

KOHLER®

INSTALLATION INSTRUCTIONS

*J***ULY**
*S***INGULIER**
*C***UFF**
*S***YMBOL**

16086IN-4A	JULY ANGLE STOP VALVE
11711IN-4A	SINGULIER ANGLE STOP VALVE
37317IN-4A	CUFF ANGLE VALVE
11791IN-4A	SYMBOL ANGLE STOP VALVE

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.



NOTE:

1. Flush the water supply pipes thoroughly to remove any debris.
2. Observe all local plumbing and building codes.


ROUGH-IN DIMENSIONS

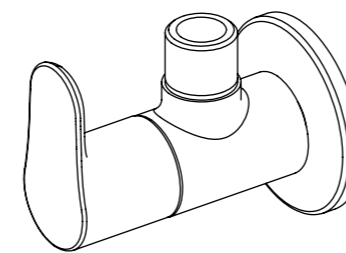

16086IN-4A

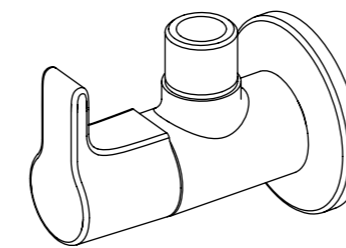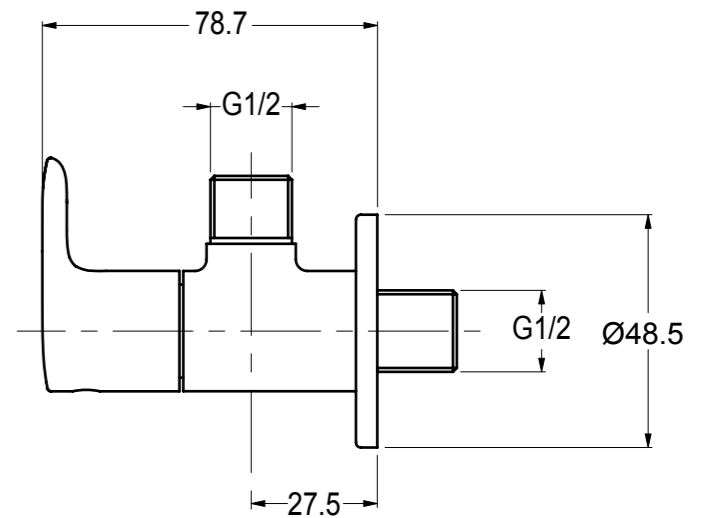

11711IN-4A

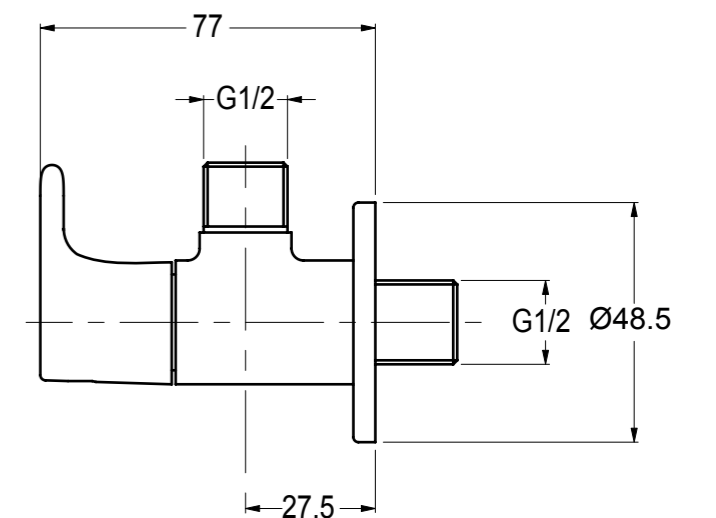

KOHLER®

IN




Kohler India Corporation Pvt. Ltd.
6th Floor. Office Block, Ambiance Island, NH-8
Gurgaon - 122002, Haryana, India





Customer Care No : 1800 103 2244
(Toll Free) & +91-124-4319685 / 86
Customer Care Email : indiacustomer@kohler.com
www.kohler.co.in




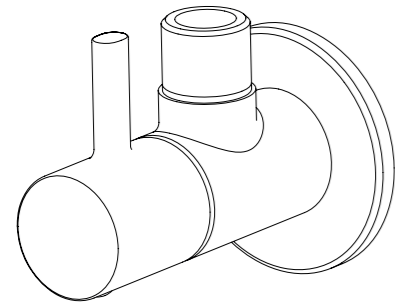


37317IN-4A

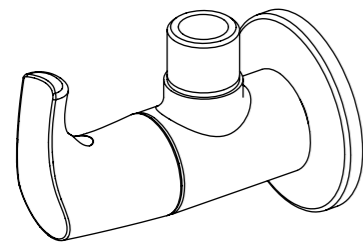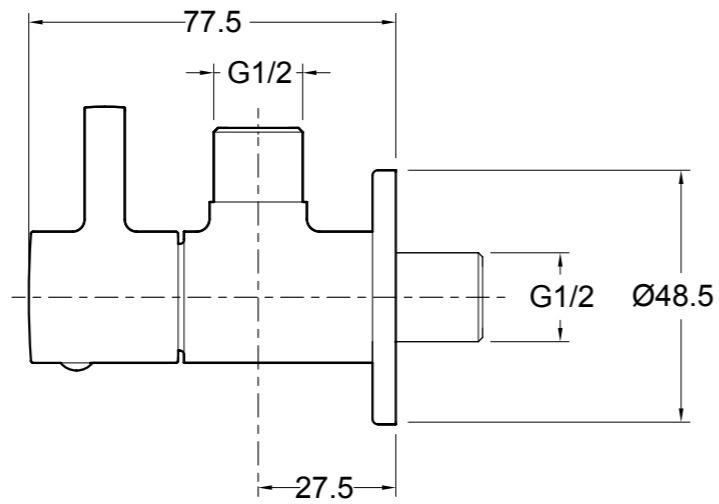

11791IN-4A

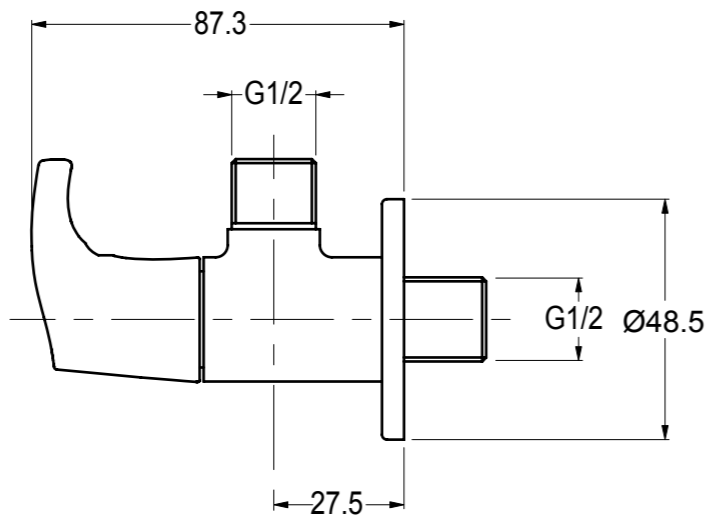

INSTALLATION

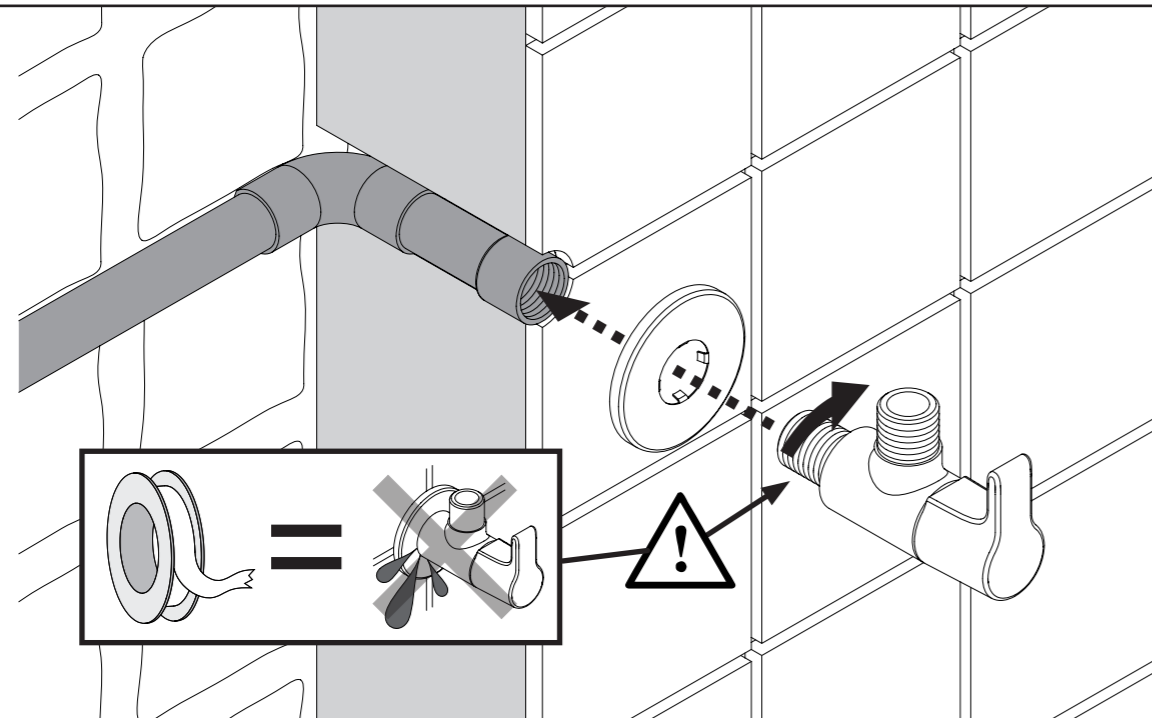

KOHLER®

SERVICE PARTS

16086IN-4A
11711IN-4A
37317IN-4A
11791IN-4A

JULY ANGLE STOP VALVE
SINGULIER ANGLE STOP VALVE
CUFF ANGLE STOP VALVE
SYMBOL ANGLE STOP VALVE

JULY
SINGULIER
CUFF
SYMBOL

