


KOHLER®

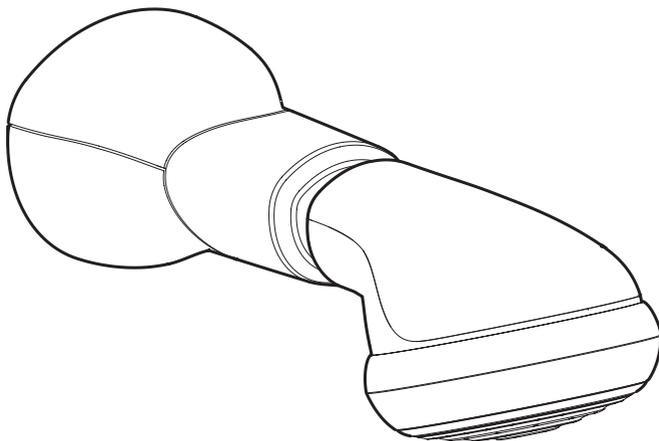

BIR Showerhead Installation and User Guide

MODEL NUMBERS

36876IN-CP Logic Multi Mode Showerhead

36877IN-CP Everclear Single Function Showerhead

36878IN-CP Magna Low Pressure Multi Mode Showerhead

36879IN-CP Magna High Pressure Multi Function Showerhead

Important! Please quote the above model number(s) when ordering spares

IMPORTANT

INSTALLER: THIS MANUAL IS THE PROPERTY OF THE CUSTOMER AND MUST BE RETAINED WITH THE PRODUCT FOR MAINTENANCE AND OPERATIONAL PURPOSES.

GENERAL

Thank you for choosing Kohler Company. Your Kohler Company product reflects the true passion for design, craftsmanship, artistry, and innovation Kohler Company stands for. We are confident its dependability and beauty will surpass your highest expectations, satisfying you for years to come.

All the information in this guide is based upon the latest product information available at the time of publication. At Kohler Company, we strive to fulfil our mission of improving the level of gracious living for each person who is touched by our products and services. We reserve the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please take a few minutes to review this guide. If you encounter any installation or performance problems, please call the Customer Care number on the back page of this guide.


BEFORE YOU BEGIN

1. Turn off the water supply.
2. Make sure that the showerhead is installed by a competent installer.
3. Before installation carefully inspect the new fixture for any signs of damage.
4. Kohler Co. reserves the right to make revisions in the design of products without notice.


INSTALLATION

Showerhead may differ slightly from the one shown, but the installation method is the same.

1. The supply elbow with a 1/2" BSP female thread, which is connected to the shower control must be between 4 - 7 mm maximum from the finished wall surface as shown. If less than 4 mm, cut the 1/2" BSP male threads on the adapter accordingly.

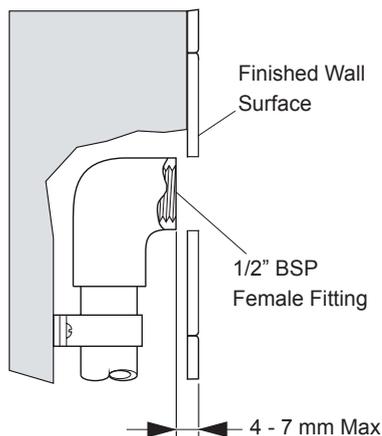


2. Flush the pipework to remove any debris.

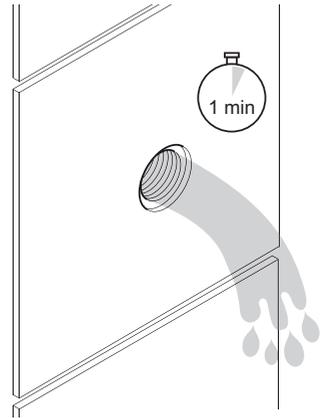


3. For part numbers: **36876IN**, **36877IN** and **36878IN**:

If the dynamic pressure in the plumbing system is less than 0.5 bar (8 psi) then remove the flow regulator for better flow performance.


Reinstall the filter, making sure that it is pushed fully home.

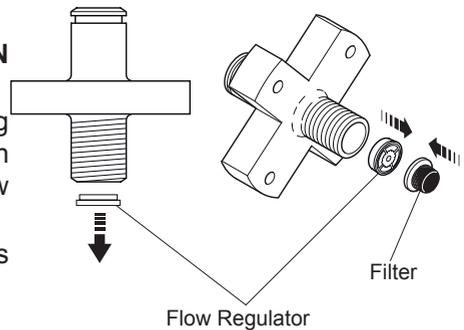


4. Apply PTFE tape over the threaded end of the adapter. Do not use paste.

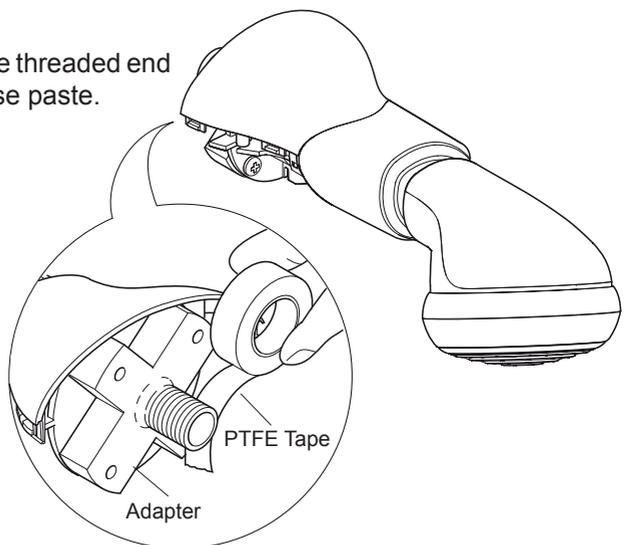

5. Without applying any pressure, hand tighten the showerhead into the elbow in the wall.
Finally tighten the showerhead with a suitable wrench to achieve the proper orientation.

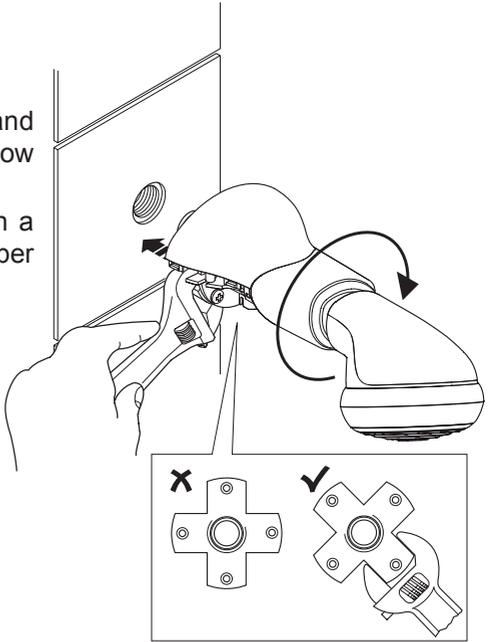

6. Snap the lower shroud into position.

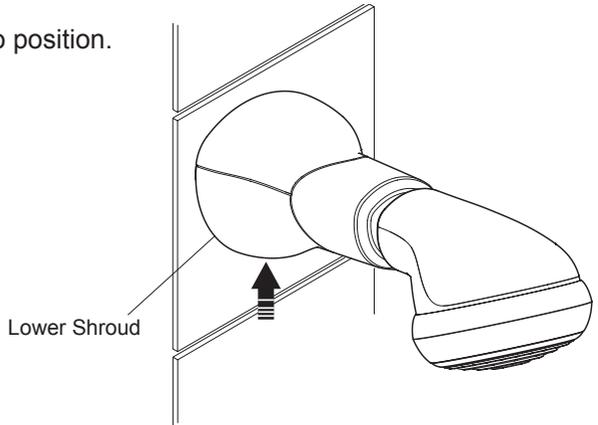

CARE AND CLEANING

Like anything of lasting quality, Kohler tapware and fittings require a certain amount of periodic care to preserve their lustrous finish. Clean your new Kohler tapware and fittings with a mild soap, rinse thoroughly with warm water and dry with a clean, soft cloth. The ideal cleaning technique is to always blot dry any water from chrome surfaces.

Allowing water to evaporate on chrome will form water deposits. It is important to use a dabbing action to dry chrome, not an abrasive or rubbing action.


Never use cleaners containing abrasive cleansers, ammonia, bleach, acids, or chemicals that can damage the finish. By taking the time to dry your tapware often, soap and water deposits can be prevented.

Failure to comply with these cleaning instructions may void Kohler's warranty obligations.

OPERATION

Showerhead Adjustment

Showerhead may differ slightly from the one shown, but the operation is the same.

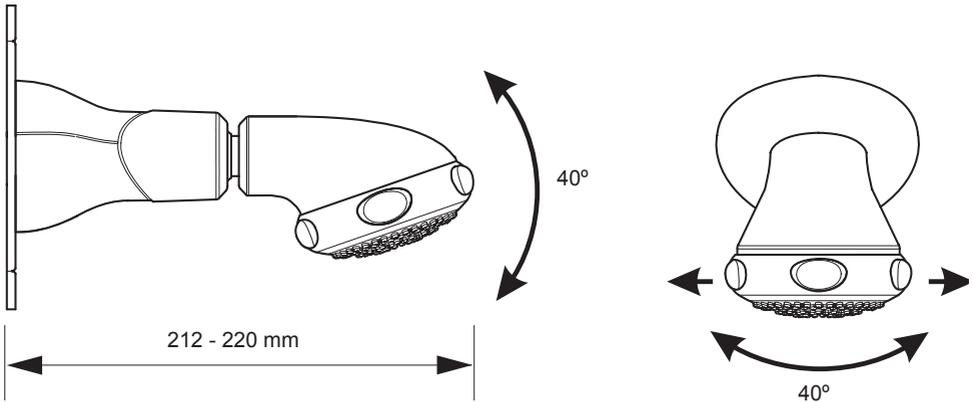


Move the sprayhead to the required position. The sprayhead is adjustable in both the horizontal and vertical directions.


Everclear Showerhead (36877IN)

The Everclear showerhead has three operation modes:


1. The flow of water automatically pushes the spray plate forward, sealing it against the retainer and allowing showering to start.

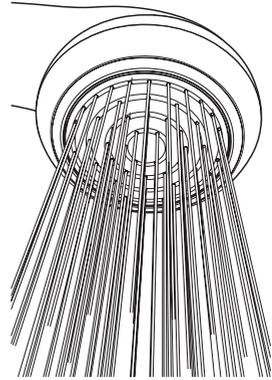

2. Turning off the flow of water automatically allows the spray plate to retract to the rest position, causing a series of pins to clear any scale from the holes. Water left in the shower head will drain away.

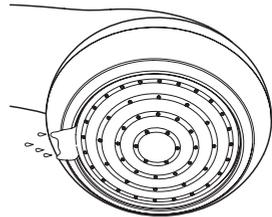

3. If the spray plate should become stuck, it can be pressed further inwards by the user, this will clear any additional scale from the holes. Once released, it will return to the rest position.

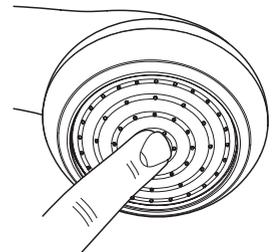


Logic Showerhead (36876IN)

The Logic showerhead has four spray settings: Eco, Start, Soothe and Force:

- 1. Eco:** Water flows from the outer set of holes at a reduced flow rate.
To select the Eco setting, turn the spray plate fully clockwise.



- 2. Start:** Water flows from the outer set of holes.
To select the Start setting, turn the spray plate anticlockwise from the full clockwise position until it clicks once.

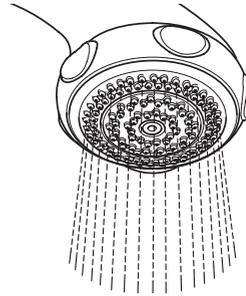

- 3. Soothe:** Water flows from the middle set of holes.
To select the Soothe setting, turn the spray plate anticlockwise from the full clockwise position until it clicks twice.



- 4. Force:** Water flows from the inner set of holes.
To select the Force setting, turn the spray plate anticlockwise from the full clockwise position until it clicks three times.




Magna Showerhead (36878IN)

The Magna low pressure showerhead has four spray settings: Eco, Start, Soothe and Force.


1. **Eco:** Water flows from the outer set of holes at a reduced flow rate.

To select the Eco mode, turn the spray plate fully clockwise.

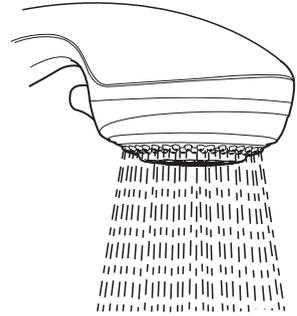


2. **Start:** Water flows from the outer set of holes.

To select the Start mode, turn the spray plate anticlockwise from the full clockwise position until it clicks once.

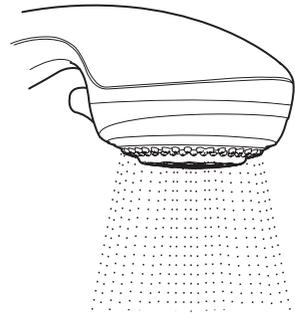

3. **Soothe:** Water flows from the middle set of holes.

To select the Soothe mode, turn the spray plate anticlockwise from the full clockwise position until it clicks twice.

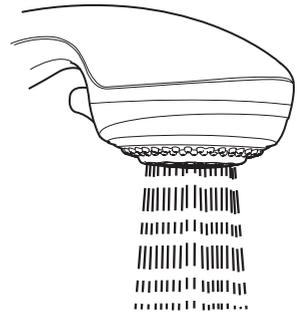

4. **Force:** Water flows from the inner set of holes.

To select the Force mode, turn the spray plate anticlockwise from the full clockwise position until it clicks three times.



Magna Showerhead (36879IN)

The Magna showerhead has four spray settings: Start, Eco, Champagne and Massage:

1. **Start:** Water flows from the outer set of holes.

To select the Start mode, turn the spray plate anticlockwise from the full clockwise position until it clicks once.



2. **Eco:** Water flows from the outer set of holes at a reduced flow rate.

To select the Eco mode, turn the spray plate fully clockwise.



3. **Champagne:** Water flows from the middle set of holes.

To select the Champagne mode, turn the spray plate anticlockwise from the full clockwise position until it clicks twice.




4. **Massage:** Water flows from the inner set of holes.

To select the Massage mode, turn the spray plate anticlockwise from the full clockwise position until it clicks three times.



SPARE PARTS

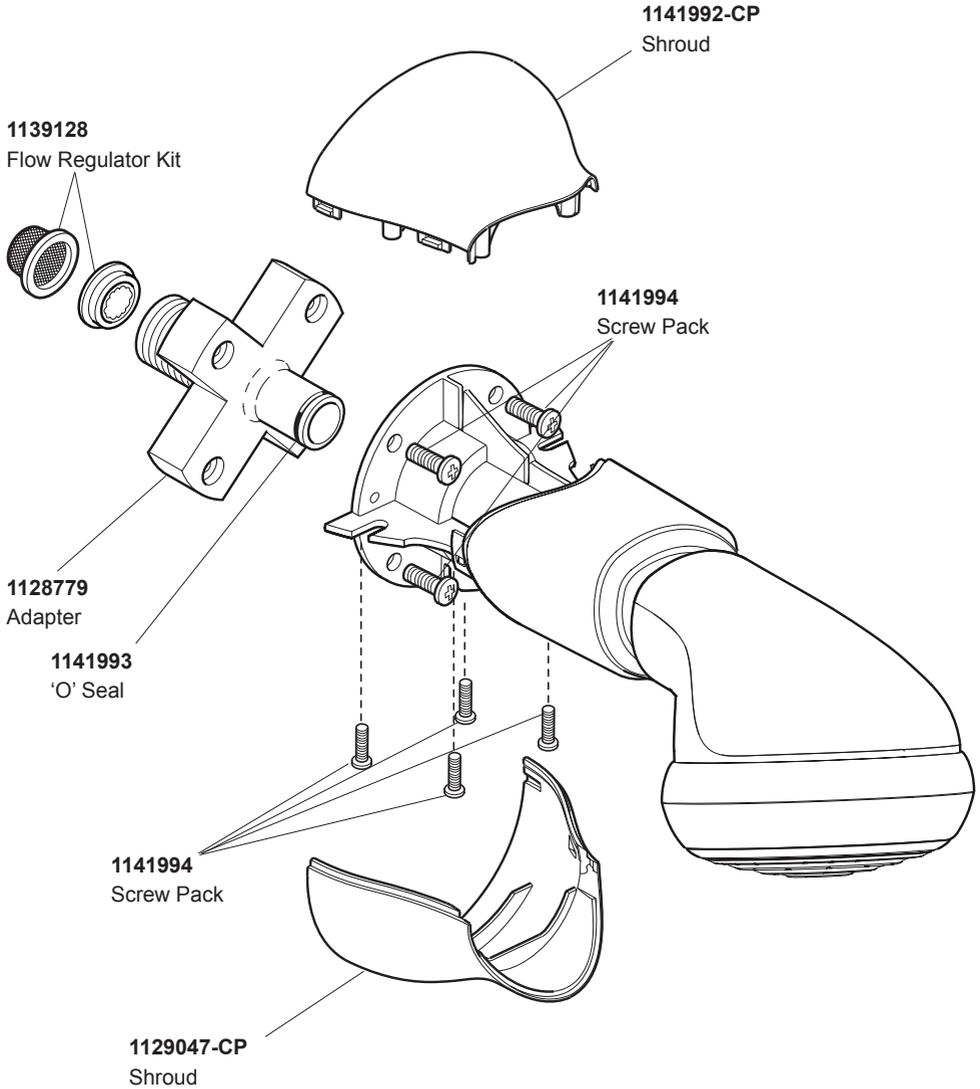

CUSTOMER CARE

KOHLER India's Faucets* used in normal residential settings are warranted to be free of defects in material and workmanship for seven years from date of purchase. KOHLER India's Faucets* used in commercial settings are warranted to be free of defects in material and workmanship for five years from date of purchase. If, in the opinion of Kohler India, the defect is due to defects in material or workmanship, Kohler India will, for a period of 7 (seven) years, for faucets used in residential settings, and for 5 (five) years, for faucets used in commercial settings, from the date of sale of the Faucet to the original purchaser ("warranty period"), at its sole option, repair or replace free of cost, any defective component or part of the Faucet, subject to the terms and conditions described below:

1. Kohler India or its Authorized Service Franchisee alone can service/repair the Faucet.
2. Proof of purchase (original sales receipt) must be provided with all warranty claims or requests.
3. The service/repair of the warranty shall be provided only within the municipal limits of the town or city where the branch office of Kohler India or Authorized Service Franchisee is located.

To obtain warranty service, please contact:

India Customer Service Centre
Kohler India Corporation Pvt. Ltd.,
6th Floor, Office Block,
Ambience Mall, Ambli Island, NH-8
Gurgaon-122002
Haryana, India
www.kohler.co.in

4. If the Faucet is installed beyond the municipal limits of Kohler India's branch office/Authorized Service Franchisee locations, any and all costs and expenses incurred for repair/service of the Faucet in respect of a) to and from travel of service personnel b) transportation of the Faucet and/or spare parts and/or components from the location of Kohler India's branch office or Authorized Service franchisee to customer's location and back shall be borne wholly and solely by the customer at the prevailing rates, and Kohler India shall not be liable for any damage caused to the Faucet in transit or delivery for repair.
5. This warranty shall automatically terminate upon the expiry of the warranty period even if the Faucet has not been installed after purchase or has not been in use for any part or whole of the warranty period for any reason whatsoever.

*Trend™ faucets; MasterShower™ tower; BodySpa™ systems and components; WaterHaven™ tower, systems and components; Polished Gold finishes; fittings; all recommended fixture plumbing accessories, including but not limited to, grip rails, trim kits, drains; Duostrainer® sink strainers and soap/lotion dispensers; are warranted to the original purchaser to be free of defects in material and workmanship for one year from date of purchase. All other aspects and conditions of the above stated warranty, other than duration, apply to these faucets.

**Never use cleaners containing abrasive cleansers, ammonia, bleach, acids waxes, alcohol, solvents or other products not recommended for chrome. This will void the warranty.

6. This warranty remains applicable only if the Faucet has at all times been used strictly in accordance with the terms of this warranty and has not been improperly or negligently handled. This warranty does not cover problems arising from insufficient water pressure, excessive water impurities or improper care and cleaning**. Kohler is not responsible for labor charges, installation or other incidental or consequential costs. In no event shall the liability of Kohler India exceed the purchase price of the Faucet. Improper care and cleaning will void the warranty.
7. In the event of any repairs/replacement of any parts of the Faucet, this warranty shall thereafter continue and remain in force only for the unexpired period of the warranty. Any time consumed for the repair/ replacement of parts including transit of the Faucet or its parts or any period during which the Faucet has not been used whether under warranty or otherwise shall not be excluded from the warranty period.
8. In the event of non availability of components or parts due to any reason whatsoever neither Kohler India nor its Authorized Service Center nor the Dealer will be responsible or liable for any delay that may be caused to service/repair of the Faucet.

This is Kohler India's exclusive written warranty.

Care and cleaning guidelines for chrome and Vibrant® PVD colors/ finishes

- Do not use cleaners containing ammonia, bleach, or acid.
- Use a mild detergent (such as dishwashing soap). Do not use abrasive cleaners.
- Rinse and be sure to wipe the entire surface dry.

The ideal cleaning technique is to always blot dry any water from metal surfaces. Allowing water to evaporate on metal will form water deposits. It is important to use a dabbing action to dry metal, not an abrasive or rubbing action. Cleaning with a damp sponge and buff drying should keep your faucet looking beautiful.