


INSTALLATION INSTRUCTIONS

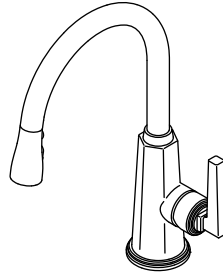

P23090

INSTALLATION INSTRUCTIONS

THANK YOU FOR CHOOSING KALLISTA

 
We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN


⚠ CAUTION: Risk of fresh water contamination. This faucet contains important back-siphonage protection. Do not replace the faucet ground joints or remove any components.

- Prior to installation, unpack the new faucet and inspect it for damage. Return the faucet to its protective carton until you are ready to install it.
- Observe all local plumbing and building codes.
- Shut off the main water supply.
- Inspect the drain and supply tubing. Replace if necessary.
- If possible, assemble the faucet to the sink before installing the sink.
- Except for plumbers putty, do not use petroleum based products on this faucet.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.


TOOLS AND MATERIALS




Hex
Wrench

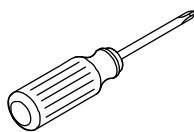


Phillips
Screwdriver

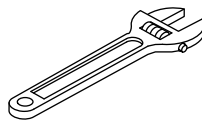

Adjustable
Wrench

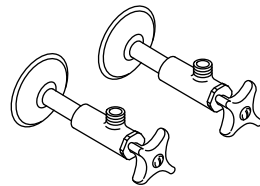


Two 3/8" Male
Supply Connections

 

Plumbers
Putty

INSTALLATION INSTRUCTIONS


1. INSTALL THE FAUCET

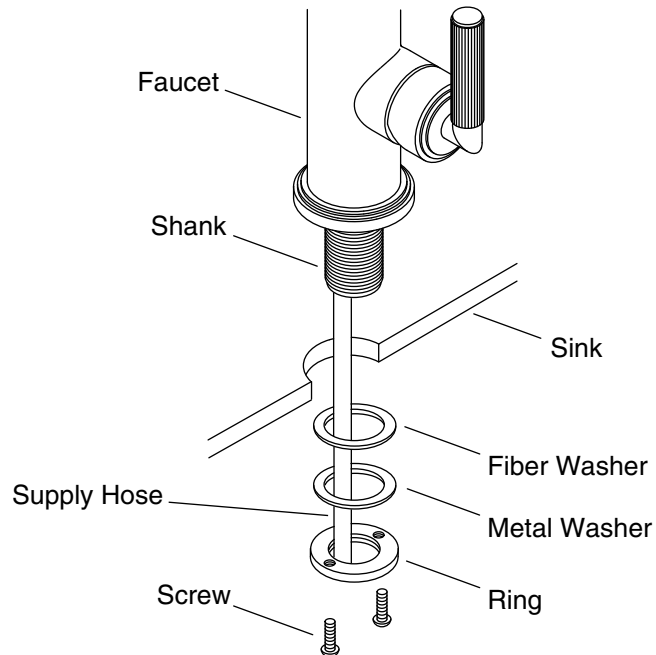

- Ensure that the O-ring is installed in the bottom of the escutcheon.
- Partially thread the two screws into the threaded ring until the screws slightly protrude from the backside of the ring.
- Fit the faucet through the hole in the sink. Position the faucet so the handle faces the desired position. The recommended handle position is to the user's right.
- From underneath the sink, slide the fiber washer and metal washer onto the shank.
- Thread the ring onto the shank, leaving approximately 1/4" (6 mm) between the ring and the sink. Turn the ring so the screws are to the front and back.
- Use a Phillips screwdriver to tighten the screws securely and evenly.

INSTALLATION INSTRUCTIONS

2. INSTALL THE SUPPLIES

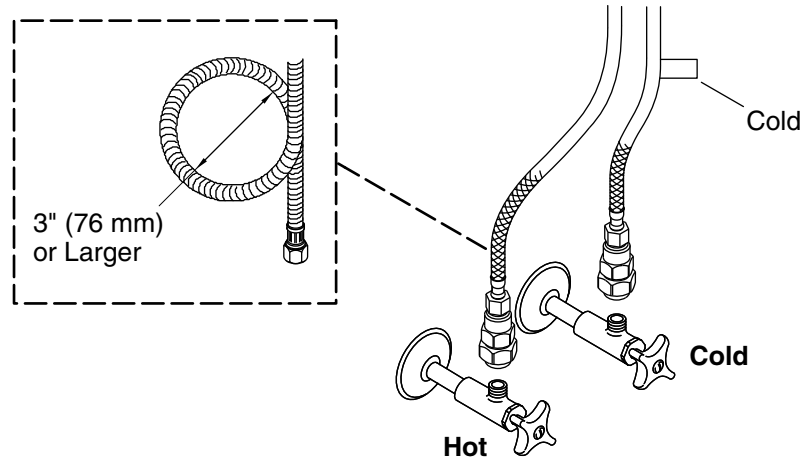

CAUTION: Risk of restricted water flow and product damage. Use extreme care when bending the supply hoses to avoid kinking and twisting. Hoses must not be taut after installation.

NOTE: If the sink is not installed, install it at this time. Be sure to follow all instructions packed with the sink.


NOTE: If the sink installation requires that you coil the supply hoses to obtain a good connection, maintain an inside coil diameter of at least 3" (76 mm).

NOTE: The most common type of faucet installation is with the handle positioned to the right. Pull the handle for cold water or push the handle for hot water. If the handle is installed to the left or centered, reverse the supply tubes; connect the tube for cold water to the hot supply and the tube for hot water to the cold supply. This will maintain the relationship of pulling the handle for cold water or pushing for hot water. If the handle is centered, press it to the right for cold water or to the left for hot water.

- Position the hot and cold water supplies to not interfere with other hoses.
- Connect the supply hoses to the supply stops. Left is hot, right is cold.
- Tighten all connections.


INSTALLATION INSTRUCTIONS

3. FLUSH THE SUPPLY LINES

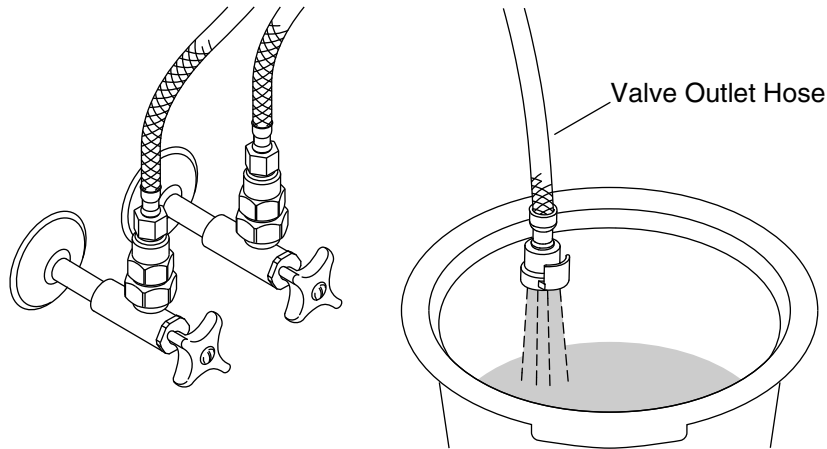

- Place the valve outlet hose into a bucket or suitable container.
- Turn on the hot and cold supplies.
- Turn the faucet handle to the full cold ON position. Let the water run for one minute to remove any debris.
- Rotate the faucet handle to full hot position. Let the water run for one minute to remove any debris.
- Turn the faucet handle to the OFF position.

4. CONNECT THE SPRAY HOSE

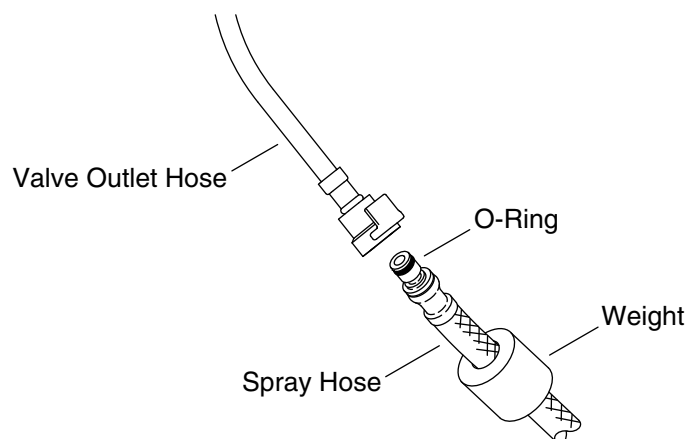

- Slide the weight onto the spray hose.
- Verify that the hose ends are clean and that the O-ring is in place.
- Fully engage the hose ends.
- Reposition the supply hoses if necessary.
- Extend and retract the spray hose to check for smooth operation.