

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual

before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.								
BEFORE YOU BEGIN								
 Please read all instructions before you begin. Prior to installation, unpack the valve trim and inspect it for damage. Return it to the carton until installation. Observe all local plumbing and building codes. Shut off the water supply. The appearance of your product may differ from what is shown in these instructions, however, the installation procedure is the same. KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book. 								
TOOLS AND MATERIALS								
Assorted	Assorted							
,	ALLISTA product. If you end us at the phone number listed BEFOI tructions before you begin. In unpack the valve trim and in lumbing and building codes. Supply. If your product may differ from ure is the same. Is the right to make revisions in the r							

Screwdrivers


Hex Wrenches

Select the correct valve stem adapter and screw. Spline Adapter Valve Stem Adapter

NOTE: Check the finished wall surface as related to the graphics on the plaster guard.

- □ Select the correct length valve stem adapter and screw for your application. Refer to the information stamped on the plaster guard to verify the wall thickness.
- □ Thin wall 3/16" (5 mm) to 9/16" (14 mm): Use the 1/2" (13 mm) (short) valve stem adapter, stamped "3" on the plaster guard, and the 13/16" (21 mm) screw.
- □ Standard wall 9/16" (14 mm) to 1-1/16" (27 mm): Use the 7/8" (22 mm) (medium) valve stem adapter, stamped "1" on the plaster guard, and the 13/16" (21 mm) screw.
- □ Thick wall 1-1/16" (27 mm) to 1-9/16" (40 mm): Use the 1-3/8" (35 mm) (long) valve stem adapter, stamped "2" on the plaster guard, and the 1-3/8" (35 mm) screw.
- $\hfill \square$ Remove and discard the plaster guard from the valve.
- ☐ Place the spline adapter over the valve stem.
- □ Set the valve stem adapter over the spline adapter. Do not completely press or screw the valve stem adapter into place until instructed to do so.


2. INSTALL THE FRONT PLATE

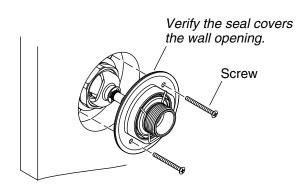

Align the	holes or	n the fron	t plate	assembly	/ and the	valve.


NOTE: Be sure to select the correct length screw for your application.


- ☐ Attach the two screws through the front plate assembly and into the valve. Do not overtighten.
- □ Visually inspect the front plate assembly to ensure the foam seal is completely covering the wall opening. If not, stop the installation and repair the wall opening.

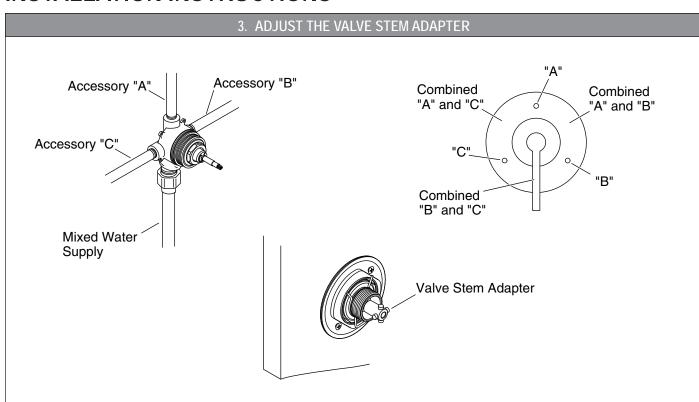

NOTE: Valve Operation. Water will flow from a single shower accessory when the control knob detent lines up with any of the large detents on the escutcheon. Water will flow from two accessories at the same time when the control knob detent is centered between two large detents on the escutcheon.

- ☐ Make sure the valve stem adapter is lightly placed over the spline adapter.
- ☐ Turn on the water supply to the transfer valve.
- ☐ Rotate the valve stem adapter until water begins to flow through the shower accessory.
- □ Determine the shower accessory that will correspond to the accessory "A" setting at the 12 o'clock position on the escutcheon.
- ☐ Turn the valve stem adapter to the detent setting that corresponds with accessory "A."

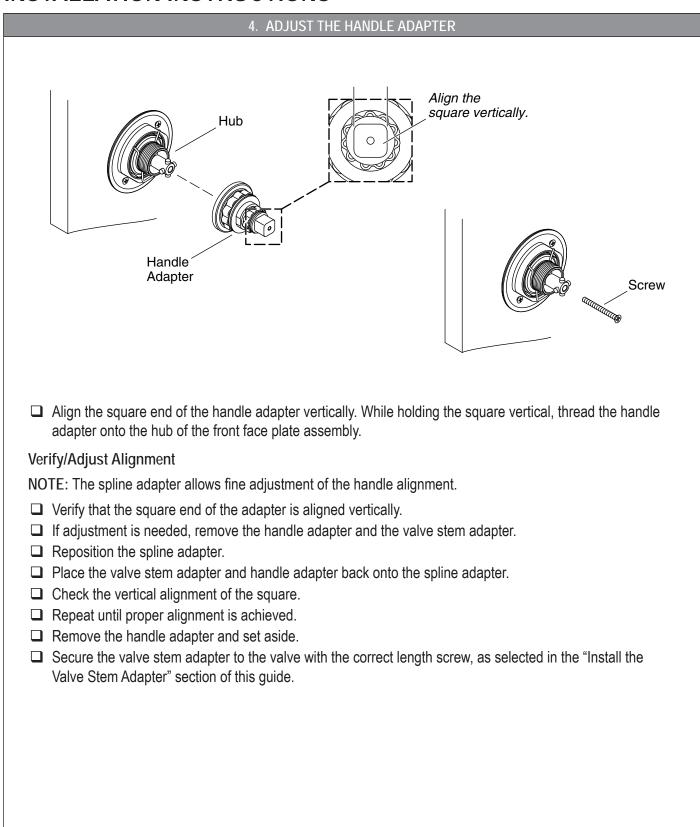

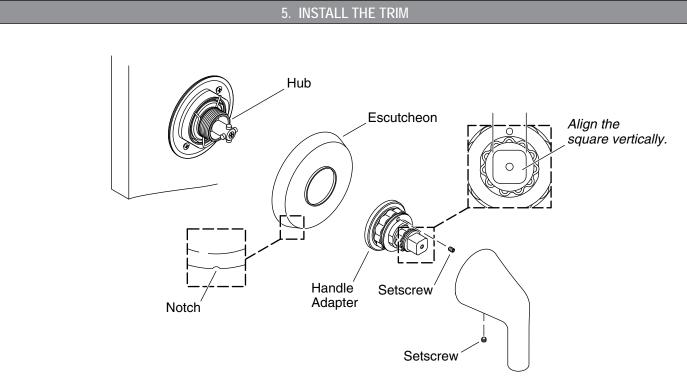

- ☐ Place the escutcheon on the wall with the drain notch located downward in the 6 o'clock position.
- Align the square end of the handle adapter vertically. While holding the square end vertically, thread the handle adapter onto the hub of the front face plate assembly.
- ☐ Thread the setscrew into the handle adapter to secure it to the hub.
- ☐ Press the handle onto the adapter with the handle pointing down in the 6 o'clock position.
- ☐ Secure the setscrew into the handle. Do not overtighten.