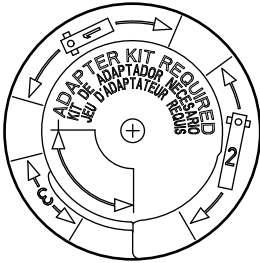
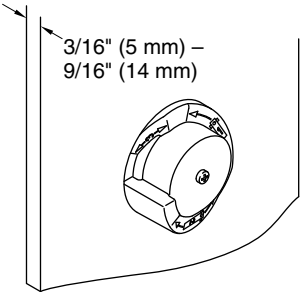
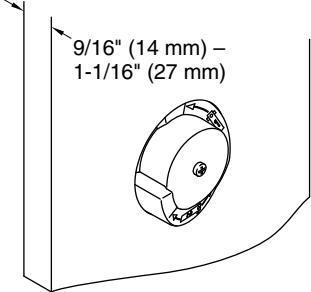
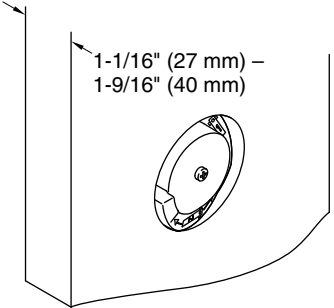
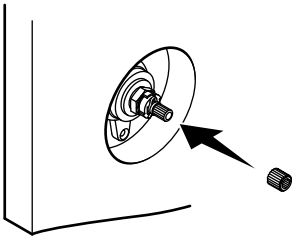
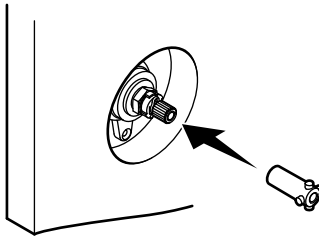
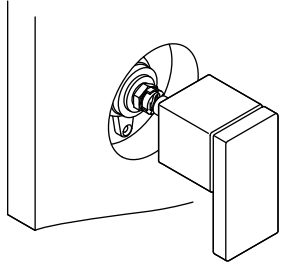
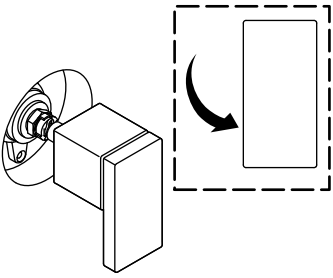
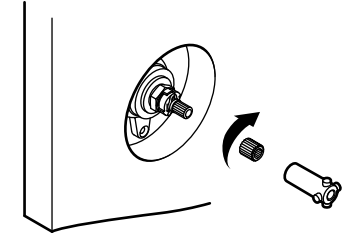
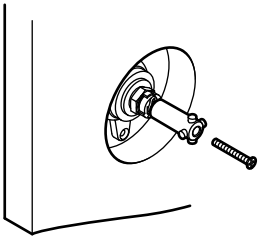
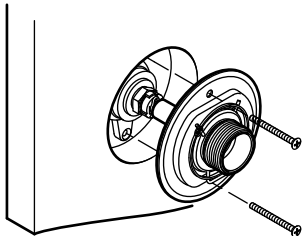
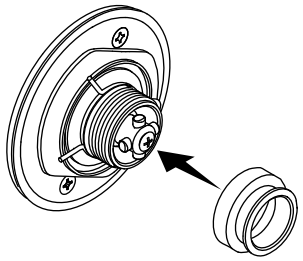
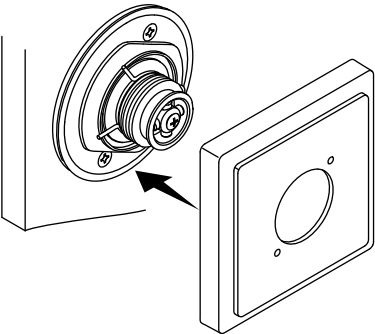
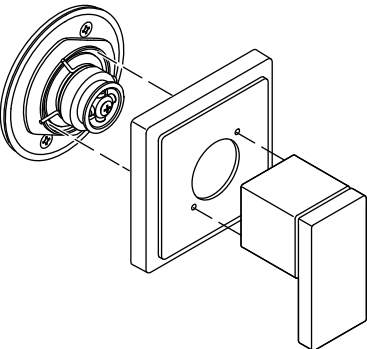
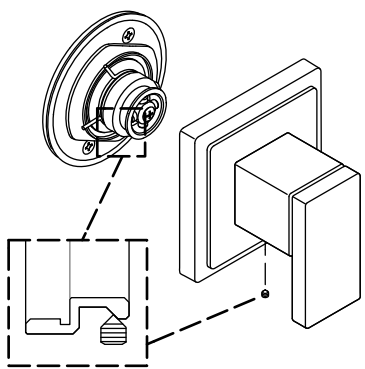


<p>Record your model number.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>1 Determine the valve stem adapter length. Refer to the plaster guard.</p> 	<p>Thin Wall: Use the #3 adapter and the 3/8" (19 mm) screw.</p> 	<p>Standard Wall: Use the #1 adapter and the 1-3/8" (35 mm) screw.</p> 
<p>Thick Wall: Use the #2 adapter and the 1-3/4" (44 mm) screw.</p> 	<p>2 Remove the plaster guard. Place the spline adapter on the valve stem.</p> 	<p>3 Temporarily fit the valve stem adapter on the spline adapter.</p> 	<p>4 Position the handle on the valve stem adapter.</p> 	<p>5 Turn the handle counterclockwise. The handle should stop at the 6 o'clock position.</p> 
<p>6 To adjust position, remove the handle and valve stem adapter. Turn the spline adapter.</p> 	<p>7 Secure the valve stem adapter with the proper length screw.</p> 	<p>8 Secure the plate assembly to the valve with proper length screws. Do not overtighten.</p> 	<p>9 Thread the adapter ring onto the hub of the front plate assembly.</p> 	<p>10 Place the escutcheon on the wall with the drain notch located downward in the 6 o'clock position.</p> 
<p>11 Point the handle down. Align the handle pins with the holes in the escutcheon.</p> 	<p>12 Thread the adapter ring in or out to ensure the setscrew contacts the front angle of the adapter ring.</p> 			

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.