

### BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information is based on the latest product information available at the time of publication. Kohler China Ltd. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**

### 安装之前

- 请仔细阅读此说明书以熟悉所需要的工具、材料及安装顺序。遵循适合您的特定安装要求的各项内容，避免昂贵的损失。除了要正确安装外，还应阅读操作及安全说明。
- 所有的资料是按最新出版的产品资料编写而成。科勒中国有限公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 说明书包括重要的安装、清洁及保养方面的内容，请把这些资料交给用户阅读。

### ROUGHING-IN & DIMENSIONS

#### A. Ordering Information

SERIF Bubble Massage Bath, L/Drain .....K-1337T-G1  
SERIF Bubble Massage Bath, R/Drain.....K-1337T-G2  
REGATTA Bubble Massage Bath, L/Drain.K-11303T-G1  
REGATTA Bubble Massage Bath, R/Drain K-11303T-G2

#### B. Required Electrical Service

Dedicated branch circuit required, protected with Class A Ground-Fault Circuit-Interrupt (GFCI):

Pump	220~240V, 5.1A, 50Hz.
------	-----------------------

### 安装尺寸说明及尺寸图

#### A. 订购信息

史瑞夫泡泡浴缸, 左出水.....K-1337T-G1  
史瑞夫泡泡浴缸, 右出水.....K-1337T-G2  
瑞嘉娜泡泡浴缸, 左出水.....K-11303T-G1  
瑞嘉娜泡泡浴缸, 右出水.....K-11303T-G2

#### B. 所需的电源线路

需要专用的分支电路，并以A级接地漏电断路器(GFCI)保护：

水泵	220~240伏特, 5.1安培, 50赫兹。
----	-------------------------

### C. Product Information

#### K-1337T-G1/G2

Fixture*:	Basin Area	Top Area	Weight	
Bathing Well	1067×711mm	1397×1016mm	39.5kg	
	Water depth	Capacity		
To Overflow	394mm	276.3L		
* Approximate measurements for comparison only.				
Blower motor:	Heater	Voltage	Frequency	Amperage
1 HP	300 W	220~240 V	50 Hz	5A
Included Components				
Cutout template		1017044-7		

#### K-11303T-G1/G2

Fixture*	Basin area	Top area	Weight	
Bathing well	1145×450mm	1505×640mm	45kgs	
	Water depth	Capacity		
To overflow	370mm	234L		
* Approximate measurements for comparison only.				
Blower motor:	Heater	Voltage	Frequency	Amperage
1 HP	300 W	220~240 V	50 Hz	5A

### C. 产品资料

浴缸*:	底部中间	顶部中间	重量	
面积	1067×711mm	1397×1016mm	39.5Kg	
	深度	容积		
到溢水口	394mm	276.3升		
* 为比较浴缸所用的参考数值。				
气泵:	加热器	电压	频率	电流
1 匹马力	300 W	220~240 V	50 Hz	5A
Included Components				
切割模板		1017044-7		

### D. Installation


Read the entire installation instructions before beginning the installation.


### D. 安装须知

开始安装前，请先阅读整份说明书。

### E. Dimensions

#### K-1337T-G1/G2

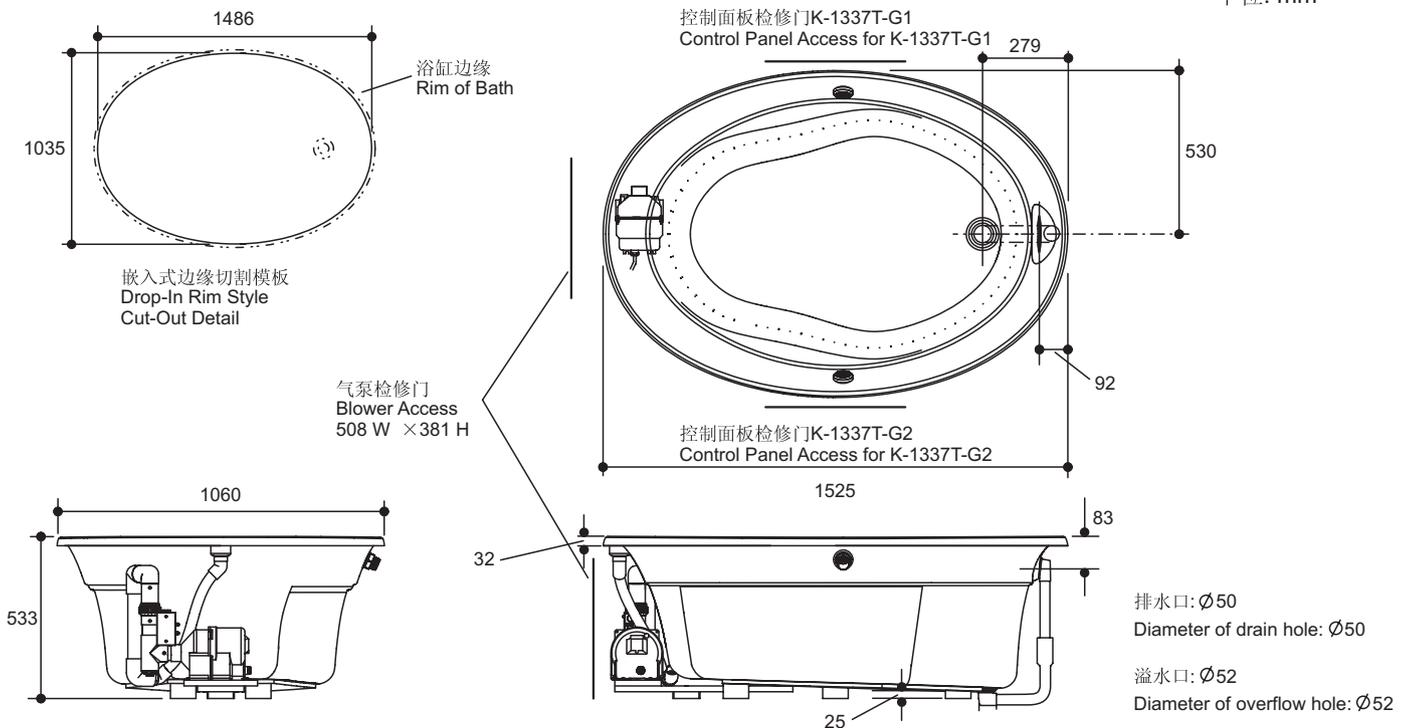

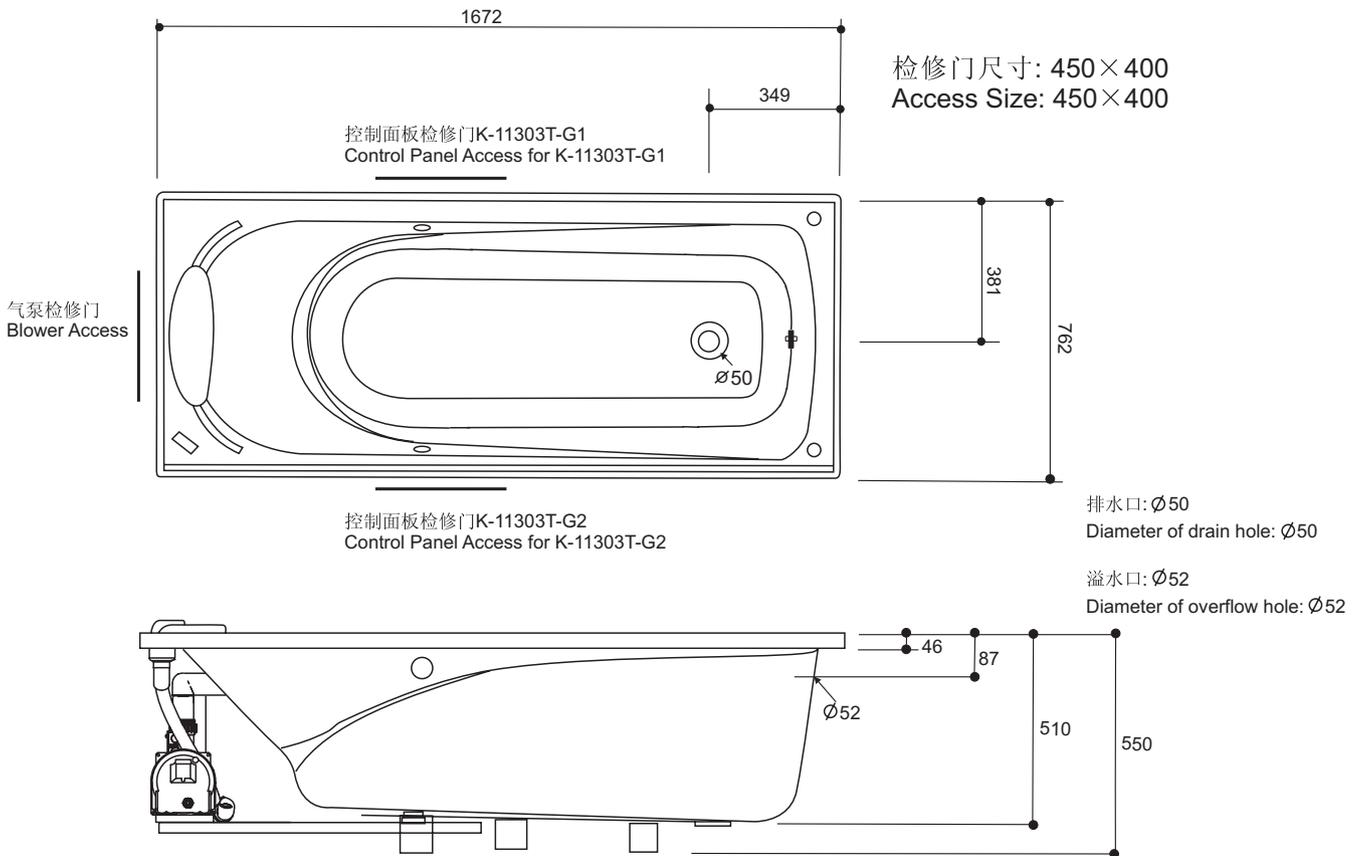

PRODUCT NOTICES

产品注意事项

A. Installation Hazard Notification

A. 安装危险警告

**DANGER: Risk of fire, electric shock, or injury to Persons.** Read important safety instructions on inside front cover of these instructions.

危险: 有起火、触电或人员受伤的危险。请阅读本说明书封面内页的重要安全指示。

**WARNING: Risk of electrical shock.** A licensed electrician should make all electrical connections.

**警告: 有触电的危险。** 请找合格的电工来进行所有的线路连接。

**WARNING: Risk of electrical shock.** Connect only to a circuit protected by a Ground-Fault Circuit-Interrupter (GFCI) or Earth-Leakage Circuit-Breaker (ELCB).

**警告: 有触电的危险。** 仅能和由接地故障断路器 (GFCI)保护的电路相接。

**WARNING: Risk of electrical shock.** Disconnect power before servicing.

**警告: 有触电的危险。** 工作之前先切断电源。

**WARNING: Risk of injury or property damage.** Please read all instructions thoroughly before beginning installation, including the following Product Requirements.

**警告: 有受伤或财物受损的危险。** 开始安装之前, 请先彻底阅读所有说明, 包括以下的产品要求。

**NOTICE:** Follow all local plumbing and electrical codes.

注意: 请遵守所有的本地卫生管道和电气规范。

**WARNING: Keep the area around the blower motor clean and free of debris.** Ensure that the area around the blower motor is free of sawdust, insulation, dirt, or other small loose debris. Such material could clog the blower motor air ducts and reduce the air flow through the blower.

**警告: 请保持气泵周围区域清洁, 没有任何残留物。** 请确保气泵周围区域没有任何锯屑、绝缘物、尘土, 或者其它小的松散的残留物。这些残留物可能导致气泵通风口堵塞, 从而使通过气泵的气流不畅。

## B. Factory-Assembled Features

Factory installed components include blower motor with power supply cord, check valve, air piping, user keypad, and keypad cable. Other than power wiring and plumbing, no assembly is needed.



**WARNING: Unauthorized modification may cause unsafe operation or affect performance of the bath with airjets.** Do not relocate the blower motor, or make other modifications to the system in the absence of kit instructions, as this could adversely affect the performance and safe operation of the bath with airjets. Kohler China shall not be liable under its warranty or otherwise for personal injury or damage caused by any such unauthorized modification.

## B. 由厂家组装的部件

工厂已经对部件进行了安装，包括带电源线的气泵、单向阀、空气管道、控制面板、信号线等。除了电源线和管道连接，不再需要任何安装。



**警告：未经授权的更改会导致浴缸不安全运转或者影响泡泡浴缸的性能。**在没有专业人员的指导下，请不要移动气泵，或者对系统进行任何更改，因为这样可能导致浴缸不安全运转或者影响泡泡浴缸的性能。由于此种未经授权的更改所导致的人员伤害或损失，科勒公司将不承担任何保修责任或赔偿责任。

## PRODUCT REQUIREMENTS

## 产品要求

### A. Summary Of Key Requirements

- Observe all local plumbing codes.
- Install the unit to a level subfloor.
- Provide properly-dimensioned framing.
- Baths with airjets are designed for a variety of installations, depending upon the model chosen.

### A. 关键要求的总结

- 请遵守当地的卫生管道施工规范。
- 在未装修的水平地面上安装浴缸。
- 提供适当尺寸的结构。
- 泡泡浴缸的设计适用于不同的安装方式，请按型号来选定。

### B. Plumbing Specifications

If using a rim-mounted bath faucet, flexible connections between the valves and spout may be required. Confirm adequate mounting, connection space of specified faucet for your installation.

Confirm adequate support for the faucet; large faucets that may inadvertently used as a means of support are not appropriate or safe for this installation.

### B. 卫生管道规格

如果是在边缘安装水龙头，必须以软管连接阀体和水龙头，确认安装是否适当，及指定的水龙头连接空间是否足够。

确认水龙头的支撑是否稳固；大型的水龙头可能会被误用为支撑之用，而使安装不适当或不安全。

### C. Product Inspection

Carefully unpack and inspect the bath with airjets for damage. Leave all materials in the carton during constructions to prevent damage.

### C. 产品检查

小心打开包装箱并检查泡泡浴缸是否损坏，施工期间将所有的材料都留在箱内，以防止损坏。

### D. Electrical Requirements

The installation must have a Class A Ground-Fault Circuit-Interrupter (GFCI). The GFCI protects against Line-to-ground shock hazard. Use a 220-240 V, 10 A (minimum), 50 Hz dedicated service for the bath with airjets.

### D. 电气要求

安装时必须有A级接地事故断路(GFCI)。GFCI可避免线路到地面的触电危险，请使用一条220-240伏特，10安培(最小)，50赫兹的专用电路供泡泡浴缸使用。

## INSTALLATION REQUIREMENTS

## 安装要求

### A. Tools Required B. Materials Required

- Adjustable pipe wrench
  - Rule
  - Level
  - Safety shoes
  - Safety glasses
  - Square
  - Screwdriver
  - Pliers
  - Utility knife
  - Pencil
  - Measuring Tape
- Plumbers putty
  - Wall coverings, as necessary
  - Silicone sealant
  - Gypsum cement (optional)
  - Construction adhesive (optional)
  - Protective covering for bathtub
  - Nails
  - Silicone Sealant

#### Plus:

- Conventional woodworking tools and materials or conventional bricklaying tools and materials
- Drop Cloth
- Construction adhesive (optional)
- Cement or mortar (optional)
- 2x4's or 2x6's

### A. 所需工具

- 管道扳手
- 刻度尺
- 水平仪
- 安全鞋
- 安全眼镜
- 直角尺
- 螺丝刀
- 钳子
- 多用工具刀
- 铅笔
- 卷尺

#### 附加:

- 常规木工和砖瓦工的工具和材料
- 垫布
- 建筑粘胶(选用)
- 水泥或灰泥(选用)
- 2x4' 或 2x6'支撑架

### B. 所需材料

- 管道用油灰
- 墙面保护罩(如需要)
- 密封硅胶
- 石灰水泥(选用)
- 建筑粘胶(选用)
- 浴缸保护套
- 钉子
- 密封硅胶

## SITE REQUIREMENTS


## 场所要求

### A. 拆除旧浴缸

在存水弯处拆下排水管。清除所有旧墙材料。在旧浴缸下面塞入护板以保护地面，并如图所示把旧浴缸从安装空间拉出。

#### A. Old Bath Removal (If Applicable)

Disconnect the drain at the trap. Remove the old wall material. Slip boards under the old bath feet to protect the floor, and slide the old bath out of the recess as illustrated.

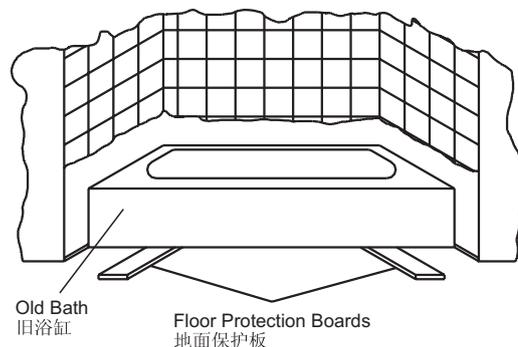

## B. Prepare the Site

**CAUTION: Risk of product damage.** Do not support the bath by the rim.

**NOTICE:** Unless otherwise specified, floor support under the bath must provide for a minimum of 80 lbs./square foot (390 kg./square meter) loading.

**NOTICE:** Provide adequate ventilation and a minimum of 15 cubic feet (.4 cubic meters) in the installed location for cooling the motor and to supply sufficient air for the blower. Do not install the blower motor closer than 2.5mm from the wall or other objects.

- Make sure the flooring offers adequate support for your bath, and verify that the subfloor is flat and level.
- This bath may be installed in a drop-in or in an island installation. An island installation requires a four side surround. In both instances, make sure the deck is supported by brick or concrete.
- Install an access panel to allow the blower to be serviced. Jalousie access is recommended.
- Construct brick or concrete supports.
- Provide a 2mm gap between the bath rim and the concrete or brick framing. Frame the floor, or construct a frame for a raised installation, in accordance with the roughing-in information packed with the bath.


## B. 场所准备

**警告：存在产品受损危险。** 请不要仅靠浴缸边缘支撑浴缸。

**注意：**除非特别注明，浴缸下面的底层地面必须提供至少80磅/平方英尺(390公斤/平方米)的荷载承重。

**注意：**在安装位置，提供足够的通风，有效通风口面积应不小于5000平方毫米以及至少15立方英尺(0.4立方米)的空间，以冷却发动机，并为气泵供应足够的空气。不要将气泵安装在离墙或者其它物体25毫米以内的位置。

- 确保地面具有足够的支撑力支撑您的浴缸，并核实底层地面是水平的。
- 此浴缸可进行嵌入式安装或者岛屿式安装。岛屿式安装需要四面均有围墙。两种安装方式下，均要确定浴缸由混凝土或者砖头支撑。
- 为维修气泵提供维修入口，建议使用百叶窗式检修门。
- 建造砖头或者混凝土框架底座。
- 在浴缸边缘和柱型框架之间保留一个2毫米的缝隙。根据您的浴缸随附的初步安装信息在地面上确定安装位置，如果需要抬高浴缸进行安装，请建造框架。

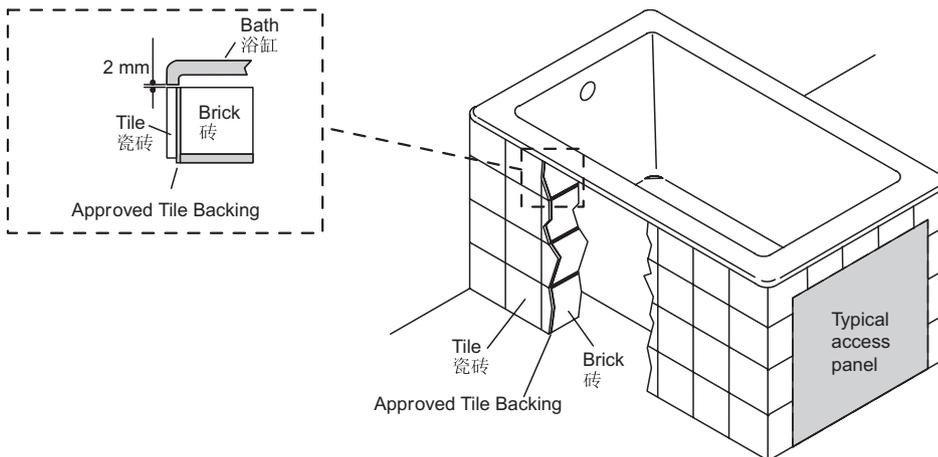

Bath may be installed next to the wall or as an island installation. 浴缸可以靠墙安装或岛屿式安装。

Install an access panel to allow the pump to be serviced. 为气泵及控制面板提供检修门。

### C. Whirlpool Area Construction Preparation (Optional)


Make sure you allow for access to the pump in the event the unit requires service. When constructing the framing, allow for the thickness of sub and finish wall material (e.g. mortar mix and ceramic or marble tiling).

Drop In Installation: Refer to rough-in notes on page 2 for cut-out details. Make sure the whirlpool is supported by the supporting feet on the bottom of the whirlpool. Do not hang the bath by the rim.

嵌入安装：有关切割图样的细节请参阅第2页的安装尺寸说明。务必使按摩浴缸底部的支撑脚支撑。不要使浴缸靠边缘悬挂。

### C. 按摩浴缸支撑结构的准备(选用)

确保为水泵预留空间，以便于维修。建立结构时，请预留底层地面和完工墙壁材料的厚度(例如水泥砂浆和瓷砖或大理石)。

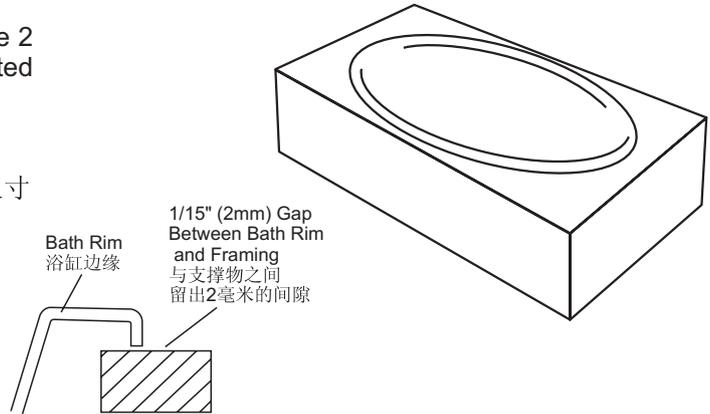

### BEFORE INSTALLING WHIRLPOOL

### 安装按摩浴缸之前

**A.** Your new whirlpool has been manufactured to the highest possible standards, it has been factory tested and approved.

**A.** 本按摩浴缸质量上乘，已经工厂检测通过。

**B.** When removing bath from protective carton **DO NOT LIFT BATH BY PIPE WORK**. Inspect for any possible damage that may have occurred in transit. Position a clean drop cloth or similar material in the bottom of the bath to protect the finish. Be careful not to scratch the surface of the bath.


**B.** 从起保护作用的纸箱中取出时，**请不要拎着管道部分将浴缸取出**。检查可能有搬运造成的损伤。放置时在浴缸底部垫上一块干净的布或类似材料，以保护浴缸表面的光洁度。注意：不要在浴缸表面造成划痕。

**C.** Identify motor access location before proceeding with installation.

**NOTE: NO MOTOR ACCESS NO WARRANTY SERVICE.** Ventilation must be provided in order to allow heat from motor to dissipate. Jalousie access is recommended.


**C.** 安装前，请找到马达检修门的位置。  
注意：无马达维修口，不能获得保修。应通风良好，保证马达散热。  
请根据你的实际情况预留检修门。建议使用百叶窗式检修门。

**PROVIDE MOTOR ACCESS AS SHOWN.**  
如图所示马达检修门位置。

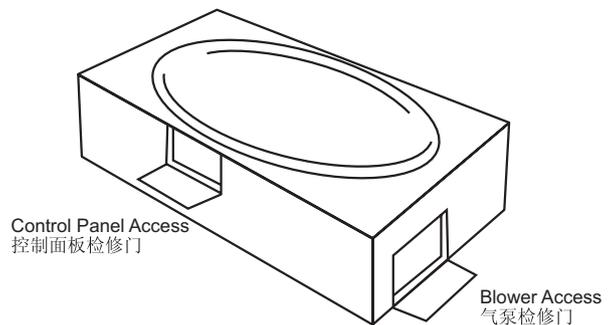

**D. IMPORTANT:** Bath must be installed level on all top edges.

D. 注意：浴缸必须水平地放置。

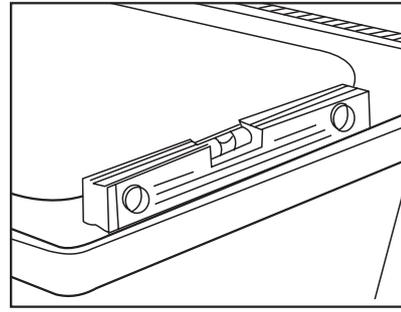

**E.** Install the drain to the bath according to the drain manufacturer's instructions. Do not connect the trap at this time.

E. 根据排水装置安装的说明，将排水装置安装到浴缸上。注意此时不要连接存水弯。

**F. Partially Install Bath Drain**

**F. 局部安装浴缸的排水配件**

Unpack drain (17295T-CP) and ensure that the Control Cable ⑩ is not twisted or awkwardly bent. Please ensure that the bath is placed on wooden blocks or bricks to protect the waste body under the bath.


Installation steps:

- 1) Fit Drain Gasket Thin ⑤ to Strainer ④
- 2) Insert Strainer ④ into hole in bath from upper side.
- 3) Fit Drain Gasket Thick ⑥ to Drain Body Assy ⑨ and Drain Body Assy ⑨ to underside of bath.
- 4) Strainer ④ to Drain Body Assy ⑨ by means of Fix Screw Strainer ③. **Do not tighten firmly at this stage.**

打开(17295T-CP)排水包装，确保控制线⑩没有扭曲打结。请将浴缸放置在木架或砖墙上保障排水配件在浴缸底下。

安装步骤：

- 1) 将橡胶密封圈⑤垫于去水滤网④处。
- 2) 从浴缸的上方将去水滤网④插入排水口。
- 3) 将橡皮密封圈⑥垫于去水本体⑨上并置于浴缸底部排水口下端。
- 4) 用固定螺栓③固定滤网④和去水本体⑨，注意在此时不要将螺丝旋得太紧。

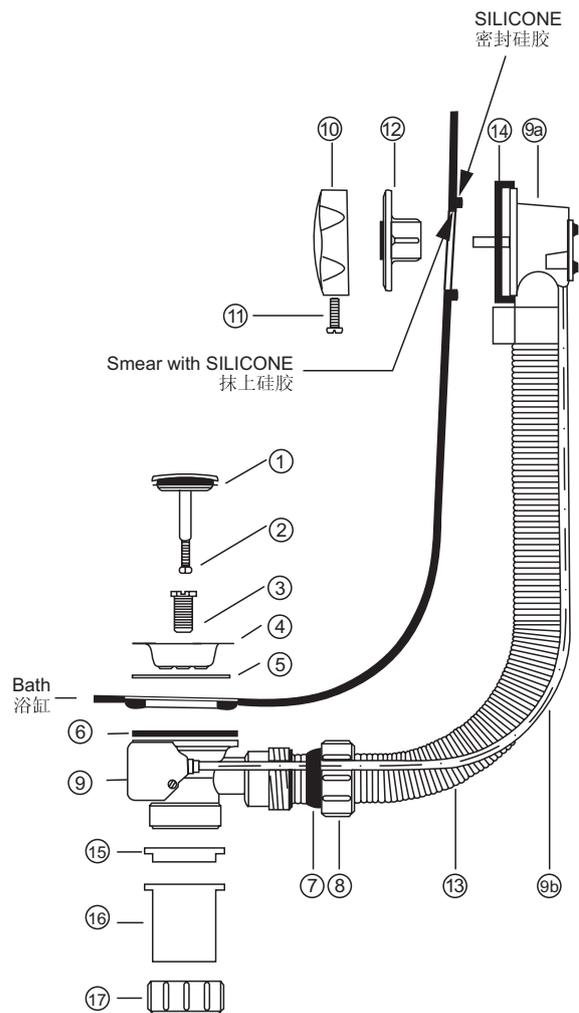


- 5) Apply a bead of silicone around the overflow hole, on the outside of the bath. Smear with silicone the inside wall of overflow hole as illustrated.
- 6) Fit 2nd. Gasket Overflow<sup>®</sup> (14) to Over Flow Body<sup>®</sup> (9a) and offer this assembly to back of overflow opening, ensuring they are centrally positioned and then screw Overflow Cover<sup>®</sup> (12) on to central spindle . Control Cable<sup>®</sup> (9b) is not twisted before fully tightening Overflow Cover<sup>®</sup> (12) . In the event that the Control Cable is twisted or jammed, the pop-up mechanism will not operate.
- 7) Centralise Grating (4) with Waste Body (9) by lining up ribs of each directly in line and tighten Fixing Screw (3) with a coin or suitable screwdriver.  
**Do not overtighten** - handtight plus 1/4 turn should be sufficient.
- 8) Adjust Plug (1) by twisting Control Knob (10) to the 'up' position and then fix Plug height by use of Adjusting Screw (2).
- 9) Secure Flexible Pipe (13) by tightening Compression Nut (8) against Compression Seal (7) .
- 10) Set drain pipe (16), put on nut drain pipe (17), and then tighten gasket (15).  
Check if the pop-up mechanism is operating correctly. If it doesn't the Plug height still needs adjusting or Control Cable might be twisted or jammed. Proceed with bath installation only after you've ensured the drain is operating correctly.

- 5) 从浴缸的外面朝溢水口处涂一圈密封硅胶。再在溢水口内壁处涂上硅胶。(如图)
- 6) 将另一块橡皮密封圈(14)垫于溢水头(9a)上, 然后放在浴缸溢水口的背面并确保它们置中放置。用螺丝将溢水面板(12)固定到中心轴上。在拧紧溢水面板(12)前请确保控制线(9b)没有扭曲打结。控制线打结或扭曲会造成提拉式去水工作失灵。
- 7) 将滤网(4)和去水本体(9)置中排列并排成一线后用硬币或电钻来固定螺栓(3)。  
  
不要过分拧紧-----用手上紧后再拧紧至合适松紧。
- 8) 旋转控制钮(10)来调节塞子(1)到放水的位置, 然后使用调节螺丝(2)固定塞子的高度。
- 9) 旋紧在压缩密封圈(7)后的压缩螺母(8)来调节和固定软管(13)。
- 10) 安装排水管(16), 套上排水管螺帽(17), 并垫上密封垫片(15)旋紧。  
检查使用提拉式排水正常工作。如果塞子不能够提拉到工作高度的话, 需要调节控制线看它是否扭曲打结。在您检查并确认浴缸排水工作正常后才进行浴缸的下步安装。


## G. Cut out Bath mount Only for 1337T Series

- 1). Using the template supplied, cut along dotted lines as shown.  
This will give you the dimensions for the inset cut out when cutting the bath mount.
- 2). Ensuring your Bath mount top is level.  
Tape the template to the Bath mount top.  
Using template as a guide, trim out Bath mount material for the bath.

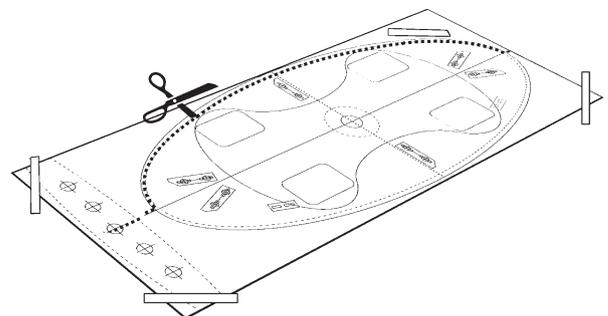

## G. 切割台面 仅适用于1337T系列

- 1). 使用所附的切割图, 如图所示沿虚线剪开。  
在您切割台面时, 这将提供您嵌入式安装所需的切割尺寸。
- 2). 确保安装台面水平。  
将切割图固定在浴缸安装台面上。  
如切割图大小, 仔细切割出台面。

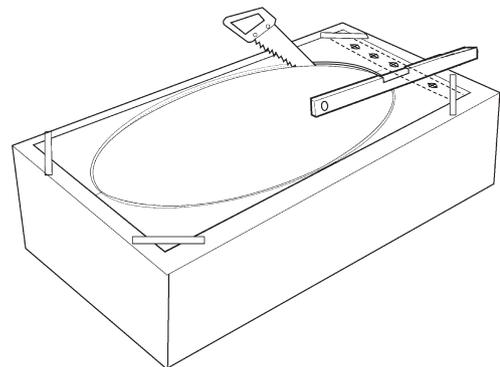

## INSTALL THE BATH

## 安装浴缸

**⚠ CAUTION: Risk of product damage.** Do not lift the bath with airjets by the air channels or blower motor, or use the air channels or blower motor for structural support of the bath.

**⚠ CAUTION: Risk of product damage.** Do not support the bath by the rim.

If the subfloor is not level, shim the bath support blocks as necessary.

**⚠ 警告：存在产品受损危险。** 请不要利用通气管或气泵抬起泡泡浴缸，或者利用通气管或气泵作为浴缸的支撑物。

**⚠ 警告：存在产品受损危险。** 请不要仅靠浴缸边缘支撑浴缸。

如果底层地面不够水平，根据需要，利用垫片调整浴缸支撑脚的高度。

### A. Option Using a Cement or Mortar Bed


**NOTE:** Do not use gypsum cement or drywall compound for this application, as they will not provide an acceptable, durable bond.

- Spread a 50mm thick layer of cement or mortar on the subfloor where the bath will be set. This will help secure, level, and support the unit. Clear all the material away from the support block locations.
- Position a piece of plastic drop cloth material on top of the cement or mortar bed.
- With help, carefully lift the bath into place, and make sure the support blocks do not rest in the bed Material.
- Insert the drain tailpiece into the trap. Make sure the bath is level and resting on all support blocks.
- Remove the protective tape from the rim.

### A. 选择使用混凝土或砂浆层


**注意：**在此操作中，请不要使用石膏混凝土或者清水墙混合物，因为他们不能提供足够的持久的粘合力。

- 在浴缸将要置入的位置的底层地板上涂上**50毫米**厚的一层混凝土或者砂浆层材料。这将有助于支撑浴缸，让浴缸更安全、更水平。将支撑脚将要置入的位置上所有的材料清除干净。
- 在混凝土或砂浆层上放一片塑料布类材料。
- 将浴缸小心地放置到位，确保支撑脚没有位于混凝土或砂浆层上。
- 将排水件插入活板。确保浴缸处于水平位置，所有的支撑脚放置到位。
- 将浴缸边缘的保护胶带移走。

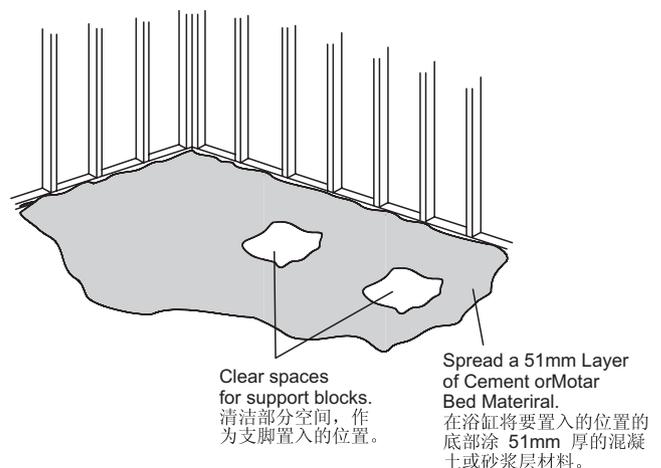

## B. Option Using Construction Adhesive

- Apply a generous amount of high-quality construction adhesive to the bottom of the support blocks.
- With help, carefully lift the bath into position.
- Insert the drain tailpiece into the trap. Make sure the bath is level and resting on all support blocks.
- Remove the protective tape from the rim.

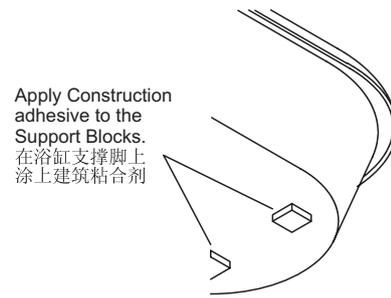


## B. 选择使用建筑粘合剂

- 在支撑脚底部涂上大量的优质建筑粘合剂。
- 将浴缸小心地放置到位，确保浴缸处于水平位置，所有的支撑脚放置到位。
- 将浴缸边缘的保护胶带移走。

## C. Option Using Silicone Sealant

- With help, Carefully lift the bath into position.
- Insert the drain tailpiece into the trap. Make sure the bath is level and resting on all support blocks.
- Remove the protective tape from the rim. Apply a continuous bead of high-quality silicone sealant around the entire rim of the bath.
- Allow the sealant to cure according to the manufacturer's instructions.

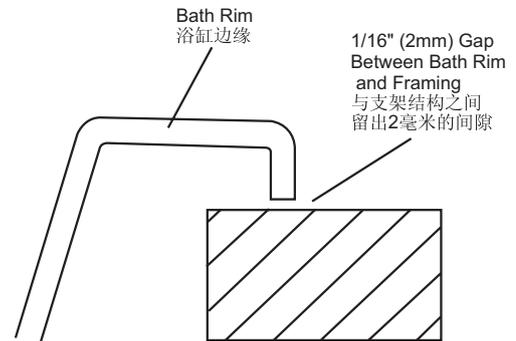

## C. 选择使用硅胶密封剂

- 将浴缸小心地放置到位。
- 将排水件插入活板。确保浴缸处于水平位置，所有的支撑脚放置到位。
- 将浴缸边缘的保护胶带移走。在整个浴缸边缘周围连续涂上一层优质硅胶密封剂。
- 根据说明使硅胶干燥。

## D. Install the Plumbing

**CAUTION: Risk of property damage.** Ensure a watertight seal on the bath drain.

- Connect the drain to the trap according to the manufacturer's instructions.

**NOTICE:** An access panel will simplify future maintenance.

- Install the faucet valving according to the faucet manufacturer's instructions. Do not install the faucet trim until instructed. Open the hot and cold water supplies, and check the supply connections for leakage.
- Run water into the bath, and check the drain connections for leakage.

## D. 管道安装

**警告：存在产品受损危险。** 请确保浴缸落水装置的水密性。

- 根据落水装置的说明，将落水装置和下水连接起来。

**注意：** 预留检修门将有助于将来的维修。

- 根据龙头生厂商的说明，安装水龙头阀门。在没有相关指示前，请不要安装龙头装饰物。打开冷热水进水口，检查供水连接是否漏水。
- 将水注入浴缸，检查排水连接是否漏水。

## E. Make Electrical Connections

**⚠ WARNING: Risk of electric shock.** To reduce the risk of electrical shock, connect the blower motor to a properly grounded, grounding-type receptacle protected by Ground-Fault Circuit-Interrupters (GFCI's). Do not remove the plug grounding pins. Do not use grounding adapters.

**NOTE:** The bath with airjets model number is printed on a label near the blower motor. This label also identifies the electrical rating.



- Your Kohler bath with airjets is equipped with a cord and plug. The blower motor has been wired at the factory. A licensed electrician must install a dedicated GFCI-protected, 220 V, 10 A, grounded outlet. Locate the outlet behind the bath, and within 610mm of the blower motor.
- Plug the blower motor into this outlet.
- Clean the area of all dust and debris.

### E. 管道安装电路连接

**⚠ 警告：存在触电危险。**为降低触电危险，请将气泵和正确接地的受接地故障线路断路器GFCI保护的接地型插座相连接。请不要移动接地插头。不要使用接地适配器。


**注意：**泡泡浴缸的产品型号印刷在靠近气泵的一边标签上。此标签上同时注明了使用的额定电压和电流。

- 您的科勒泡泡浴缸附带有电线和插头。气泵的所有电路连接已经在工厂完成。请由一名持证电工将安装一个专用的220伏特、10安培的受到GFCI保护的接地插座。插座将位于浴缸后面，离气泵的距离在610毫米以内。
- 将气泵插头插入此插座。
- 将气泵周围的尘土和碎屑清除干净。

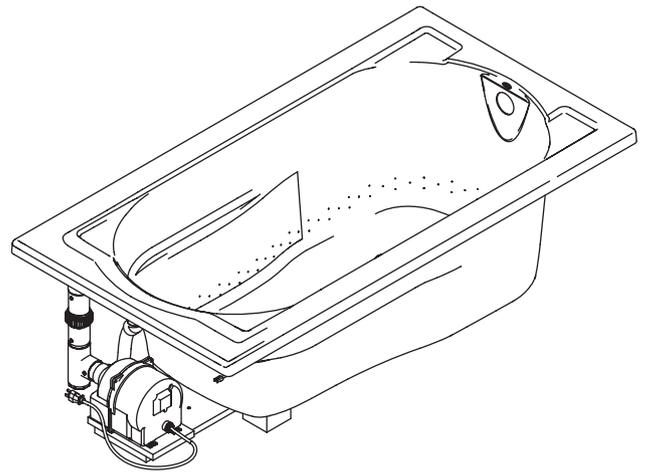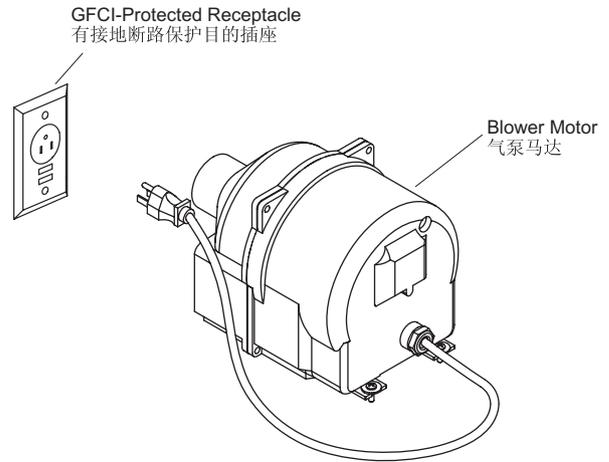

## F. Test Run the Bath with Airjets

- For information on unit operation, refer to the "Confirm Proper Operation" section.
- Check all electrical connections, and make sure the electrical power to the bath with airjets is on.
- Make sure all piping connections in the air harness are secure.
- Verify that the blower motor is secure.
- Temporarily remove the plastic drop cloth or other protective sheeting from the bath.
- Fill the bath to a level at least 50mm above the top of the highest airjet.
- Check the drain piping for leaks. Repair any leaks.
- Operate the bath and check for air flow through the airjets. Check the air piping for air leaks.
- Stop the bath and drain the water.
- Return the plastic drop cloth or other protective sheeting to the bath. Check the drain connections for leakage.

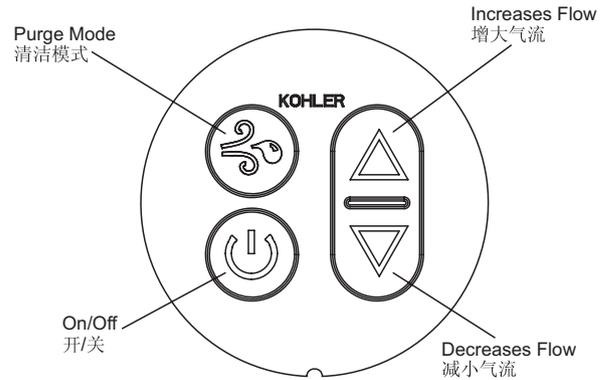

## F. 测试泡泡浴缸的运转

- 如需浴缸操作信息，请参照“确认正确操作”部分
- 检查所有的电路连接，确保浴缸连接电源部分是打开的。
- 确保气管道的所有管道连接安全。
- 核实气泵安全。
- 暂时从浴缸上拿走塑料布或其他保护性材料。
- 注水入浴缸，水量至少达到最高的气口顶部以上50毫米。
- 检查排水管道是否漏水。如果有任何漏水现象，及时修理。
- 启动浴缸，检查气口的气流状况。检查气管道是否漏气。
- 关闭泡泡浴缸，进行排水。
- 将塑料布或其他保护性材料放回原位。检查落水接头有无渗漏。

## G. Drop-In Models:


**CAUTION: Risk of product damage.** Do not support the weight of the bath by the rim.

For sunken type installation, construct the ceramic or marble tiles. Seal the joints between the bath rim and the tiled wall with silicone sealant.

### G. 无裙边浴缸类型:

**注意！！** 当心损坏浴缸！不要靠浴缸边缘支撑浴缸的重量。

对嵌入式安装，在敷上瓷砖或大理石贴面后，再用硅胶密封浴缸边缘和贴面的连接处。

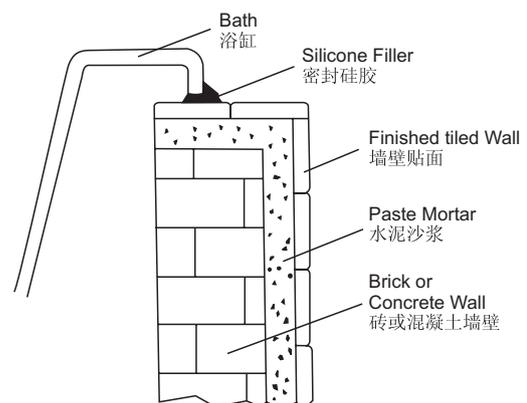

## H. Drilling And Cutting Acrylic

**DRILLING:** Small holes can be drilled with a twist drill, but the cutting edge **MUST** be backed off with an oil stone (the sharp edge dulled). Large holes must be drilled with a hole saw. Maximum drill size-12mm. Drill speeds-6mm × 1800 RPM-12 mm × 900 RPM.

**NOTE:** Always drill from acrylic surface.

**CUTTING:** If for any reason the acrylic requires cutting, use a fine tooth hacksaw and proceed with caution. Edges can be smoothed with a second-cut file and medium-fine sandpaper. If the surface of the acrylic should happen to be damaged, it can be restored by polishing with an abrasive cleaner. Deep scratches can be removed by rubbing with 600 grade wet & dry sandpaper then polishing.

## H. 在亚克力表面上钻孔和切割

**钻孔:** 可用一麻花钻头钻小孔, 但切削刃必须用一块油石磨钝。大孔须用孔钻加工。麻花钻头的最大尺寸为12mm, 速度为6mm × 1800转/分至12mm × 900转/分。

**注意:** 钻孔要从亚克力表面钻向浴缸背面。

**切割:** 如果因故需要切割亚克力, 请用优质齿型钢锯仔细切割。边缘可用一旧锉刀及中等砂纸磨平。如果亚克力表面受损, 可用磨蚀性清洁剂抛光, 将其恢复。深度刮伤可用600号水砂纸磨平, 然后抛光。

## I. Clean-Up After Installation

- Clean the area around the blower motor of all dust and debris.
- Use warm water and a liquid detergent to clean the surface of the bath with airjets. **Do not use abrasive cleansers**, as they may scratch and dull the surface. **Do not use powdered cleaners unless the cleaner is fully dissolved in water.** Solid substances could block the airjets. **Do not use bleach or ammonia cleaning solutions.** Chemically active cleaning solutions can damage the bath surface. Refer to the homeowners guide for normal cleaning recommendations.

## I. 安装之后的清理工作

- 将气泵周围的尘土和碎屑清理干净。
- 使用温水和液体清洁剂清洗泡泡浴缸表面。请**不要**使用磨损性的清洗剂, 因为他们会擦伤浴缸表面, 或者损伤浴缸表面的光洁度。请**不要**使用粉状清洁剂, 除非这种清洁剂能够完全融于水。固体物质会堵塞气口。也不要使用漂白剂或者含氨类清洁剂。含化学物质的清洁剂将有损于浴缸表面。如果需要正常的清洁剂和清洁方法, 请参照家庭用户指南。

## BATH OPERATION

## 浴缸操作

### A. Fill the Bath

 **CAUTION: Risk of product damage.** Ensure that the area around the blower motor is free of sawdust, insulation, dirt, or other small loose debris. Such material could clog the blower motor air ducts and reduce the air flow through the blower motor.

**NOTE:** Please read these steps carefully before you operate your bath with airjets. Troubleshoot any problems using the "Troubleshooting" section.


### A. 注水入浴缸

 **警告: 存在产品受损危险。** 确保气泵周围区域没有任何锯屑、绝缘物、尘土、或者其他小的松散的碎屑。此类物品会堵塞气泵通气口, 降低通过气泵的空气流动。

**注意:** 在操作你的泡泡浴缸之前, 请仔细阅读这些步骤。如果有任何故障, 请参照“故障排除”部分。

## B. Keypad Operation

- **On/Off** - Turns the blower motor on and off.  
Pressing the switch once starts the blower motor at a midrange speed. Pressing the button again stops the blower motor. The blower motor automatically stops after about 20 minutes of operation. The blower motor can be restarted by pressing the On/Off button.
- **Purge Mode** - Initiates the purge cycle manually.  
The purge cycle blows any residual water out of the air channels after the bath has been drained. Pressing the button once starts the blower motor at low-speed. The blower motor stops automatically after about two minutes. Pressing the button again before the cycle ends will stop the blower motor. Note that this product also has an automatic purge cycle, which initiates about 30 minutes after the blower has stopped.
- **Increases Flow** - Increases the air flow.
- **Decreases Flow** - Decreases the air flow.

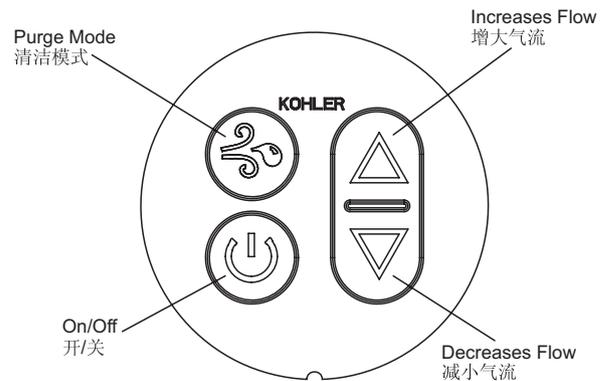

## B. 控制面板操作

- 开/关 打开和关闭气泵。摁下按钮一次，则气泵以中等速率开始运转。再次摁下按钮，则气泵停止运转。在运转大约20分钟后，气泵将自动关闭。摁下开/关按钮，则气泵再次开始运转。
- 清洗模式 手动启动清洗循环。在浴缸排水完毕后，清洗循环将吹干所有气通道中残留的水分。摁下清洗模式按钮，则气泵以较低速率开始运转。在运转大约2分钟后，气泵将自动关闭。在清洗循环终止之前摁下按钮，气泵将停止运转。请注意，此产品有自动进行清洗循环的功能，在气泵停止运转后大约30分钟左右自动启动。
- 气流增强 增强气流
- 气流降低 降低气流

## C. Preliminary Checks

- Temporarily remove all access panels.
- Verify that the union connection at the check valve is securely hand tightened.
- Verify that the screws are installed in the PVC air piping at the blower motor and at the check valve.
- Verify that cable ties support the air piping.
- Verify that the blower motor is secure.
- Verify that the keypad cable is securely connected at the user keypad and at the blower motor.
- Fill the bath to a level at least 50mm above the top of the highest airjet.

## C. 初步检查

- 暂时移走所有的检修门。
- 请核实单向阀的管子接头已经安全地手动拧紧。
- 请核实气泵和单向阀的PVC气管上的螺丝正确安装。
- 请核实气管道得到适当支撑。
- 请核实气泵的安全。
- 请确认控制面板和水泵与所有线路安全连接。
- 注水入浴缸，水量至少达到最高的气口顶部以上50毫米。

## D. Confirm Air System Operation

- Press the power button on the user keypad.
- Observe that the blower motor starts at a midrange speed.
- Observe that air is blowing through all of the airjets.
- Press the up button on the user keypad.
- Verify that the air flow increases.
- Press the down button on the user keypad.
- Verify that the air flow decreases.
- Press the power button on the keypad to stop the blower motor.

## D. 确认气泡系统的操作

- 摁下控制面板上的开关按钮。
- 观察确认气泵以中等速率开始运转。
- 观察并确认所有的气泡孔都有气泡冒出。
- 摁下控制面板上的气流增强按钮。
- 核实气流增强。
- 摁下控制面板上的气流降低按钮。
- 核实气流降低。
- 摁下控制面板上的电源按钮，终止气泵的运转。

---

## E. Confirm Manual Purge Operation

- Drain the bath.
- When the bath has drained, press the purge button once.
- Observe that the blower motor starts at low speed and blows any residual water from the air channels.
- Observe that air comes out of the airjets.
- Verify that pressing the purge button again stops the blower motor.
- Press the purge button to restart the manual purge.
- Observe that the blower motor stops automatically after about two minutes.

## E. 确认手动清洗操作

- 排干浴缸的水。
- 在水排干后，摁下清洗按钮。
- 观察并确认气泵以低速开始运转，并吹干所有气管道中残留的水分。
- 观察并确认气泡从气孔中喷出。
- 核实再次摁下清洗按钮，气泵将停止运转。
- 摁下清洗按钮，重新启动手动清洗循环。
- 观察并确认气泵在大约两分钟后自动停止运转。

---

## F. Confirm Automatic Purge Operation

- Press the power button.
- Press the power button again to turn off the blower. Note the time.
- If filled, drain the bath.
- Observe that the blower motor starts in the purge cycle after about 30 minutes.
- Observe that the blower motor stops automatically after about two minutes.

## F. 确认自动清洗操作

- 摁下电源开关。
- 再次摁下电源开关，停止气泵的运转，请记下时间。
- 如果浴缸中有水，先排干。
- 观察并确认气泵在大约30分钟后自动开始运转，进行清洗循环。
- 观察并确认气泵在大约两分钟后自动停止运转。

## TROUBLESHOOTING CHART

SYMPTOMS	PROBABLE CAUSES	RECORRECTIVE ACTION
1. Bath with airjets does not start.	A. No power to blower motor.	A. Set/reset GFCI or ELCB breaker; check wiring.
	B. User keypad cable loose or damaged.	B. Check wire connections. If necessary, replace user keypad cable.
	C. User keypad does not work.	C. Check wire connections. Replace user keypad.
	D. Blower motor does not work.	D. Replace blower motor.
2. Blower motor starts, but there are few or no bubbles.	A. Blower motor is disconnected.	A. Connect blower motor to air harness.
	B. Blower motor air flow is restricted.	B. Clean the area around the blower motor. Ensure adequate ventilation.
3. Bath stops automatically before 18 minutes.	A. GFCI or ELCB trips.	A. Identify source of fault and correct.
	B. Motor overheated and protection device activated.	B. Check for blockage at motor vents. Remove blockage and allow motor to cool.
4. Bath does not stop automatically after 22 minutes.	A. Blower motor does not work.	A. Replace blower motor.
5. Blower motor does not stop when power button on user keypad is pressed.	A. User keypad cable loose or damaged.	A. Check wire connections. If necessary, replace user keypad cable.
	B. User keypad does not work.	B. Replace user keypad.
6. Blower motor operates but variable speed feature does not work.	A. User keypad cable loose or damaged.	A. Check wire connections. If necessary, replace user keypad cable.
	B. User keypad does not work.	B. Replace user keypad.
	C. Blower motor does not work.	C. Replace blower motor.
7. Automatic purge cycle does not occur.	A. Blower motor does not work.	A. Replace blower motor.
8. Manual purge cycle does not Work.	A. User keypad cable loose or damaged.	A. Check wire connections. If necessary, replace user keypad cable.
	B. User keypad does not work.	B. Replace user keypad.
	C. Blower motor does not work.	C. Replace blower motor.

## 故障处理表

现象	原因	处理措施
1. 气泡浴缸不能启动。	A. 气泵未能通电。	A. 启动/重启GFCI或ELCB断路器；检查线路。
	B. 控制面板线路松弛或受损。	B. 检查线路连接。如果需要，更换控制面板线路。
	C. 控制面板不能启动。	C. 检查线路连接。更换控制面板。
	D. 气泵不工作。	D. 更换气泵。
2. 气泵启动，但是很少，甚至没有气泡。	A. 气泵接触不良。	A. 连接气泵和气管道
	B. 气泵气管道堵塞。	B. 将气泵周围清理干净。确保足够的通风。
3. 18分钟以前浴缸自动停止运转。	A. GFCI或ELCB故障。	A. 找到故障原因并排除。
	B. 气泵过热，保护装置启动。	B. 检查气泵通风口是否堵塞。移走堵塞物，并让气泵冷却。
4. 22分钟以后浴缸没有自动停止运转。	A. 气泵不工作。	A. 更换气泵。
5. 摁下控制面板上的电源按钮后，气泵不停止运转。	A. 控制面板电线松弛或受损。	A. 检查线路连接，如果有必要，更换控制面板电线。
	B. 控制面板不工作。	B. 更换控制面板。
6. 气泵运转，但是各种速度没有差别。	A. 控制面板电线松弛或受损。	A. 检查线路连接，如果有必要，更换控制面板电线。
	B. 控制面板不工作。	B. 更换控制面板。
7. 不能进行自动清洗循环。	A. 气泵不工作。	A. 更换气泵。
8. 不能进行手动清洗循环。	A. 控制面板电线松弛或受损。	A. 检查线路连接。如果有必要，更换控制面板电线。
	B. 控制面板不工作。	B. 更换控制面板。
	C. 气泵不工作。	C. 更换气泵。

## IMPORTANT CONSUMER INFORMATION

## 重要的用户资料

### Consumer Responsibilities

Please confirm that the bubble massage bath is installed according to the installation instructions.

Massage system should be used at least once a month to avoid the possibility that the electrical fittings be damaged because of excessive moisture.

Cleaning Acrylic Surfaces: Do not use abrasive cleansers on any acrylic surfaces, as they will scratch and dull the surface. Wipe out the bath after each use to prevent a build-up of soap and scum.

If the acrylic surface becomes dull, an automotive type rubbing compound \*may be used on the unit, followed by an application of paste wax.

\*We recommended:  
Rubbing compound mequiars mirror glaze 28 metal polish (import product) or "green oil".

### 用户的责任

请确认泡泡浴缸按照本安装说明书的要求被安装。

按摩系统至少每个月使用一次，以避免电气零件因过度受潮而导致损坏的可能。

清洗亚克力表面：请勿在亚克力表面使用磨损性的清洁用具，以免擦伤浴缸表面，使其失去光泽。每次使用后，将浴缸擦干，以防止肥皂和污垢沉积。

若亚克力表面失去光泽，先用汽车抛光剂\*，然后再用粗腊打亮。


\*我们推荐使用以下2种抛光剂：  
① Mequiars 镜面光亮28金属上光剂。(进口)  
② 抛光膏(绿油)。

# 科 THE BOLD LOOK 勒 OF KOHLER

全 球 厨 卫 经 典

## 史瑞夫 SERIF 瑞嘉娜 REGATTA

维修零件图  
SERVICE PARTS PAGE  
泡泡浴缸  
BUBBLE MASSAGE BATH  
K-1337T-G1/G2, K-11303T-G1/G2

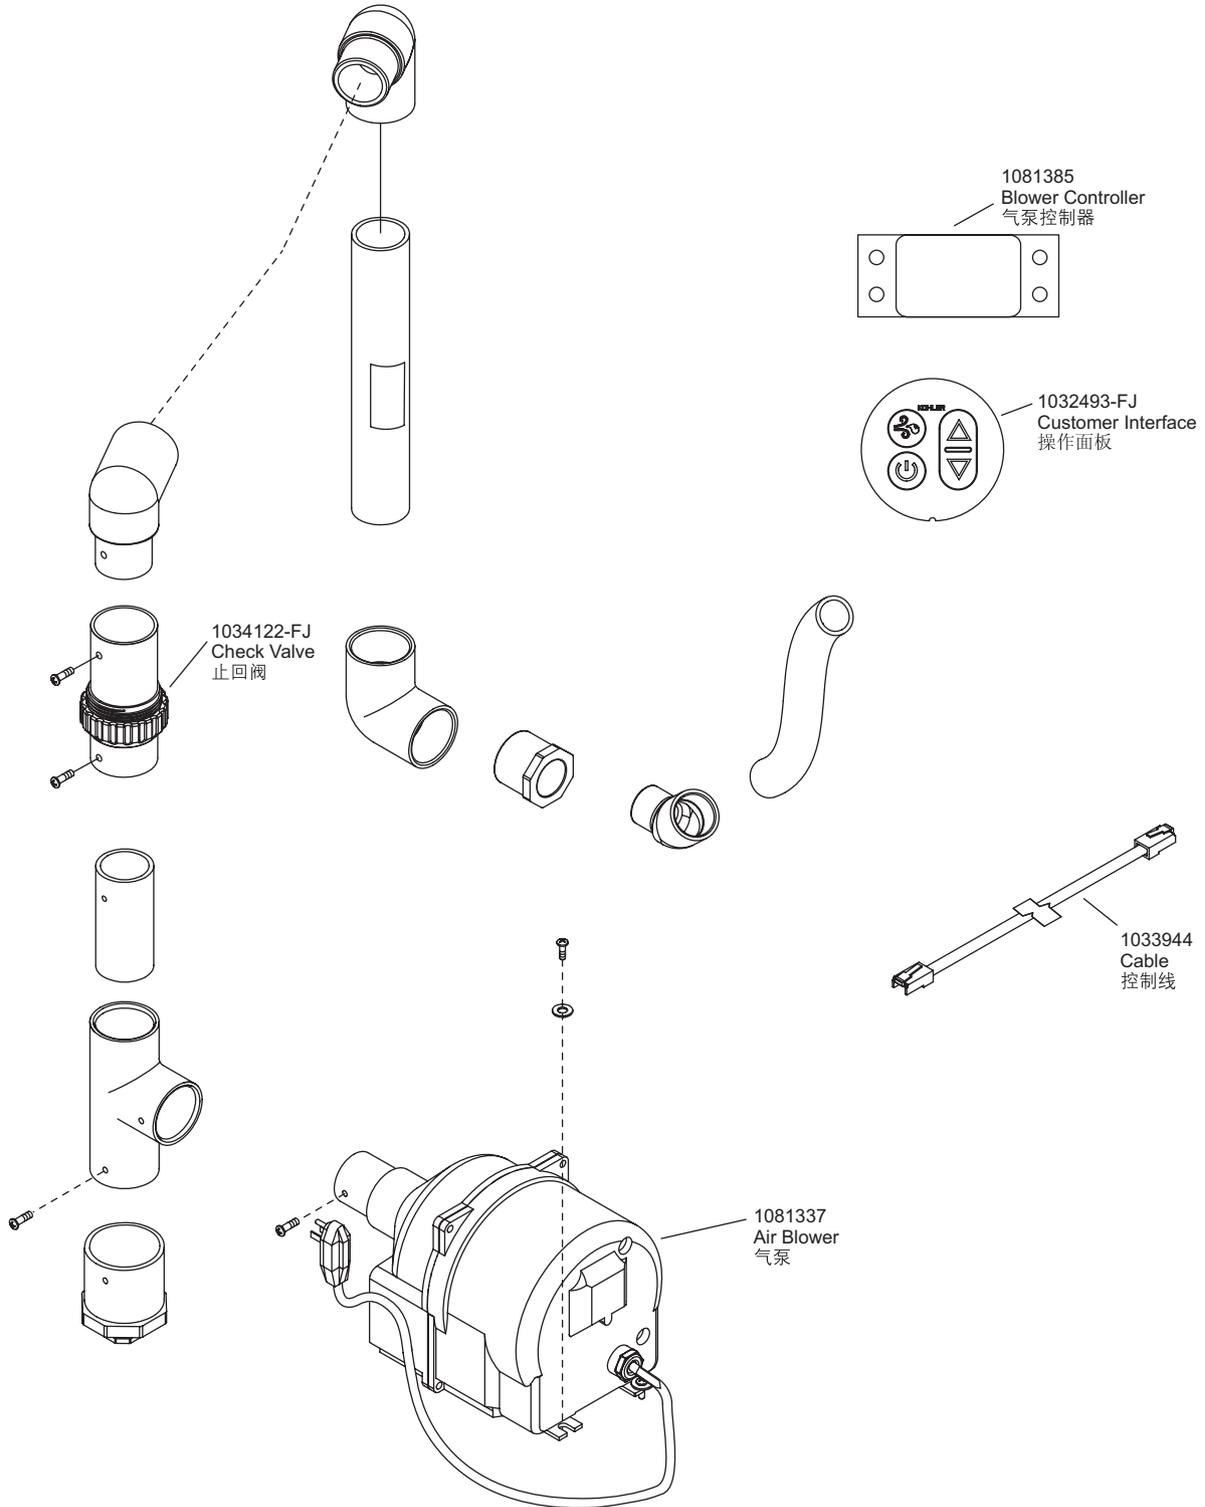

\* 订货时必须指明表面处理/颜色代码  
\* Color code must be specified when ordering.