

SYMPTOMS	CORRECTIVE ACTION	PARTIAL SERVICE PARTS
1. Poor flush.	A. Adjust tank water level to match the waterline. B. Fully open water supply shut-off valve. C. Clear obstruction in trapway, jet, or bowl rim holes. D. Clear obstruction in soil pipe or vent pipe.	1034693** (LH) 1036058** (RH) Trip Lever Kit 83451 Valve Head 78132 Trip Lever Nut 83143 Seal 1033209 Hose 51261 Clip Waterline 1044459 Fill Valve 1044458 Flush Valve 84678 Locknut 42398 Washer 85307 Washer 42397 Nut 1039444 Flapper 83996 Gasket **Finish/color code required.
2. No flush.	A. Reconnect the flapper chain to trip lever or flush valve. B. Adjust flapper chain assembly to remove excessive slack.	
3. Fill valve turns on/off by itself without toilet being flushed, or runs allowing water to enter tank.	A. Adjust flapper chain for proper slack so flapper isn't held off flush valve seat. B. Clean or replace flapper if flapper is worn, dirty, or misaligned with flush valve seat or flush valve seat is damaged. Replace flush valve seal or flush valve. C. Clean fill valve seat/seat washer of debris, or replace piston/seat washer assembly. D. Replace fill valve if valve float sinks. E. Adjust tank water level if too high.	
4. Long tank fill cycle.	A. Fully open water supply shut-off valve. B. Clean fill valve inlet, valve head, or supply line. Flush lines.	
5. Noisy tank fill cycle.	A. Partially close the water supply shut-off valve if water pressure to the toilet is too high. Check toilet performance following any such adjustment. B. Remove dirt or obstruction in valve head, flush line.	
WARNING: Use only genuine Kohler parts as shown to avoid property damage.		
If unable to correct the problem, contact Customer Service: 1-800-4-KOHLER (USA), 1-800-964-5590 (Canada), or www.kohler.com.		

1044018-6-A

©2004 Kohler Co.