

**KOHLER**®




**BODYSPA™** Personal Hydro-Massage System:  
10-Jet Tower Model

Owner's Manual



**IMPORTANT SAFETY INSTRUCTIONS.  
READ AND FOLLOW ALL INSTRUCTIONS.  
INSTRUCTIONS PERTAINING TO RISK OF FIRE, ELECTRIC  
SHOCK, OR INJURY TO PERSONS.  
SAVE THESE INSTRUCTIONS.**

 **WARNING: Risk of Injury or Electric Shock.** When using this unit, always follow basic precautions, including the following:

The unit must be connected only to a circuit that is protected by a Ground-Fault Circuit-Interrupter (GFCI). Such a GFCI should be provided by the installer and should be tested on a routine basis.

To test the GFCI, press the test button. The GFCI should interrupt power. Press the reset button. Power should be restored.

If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the bath without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. **DO NOT** use this hydro-massage bath. Disconnect the hydro-massage bath and have the problem corrected by a qualified service representative before using.

To reduce the risk of electric shock, connect only to a properly grounded, grounding type receptacle, protected by a Ground-Fault Circuit-Interrupter (GFCI). Do not remove the plug's ground pin. Do not use a grounding adapter.

A pressure wire connector is provided on the exterior of the pump or control within this unit to permit connection of a bonding conductor between this unit and all other exposed metal in the vicinity, as needed to comply with local requirements.

**IMPORTANT!** Flush your BodySpa™ system twice a month or more depending upon usage, as described on Page 8.

**DO NOT** operate this unit without the guard on the suction fitting.


Never drop or insert any object into any opening.

Use this unit only for its intended use as indicated in this manual. **DO NOT** use attachments not recommended by the Kohler Co.

Keep small objects such as bath toys and bathing accessories out of the BodySpa™ while the pump is operating.

**NOTE:** The BodySpa™ action can cause even a small amount of bubble bath, bath soap, shampoo, or bath oil to foam excessively. For this reason, refrain from using these products during the whirlpool cycle.

Repeated use of personal care products containing oils can damage plastic whirlpool components. Do not use heavy, vegetable-based shampoos or bath oils.

 **DANGER: Risk of Injury.** Hot whirlpool baths can put certain stresses on the body, as does any hot bath, shower, sauna, or steam bath. **Prolonged immersions in hot water may induce hyperthermia.** Symptoms of hyperthermia include an increase in the internal body temperature, dizziness, lethargy, drowsiness, and fainting. The effects of hyperthermia include (1) failure to perceive heat, (2) failure to recognize the need to exit the bath, (3) unawareness of impending hazard, (4) fetal damage in pregnant women, (5) physical inability to exit the bath, and (6) unconsciousness resulting in the danger of drowning. **Warning – The use of alcohol, drugs, or other medication can greatly increase the risk of fatal hyperthermia.**

 **DANGER: Risk of injury.** To reduce the risk of injury, do not permit children to use this unit unless they are closely supervised at all times.

Water temperature in the BodySpa™ should not exceed 104° F (40° C).

Your new Kohler BodySpa™ has been listed by Underwriter's Laboratories, thus ensuring safety for you and your family. Your new BodySpa™ also conforms to rigid ANSI and IAPMO standards set within the plumbing industry.

# TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS .....	2
INTRODUCTION .....	3
HOW YOUR BODYSPA™ WORKS .....	4
Your BodySpa™ System .....	4
BodySpa™ Basics .....	4
SPECIAL BODYSPA™ FEATURES .....	6
The Foot Bath .....	5
The Tower .....	5
The Waterfall .....	5
The Body Jets .....	5
The Adjustable Seat .....	6
The Keypad .....	6
The Pump And Heater .....	6
OPERATING INSTRUCTIONS .....	6
Getting Ready To Use Your BodySpa™ .....	6
Using Your BodySpa™ .....	7
Helpful Tips To Increase Enjoyment Of Your BodySpa™ .....	7
CARE AND CLEANING INSTRUCTIONS .....	8
Cleaning Your Acrylic BodySpa™ Foot Bath ...	8
Cleaning Your BodySpa™ Tower .....	8
Flushing Your BodySpa™ System .....	8
Cleaning Your BodySpa™ Door Enclosure .....	8
Cleaning Your BodySpa™ Seat .....	8
TROUBLESHOOT THE BODYSPA™ SYSTEM ..	9
IMPORTANT CONSUMER INFORMATION .....	11
Requesting Service .....	11
Limited One-Year Warranty .....	11

## 1. INTRODUCTION

All information in this manual is based upon the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Identify and record the BodySpa™ model and serial number below (found at the pump end of the BodySpa™ bath):

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_ Date of Manufacture \_\_\_\_\_

## 2. HOW YOUR BODYSPA™ PERSONAL HYDRO-MASSAGE SYSTEM WORKS

### A. YOUR BODYSPA™ SYSTEM

Your BodySpa™ is designed to give you a complete body hydro-massage for an invigorating experience. The BodySpa™ gives you complete freedom of movement (and choice) to concentrate your hydro-massage on specific areas of your body. An adjustable seat can be used or moved back out of your way with ease.


An easy-to-read keypad is mounted inside the enclosure for quick access. With it, you can individualize each BodySpa™ experience by selecting the overhead Waterfall feature or any combination of five pairs of Body Jets. You can vary the intensity of your BodySpa™ hydro-massage from gentle to vigorous with the touch of a finger.

### B. BODYSPA™ BASICS

Your BodySpa™ needs less than 40 gallons of water to operate because it recirculates the tempered water you put in the bath basin.

The BodySpa™ recirculates water from the foot bath basin, through the pump and heater, out the Body Jets, and back into the foot bath basin. This cycle continues as long as your BodySpa™ is running.


**After reading this manual, contact your Kohler dealer if you have any questions.**

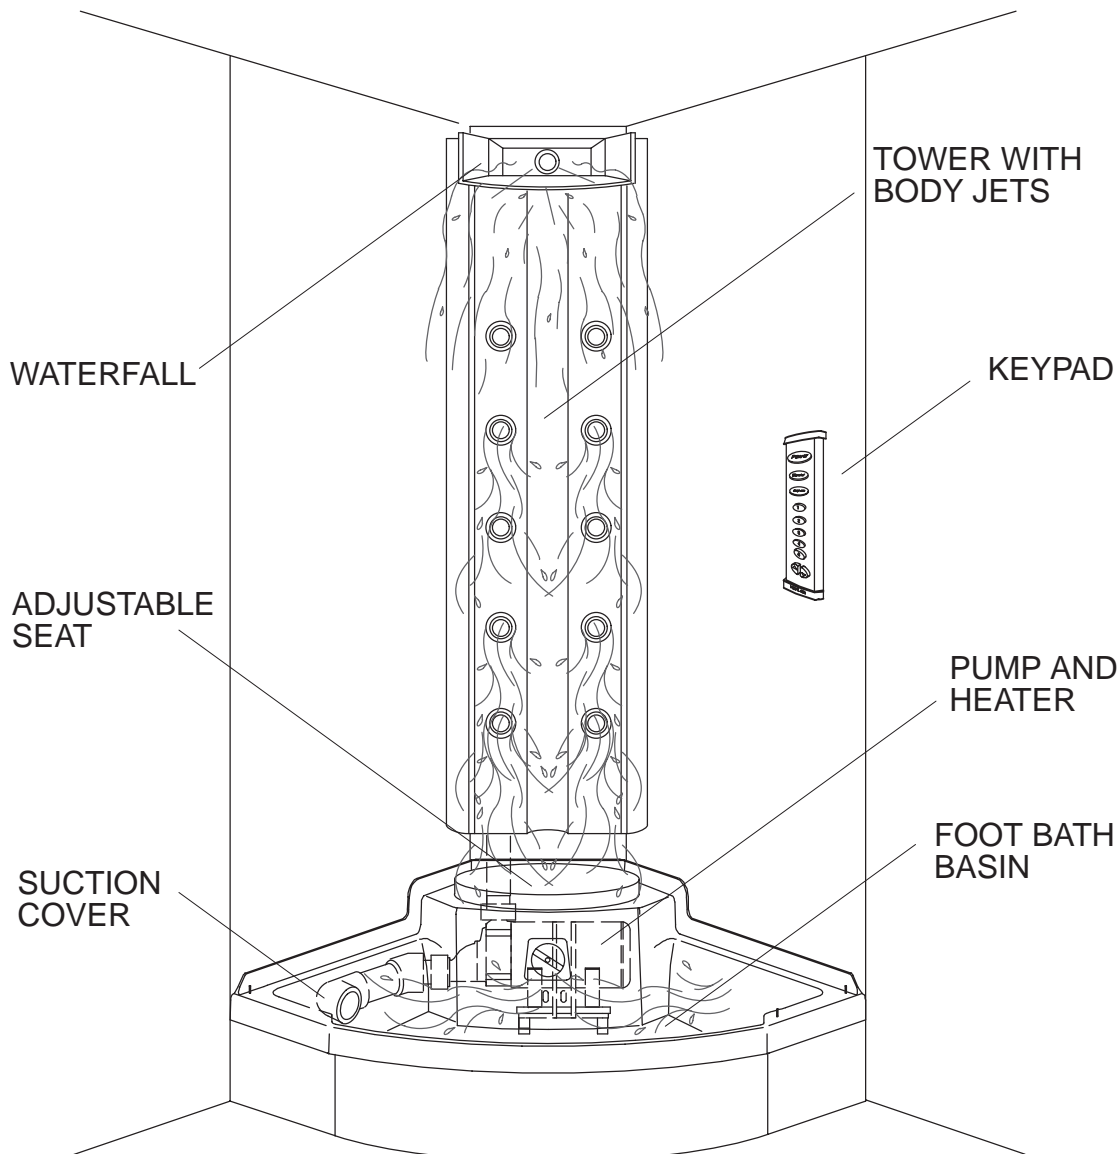

### 3. SPECIAL BODYSPA™ PERSONAL HYDRO-MASSAGE SYSTEM FEATURES

#### A. THE FOOT BATH

- The foot bath acts as a reservoir for the BodySpa™ water you add. Less than 40 gallons of tempered water are needed to operate your BodySpa™. Your BodySpa™ foot bath is made of durable acrylic.
- The bottom surface of the foot bath is covered with an effective slip-resistant surface. This feature allows you to safely move in and out of the water flow as you change your position.

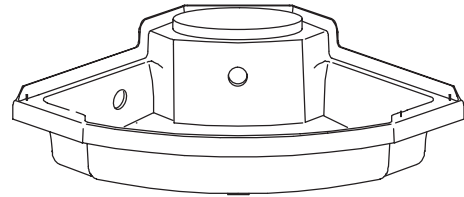


#### B. THE TOWER

- The tower contains five pairs of Body Jets and a lighted, overhead Waterfall. You can choose to run the Waterfall alone, or you can select any pairs or combination of Body Jets to personalize your hydro-massage experience. You can select one Body Jet array, several, or all five at once. They will come on at low speed. If you turn off all five Body Jet arrays, the Waterfall feature will automatically turn back on at low speed. The Waterfall light will stay on as long as the BodySpa™ is running.

You can adjust the intensity of your hydro-massage.

- The sides of the tower are gently ribbed with grip-providing grooves to offer a place for you to grasp during your hydro-massage.

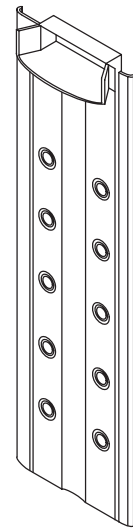


#### C. THE WATERFALL

- The lighted Waterfall calms and soothes with sheets of drenching water to enhance your hydro-massage experience. The Waterfall comes on automatically when you turn on your BodySpa™ and when you turn off all the Body Jets.




**WARNING: Risk of personal injury.** Do not set objects on the Waterfall ledge.

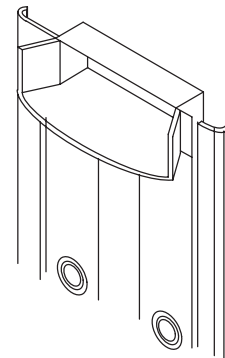

#### D. THE BODY JETS

- There are ten Body Jets positioned vertically on your BodySpa™ tower to provide you with full body hydro-massage effects. The Body Jets are grouped in horizontal pairs. You can select any combination of pairs.


When you select the Body Jets function on your keypad, the middle three pairs of Body Jets will begin to run at their lowest setting. If you want, you can then select one Body Jet array, several, or all five at once. They will come on at low speed. If you turn off all five Body Jet arrays, the Waterfall feature will automatically turn back on.

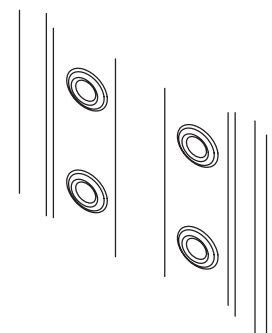

## SPECIAL BODYSPA™ FEATURES – CONTINUED

### E. THE ADJUSTABLE SEAT


- An adjustable seat is mounted to the foot bath ledge. Pressing a lever located underneath the seat allows you to move the seat back and out of your way when you choose to stand, or outward when you decide to sit.

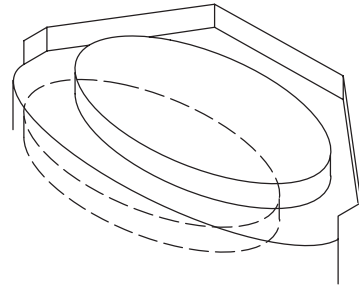

**WARNING: Risk of personal injury.** Do not attempt to stand on the adjustable seat.

### F. THE KEYPAD

 
- The easy-to-read keypad allows you to individualize each BodySpa™ bathing experience to suit your personal needs. You use fingertip control to select the Waterfall setting or any combination of Body Jet arrays. You can adjust the intensity of your hydro-massage from gentle to vigorous.



### G. THE PUMP AND HEATER

- The pump and heater combine to propel and maintain the temperature of the water in your BodySpa™ foot bath.\* Your BodySpa™ heater is located inside the pump housing, and is designed to automatically maintain the BodySpa™ water temperature at a comfortable level.

\* Maintains the temperature if installed as recommended.

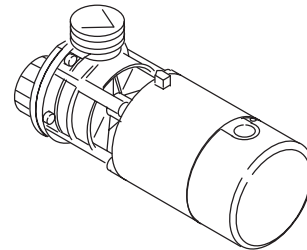

## 4. OPERATING INSTRUCTIONS

### A. GETTING READY TO USE YOUR BODYSPA™

Please read and follow these steps carefully so you can safely enjoy the benefits of BodySpa™ hydro-massage bathing.

- Remove your eyeglasses, contact lenses, and loose jewelry before entering the BodySpa™.
- Shower before using your BodySpa™ if you desire.
- Do not use shampoo, soap, or bubble bath in the BodySpa™ bath water. Shampoo and soap may be used for showering before filling the foot bath basin.
- Rinse down the enclosure and foot bath to remove soap residue and debris.
- Remove all loose bathing items such as soap bars, shampoo bottles, and washcloths from the BodySpa™ enclosure. Be sure to check that nothing is resting on the Waterfall ledge.
- Close the drain, and fill the foot bath basin with tempered water to a level at least 2" above the suction cover. Do not allow the water temperature to exceed 104° F.
- Enter the BodySpa™, and close the door tightly.

## B. USING YOUR BODYSPA™





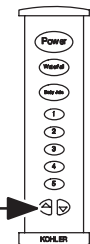
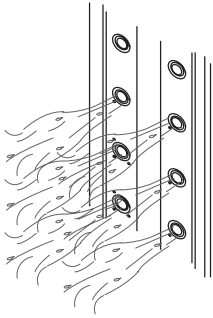
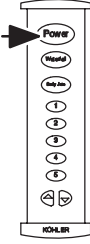

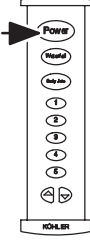
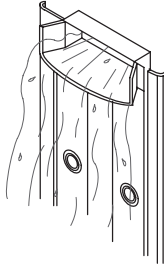
Your Kohler BodySpa™ promises many hours of massaging invigoration and enjoyment. Turn on either the Waterfall or Body Jets for a unique hydro-massage – you can select any combination of body jet arrays to satisfy your personal needs.

Refer to the chart at right for the proper operating sequence.

1. Close the drain, and fill the foot bath basin with tempered water to a level at least 2" above the suction cover. Do not allow the water temperature to exceed 104° F.
2. Turn on the BodySpa™ by pressing the **Power** button on the keypad. Water will flow from the Waterfall at low speed, and the waterfall light will turn on. The light will remain on as long as the BodySpa™ is running.
3. Use the ↑ and ↓ arrows to increase or decrease the water force.
4. Press the **Body Jets** button. Water will flow from Body Jet arrays 2, 3, and 4 at low speed. Water will stop flowing from the waterfall.
5. This BodySpa™ features five pairs of Body Jets. Toggle any quantity or combination of buttons 1 through 5 to personalize your hydro-massage experience. You can select one Body Jet array, several, or all five at once. If you turn off all five Body Jet arrays, the Waterfall feature will automatically turn back on at low speed.
6. Use the ↑ and ↓ arrows to increase or decrease the water force.
7. Whenever you change your feature selection between the Waterfall and Body Jets, the water will automatically flow at low speed until you increase it.
8. Press the **Power** button a second time to turn off the BodySpa™.
9. A built-in timer automatically turns off the BodySpa™ after 20 minutes of continuous operation.

## C. HELPFUL TIPS TO INCREASE ENJOYMENT OF YOUR BODYSPA™

- If you choose to use your BodySpa™ for more than one 20-minute cycle, we suggest you open the door for a moment between cycles. This will allow fresh air to enter the enclosure.
- If you feel faint, drowsy, dizzy, or lightheaded at any time, turn off your BodySpa™ and exit immediately.
- Only allow children to use your BodySpa™ if they are supervised by an adult at all times.
- To enhance your BodySpa™ experience, we suggest you increase the water force gradually.

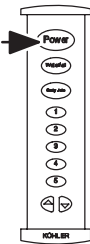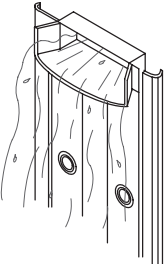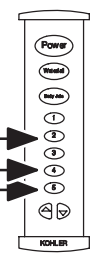TO	METHOD	OBSERVE
Turn on the BodySpa™.		
Select desired BodySpa™ features.		
Increase water force, press the ↑ button.  Decrease water force, press the ↓ button.		
Shut off the BodySpa™.		
Restart BodySpa™ after the 20 minute cycle is complete.		



## 5. CARE AND CLEANING INSTRUCTIONS

### A. CLEANING YOUR ACRYLIC BODYSPA™ FOOT BATH

One of the joys of owning a Kohler acrylic BodySpa™ is the ease of cleaning. There are no seams or tight corners for lime or mildew build-up. As with any smooth surface, **avoid using abrasive cleansers** on your acrylic BodySpa™ bath. Abrasive cleansers will scratch and dull the surface. It also helps if you wipe out your BodySpa™ bath after each use to prevent a build-up of soap and mineral deposits. If the surface gets excessively dirty you can use a general purpose cleaner such as: Cinch®, Glass Plus®, 409® All Purpose, Dow Soap Scum and Mildew Remover, Scrub Free® Mildew Remover, Mr. Clean® Lemon Fresh, or Fantastik®.

If the surface of your acrylic BodySpa™ bath becomes dull, you may use an automotive-type rubbing compound on the unit, followed by a good application of paste wax.

**NOTICE: Risk of product damage.** Avoid products containing the following chemicals, as they will damage the finish: acetone, ethyl alcohol, amyl or ethyl acetate, sodium hypochlorite, toluene, phenol. Extreme heat, such as that generated by cigarettes or portable heaters, can damage bath surfaces; do not use such items near your bath.

### B. CLEANING YOUR BODYSPA™ TOWER

Clean your BodySpa™ Tower with a mild soap and warm water. Wipe the entire surface completely dry with a clean, soft cloth. Many cleaners contain harsh chemicals, such as ammonia, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleansers or solvents on your Kohler BodySpa™ Tower.

### C. FLUSHING YOUR BODYSPA™ SYSTEM

Flush your BodySpa™ system twice a month or more, depending upon usage. Use the following sequence:

- Fill the bath with hot water to a level 2" above the suction cover;
- Add 2 teaspoons of a low-foaming dishwasher detergent, and 4 ounces of household bleach to the water;
- Run the BodySpa™ for 5 to 10 minutes in the waterfall mode; then another 5 to 10 minutes with all ten body jets running at the same time. Then shut off the BodySpa™, and drain the water;
- Fill the bath with cold water to a level 2" above the suction cover, and run the BodySpa™ for another 5 to 10 minutes in both the waterfall and ten-jet modes. Drain the bath, and wipe it dry with a soft cloth.

### D. CLEANING YOUR BODYSPA™ DOOR ENCLOSURE

Your Kohler BodySpa™ Door Enclosure will remain beautiful if you take care of it. We recommend you replace seals when they show signs of wear, yellowing, or leakage. For replacement parts, please contact the dealer where you purchased the door enclosure.

Water conditions in various parts of the country will determine any extra cleaning attention you may need to give your new door enclosure. A simple routine of daily care will keep your door enclosure looking like new.

Kohler Co. does not recommend the use of harsh abrasive cleansers on any of its products. Harsh cleansers will damage the metal and glass finish on your door enclosure.

Apply a glass cleaner with a clean sponge and immediately rinse off the area.

### E. CLEANING YOUR BODYSPA™ SEAT

Clean your BodySpa™ seat twice a month or more, depending upon usage.

The seat may be cleaned using a soft cloth and warm water. Stubborn dirt or stains may require a non-abrasive cleanser.

Do not use abrasive cleansers or solvents on the BodySpa™ seat.



## 6. TROUBLESHOOT THE BODYSPA™ PERSONAL HYDRO-MASSAGE SYSTEM

This troubleshooting guide is for general aid only. A Kohler Authorized Service Representative or a qualified electrician should correct all electrical problems. For warranty service, contact your dealer or wholesale distributor.

SYMPTOMS	PROBABLE CAUSES	RECOMMENDED ACTION
1. BodySpa™ does not start/stop.	A. No power to pump/control/keypad.	A. Set/Reset GFCI breaker; check wiring to pump/receptacle/keypad. Refer to dealer/installer.
	B. Harness is blocked.	B. Remove blockage. Refer to dealer/installer.
	C. Keypad disconnected from pump/control box.	C. Reconnect keypad.
	D. Faulty keypad.	D. Replace keypad. Refer to dealer/installer.
	E. Faulty circuit board.	E. Replace circuit board inside control box. Refer to dealer/installer.
	F. Faulty motor/pump assembly.	F. Replace motor/pump assembly. Refer to dealer/installer.
	G. Not enough water in foot bath.	G. Fill foot bath 2" over suction cover.
2. Water flow surges.	A. Not enough water in foot bath.	A. Fill foot bath 2" over suction cover.
	B. Suction blocked.	B. Remove obstruction.
	C. Harness is blocked.	C. Remove blockage. Refer to dealer/installer.
3. Motor starts, all Body Jets are not functioning.	A. Body Jet is blocked.	A. Remove blockage. Refer to dealer/installer.
	B. Faulty keypad.	B. Replace keypad. Refer to dealer/installer.
	C. Body Jet butterfly valve wiring loose or damaged, or butterfly valve is faulty.	C. Identify source of fault and correct, or replace faulty butterfly valve. Refer to dealer/installer.
4. Motor starts, waterfall does not function.	A. Waterfall is blocked.	A. Remove blockage. Refer to dealer/installer.
	B. Faulty keypad.	B. Replace keypad. Refer to dealer/installer.
	C. Waterfall butterfly valve wiring loose or damaged, or butterfly valve is faulty.	C. Identify source of fault and correct, or replace faulty butterfly valve. Refer to dealer/installer.
5. Water flow increases when ↓ keypad button is pressed, or decreases when ↑ keypad is pressed.	A. Variable flow valve wiring error.	A. Reverse variable flow valve wire connections. Refer to dealer/installer.
6. Waterfall light does not work.	A. Light bulb is burned out.	A. Replace light bulb. Refer to dealer/installer.
	B. Loose or damaged wiring.	B. Identify source of fault and correct. Refer to dealer/installer.

## TROUBLESHOOT THE BODYSPA™ – CONTINUED

This troubleshooting guide is for general aid only. A Kohler Authorized Service Representative or a qualified electrician should correct all electrical problems. For warranty service, contact your dealer or wholesale distributor.

7. BodySpa™ stops automatically <b>before</b> 18 minutes.	A. GFCI trips.	A. Identify source of fault and correct. Refer to dealer/installer.
	B. Motor overheated and protection device activated.	B. Check for blockage at motor vents. Remove blockage and allow motor to cool. Refer to dealer/installer.  Check for suction blockage. Remove blockage and allow motor to cool. Refer to dealer/installer.  Check for harness blockage. Remove blockage and allow motor to cool. Refer to dealer/installer.
8. BodySpa™ does not automatically <b>stop after</b> 22 minutes.	A. Faulty timer mechanism.	A. Replace timer board inside pump/motor. Refer to dealer/installer.
	B. Wiring error.	B. Refer to dealer/installer.
9. Noisy operation.	A. Pump straps have not been cut.	A. Cut straps with tin snips.
	B. Not enough water in foot bath.	B. Fill foot bath 2" over suction cover.

## 7. IMPORTANT CONSUMER INFORMATION

### A. REQUESTING SERVICE

Please take a moment to familiarize yourself with the Kohler Warranty, its benefits, and limitations. Kohler Co. and its distributors support you with one of the largest Service Networks of its type. Here's what you need to do if you require service:

1. Contact the dealer or contractor who sold and installed the product. They should be able to solve any problems you may have.
2. If your dealer or contractor cannot solve the problem, they will contact or supply you with the name of the local Kohler Distributor and the:

 KOHLER TECHNICAL SPECIALIST

3. If you are unable to obtain warranty service through either your contractor or Kohler Co. distributor, please write us directly at Kohler Co., Attn: Customer Service Department, 444 Highland Drive, Kohler, WI 53044 USA, or by calling 1-800-4-KOHLER from within the USA.
4. Include all pertinent information regarding your claim, including a complete description of the product, model numbers, colors, finishes, and the date the product was installed. Include a description of the problem, and a photocopy of your invoice for the products involved. Also give us the name of the contractor and distributor.

### B. LIMITED ONE-YEAR WARRANTY

Kohler plumbing fixtures and fittings are warranted free of manufacturing defects.

Kohler Co. will, at its election, repair, replace, or make appropriate adjustment where Kohler Co. inspection discloses any such defects occurring in normal usage within one year after installation. **Kohler Co. is not responsible for installation or removal costs.**

To obtain warranty service, contact Kohler Co. either through your Dealer or Plumbing Contractor or by writing Kohler Co., Attn: Customer Service Department, 444 Highland Drive, Kohler, WI 53044 USA, or by calling **1-800-4-KOHLER** from within the USA.

**Implied warranties, including that of merchantability or fitness for a particular purpose, are expressly limited in duration to the duration of this warranty. Kohler Co. disclaims any liability for special, incidental, or consequential damages.**

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of special, incidental, or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

This limited warranty provides specific legal rights as they apply within the USA, and other rights may be available, but may vary from country to country.

This is our exclusive written warranty.

KOHLER CO., KOHLER, WISCONSIN 53044



**KOHLER®**

