


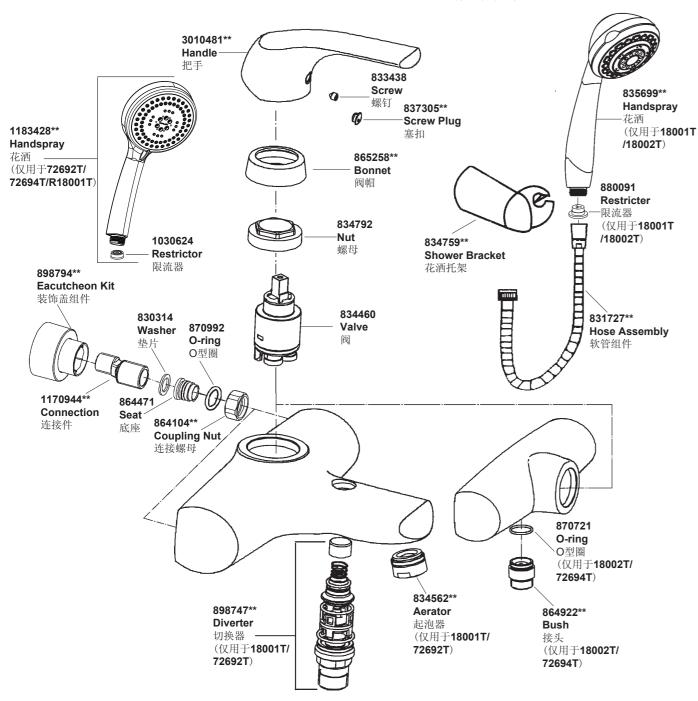

零件图

Wall-Mount Bath/Shower Faucet

18001T 72692T R18001T 挂墙式浴缸花洒龙头 18002T 72694T 挂墙式花洒龙头



KOHLER® INSTALLATION INSTRUCTIONS



安装说明书

Wall-Mount Bath/Shower Faucet

18001T 72692T R18001T 挂墙式浴缸花洒龙头 18002T 72694T 挂墙式花洒龙头

安装之前

所有的资料是按最新出版的产品资料编写而成。科 勒公司保留任何时候不经通知即可改变产品特性、 包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容,请把这些资料交给用户阅读。

注意事项:

- 1. 一定要先彻底冲洗供水管以清楚管道中的杂质。
- 2. 遵守当地管路安装条例。检查供水管有无损坏。如需要,进行替换。
- 3. 花洒最高工作压力: 0.5MPa(5bar)。水压超过 0.5MPa(5bar)须安装减压阀。花洒最高工作温度及环境温度: 60°C。请特别注意花洒同花洒连接的臂管须远离浴霸,否则可能损坏花洒及其密封件,甚至对使用者造成伤害。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

NOTES:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. Observe local plumbing codes. Inspect the supply tubing for damage. Replace as necessary.
- 3. The highest working pressure for handspray is 0.5MPa(5 bar). If it exceeds 0.5MPa(5 bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handspray, showerhead and the shower arm away from heater, or it may become damaged and cause injury to the user.

使用说明


将手柄轻轻提起, 向左转为热水, 向右转位冷水。

HANDLE OPERATION

Lift the handle gently. Turn left for hot water, right for cold water.

安装尺寸

ROUGH-IN DIMENSIONS

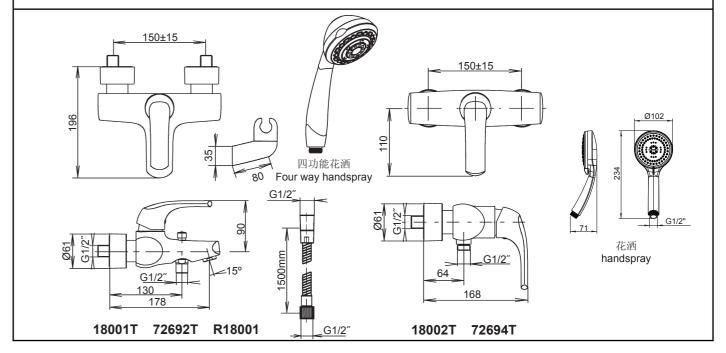

1034993-A **4** 1034993-A **1**

^{**}订购时请说明颜色编号

^{**}Color code must be specified when ordering

安装说明

 
安装水龙头

为使安装顺利, G1/2"内螺纹管道配件 应已装好,预留150mm的间距,保持 水平,不要凸出墙面。

40~45mm

Cold

彻底冲洗供水管,以清除管路中的杂 质。使用合适的螺纹密封膏,安装两 个接头(1)到冷热供水管。保持两个接 头中心到中心的距离150mm , 并调整 到同一水平线上。两接头伸出墙壁的 长度控制在40~45mm之间



注意: 在锁紧螺母时, 须用带状扳手 或软布垫在普通扳手和螺母之间,以 保护电镀表面。

将两滤网垫片(5)分别安装在软管(6)的 两头,把软管的一头接到水龙头出水 口(7),另一头接花酒(8)。

如何安装托架

在垂直面的墙壁,选一个花洒能够着 的位置来安装托架。

把托架盖子(10)与底板(9)撬开。

在墙壁标记安装托架底板位置的记号 (11)。按记号在墙上钻两个孔,以便于 安装螺钉及铰钉。旋紧螺钉, 固定托 架,并使其紧贴墙壁。

用托架盖子盖住底板。把花洒挂在托 架上面。

To perform installation, installer must provide G1/2" female supply fittings(1), space 150mm apart, level and not extend beyond finished wall surface.

Flush the water supply pipes thoroughly to remove debris. Install the two offset connectors(2) into the HOT and COLD supply pipes. Use appropriate thread sealants on pipe threads. Adjust the center-to-center distance between the connectors to 150mm and level. They should extend 40~45mm beyond the finished wall.

Rotate inside rings of the escutcheons(2) to make them extend the shortest. Slide the escutcheons onto the connectors. Put washers(3) into supply nuts(4) of the faucet. Thread the faucet supply nuts onto connectors and tighten. Push escutcheons forward untill they touch the rear of the faucet. Thread the outside sleaves of escutcheons to make them against the finished wall.

shower outlet(7) and handspray(8). Filter washers(5) provided with hose must be installed in each end.

How To Install The Shower Bracket

Select a location in vertical wall within reach of the shower hose to install shower bracket.

Pry between the bracket cover(10) and base(9) to separate the two parts.

Mark bracket base mounting hole locations(11) on wall as shown. Drill two holes in the finished wall as required, for the installation screws and anchors. Tighten screws to secure bracket base to the finished wall.

Replace bracket cover onto bracket base. Hang the handspray on the shower bracket.

INSTALLATION

Install The Faucet

NOTE: When tighten the nut, use strap wrench or soft cloth between product and regular wrench to protect the finish.

Connect shower hose(6) to faucet

安装结果检查

检查并确保所有的衔接处都已拧紧。

确保手柄在"关"的位置。

打开排水系统和主要供水源, 检查并 修理有漏水的接口。

浴缸花洒龙头:

取下花洒,并用扳手卸下起泡器组件 (12)。打开冷热水,让水流出约一分钟 以清除杂质。检查渗漏。清洗起泡器 组件。关闭水龙头,并装回起泡器和 花洒。

注意: 切换器正常工作的最小压力为 0.05MPa(0.5bar).

花洒龙头:

取下花洒。打开冷热水, 让水流出约 一分钟以清除杂质。检查渗漏。关闭 水龙头,并装回花洒。

INSTALLATION CHECKOUT

Ensure that all coupling nuts are tight.

Ensure that the handle is in the off

Turn on the main water supply, and check for leaks. Repair as needed.

Bath & Shower Faucet:

Remove the handspray and remove the aerator(12) with the wrench. Run hot and cold water through the faucet for about a minute to remove any debris. Check for leaks. Remove any debris from the aerator assembly. Shut the faucet off, and reinstall the aerator assembly and handspray.

NOTE: The minimum inlet water pressure for the diverter is 0.05MPa(0.5bar).

Shower Faucet:

Remove the handspray. Run hot and cold water through the faucet for about one minute to remove any debris. Check for leaks. Shut the faucet off, and reinstall the handspray.

清洗说明

适用于所有加工处理过的表面: 以中性肥皂水清洗 镀层表面,再以干净的软布彻底擦干整个表面,许 多清洁剂, 比如氨水、去污粉及洁厕灵等, 会对电 镀表面造成伤害, 切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌 的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with a mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

