

MODERN LIFE 明莱 INSTALLATION INSTRUCTIONS

安装说明书 SKIRTED CLASS FIVE TWO-PIECE TOILET 五级旋风分体座便器 S-TRAP 305mm K-77744T-SL S-TRAP 400mm K-77745T-SL

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information please leave instructions for the consumer.

ORDERING INFORMATION

MODERN LIFE Class Five Two-Piece Toilet
305mmK-77744T-SL
Includes BowlK-77728T
Includes TankK-77742T-SLT3
Includes MODERN LIFE Slim Quiet-close
Toilet SeatK-77380T
MODERN LIFE Class Five Two-Piece Toilet
400mmK-77745T-SL
Includes BowlK-77729T
Includes TankK-77742T-SLT4
Includes MODERN LIFE Slim Quiet-close
Toilet SeatK-77380T

NOTES

- Observe all local plumbing and building codes.
- Shut off the water supply.
- Seat post holes are on 140mm centers.
- Ensure that the new drain has the correct roughing-in dimension. This toilet has a 305/400mm roughing-in dimension. **See Roughing-in**.
- Closet flange must be 305/400mm on-center from wall.
- Carefully inspect the new fixture for any sign of damage.
- For new construction, refer to the dimensions in installation step for locating the shut-off valve.
- Fixture dimensions are nominal and conform to tolerances established by ASME Standards (A112.19.2-2013).
- This product complies with GB25502-2017. Water Efficiency Grade 1.

安装之前

- 请小心详阅本指引。以便熟悉所需工具、材料及安装程序。请遵照适用的章节来安装你的座便器,以避免由于安装不当而导致不必要的损失。除了有关正确的安装方法之外,还务请详阅所有操作及安全指引。
- 本指引所载之一切资料,均以印刷时所有之最新产品情况 为基础,科勒中国保留权利随时更改产品特性、包装或供 应情况,恕不另行通知。
- 本指引也包含了有关护理、清洁及保养等重要资料 请交 予用户保存。

订购资料

明莱五级旋风分体座便器	
305mm	K-77744T-SL
含缸体	K-77728T
含水箱	K-77742T-SLT3
含明莱超薄缓降	
座便器盖板	K-77380T
明莱五级旋风分体座便器	
400mm	K-77745T-SL
含缸体	K-77729T
含水箱	K-77742T-SLT4
含明莱超薄缓降	
座便器盖板	K-77380T

注意

- 遵守当地所有给排水及建筑规定。
- 先关掉水源。
- 盖板孔中心间距140mm。
- 请确保污水管的坑距尺寸正确。本型号坑距为 305/400mm(请参阅尺寸图)。
- 座便器法兰盘中心必须距离墙壁305/400mm。
- 小心检验新的座便器是否有损坏的迹象。
- 若为新安装工程,请参看安装步骤中的尺寸标示以定位止 水阀。
- 部件尺寸为标定值,误差符合美国ASME标准(A112.19.2-2013)。
- 本产品符合GB25502-2017。水效等级1级。

No.2 KOHLER ROAD, SANSHUI CENTRAL INDUSTRIAL PARK, LEPING TOWN, SANSHUI DIST., FOSHAN, GUANGDONG, PRC POST CODE 528137 广东省佛山市三水区乐平镇三水中心工业园区科勒大道2号邮编: 528137

> 8# MENGSHAN RD, ECONOMIC DEVELOPMENT ZONE OF HUANTAI, ZIBO, SHANDONG, CHINA POST CODE: 256410 山东省淄博市桓台经济开发区蒙山路8号 邮编: 256410

> > -1-

1322809-T01-B

.

© Copyright Kohler China Investment Co., Ltd. 2018



/ WARNING: Risk of personal injury or product damage: Handle vitreous china products very carefully. Vitreous china can break and chip if you overtighten bolts and nuts.

WARNING: Risk of external leakage. The fill valve nut has been factory-tightened to design specifications. If re-tightening is required, wrench tighten one turn past finger tight .

TOOLS AND MATERIALS REQUIRED (Not supplied)

- 254mm (10") adjustable wrench •
- 305mm (12") pipe wrench •
- Metal file (file cut) •
- Tape measure
- Tubing cutter •
- Level •
- Hacksaw
- Putty knife
- Screwdriver •
- Toilet gasket (wax seal) •
- Toilet T-bolts (2), 8mm (5/16") diameter •
- Toilet supply shut-off valve, 10mm(3/8") recommended •

NOTICE: If the existing toilet does not have a supply shut-off valve below the tank, install one before installing the new toilet.

ROUGHING-IN

Reference Value 参考值

K-77744T-SL

- 警告:提防身体受伤或产品破裂。请小心处理釉面陶瓷 Λ 产品。不可把螺母和螺栓上得过紧,以免产品破损或崩 , 裂。
- 警告: 有向外渗漏之危险。注水阀螺母在出厂时已上紧以符合设计规格, 如需再上紧, 可用手上紧后再以板钳 Λ 上紧一圈。

所需工具及材料 (不随货供应)

- 254mm 活动板钳
- 305mm 喉管板钳
- 锉刀
- 卷尺
- 切管刀
- 水平尺
- 钢锯
- 涂油灰刀
- 螺丝刀


尺寸图

- 座便器垫圈 (蜡封)
- 直径8mm的T型螺栓(2枚)
- 座便器供水管止水阀,以10mm为准 .


注意:如果现有座便器的水箱下方没有止水阀,须在安装新座 便器前装妥止水阀。

285

FRONT OF BOWL 缸体前端

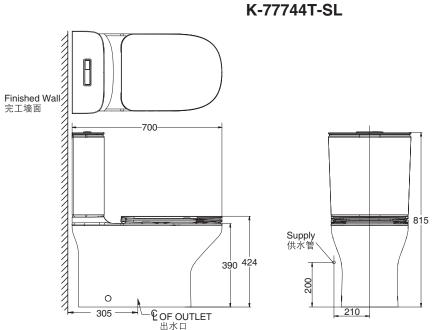

Unit: mm 单位:毫米

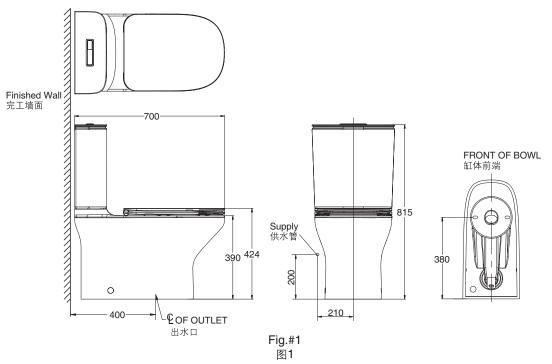

Kohler reserves the right to change marked dimensions without prior notice. 科勒公司保留随时变更图中标示尺寸的权利,无需另行通知。

安装

拆除旧座便器

INSTALLATION

TO REMOVE EXISTING TOILET

Turn off the water supply. Flush the toilet, and use a sponge to remove the remaining water from the tank and bowl. Disconnect the supply shut-off valve (if present), and remove the old tank and bowl.

Remove the old gasket from the floor and the closet flange with a putty knife. Remove the old T-bolts and discard them.


NOTICE: if the new toilet is not installed immediately, temporarily stuff a rag into the closet flange.

NOTICE: Do not use white cement or high lime content cements to install this toilet. The expansion of cement due to a rise in temperature may make the toilet crack or cause damage. Kohler is not responsible for any damage caused by installation with the use of cement.

TO INSTALL SUPPLY SHUT-OFF VALVE

Install the supply shut-off valve so it is 200mm above the finished floor line, and 210mm to the left of the closet flange centerline.

The centerline of the supply shut-off valve outlet should extend 67mm from the finished wall. Install the supply shut-off valve with the outlet vertical.

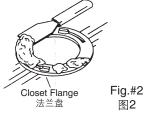

Supply Shut-Off Valve 供水管止水阀

200

305/400

210

Closet Flange Centerline 法兰盘中心线 用涂油灰刀拆除地上的旧密封垫圈及座 便器法兰盘,拆除及扔掉旧的T型螺 栓。

注意: 如果不能即时安装新座便器,请 用碎布暂将法兰盘堵住。

注意: 安装本座便器时切勿使用白水泥或高石灰含量之水泥, 因水泥的热膨胀可能使座便器的脚部挤破或损坏。科勒对所有 因水泥安装而引致的座便器破裂恕不负责。

关掉供水源,给座便器冲水,用海绵吸去座便器内的剩余水

份,除下供水管止水阀(如果有),移开旧水箱和座便器。

安装供水管止水阀

安装厕所供水管止水阀,使之离地线 200mm,也离法兰盘中心线左 210mm。


供水管止水出口管应凸出完工墙67mm; 安装止水阀应以出口管垂直为合。

1322809-T01-B

Fig.#3


图3

TO INSTALL BOWL

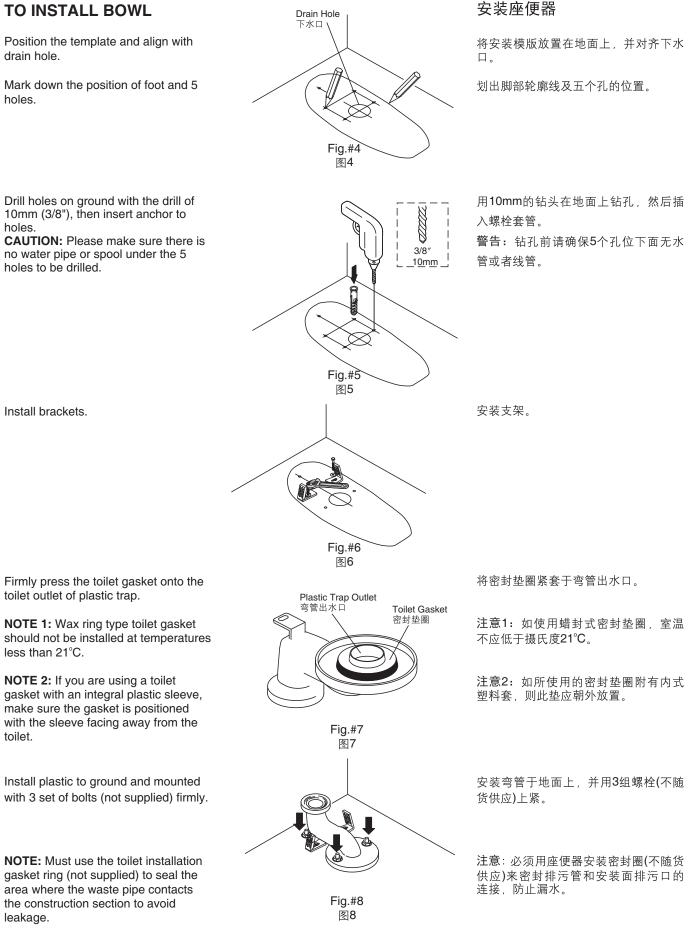

Thread the supply hose onto the tank.

将进水软管旋入到水箱上。

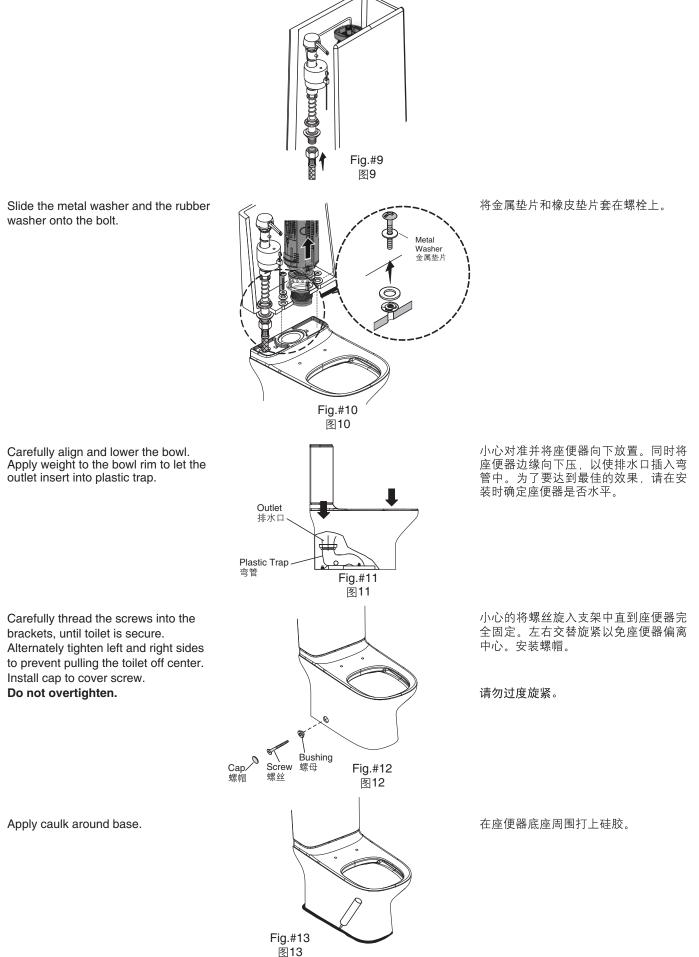

TO CONNECT WATER SUPPLY

* Flexible hose (not provided) are recommended to connect the supply line to the fill valve. If you use a rigid connection(not provided), take care not to apply side forces to the bottom of the fill valve. Be sure the rigid connection must be fit with supply line completely to prevent damage shank by forced connection.

IMPORTANT: Before turning on the supply valve for the first time, follow the steps below to clear sand, debris and rust from the system:

Make sure water sure water supply is off. Remove valve END by rotating it 1/8 turn counterclockwise.

While holding a container over the uncapped VALVE to prevent splashing, turn water supply on and off a few times. Leave water supply off.

Replace END by engaging lugs and rotating 1/8 turn clockwise. Make certain the top is turned to the locked position. Valve may not turn on if top is not fully in the locked position.

Turn on water supply. Check that water level is at the marked water line.

Install the tank lid and the seat. Use the supplied hardware pack for seat. Periodically check for leaks for several days following the installation.

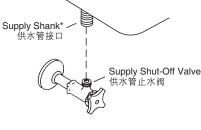


Fig.#14 图14 连接供水管止水阀

我们建议使用软管(不随货供应)来连接 供水管与座便器进水阀。如果您使用硬 管(不随货供应)连接的话,连接时要注 意不要在进水阀的底部施加横向压力, 并请注意硬管必须与供阀口完全吻合, 以免强行连接日后会损坏接口。

注意: 第一次打开供水阀之前, 请按下列步骤清理阀门组件里的砂石、碎屑及铁锈:


关掉供水源,以逆时针方向旋转1/8圈,拆除阀帽。

用杯子盖好无遮盖的阀门组件以防溅水,然后反覆开关水源数次,最后关掉水源。

重新盖上阀顶部份,顺时针旋转阀帽1/8圈上好,<mark>阀帽必须旋转</mark> 至对准上锁的位置,否则可能无法打开注水阀。

打开水源,查核水位是否达到水位线。

安装水箱盖和盖板。使用附带的盖板安 装组件包进行安装。安装后定期检查漏 水情况。

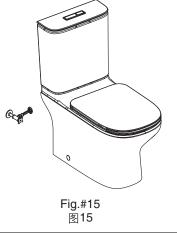


FILL VALVE ADJUSTMENT Fill float with ballast

Adjust the cam clockwise or counterclockwise until the water level is at the marked water line.

Test flush the toilet.

Check all connections for leakage for several days.

Set the tank cover in place on the tank.

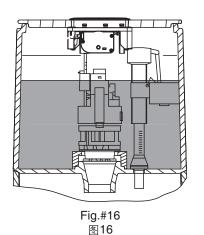

调节进水阀 注水以稳定浮球

可顺时针或者逆时针调整凸轮直至水位 达到水位线。


测试冲水情况。

安装后的几天内,应反复检查所有接口 有无渗漏。

盖上水箱盖。

TANK COVER INSTALLATION

Note: Press down the spring and insert the button into the installation position on the tank cover. Release the spring to lock it. Be noted not to let the steel wire of the flush valve resting on the lever of the fill valve.

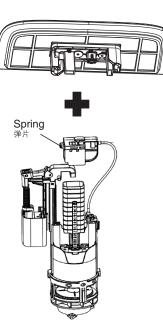

安装水箱盖

注释: 往里按下弹片,对准水箱盖上按钮的位置,让按钮插在 按钮盒里,放开弹片锁住,注意不要让排水阀的钢丝绳压在进 水阀抬杆上。

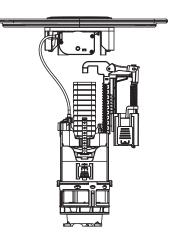


Fig.#17 图17

SYMPTOMS	CORRECTIVE ACTION
1. Poor Flush	 A. Adjust the tank water level to match the waterline. B. Fully open the water supply shut-off valve. C. Clear obstructions from the trapway, jet, or bowl rim holes. D. Clear obstructions from the waste line.
2. No Flush	A. Reconnect the chain to the trip lever or flush valve. B. Adjust the chain assembly to remove excessive slack.
 The fill valve turns on/off by itself without the toilet being flushed, or it runs allowing water to enter the tank. 	 A. Adjust the chain for proper slack so the seal is not held off the flush valve seat. B. Clean or replace the seal if it is worn, dirty, or misaligned with the flush valve seat, or if the flush valve seat is damaged. Replace the flush valve seal or flush valve. C. Clean the fill valve seat/seat washer of debris, or replace the piston/seat washer assembly. D. Remove the tank and tighten the flush valve nut if flush valve gasket is leaking. Do not overtighten. If leakage continues, replace the gasket. E. Adjust the tank water level if it is too high.
4. Tank takes excessive time to fill.	A. Fully open the water supply shut-off valve. B. Clean the valve inlet, valve head, or supply line. Flush the lines.
5. There is excessive noise when the tank is filling.	 A. Partially close the water supply shut-off valve if the water pressure to the toilet is too high. Check the toilet performance following any such adjustment. B. Remove dirt or obstructions from the valve head. Flush the lines.

故障处理表		
现象	处理措施	
1. 冲水效果不佳。	 A. 调节水箱水位至水位线。 B. 完全开启供水管止水阀。 C. 清除存水弯,喷头和缸体冲水孔内的堵塞物。 D. 清除污水管内的堵塞物。 	
2. 无冲水。	A. 重新连接冲水链至冲水把手或冲水阀。 B. 调节冲水链组件防止过松。	
3. 未注水时注水阀自行开/关,或注水阀 运转不停,水箱注水不停。	 A. 调节冲水链至适当松紧度使垫圈不离开冲水阀座。 B. 如果垫圈磨损,变脏或未对准冲水阀座,或者冲水阀破损时,更换冲水阀密封圈或冲水阀。 C. 清除注水阀座以及垫圈阀座中的脏物,或更换活塞/阀座垫圈组件。 D. 如果冲水阀垫圈漏水,则拆下冲水阀座,清洗阀座和垫圈后,重新安装。如仍发生漏水现象,则更换垫圈。 E. 如果水箱水位太高,则相应作出调整。 	
4. 水箱注水需时过长。	A. 完全开启供水管止水阀。 B. 清洁注水阀进水口,阀帽或供水管。冲洗供水管。	
5. 水箱注水时噪音过大。	 A. 如果座便器内水压过高,则关小供水管止水阀。做过此类调节后,检查座便器的使用状况。 B. 清除阀帽内的脏物或堵塞物。冲洗供水管。 	
重要: 仅可使用图中所示的科勒公司原装配件以防产品损坏。		

IMPORTANT CONSUMER INFORMATION 用户须知

CONSUMER RESPONSIBILITIES

If you live in a hard water area, make certain that the holes in the toilet rim are kept clean to ensure proper bowl flushing. Toilet bowl cleaners should be used at least once a week. Use a long-handled brush to clean the rim holes, and to clean as far into the trap as possible to prevent mineral deposits from forming.

Most toilet bowl cleaners are not harmful to the vitreous china surface of the toilet bowl. Please follow the bowl cleaner manufacturer's instructions carefully.

Do not use abrasive cleaners or solvents.

WARNING: Risk of property or product damage. Do not use in-tank cleaners. Products containing chlorine (calcium hypochlorite) can seriously damage fittings in the tank. This damage can cause leakage and property damage.

Kohler Company shall not be responsible or liable for any damage to these tank fittings caused by the use of cleaners containing chlorine (calcium hypochlorite).

CAUTION: Don't use any cement while installing the toilet. Heat expansion of the toilet may damage the feet of the toilet. Kohler will not be responsible for any damage because of using cement.

WARNING: Risk of product damage. Do not throw into the toilet what is easy to block it, such as newspaper, paper pilch, sanitary towel. Do not bump the vitreous china with great force to prevent it from damaging and leaking. Do not use the product in the water below 0°C.

CAUTION: Please do not use hard materials (like scouring pad) to clean product surface, especially the product logo.

用户责任

如果你居住地方的水质是硬性,你必须保持冲水孔清洁,令座 便器冲水正常。每星期应最少使用座便器清洁剂清洁一次,用 长把手的刷子清洁冲水孔,并尽量伸入排污管洗刷,防止矿物 质积聚。

大多数马桶清洁剂对座便器表面是无害的。请认真遵循马桶清 洁剂制造商的指示来操作。

请勿使用腐蚀性清洁剂或溶剂。

 警告:提防楼宇受损或损坏产品。请勿使用水箱内用清 洁剂。含氯(次氯酸钙)的清洁剂会严重破坏水箱配 件,从而引起渗漏,或对楼宇结构造成损坏。

科勒公司对此类因使用氯(次氯酸钙)而引致的水箱装置损毁, 概不负责。

- 警告:在安装本座便器时切勿使用任何水泥。因为水泥的热膨胀可能使座便器的脚部挤破或损坏。科勒对所有因为水泥安装而引起的座便器破裂恕不负责。

不要在0℃以下的水环境中使用。

 警告:请勿使用钢丝球等硬质材料擦洗产品表面,特别 是产品商标处。