

# **KOHLER** INSTALLATION INSTRUCTIONS

5680IN-4ND-\*\* JULY WM SC LAV FAUCET TRIM 5681IN-4ND-\*\* SINGULIER WM SC LAV FAUCET TRIM 5682IN-4ND-\*\* CUFF WM SC LAV FAUCET TRIM 5683IN-4ND-\*\* ALEO WM SC LAV FAUCET TRIM 5684IN-4ND-\*\* ALEO+ WM SC LAV FAUCET TRIM

#### **BEFORE YOU BEGIN**

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information. NOTES:


- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. Inspect the supply tubing for damage. Replace as necessary.
- 3. Observe local plumbing codes.
- 4. Check for leaks before covering the pipes, repairs as needed.
- 5. These trims use with valve assembly 5679IN-\*\*

### **CLEANING INSTRUCTION**


Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.


Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

#### **ROUGH-IN DIMENSION**

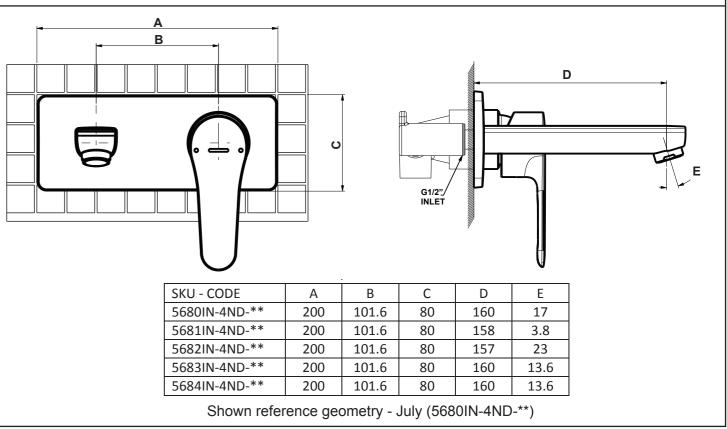

## JULY SINGULIER CUFF ALEO ALEO+

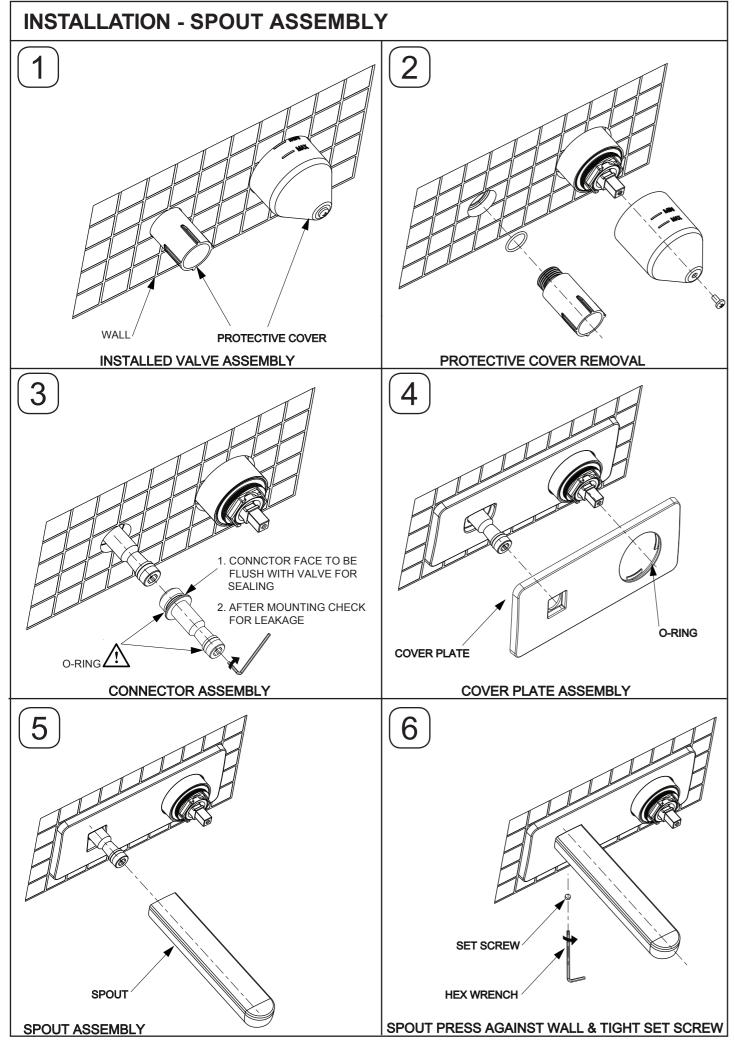

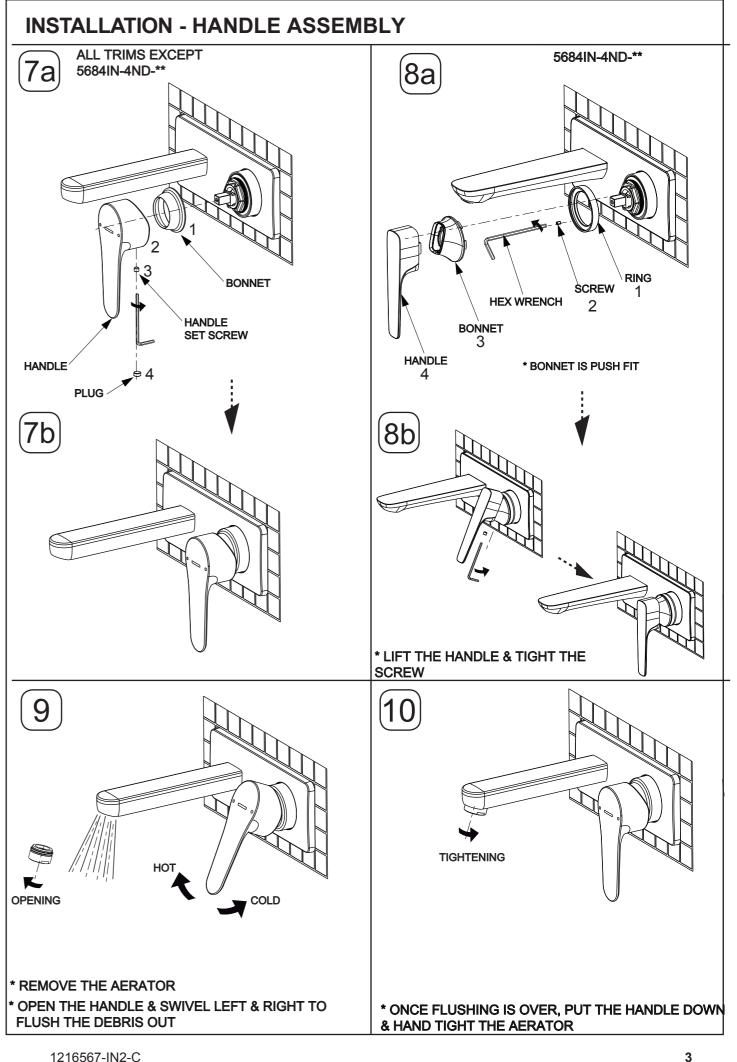

1216567-IN2-C