

13.5 L OEM Diesel Engines (PowerTech™)



OPERATOR'S MANUAL

13.5 L OEM Diesel Engines (Tier 3/Stage III A Platform)

OMRG36873 ISSUE 18AUG22 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

John Deere Power Systems

Worldwide Edition
PRINTED IN U.S.A.

TP-6787 8/22



Introduction

OEM Engine and Drivetrain Warranty Registration

RG24614 —UN—21OCT13



Scan this code to register your OEM engine or drivetrain product online. You can also visit us directly at <http://jdpswarrantyreg.deere.com/WarrantyReg>.

Why registering your OEM engine or drivetrain product is a really smart idea:

- **Get faster service.** Registering your engine or drivetrain product gives us the information we need to meet your service needs promptly and completely.
- **Protect your investment.** You'll be kept up-to-date on engine or drivetrain product updates.
- **Extend your warranty.** You'll be given the option to extend your coverage before your standard warranty term expires.
- **Stay informed.** Be the first to know about new products and money-saving offers from John Deere.

You're Covered

When you buy a John Deere engine or drivetrain product you aren't just buying pistons and crankshafts and gear drives. You're buying the ability to get work done. Without downtime, without worries, and without hassles. And you're buying the assurance that if you do need help, a strong support network will be there — ready to step in.

Confidence. That's what John Deere engines, John Deere drivetrains, and John Deere Warranties are all about.

Long durations. Warranties designed to give you confidence in your engine or drivetrain product.

Worldwide support. Get service when and where you need it. John Deere has 4,000+ service locations worldwide.

Genuine John Deere parts and service. Authorized service outlets will use only new or remanufactured parts or components furnished by John Deere.

Warranty Duration

Equipment operators can't afford downtime or unexpected repairs. That's why we offer comprehensive warranties on our OEM industrial engines, marine engines, and drivetrain products.

- **OEM Engines:** 2-year/2,000-hour warranty, with unlimited hours in the first year.
- **Drivetrain Products:** 12-month/2000-hour warranty. In the absence of a functional hour meter, hours of use will be determined on the basis of 12 hours of use per calendar day.

These warranties take effect the date the engine or drivetrain product is delivered to the first retail purchaser. Be sure to register your engine or drivetrain product and take full advantage of the John Deere service and support network.

In addition, engine extended warranties are available under certain conditions. John Deere offers a variety of purchased warranties to extend the warranty period for your engine. You'll be given the option to extend your coverage before your standard warranty term expires.

Obtaining Warranty Service

Warranty service must be requested through an authorized John Deere service outlet before the expiration of the warranty. Evidence of the engine's or drivetrain product's delivery date to the first retail purchaser must be presented when requesting warranty service. Authorized service outlets include:

- John Deere distributor
- John Deere OEM service dealer
- John Deere equipment dealer
- John Deere marine dealer

Worldwide Support Network

Visit <https://dealerlocator.deere.com/> or <https://dealerlocator.deere.ca/> to find the authorized engine or drivetrain service location nearest you. For complete warranty details visit <https://www.deere.com/en/parts-and-service/warranty-and-protection-plans/warranties/warranty-statements> or <https://www.deere.ca/en/parts-and-service/warranty-and-protection-plans/warranties/warranty-statements> to view, download, or print the warranty statement for your engine or drivetrain product.

GM52594,0000996 -19-26MAY22-1/1

Foreword

READ THIS MANUAL carefully to learn how to operate and service your engine correctly. Failure to do so could result in personal injury or equipment damage.

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your engine and should remain with the engine when you sell it.

MEASUREMENTS IN THIS MANUAL are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by standing at the drive or flywheel end (rear) of the engine and facing toward the front of the engine.

WRITE ENGINE SERIAL NUMBERS and option codes in the spaces indicated in the Record Keeping section. Accurately record all the numbers. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the engine.

SETTING FUEL DELIVERY beyond published factory specifications or otherwise overpowering will result in loss of warranty protection for this engine.

CERTAIN ENGINE ACCESSORIES such as radiator, air cleaner, and instruments are optional equipment on John Deere OEM Engines. These accessories may be provided by the equipment manufacturer instead of John Deere. This operator's manual applies only to the engine and those options available through the John Deere distribution network.

NOTE: This operator's manual covers only engines provided to OEM (Original Equipment Manufacturers). For engines in Deere machines, refer to the machine operator's manual.

This manual covers primarily the PowerTech Plus 13.5 L (6135HF485) OEM engines. These engines meet emission standards for EPA Tier 3 and EU Stage III A. Other emission tiers of this engine size may be located in this manual based on the cover title.

JR74534,000031F -19-04MAR11-1/1

Engine Owner


John Deere Engine Owner:

It is important for the new engine to be registered for factory warranty. Registering the engine will allow the Service Dealer to verify the warranty status should a repair be needed. The easiest way to register the engine is via the internet. To register the engine for warranty via the internet, please use the following URL: <http://www.johndeere.com/enginewarranty>

The John Deere Engine Distributor or local John Deere Service Dealer can also provide this service. Engine service can be done by all AG, C&F, and JDPS branded dealers. To view the John Deere Service Dealer network or locate the nearest Dealer, use the following URL: <http://www.johndeere.com/dealer>

JR74534,000026F -19-19AUG21-1/1

Download Instructions

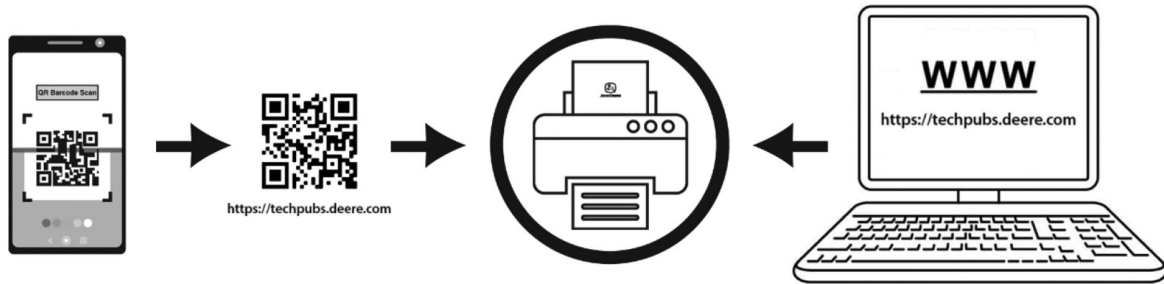

Instructions, manuals, and other documents may be downloaded at [www.techpubs.deere.com](https://techpubs.deere.com). Scanning the QR code on a mobile device will route to the site automatically.

Les instructions, les manuels et autres documents peuvent être téléchargés à cette adresse: [www.techpubs.deere.com](https://techpubs.deere.com). Scanner le QR code via un appareil mobile mène automatiquement au site.

Istruzioni, manuali e altri documenti possono essere scaricati su [www.techpubs.deere.com](https://techpubs.deere.com). La scansione del codice QR su un dispositivo portatile indirizza automaticamente al sito.

Anleitungen, Handbücher und andere Dokumente können unter [www.techpubs.deere.com](https://techpubs.deere.com) heruntergeladen werden. Durch Scannen des QR-Codes mit einem Mobilgerät wird man automatisch zur Webseite weitergeleitet.


Las instrucciones, los manuales y otros documentos se pueden descargar en [www.techpubs.deere.com](https://techpubs.deere.com). Al escanear el código QR en un dispositivo móvil, se abrirá automáticamente el sitio web.

Instruções, manuais e outros documentos podem ser baixados em [www.techpubs.deere.com](https://techpubs.deere.com). A leitura do código QR em um dispositivo móvel levará você automaticamente para o site.

Инструкции, руководства и другие документы можно загрузить на странице [www.techpubs.deere.com](https://techpubs.deere.com). Сканирование QR-кода на мобильном устройстве будет автоматически отправлять на сайт.


Identification Views

*NOTE: There are multiple engine configurations.
Base engine model shown.*

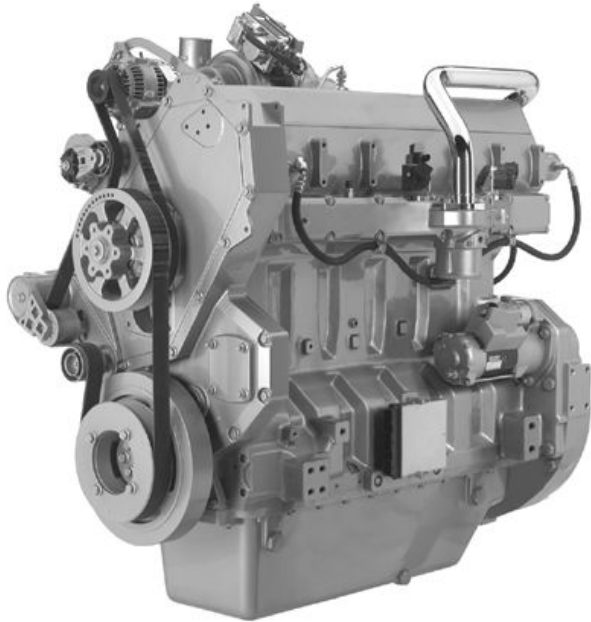

John Deere 13.5 L Diesel Base Engine

RG13885 —UN—19MAY05

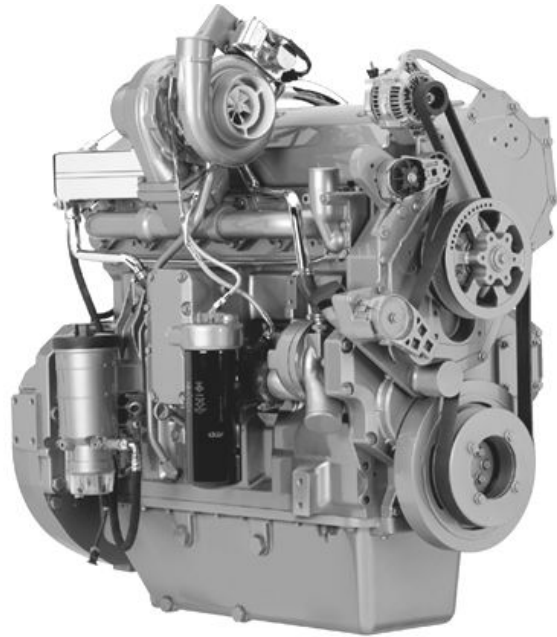

John Deere 13.5 L Diesel Base Engine

RG13886 —UN—19MAY05

OMRGP15,000011D -19-13JUL21-1/1

Trademarks

Trademarks	
AdBlue®	AdBlue is a trademark of VDA, the German Association of the Automotive Industry.
AMP®	AMP is a trademark of Tyco Electronics
BIO-GREASE-GARD™	BIO-GREASE-GARD is a trademark of Deere & Company
Bio Hy-Gard™	Bio Hy-Gard is a trademark of Deere & Company
Bluetooth®	Bluetooth is a trademark of Bluetooth SIG
Break-In™ Plus	Break-In is a trademark of Deere & Company
CINCH®	CINCH is a trademark of Cinch Inc.
COOL-GARD™ PLUS	COOL-GARD is a trademark of Deere & Company
CoolScan™	CoolScan is a trademark of Deere & Company
COOLSCAN™ PLUS	COOLSCAN is a trademark of Deere & Company
Custom Performance™	Custom Performance is a trademark of Deere & Company
Deere™	Deere is a trademark of Deere & Company
DENSO®	DENSO is a trademark of DENSO Corporation
DEUTSCH®	DEUTSCH is a trademark of TE Connectivity
DieselScan™	DieselScan is a trademark of Deere & Company
DuPont®	DuPont is a trademark of E.I. DuPont de Nemours and Company
EXTREME-GARD™	EXTREME-GARD is a trademark of Deere & Company
FleetGard™	FleetGard is a trademark of Deere & Company
Fuelscan™	Fuelscan is a trademark of Deere & Company
Funk™	Funk is a trademark of Deere & Company
GREASE-GARD™	GREASE-GARD is a trademark of Deere & Company
Hy-Gard™	Hy-Gard is a trademark of Deere & Company
JDLink™	JDLink is a trademark of Deere & Company
JDParts™	JDParts is a trademark of Deere & Company
JDPoint™	JDPoint is a trademark of Deere & Company
John Deere™	John Deere is a trademark of Deere & Company
Loctite®	Loctite is a trademark of Henkel Corporation
Metri-Pack®	Metri-Pack is a trademark of Delphi Connection Systems
OILSCAN PLUS™	OILSCAN PLUS is a trademark of Deere & Company
Oilscan™	Oilscan is a trademark of Deere & Company
Permatex®	Permatex is a trademark of Illinois Tool Works Inc.
Phoenix™	Phoenix is a trademark of Deere & Company
Plastigage®	Plastigage is a trademark of Perfect Circle Corporation
Plus-50™ II	Plus-50 is a trademark of Deere & Company
PowerSight™	PowerSight is a trademark of Deere & Company
PowerTech™	PowerTech is a trademark of Deere & Company
PowerTech™ E	PowerTech is a trademark of Deere & Company
PowerTech™ M	PowerTech is a trademark of Deere & Company
PowerTech™ Plus	PowerTech is a trademark of Deere & Company
Restore®	Restore is a trademark of "Restore, Inc."

Continued on next page

ZE59858,0000006 -19-12APR21-1/2

Introduction

Scotch-Brite®	Scotch-Brite is a trademark of 3M Co.
Scotch-Grip®	Scotch-Grip is a trademark of 3M Co.
Service ADVISOR™	Service ADVISOR is a trademark of Deere & Company
SERVICEGARD™	SERVICEGARD is a trademark of Deere & Company
SPEEDI-SLEEVE®	SPEEDI-SLEEVE is a registered trademark of the SKF Group.
SWEDA™	SWEDA is a trademark of Deere & Company
Swagelok®	Swagelok is a registered trademark of Swagelok Company.
TACH-N-TIME™	TACH-N-TIME is a trademark of Bosch Automotive Service Solutions Inc.
TeamMate™	TeamMate is a trademark of Deere & Company
TEFLON®	TEFLON is a trademark of Du Pont Co.
Torq-Gard™	Torq-Gard is a trademark of Deere & Company
TORX®	TORX is a registered trademark of Acument Intellectual Properties, LLC
Vari-Cool™	Vari-Cool is a trademark of Deere & Company
WEATHER PACK®	WEATHER PACK is a trademark of Packard Electric
WINDOWS®	WINDOWS is a trademark of Microsoft Corporation

ZE59858,0000006 -19-12APR21-2/2

Contents

	Page		Page
Record Keeping			
Record Engine Serial Number	01-1	Supplemental Diesel Fuel Additives	10-2
Engine Option Codes	01-2	Lubricity of Diesel Fuel	10-2
Record Engine Control Unit (ECU)		Handling and Storing Diesel Fuel	10-2
Serial Number	01-4	Biodiesel Fuel	10-3
Record Rear Power Take-Off (PTO)		Testing Diesel Fuel	10-4
Serial Number (If Equipped)	01-4	Fuel Filters	10-4
Emergency Stationary Engine Rule	01-5	Minimizing the Effect of Cold Weather	
		on Diesel Engines	10-5
Safety		Diesel Engine Break-In Oil —	
Recognize Safety Information	05-1	Non-Emissions Certified and	
Understand Signal Words	05-1	Certified Tier 1, Tier 2, Tier 3, Stage	
Follow Safety Instructions	05-1	I, Stage II, and Stage III	10-6
Replace Safety Signs	05-2	Diesel Engine Oil — Tier 3 and Stage IIIA	10-7
Illuminate Work Area Safely	05-2	Engine Oil and Filter Service Intervals	
Work in Clean Area	05-2	— Tier 3 and Stage IIIA — OEM	
Use Proper Tools	05-3	Applications	10-8
Live With Safety	05-3	Diesel Engine Oil and Filter Service Intervals	10-9
Prevent Machine Runaway	05-3	Mixing of Lubricants	10-10
Handle Fuel Safely—Avoid Fires	05-4	Alternative and Synthetic Lubricants	10-10
Prepare for Emergencies	05-4	Lubricant Storage	10-10
Handle Starting Fluid Safely	05-4	Oil Filters	10-10
In Case of Fire	05-5	Diesel Engine Coolant (engine with	
Handle Fluids Safely—Avoid Fires	05-5	wet sleeve cylinder liners)	10-11
Avoid Static Electricity Risk When Refueling	05-6	Water Quality for Mixing with Coolant	
Service Machines Safely	05-6	Concentrate	10-12
Wear Protective Clothing	05-6	Operating in Warm Temperature Climates	10-12
Protect Against Noise	05-7	Testing Coolant Freeze Point	10-13
Handling Batteries Safely	05-7	Disposing of Coolant	10-13
Prevent Acid Burns	05-8		
Stay Clear of Rotating Drivelines	05-8	Instrument Panel and Diagnostic Gauge	
Install All Guards	05-9	Instrument Panels	15-1
Practice Safe Maintenance	05-9	PV101 Instrument Panels	15-4
Remove Paint Before Welding or Heating	05-10	PV101 Diagnostic Gauge — Using	15-6
Avoid Heating Near Pressurized Fluid Lines	05-10	PV101 Diagnostic Gauge — Main Menu	15-7
Avoid High-Pressure Fluids	05-10	PV101 Diagnostic Gauge — Essential Menus ...	15-8
Do Not Open High-Pressure Fuel System	05-11	DG14 Diagnostic Gauge — Using	15-8
Protect Against High Pressure Spray	05-11	DG14 Diagnostic Gauge — Main Menu	15-9
Prevent Battery Explosions	05-11	DG14 Diagnostic Gauge — Essential Menus ...	15-10
Avoid Hot Exhaust	05-12	PV480 Instrument Panel	15-11
Work In Ventilated Area	05-12	PV480 Diagnostic Gauge — Using	15-12
Service Cooling System Safely	05-12	PV480 Diagnostic Gauge — Main Menu	15-13
Decommissioning — Proper Recycling		PV480 Diagnostic Gauge — Essential Menus ..	15-14
and Disposal of Fluids and Components	05-13	Main Menu Navigation	15-14
		Engine Configuration Data	15-16
Fuels, Lubricants, and Coolant		Accessing Stored Trouble Codes	15-17
Diesel Fuel	10-1	Accessing Active Trouble Codes	15-19

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2022
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions

Copyright © 2005, 2006, 2008, 2009, 2010, 2011, 2013, 2014, 2015, 2016, 2017, 2018, 2020, 2021

Page	Page
Engine Shutdown Codes.....	15-21
Adjusting Backlighting	15-22
Adjusting Contrast	15-24
Selecting Units Of Measurement.....	15-26
Setup 1-Up Display.....	15-28
Setup 4-Up Display.....	15-33
John Deere PowerSight.....	15-37
Engine Operation	
Engine Break-In Service.....	20-1
Auxiliary Gear Drive Limitations	20-3
Generator Set (Standby) And All Other OEM Engine Applications	20-3
Starting the Engine.....	20-4
Restarting Engine Which Has Run Out Of Fuel	20-5
Warming Engine	20-6
Normal Engine Operation.....	20-6
Cold Weather Operation.....	20-7
Changing Engine Speed.....	20-8
Avoid Excessive Engine Idling.....	20-9
Stopping the Engine	20-10
Using a Booster Battery or Charger	20-11
Lubrication and Maintenance	
Required Emission-Related Information.....	25-1
Observe Service Intervals	25-1
Use Correct Fuels, Lubricants, and Coolant.....	25-1
Lubrication and Maintenance Service Interval Chart—Industrial Unit and Generator (Prime Power)	25-2
Lubrication and Maintenance Service Interval Chart—Generator (Standby) Applications	25-3
Lubrication & Maintenance — Daily	
Daily Prestarting Checks	30-1
Lubrication & Maintenance — 500 Hours/12 Months	
Servicing Fire Extinguisher.....	35-1
Servicing Battery	35-1
Changing Engine Oil and Replacing Oil Filter	35-3
Visually Inspecting Coolant Pump	35-5
Replacing Fuel Filters/Cleaning Water Separator (Earlier Engines).....	35-5
Replacing Fuel Filters/Cleaning Water Separator (Later Engines).....	35-9
Checking and Adjusting Engine Speeds	35-11
Checking Engine Mounts.....	35-11
Checking Crankcase Vent Tube and Valve	35-11
Checking Air Intake System	35-12
Check Engine Electrical Ground Connection ...	35-12
Checking Belt Tensioner Spring Tension and Belt Wear	35-13
Checking Cooling System	35-14
Testing Diesel Engine Coolant.....	35-15
Replenishing Supplemental Coolant Additives (SCAs) Between Coolant Changes	35-16
Pressure Testing Cooling System.....	35-17
Lubrication & Maintenance — 2000 Hours/24 Months	
Checking Crankshaft Vibration Damper	40-1
Testing Thermostats Opening Temperature	40-2
Lubrication & Maintenance — 2500 Hours	
Checking and Adjusting Engine Valve Clearance and Electronic Unit Injector Preload	45-1
Do Not Modify Fuel System.....	45-1
Service as Required	
Additional Service Information.....	50-1
Adding Coolant.....	50-1
Pre-Start Cleaning Guide	50-2
Flushing and Refilling Cooling System	50-2
Replacing Air Cleaner Filter Elements.....	50-5
Draining Fuel Filter Water Separator Bowl	50-6
Bleeding Fuel System (Earlier Engines).....	50-7
Bleeding Fuel System (Later Engines).....	50-7
Replacing Fan/Alternator V-Belts	50-8
V-Belt Routing	50-9
Checking Fuses.....	50-9
Air Compressors.....	50-9
Rear Power Take-Off (PTO)	50-10
Troubleshooting	
General Troubleshooting Information	55-1
Instrument Panel Method for Retrieving Diagnostic Trouble Codes	55-2
Displaying Of Diagnostic Trouble Codes (DTCs)	55-2
Listing of Diagnostic Trouble Codes (DTCs)	55-3
Intermittent Fault Diagnostics	55-10
Displaying Diagnostic Gauge Software	55-10
Engine Troubleshooting.....	55-12
Engine Troubleshooting (Continued)	55-14
Electrical Troubleshooting	55-16
Lubrication System Troubleshooting	55-18
Cooling System Troubleshooting.....	55-21
Air Intake and Exhaust System Troubleshooting.....	55-23
Low Pressure Fuel System Troubleshooting....	55-25
Electrical System Layout	55-26
Electrical System Layout- Continued.....	55-27
Precautions for Welding on Vehicles Equipped with Electronic Engine Control Unit (ECU)	55-28
Precautions for Electrical System When Steam Cleaning Engine	55-28

Continued on next page

	Page
Engine Wiring Diagram (Engines With Full-Featured Instrument Panel)	55-29
Engine Wiring Diagram (Engines With Full-Featured Instrument Panel) (Continued)	55-30
Engine Wiring Diagram (Engines With Full-Featured Instrument Panel) (Continued)	55-31

Storage

Engine Storage Guidelines	60-1
Preparing Engine for Long Term Storage	60-2
Removing Engine from Long Term Storage	60-3

Specifications

General OEM Engine Specifications	65-1
Engine Power Ratings And Fuel System Specifications	65-4
Engine Crankcase Oil Fill Quantities	65-6
Unified Inch Bolt and Screw Torque Values	65-7
Metric Bolt and Screw Torque Values	65-8

Lubrication and Maintenance Records

Using Lubrication and Maintenance Records	70-1
Daily (Prestarting) Service	70-1
500 Hours of Operation/or 12 Months Service	70-1
2000 Hours of Operation/or 24 Months Service	70-2
2500 Hours of Operation Service	70-2
Service as Required	70-3

Warranty

John Deere Warranty in OEM Applications	75-1
Emissions Control System Certification Label	75-4
EPA Non-road Emissions Control Warranty Statement—Compression Ignition	75-5
CARB Non-road Emissions Control Warranty Statement—Compression Ignition	75-7

Record Keeping

Record Engine Serial Number

The engine serial number plate (C) is located on the left-hand side of engine block between intake manifold and starter motor.

Record all of the numbers and letters found on your engine serial number plate in the spaces provided below.

This information is very important for repair parts or warranty information.

Engine Serial Number (A)

Engine Model Number (B)

NOTE: On engine serial number (A) the 7th digit shows the emission level as follows:

- “B” for non-certified engines
- “C” for Tier 1 / Stage I engines
- “G” for Tier 2 / Stage II engines
- “L” for Tier 3 / Stage IIIA engines


For identification of publications specific to engine model refer to the [PowerAssist App](#) or [John Deere Technical Information Store](#).

A—Engine Serial Number
B—Engine Model Number

C—Engine Serial Number Plate



Engine Serial Number/Application Data

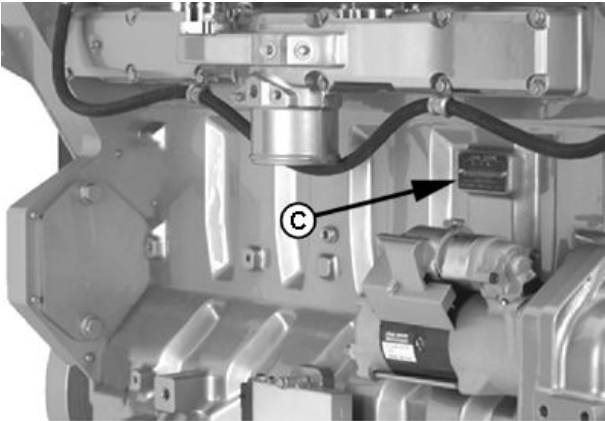

Location of Engine Serial Number Plate

RG33180 —UN—18NOV20



<https://techpubs.deere.com/https://techpubs.deere.com/>

OURGP11,000004B -19-13JUL21-1/1

RG14798 —UN—23JUN06

RG13887 —UN—26JUL05

Engine Option Codes

JOHN DEERE **Number PE6068U000094**

6068HFC09 **6.8 L** **2732F** A

1111 1399 1425 1524 1606 1708 1928 2002 2699 2815 2909 3008 3512 3914 4026
 4391 4607 4702 4803 4903 5002 5103 5215 5407 5511 5615 5709 5927 6543 6801
 6901 72F3 7306 7703 7897 8422 8911 9805

Customer No. **OPTION CODES**

Option Code Label Example

A—Engine Base Code (example)

OEM engines have an engine option code label affixed to the rocker arm cover. These codes indicate which of the engine options were installed on your engine at the factory. When in need of parts or service, furnish your authorized servicing dealer or engine distributor with these numbers.

The engine option code label includes an engine base code (A). This base code must also be recorded along with the option codes. At times it will be necessary to furnish this base code to differentiate two identical option codes for the same engine model.

The first two digits of each code identify a specific group, such as alternators. The last two digits of each code identify one specific option provided on your engine, such as a 24 volt, 120 amp alternator.

If an engine is ordered without a particular component, the last two digits of that functional group option code will be 99, 00, or XX. The following list shows only the first two digits of the code numbers. For future reference such as ordering repair parts, it is important to have these code numbers available. To ensure this availability, enter the third and fourth digits shown on your engine option code label in the spaces provided on the following page.

An additional option code label may also be delivered (in a plastic bag attached to the engine or inserted in the machine documentation). It is recommended to place this label either on this page of the operator's manual or in the Engine Owner's Warranty booklet under Option Codes.

The machine manufacturer may have placed the label in a specific accessible area (inside the enclosure or close to a maintenance area).

Your engine option code label may not contain all option codes if an option has been added after the engine left the producing factory.

If option code label is lost or destroyed, consult your servicing dealer or engine distributor selling the engine for a replacement.

Record your engine Base Code (A) in the spaces provided below for easy reference.

Engine Base Code (A):

Option Codes	Description
10_____	Paint Protection
11_____	Rocker Arm Cover
12_____	Oil Filler
13_____	Crankshaft Pulley
14_____	Flywheel Housing
15_____	Flywheel
16_____	Fuel Injection System
17_____	Air Inlet
18_____	Air Cleaner
19_____	Oil Pan
20_____	Water Pump
21_____	Thermostat Cover

Option Codes	Description
56_____	Paint
57_____	Water Pump Inlet
58_____	Power Take Off
59_____	Oil Cooler/Oil Filter
60_____	Add-On Fan Drive Pulley
61_____	After Treatment Device/Muffler
62_____	Alternator Mounting
63_____	Low-Pressure Fuel Lines
64_____	Exhaust Elbow
65_____	Turbocharger
66_____	Temperature Switch
67_____	Engine Sensors

Continued on next page

RG, RG34710, 5004 -19-16AUG21-1/2

RG24026—UN—05AUG13

Record Keeping

Option Codes	Description	Option Codes	Description
22_____	Thermostat	68_____	Damper
23_____	Fan Drive	69_____	Engine Serial Number Plate
24_____	Fan Belt	70_____	Decomposition Tube (OEM)
25_____	Fan	71_____	SCR (OEM)
26_____	Block Heater	72_____	Performance Software and Labels
27_____	Radiator/Heat Exchanger	7A_____	Performance Software and Labels
28_____	Exhaust Manifold	73_____	After Treatment Dosing System
29_____	Ventilator System	74_____	Air Conditioning
30_____	Starting Motor	75_____	Restriction Indicator
31_____	Alternator	76_____	Oil Pressure Switch
32_____	DEF Lines, Pressure (OEM)	77_____	Timing Gear Cover (S450/S650)
33_____	DEF Lines, Supply/Return to Tank (OEM)	78_____	Air Compressor
34_____	DEF Tank and Header (OEM)	79_____	Certification
35_____	Final Fuel Filter	80_____	Sea Water Pump (Marine)
36_____	Front Plate and Idler Shafts	81_____	Primary Fuel Filter/Water Separator
37_____	Fuel Transfer Pump	82_____	Ignition System (Natural Gas)
38_____	Operator Manual	83_____	Vehicle Performance Software
39_____	Thermostat Housing	84_____	Wiring Harness
40_____	Dipstick and Tube	85_____	Fuel System (Natural Gas)
41_____	Belt Driven Auxiliary Drive (Add-On Crank Pulley)	86_____	Fan Pulley
42_____	DEF Line, Supply Module to Injector (OEM)	87_____	Belt Tensioner
43_____	Starting Aid	88_____	Oil Filter
44_____	Timing Gear Cover (S350)	89_____	EGR System
44_____	Tachometer Drive Sensors (S450/S650)	90_____	Trim Software (OEM)
45_____	Secondary Balancers	91_____	Engine Installation Kit (S350)
46_____	Cylinder Block with Camshaft	92_____	Engine Test Certificate/Engine Accessories (S350)
47_____	Crankshaft/Main Bearings	92_____	Engine Installation Kit (S450)
48_____	Connecting Rods/Pistons/Liners	93_____	Emission Label
49_____	Valve Actuating Mechanism	94_____	Custom Software
50_____	Oil Pump	95_____	Parts Installed at Factory
51_____	Cylinder Head with Valves	96_____	Engine Installation Kit/Ship With (S450/S650)
52_____	Gear Driven Auxiliary Drive	96_____	ECU Wiring Harness (6125/6135)
53_____	Fuel Heater	97_____	Field Installed Items
54_____	Turbo Air Intake	98_____	Engine Lift Strap
55_____	Shipping Stand	99_____	Service Only Parts

NOTE: This is a complete option code list based on the latest information available at the time of publication. The right is reserved to make changes

at any time without notice. Your engine will not contain all option codes listed.

RG, RG34710, 5004 -19-16AUG21-2/2


Record Engine Control Unit (ECU) Serial Number

Record the part number and serial number information found on the serial number label (A) on the Engine Control Unit (ECU) mounted on or near the engine.

Part No. _____

Serial No. _____

A—Serial Number Label

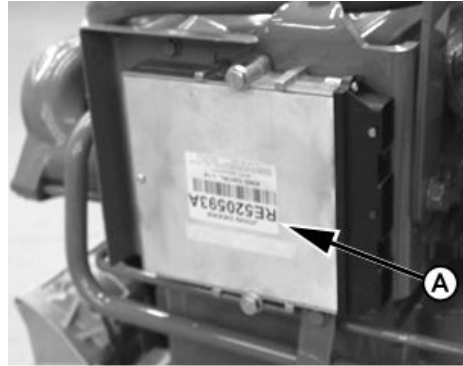

Record Engine Control Unit (ECU) Serial Number


RG13891 —UN—14JUN05

OURGP12,0000125 -19-12SEP06-1/1

Record Rear Power Take-Off (PTO) Serial Number (If Equipped)

Record the rear power take-off (PTO) serial number found on rear PTO serial number plate (A) (if equipped).

Rear PTO Serial Number

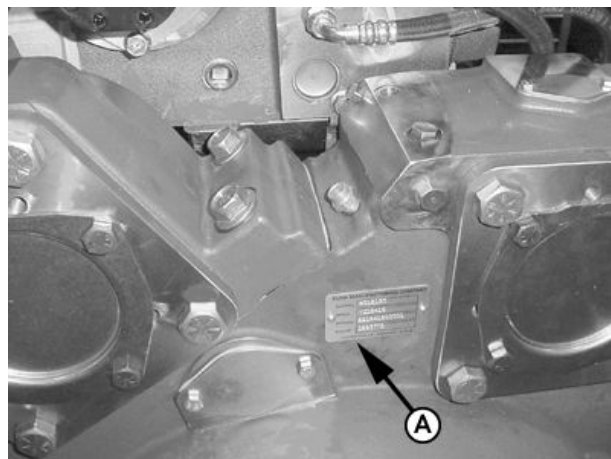


Rear PTO Serial Number Plate

RG12594 —UN—24SEP02

OUOD006,0000066 -19-12SEP06-1/1

Emergency Stationary Engine Rule

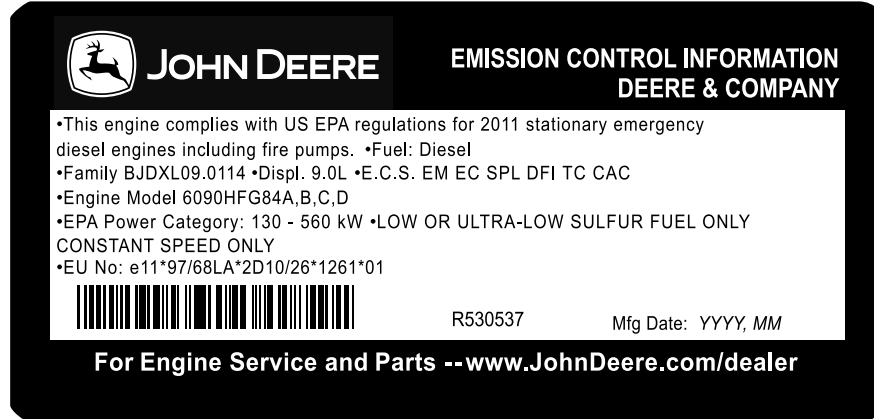

Emissions Label

Emissions Label

After Tier 4 standards take effect, engine manufacturers of emergency stationary engines that do not meet the standards for non-emergency engines must add to each such emergency engine a permanent label (such as the emission label as shown) which states that the engine is limited to stationary emergency use. On John Deere engines this is stated in the EPA emission label on each engine.

Fuel Requirements

Beginning 01 Oct 10, owners and operators of stationary engines that use diesel fuel must only use diesel fuel meeting the requirements of 40 CFR 80.510 (b), which requires that diesel fuel have a maximum sulfur content of 15 PPM and either a minimum cetane index of 40 or a maximum aromatic content of 35 volume percent.

Operation, Maintenance and Testing

The operation of emergency engines is limited to emergency operations and required maintenance and testing.

There is no time limit on the use of emergency stationary engines in emergency situations.

Maintenance and testing is limited to 100 hours per year. The EPA has also included a provision that allows anyone to petition the Administrator for additional hours, beyond the allowed 100 hours per year, if such additional hours should prove to be necessary for maintenance and testing reasons. The EPA will not require a petition for additional hours if the hours beyond 100 hours per year for maintenance and testing purposes are mandated by regulation such as State or Local requirements.

KW40574,0000003 -19-12MAY16-1/1

RG19597 —UN—20OCT10

Safety

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



T81389 —UN—28JUN13

DX,ALERT -19-29SEP98-1/1

Understand Signal Words

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General

precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



TS187 —19—30SEP88

DX,SIGNAL -19-05OCT16-1/1

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



TS201 —UN—15APR13

DX,READ -19-01AUG22-1/1

Replace Safety Signs

Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.




TS201 —UN—15APR13

DX,SIGNS -19-18AUG09-1/1

Illuminate Work Area Safely

Illuminate your work area adequately but safely. Use a portable safety light for working inside or under the machine. Make sure the bulb is enclosed by a wire cage. The hot filament of an accidentally broken bulb can ignite spilled fuel or oil.

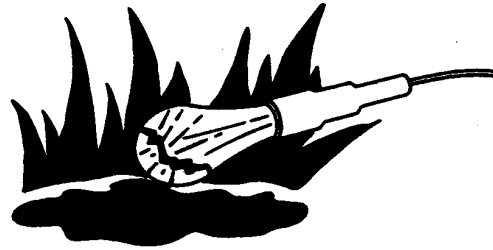


TS223 —UN—23AUG88

DX,LIGHT -19-04JUN90-1/1

Work in Clean Area

Before starting a job:

- Clean work area and machine.
- Make sure you have all necessary tools to do your job.
- Have the right parts on hand.
- Read all instructions thoroughly; do not attempt shortcuts.

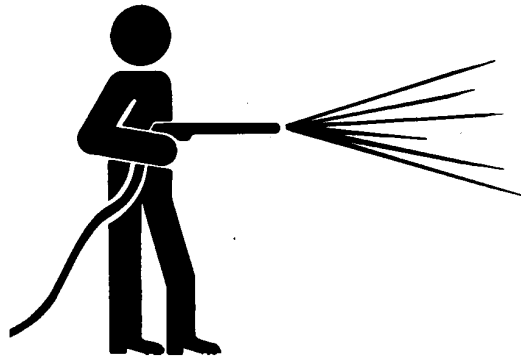

T6642EJ —UN—18OCT88

DX,CLEAN -19-04JUN90-1/1

Use Proper Tools

Use tools appropriate to the work. Makeshift tools and procedures can create safety hazards.

Use power tools only to loosen threaded parts and fasteners.

For loosening and tightening hardware, use the correct size tools. DO NOT use U.S. measurement tools on metric fasteners. Avoid bodily injury caused by slipping wrenches.

Use only service parts meeting John Deere specifications.



TS779 —UN—08NOV89

DX,REPAIR -19-17FEB99-1/1

Live With Safety

Before returning machine to customer, make sure machine is functioning properly, especially the safety systems. Install all guards and shields.



TS231 —19—07OCT88


DX,LIVE -19-25SEP92-1/1

Prevent Machine Runaway

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

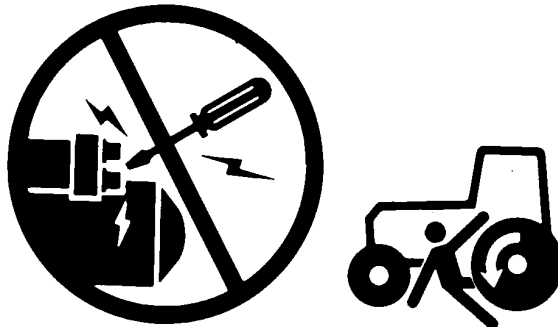

TS177 —UN—11JAN89

DX,BYPAS1 -19-29SEP98-1/1

Handle Fuel Safely—Avoid Fires

Handle fuel with care; it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1 -19-12OCT11-1/1


TS202 —UN—23AUG88

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

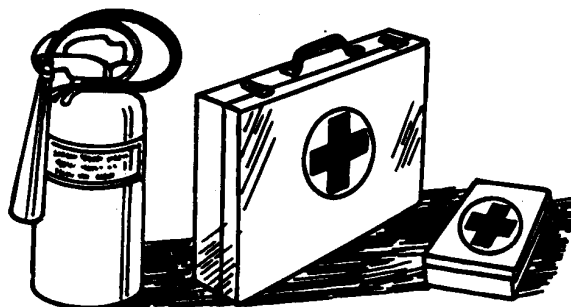

DX,FIRE2 -19-03MAR93-1/1

TS291 —UN—15APR13

Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.



DX,FIRE3 -19-14MAR14-1/1

TS1356 —UN—18MAR92

In Case of Fire

CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:

1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.



TS227 —UN—15APR13

DX,FIRE4 -19-22AUG13-1/1

Handle Fluids Safely—Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.



TS227 —UN—15APR13

DX,FLAME -19-29SEP98-1/1


Avoid Static Electricity Risk When Refueling

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

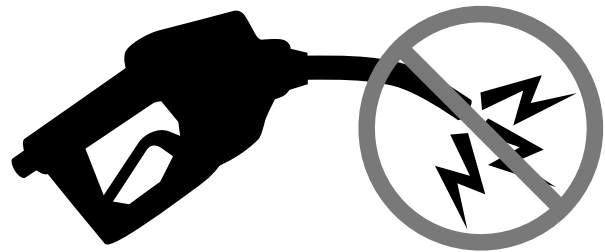

RG22142 —UN—17MAR14


RG21992 —UN—21AUG13

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1

Service Machines Safely

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

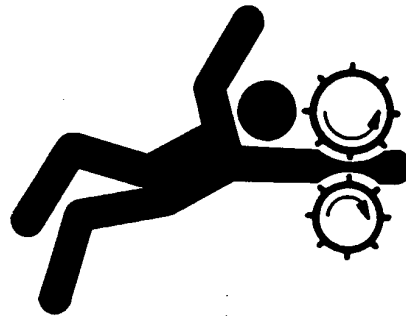


TS228 —UN—23AUG88

DX,LOOSE -19-04JUN90-1/1

Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

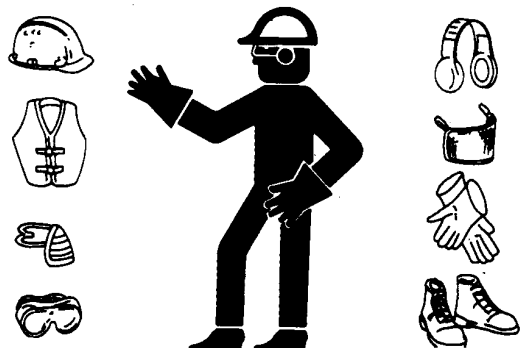

TS206 —UN—15APR13

DX,WEAR2 -19-03MAR93-1/1

Protect Against Noise

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS207 —UN—23AUG88

DX,NOISE -19-03OCT17-1/1

Handling Batteries Safely

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.


If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**



TS204 —UN—15APR13

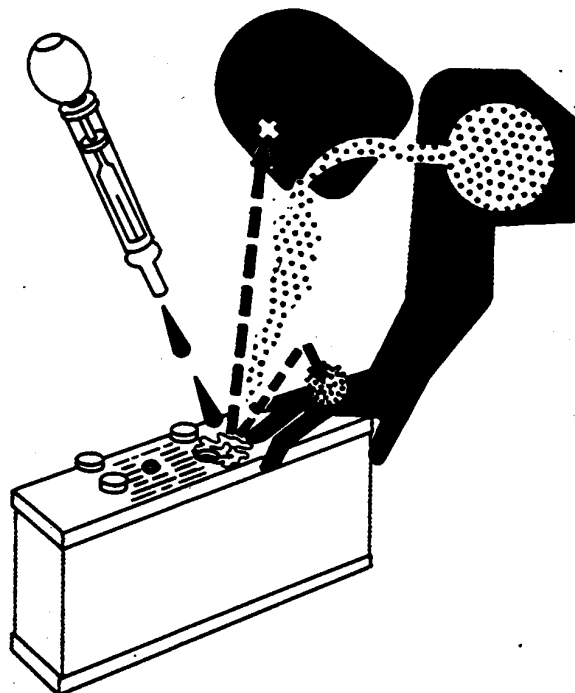

TS203 —UN—23AUG88

DX,WW,BATTERIES -19-02DEC10-1/1

Prevent Acid Burns

Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Use proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 quarts).
3. Get medical attention immediately.



TS203 —UN—23AUG88

DX,POISON -19-21APR93-1/1

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep all shields in place at all times. Make sure rotating shields turn freely.

Wear close-fitting clothing. Stop the engine and be sure that all rotating parts and drivelines are stopped before making adjustments, connections, or performing any type of service on engine or machine driven equipment.



TS1644 —UN—22AUG95


DX,ROTATING -19-18AUG09-1/1

Install All Guards

Rotating cooling system fans, belts, pulleys, and drives can cause serious injury.

Keep all guards in place at all times during engine operation.

Wear close-fitting clothes. Stop the engine and be sure fans, belts, pulleys, and drives are stopped before making adjustments, connections, or cleaning near fans and their drive components.

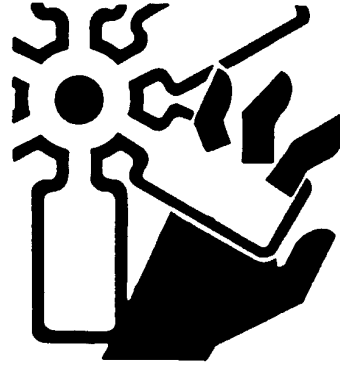

TS677 —UN—21SEP89

DX, GUARDS -19-18AUG09-1/1

Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.



TS218 —UN—23AUG88

DX, SERV -19-28FEB17-1/1

Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.



Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220 —UN—15APR13

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.



DX,TORCH -19-10DEC04-1/1

TS953 —UN—15MAY90

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within

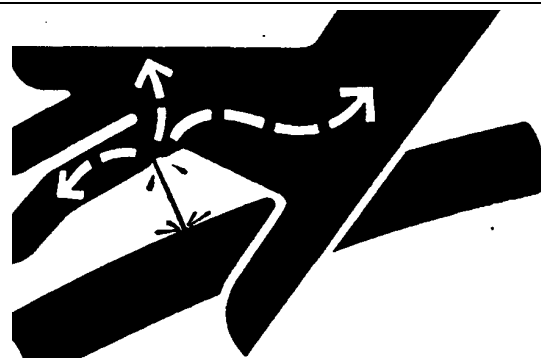

a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.


DX,FLUID -19-12OCT11-1/1

X9811 —UN—23AUG88

Do Not Open High-Pressure Fuel System

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

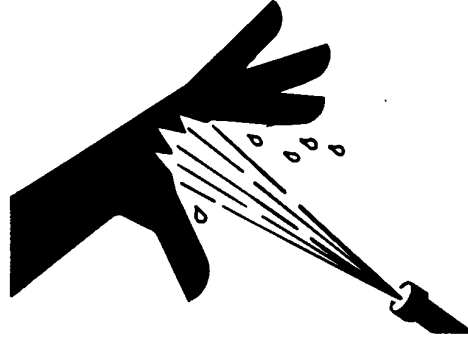


TS1343 —UN—18MAR92

DX,WW,HPCR1 -19-07JAN03-1/1

Protect Against High Pressure Spray

Spray from high pressure nozzles can penetrate the skin and cause serious injury. Keep spray from contacting hands or body.

If an accident occurs, see a doctor immediately. Any high pressure spray injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available from Deere & Company Medical Department in Moline, Illinois, U.S.A.

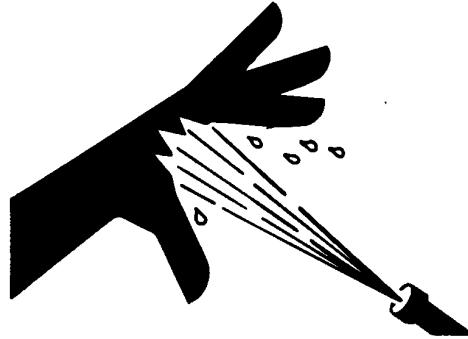

TS1343 —UN—18MAR92

DX,SPRAY -19-16APR92-1/1

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).




TS204 —UN—15APR13

DX,SPARKS -19-03MAR93-1/1

Avoid Hot Exhaust

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

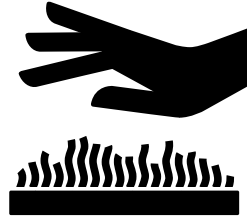


RG17488 —UN—21AUG09

DX,EXHAUST -19-20AUG09-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

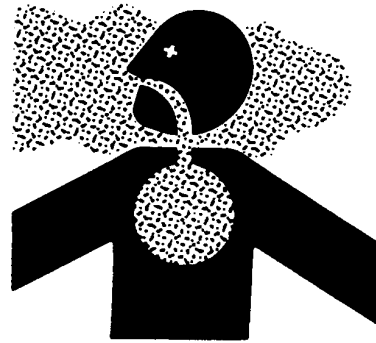

TS220 —UN—15APR13

DX,AIR -19-17FEB99-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.




TS281 —UN—15APR13

DX,WW,COOLING -19-19AUG09-1/1

Decommissioning — Proper Recycling and Disposal of Fluids and Components

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid);

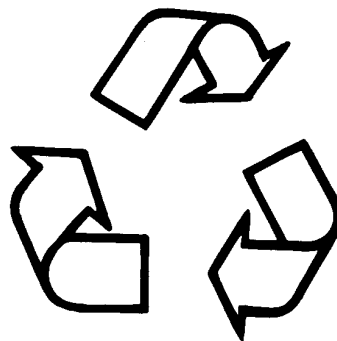

TS 1133 —UN—15APR13

filters; batteries; and, other substances or parts.

Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.

- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN -19-01JUN15-1/1

Fuels, Lubricants, and Coolant

Diesel Fuel

Consult your local fuel distributor for properties of the diesel fuel available in your area.

In general, diesel fuels are blended to satisfy the low temperature requirements of the geographical area in which they are marketed.

Diesel fuels specified to EN 590 or ASTM D975 are recommended. Renewable diesel fuel produced by hydrotreating animal fats and vegetable oils is basically identical to petroleum diesel fuel. Renewable diesel that meets EN 590, ASTM D975, or EN 15940 is acceptable for use at all percentage mixture levels.

Required Fuel Properties

In all cases, the fuel shall meet the following properties:

Cetane number of 40 minimum. Cetane number greater than 47 is preferred, especially for temperatures below -20°C (-4°F) or elevations above 1675 m (5500 ft.).

Cloud Point should be below the expected lowest ambient temperature or **Cold Filter Plugging Point (CFPP)** should be a maximum 10°C (18°F) below the fuel cloud point.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

Diesel fuel quality and sulfur content must comply with all existing emissions regulations for the area in which the engine operates. DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

Materials such as copper, lead, zinc, tin, brass and bronze should be avoided in fuel handling, distribution and storage equipment as these metals can catalyze fuel oxidation reactions which can lead to fuel system deposits and plugged fuel filters.

E-Diesel fuel

DO NOT use E-Diesel (Diesel fuel and ethanol blend). Use of E-Diesel fuel in any John Deere machine may void the machine warranty.

 **CAUTION: Avoid severe injury or death due to the fire and explosion risk from using E-Diesel fuel.**

¹See DX,ENOIL12,OEM, DX,ENOIL12,T2,STD, or DX,ENOIL12,T2,EXT for more information on Engine Oil and Filter Service Intervals.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III A and B, Stage IV, and Stage V Engines Above 560 kW

- Use ONLY diesel fuel with a maximum of 500 mg/kg (500 ppm) sulfur content.

Sulfur Content for Interim Tier 4, Final Tier 4, Stage III B, Stage IV Engines, and Stage V Engines

- Use ONLY ultra low sulfur diesel (ULSD) fuel with a maximum of 15 mg/kg (15 ppm) sulfur content.

Sulfur Content for Tier 3 and Stage III A Engines

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) REDUCES the oil and filter change interval.
- BEFORE using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer.

Sulfur Content for Tier 2 and Stage II Engines

- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content 2000—5000 mg/kg (2000—5000 ppm) REDUCES the oil and filter change interval.¹
- BEFORE using diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm), contact your John Deere dealer.

Sulfur Content for Other Engines

- Use of diesel fuel with sulfur content less than 5000 mg/kg (5000 ppm) is RECOMMENDED.
- Use of diesel fuel with sulfur content greater than 5000 mg/kg (5000 ppm) REDUCES the oil and filter change interval.

IMPORTANT: Do not mix used diesel engine oil or any other type of lubricating oil with diesel fuel.

Improper fuel additive usage may cause damage on fuel injection equipment of diesel engines.

DX,FUEL1 -19-13JUL20-1/1

Supplemental Diesel Fuel Additives

Diesel fuel can be the source of performance or other operational problems for many reasons. Some causes include poor lubricity, contaminants, low cetane number, and a variety of properties that cause fuel system deposits. These and others are referenced in other sections of this Operator's Manual.

To optimize engine performance and reliability, closely follow recommendations on fuel quality, storage, and handling, which are found elsewhere in this Operator's Manual.

To further aid in maintaining performance and reliability of the engine's fuel system, John Deere has developed a family of fuel additive products for most global markets. The primary products include Fuel-Protect Diesel Fuel Conditioner (full feature conditioner in winter and summer formulas) and Fuel-Protect Keep Clean (fuel injector deposit removal and prevention). Availability of these and other products varies by market. See your local John Deere dealer for availability and additional information about fuel additives that might be right for your needs.

DX,FUEL13 -19-07FEB14-1/1

Lubricity of Diesel Fuel

Most diesel fuels manufactured in the United States, Canada, and the European Union have adequate lubricity to ensure proper operation and durability of fuel injection system components. However, diesel fuels manufactured in some areas of the world may lack the necessary lubricity.

IMPORTANT: Make sure the diesel fuel used in your machine demonstrates good lubricity characteristics.

Fuel lubricity should pass a maximum scar diameter of 0.52 mm as measured by ASTM D6079 or ISO 12156-1. A maximum scar diameter of 0.45 mm is preferred.

If fuel of low or unknown lubricity is used, add John Deere Fuel-Protect Diesel Fuel Conditioner (or equivalent) at the specified concentration.

Lubricity of BioDiesel Fuel

Fuel lubricity can improve significantly with BioDiesel blends up to B20 (20% BioDiesel). Further increase in lubricity is limited for BioDiesel blends greater than B20.

DX,FUEL5 -19-07FEB14-1/1

Handling and Storing Diesel Fuel

⚠ CAUTION: Reduce the risk of fire. Handle fuel carefully. DO NOT fill the fuel tank when engine is running. DO NOT smoke while you fill the fuel tank or service the fuel system.

Fill the fuel tank at the end of each day's operation to prevent water condensation and freezing during cold weather.

Keep all storage tanks as full as practical to minimize condensation.

Ensure that all fuel tank caps and covers are installed properly to prevent moisture from entering. Monitor water content of the fuel regularly.

When using biodiesel fuel, the fuel filter may require more frequent replacement due to premature plugging.

Check engine oil level daily prior to starting engine. A rising oil level may indicate fuel dilution of the engine oil.

IMPORTANT: The fuel tank is vented through the filler cap. If a new filler cap is required, always replace it with an original vented cap.

When fuel is stored for an extended period or if there is a slow turnover of fuel, add a fuel conditioner to stabilize the fuel. Keeping the free water drained and treating the bulk fuel storage tank quarterly with a maintenance dose of a biocide will prevent microbial growth. Contact your fuel supplier or John Deere dealer for recommendations.

DX,FUEL4 -19-13JAN18-1/1

Biodiesel Fuel

Biodiesel fuel is comprised of monoalkyl esters of long chain fatty acids derived from vegetable oils or animal fats. Biodiesel blends are biodiesel mixed with petroleum diesel fuel on a volume basis.

Before using fuel containing biodiesel, review the Biodiesel Use Requirements and Recommendations in this Operator's Manual.

Environmental laws and regulations can encourage or prohibit the use of biofuels. Operators should consult with appropriate governmental authorities prior to using biofuels.

John Deere Stage V Engines Operating in the European Union

Where the engine is to be operated within the Union on diesel or non-road gas-oil, a fuel with a FAME content not greater than 8% volume/volume (B8) shall be used.

John Deere Engines with Exhaust Filter Except Stage V Engines Operating in the European Union

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

Biodiesel concentrations above B20 can harm the engine's emission control systems and should not be used. Risks include, but are not limited to, more frequent stationary regeneration, soot accumulation, and increased intervals for ash removal.

John Deere Fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B20, and are recommended when using lower biodiesel blends.

John Deere Engines Without Exhaust Filter

Biodiesel blends up to B20 can be used ONLY if the biodiesel (100% biodiesel or B100) meets ASTM D6751, EN 14214, or equivalent specification. Expect a 2% reduction in power and a 3% reduction in fuel economy when using B20.

These John Deere engines can operate on biodiesel blends above B20 (up to 100% biodiesel). Operate at levels above B20 ONLY if the biodiesel is permitted by law and meets the EN 14214 specification (primarily available in Europe). Engines operating on biodiesel blends above B20 might not fully comply with or be permitted by all applicable emissions regulations. Expect up to a 12% reduction in power and an 18% reduction in fuel economy when using 100% biodiesel.

John Deere fuel conditioners or equivalent, which contain detergent and dispersant additives, are required when using biodiesel blends from B10 to B100, and are recommended when using lower biodiesel blends.

Biodiesel Use Requirements and Recommendations

The petroleum diesel portion of all biodiesel blends must meet the requirements of ASTM D975 (US) or EN 590 (EU) commercial standard.

Biodiesel users in the U.S. are strongly encouraged to purchase biodiesel blends from a BQ-9000 Certified Marketer and sourced from a BQ-9000 Accredited Producer (as certified by the National biodiesel Board). Certified Marketers and Accredited Producers can be found at the following website: <http://www.bq9000.org>.

Biodiesel contains residual ash. Ash levels exceeding the maximums allowed in either ASTM D6751 or EN14214 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present).

The fuel filter can require more frequent replacement when using biodiesel fuel, particularly if switching from diesel. Check engine oil level daily prior to starting engine. A rising oil level can indicate fuel dilution of the engine oil. Biodiesel blends up to B20 must be used within 90 days of the date of biodiesel manufacture. Biodiesel blends above B20 must be used within 45 days from the date of biodiesel manufacture.

When using biodiesel blends up to B20, the following must be considered:

- Cold-weather flow degradation
- Stability and storage issues (moisture absorption, microbial growth)
- Possible filter restriction and plugging (usually a problem when first switching to biodiesel on used engines)
- Possible fuel leakage through seals and hoses (primarily an issue with older engines)
- Possible reduction of service life of engine components

Request a certificate of analysis from your fuel distributor to ensure that the fuel is compliant with the specifications provided in this Operator's Manual.

Consult your John Deere dealer for John Deere fuel products to improve storage and performance with biodiesel fuels.

The following must also be considered if using biodiesel blends above B20:

- Possible coking or blocked injector nozzles, resulting in power loss and engine misfire if John Deere fuel additives and conditioners or equivalent containing detergent/dispersants are not used
- Possible crankcase oil dilution (requiring more frequent oil changes)
- Possible lacquering or seizure of internal components
- Possible formation of sludge and sediments
- Possible thermal oxidation of fuel at elevated temperatures

Continued on next page

DX,FUEL7 -19-13JAN18-1/2

- Possible compatibility issues with other materials (including copper, lead, zinc, tin, brass, and bronze) used in fuel handling, distribution, and storage equipment
- Possible reduction in water separator efficiency
- Possible damage to paint if exposed to biodiesel
- Possible corrosion of fuel injection equipment
- Possible elastomeric seal and gasket material degradation (primarily an issue with older engines)
- Possible high acid levels within fuel system

- Because biodiesel blends above B20 contain more ash, using blends above B20 can result in more rapid ash loading and require more frequent cleaning of the Exhaust Filter (if present)

IMPORTANT: Raw pressed vegetable oils are NOT acceptable for use as fuel in any concentration in John Deere engines. Their use could cause engine failure.

DX,FUEL7 -19-13JAN18-2/2

Testing Diesel Fuel

A fuel analysis program can help to monitor the quality of diesel fuel. The fuel analysis can provide critical data such as calculated cetane index, fuel type, sulfur content, water content, appearance, suitability for cold weather

operations, bacteria, cloud point, acid number, particulate contamination, and whether the fuel meets ASTM D975 or equivalent specification.

Contact your John Deere dealer for more information on diesel fuel analysis.

DX,FUEL6 -19-13JAN18-1/1

Fuel Filters

The importance of fuel filtration cannot be overemphasized with modern fuel systems. The combination of increasingly restrictive emission regulations and more efficient engines requires fuel system to operate at much higher pressures. Higher pressures can only be achieved using fuel injection components with very close tolerances. These close

manufacturing tolerances have significantly reduced capacities for debris and water.

John Deere brand fuel filters have been designed and produced specifically for John Deere engines.

To protect the engine from debris and water, always change engine fuel filters as specified in this manual.

DX,FILT2 -19-14APR11-1/1

Minimizing the Effect of Cold Weather on Diesel Engines

John Deere diesel engines are designed to operate effectively in cold weather.

However, for effective starting and cold-weather operation, a little extra care is necessary. The following information outlines steps that can minimize the effect that cold weather may have on starting and operation of your engine. See your John Deere dealer for additional information and local availability of cold-weather aids.

Use Winter Grade Fuel

When temperatures fall below 0°C (32°F), winter grade fuel (No. 1-D in North America) is best suited for cold-weather operation. Winter grade fuel has a lower cloud point and a lower pour point.

Cloud point is the temperature at which wax begins to form in the fuel. This wax causes fuel filters to plug. **Pour point** is the lowest temperature at which movement of the fuel is observed.


NOTE: On average, winter grade diesel fuel has a lower Btu (heat content) rating. Using winter grade fuel may reduce power and fuel efficiency, but should not cause any other engine performance effects. Check the grade of fuel being used before troubleshooting for low-power complaints in cold-weather operation.

Air Intake Heater

An air intake heater is an available option for some engines to aid cold weather starting.

Ether

An ether port on the intake is available to aid cold weather starting.

 **CAUTION: Ether is highly flammable. Do not use ether when starting an engine equipped with glow plugs or an air intake heater.**

Coolant Heater

An engine block heater (coolant heater) is an available option to aid cold weather starting.

Seasonal Viscosity Oil and Proper Coolant Concentration

Use seasonal grade viscosity engine oil based on the expected air temperature range between oil changes and a proper concentration of low silicate antifreeze as recommended. (See DIESEL ENGINE OIL and ENGINE COOLANT requirements in this section.)

Diesel Fuel Cold Flow Additive

Use John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula), which contains anti-gel chemistry, or equivalent fuel conditioner to treat non-winter grade fuel (No. 2-D in North America) during the cold-weather season. This generally extends operability to about 10°C (18°F) below the fuel cloud point. For operability at even lower temperatures, use winter grade fuel.

IMPORTANT: Treat fuel when outside temperature drops below 0°C (32°F). For best results, use with untreated fuel. Follow all recommended instructions on label.

Biodiesel

When operating with biodiesel blends, wax formation can occur at warmer temperatures. Begin using John Deere Fuel-Protect Diesel Fuel Conditioner (winter formula) or equivalent at 5°C (41°F) to treat biodiesel fuels during the cold-weather season. Use B5 or lower blends at temperatures below 0°C (32°F). Use only winter grade petroleum diesel fuel at temperatures below -10°C (14°F).

Winterfronts

Use of fabric, cardboard, or solid winterfronts is not recommended with any John Deere engine. Their use can result in excessive engine coolant, oil, and charge air temperatures. This can lead to reduced engine life, loss of power and poor fuel economy. Winterfronts may also put abnormal stress on fan and fan drive components potentially causing premature failures.

If winterfronts are used, they should never totally close off the grill frontal area. Approximately 25% area in the center of the grill should remain open at all times. At no time should the air blockage device be applied directly to the radiator core.

Radiator Shutters

If equipped with a thermostatically controlled radiator shutter system, this system should be regulated in such a way that the shutters are completely open by the time the coolant reaches 93°C (200°F) to prevent excessive intake manifold temperatures. Manually controlled systems are not recommended.

If air-to-air aftercooling is used, the shutters must be completely open by the time the intake manifold air temperature reaches the maximum allowable temperature out of the charge air cooler.

For more information, see your John Deere dealer.

DX,FUEL10 -19-13JAN18-1/1

Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III

New engines are filled at the factory with either John Deere Break-In™ or John Deere Break-In Plus™ Engine Oil. During the break-in period, add John Deere Break-In™ or Break-In Plus™ Engine Oil, respectively, as needed to maintain the specified oil level.

Operate the engine under various conditions, particularly heavy loads with minimal idling, to help seat engine components properly.

If John Deere Break-In™ Engine Oil is used during the initial operation of a new or rebuilt engine, change the oil and filter at a maximum of 100 hours.

If John Deere Break-In Plus™ Engine Oil is used, change the oil and filter at a minimum of 100 hours and a maximum equal to the interval specified for John Deere Plus-50™ II or Plus-50™ oil.

After engine overhaul, fill the engine with either John Deere Break-In™ or Break-In Plus™ Engine Oil.

If John Deere Break-In™ or Break-In Plus™ Engine Oil is not available, use an SAE 10W-30 viscosity grade diesel engine oil meeting one of the following and change the oil and filter at a maximum of 100 hours of operation:

- API Service Classification CE
- API Service Classification CD
- API Service Classification CC
- ACEA Oil Sequence E2

*Break-In is a trademark of Deere & Company.
Break-In Plus is a trademark of Deere & Company
Plus-50 is a trademark of Deere & Company.*

- ACEA Oil Sequence E1

IMPORTANT: Do not use Plus-50™ II, Plus-50™, or engine oils meeting any of the following for the initial break-in of a new or rebuilt engine:

API CK-4	ACEA E9
API CJ-4	ACEA E7
API CI-4 PLUS	ACEA E6
API CI-4	ACEA E5
API CH-4	ACEA E4
API CG-4	ACEA E3
API CF-4	
API CF-2	
API CF	

These oils do not allow the engine to break in properly.

John Deere Break-In Plus™ Engine Oil can be used for all John Deere diesel engines at all emission certification levels.

After the break-in period, use John Deere Plus-50™ II, John Deere Plus-50™, or other diesel engine oil as recommended in this manual.

DX,ENOIL4 -19-02NOV16-1/1

Diesel Engine Oil — Tier 3 and Stage IIIA

Failure to follow applicable oil standards and drain intervals can result in severe engine damage that might not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere oils, parts, or service.

Use oil viscosity based on the expected air temperature range during the period between oil changes.

John Deere Plus-50™ II oil is preferred.

John Deere Plus-50™ is also recommended.

John Deere Torq-Gard™ is also allowed.


Other oils may be used if they meet one or more of the following standards:

- API Service Category CK-4
- API Service Category CJ-4
- API Service Category CI-4 PLUS
- API Service Category CI-4
- ACEA Oil Sequence E9
- ACEA Oil Sequence E7
- ACEA Oil Sequence E6
- ACEA Oil Sequence E5
- ACEA Oil Sequence E4

Multi-viscosity diesel engine oils are preferred.

Diesel fuel quality and fuel sulfur content must comply with all existing emissions regulations for the area in which the engine operates.

Plus-50 is a trademark of Deere & Company
Torq-Gard is a trademark of Deere & Company

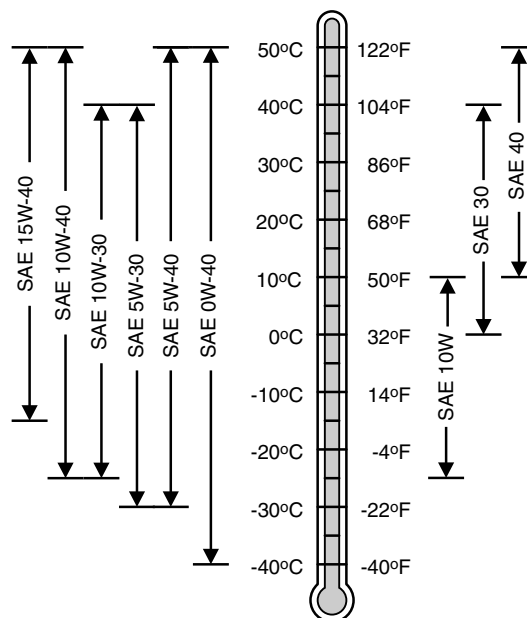

Oil Viscosities for Air Temperature Ranges

DO NOT use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm).

TS1743 —UN—25APR19

DX,ENOIL11 -19-23APR19-1/1

Engine Oil and Filter Service Intervals — Tier 3 and Stage IIIA — OEM Applications

Recommended oil and filter service intervals are based on a combination of oil pan capacity, type of engine oil and filter used, and sulfur content of the diesel fuel. Actual service intervals also depend on operation and maintenance practices.

Approved Oil Types:

- “Plus-50 Oils” include John Deere Plus-50™ II and John Deere Plus-50™
- “Other Oils” include John Deere Torq-Gard™, API CK-4, API CJ-4, API CI-4 PLUS, API CI-4, ACEA E9, ACEA E7, ACEA E6, ACEA E5, and ACEA E4

Use oil analysis to evaluate the condition of the oil and to aid in selection of the proper oil and filter service interval. Contact your John Deere dealer or other qualified service provider for more information on engine oil analysis.

Change the oil and oil filter at least once every 12 months even if the hours of operation are fewer than the otherwise recommended service interval.

Diesel fuel sulfur content affects engine oil and filter service intervals.

- Use of diesel fuel with sulfur content less than 1000 mg/kg (1000 ppm) is **RECOMMENDED**

- Use of diesel fuel with sulfur content 1000—2000 mg/kg (1000—2000 ppm) **REDUCES** the oil and filter service interval
- **BEFORE** using diesel fuel with sulfur content greater than 2000 mg/kg (2000 ppm), contact your John Deere dealer or qualified service provider
- **DO NOT** use diesel fuel with sulfur content greater than 10 000 mg/kg (10 000 ppm)

NOTE: The 500-hour extended oil and filter change interval is only allowed if all of the following conditions are met:

- Engine equipped with an extended drain interval oil pan
- Use of diesel fuel with sulfur content less than 2000 mg/kg (2000 ppm) for PowerTech™ Plus engines or 5000 mg/kg (5000 ppm) for PowerTech™ engine
- Use of John Deere Plus-50™ II or John Deere Plus-50™ oil
- Use of an approved John Deere oil filter

IMPORTANT: To avoid engine damage:

- **Reduce oil and filter service intervals by 50% when using biodiesel blends greater than B20. Oil analysis may allow longer service intervals**
- **Use only approved oil types**

	Tier 3 and Stage IIIA —PowerTech™ Plus				Tier 3 and Stage IIIA —PowerTech™		
	Oil Pan Size (L/kW)				Oil Pan Size (L/kW)		
Oil pan capacity	Greater than or equal to 0.10	Greater than or equal to 0.12	Greater than or equal to 0.14	Greater than or equal to 0.22	Greater than or equal to 0.10	Greater than or equal to 0.12	Greater than or equal to 0.14
Fuel Sulfur	Less than 1000 mg/kg (1000 ppm)				Less than 1000 mg/kg (1000 ppm)		
Plus-50 Oils	375 hours	500 hours	500 hours	500 hours	375 hours	500 hours	500 hours
Other Oils	250 hours	250 hours	250 hours	250 hours	250 hours	250 hours	250 hours
Fuel Sulfur	1000—2000 mg/kg (1000—2000 ppm)				1000—2000 mg/kg (1000—2000 ppm)		
Plus-50 Oils	300 hours	300 hours	500 hours	500 hours	300 hours	400 hours	500 hours
Other Oils	200 hours	200 hours	250 hours	250 hours	200 hours	200 hours	250 hours
Fuel Sulfur	2000—5000 mg/kg (2000—5000 ppm)				2000—5000 mg/kg (2000—5000 ppm)		
Plus-50 Oils	Not Recommended Contact John Deere dealer (dealer refers to DTAC solution)				275 hours	350 hours	500 hours
Other Oils	Not Recommended Contact John Deere dealer (dealer refers to DTAC solution)				150 hours	175 hours	250 hours
Fuel Sulfur	5000—10 000 mg/kg (5000—10 000 ppm)				5000—10 000 mg/kg (5000—10000 ppm)		
Plus-50 Oils	Not Recommended Contact John Deere dealer (dealer refers to DTAC solution)				187 hours	250 hours	250 hours
Other Oils	Not Recommended Contact John Deere dealer (dealer refers to DTAC solution)				125 hours	125 hours	125 hours
Oil analysis may extend the service interval of “Other Oils”, to a maximum not to exceed the interval for Plus-50 Oils. Oil analysis means taking a series of oil samples at 50-hour increments beyond the normal service interval until either the data indicates the end of useful oil life or the maximum service interval of John Deere Plus-50 oils is reached.							

Plus-50 is a trademark of Deere & Company

Continued on next page

DX,ENOIL13,T3,OEM -19-13JAN18-1/2

Torq-Gard is a trademark of Deere & Company
PowerTech is a trademark of Deere & Company

DX,ENOIL13,T3,OEM -19-13JAN18-2/2

Diesel Engine Oil and Filter Service Intervals

6135 (13.5 L) Engine Oil and Filter Service Intervals in Hours of Operation					
Power Rating		Oil Pans			
kW (hp)	Fuel Sulfur Content ^a	1915, 1917, 1918		1914	
		Interval		Interval	
		Other Oils	Plus-50 Oils	Other Oils	Plus-50 Oils
Industrial Ratings					
261 (350)	Less Than 0.10% (1000 ppm)	250	500	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	250	500	250	500
	0.20% - 0.50% (2000 - 5000 ppm)	200	300	250	500
298-336 (400-451)	Less Than 0.10% (1000 ppm)	250	500	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	200	300	250	500
	0.20% - 0.50% (2000 - 5000 ppm)	150	250	200	300
373-410 (500-550)	Less Than 0.10% (1000 ppm)	250	375	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	200	300	250	500
	0.20% - 0.50% (2000 - 5000 ppm)	150	250	200	300
448 (600)	Less Than 0.10% (1000 ppm)	None	None	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	None	None	200	300
	0.20% - 0.50% (2000 - 5000 ppm)	None	None	150	250
GenSet Ratings					
345-401 (463-538)	Less Than 0.10% (1000 ppm)	250	375	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	200	300	250	500
	0.20% - 0.50% (2000 - 5000 ppm)	150	250	200	300
460 (617)	Less Than 0.10% (1000 ppm)	250	375	250	500
	0.10% - 0.20% (1000 - 2000 ppm)	200	300	200	300
	0.20% - 0.50% (2000 - 5000 ppm)	150	250	150	250
563 (755)	Less Than 0.10% (1000 ppm)	250	375	N/A	N/A
	0.10% - 0.20% (1000 - 2000 ppm)	200	300	N/A	N/A
	0.20% - 0.50% (2000 - 5000 ppm)	150	250	N/A	N/A
Perform engine oil analysis to determine the actual extended service life of ACEA E7 and ACEA E6 oils.					

^a BEFORE using diesel fuel with sulfur content greater than 0.50% (5000 ppm), contact your John Deere dealer. (Dealer to reference DTAC Solution 73203)

OURGP11,000004D -19-07APR11-1/1

Mixing of Lubricants

In general, avoid mixing different brands or types of oil. Oil manufacturers blend additives in their oils to meet certain specifications and performance requirements.

Mixing different oils can interfere with the proper functioning of these additives and degrade lubricant performance.

Consult your John Deere dealer to obtain specific information and recommendations.

DX,LUBMIX -19-18MAR96-1/1

Alternative and Synthetic Lubricants

Conditions in certain geographical areas may require lubricant recommendations different from those printed in this manual.

Some John Deere brand coolants and lubricants may not be available in your location.

Consult your John Deere dealer to obtain information and recommendations.

Synthetic lubricants may be used if they meet the performance requirements as shown in this manual.

The temperature limits and service intervals shown in this manual apply to John Deere branded fluids or fluids that have been tested and/or approved for use in John Deere equipment.

Re-refined base stock products may be used if the finished lubricant meets the performance requirements.

DX,ALTER -19-13JAN18-1/1

Lubricant Storage

Your equipment can operate at top efficiency only when clean lubricants are used.

Use clean containers to handle all lubricants.

Store lubricants and containers in an area protected from dust, moisture, and other contamination. Store containers on their side to avoid water and dirt accumulation.

Make certain that all containers are properly marked to identify their contents.

Properly dispose of all old containers and any residual lubricant they may contain.

DX,LUBST -19-11APR11-1/1

Oil Filters

Filtration of oils is critical to proper operation and lubrication.

Always change filters regularly as specified in this manual.

Use filters meeting John Deere performance specifications.

DX,FILT -19-18MAR96-1/1

Diesel Engine Coolant (engine with wet sleeve cylinder liners)

Failure to follow applicable coolant standards and drain intervals can result in severe engine damage that may not be covered under warranty. Warranties, including the emissions warranty, are not conditioned on the use of John Deere coolants, parts, or service.

Preferred Coolants

The following pre-mix engine coolants are preferred:

- John Deere COOL-GARD™ II
- John Deere COOL-GARD II PG

COOL-GARD II pre-mix coolant is available in several concentrations with different freeze protection limits as shown in the following table.

COOL-GARD II Pre-Mix	Freeze Protection Limit
COOL-GARD II 20/80	-9°C (16°F)
COOL-GARD II 30/70	-16°C (3°F)
COOL-GARD II 50/50	-37°C (-34°F)
COOL-GARD II 55/45	-45°C (-49°F)
COOL-GARD II PG 60/40	-49°C (-56°F)
COOL-GARD II 60/40	-52°C (-62°F)

Not all COOL-GARD II pre-mix products are available in all countries.

Use COOL-GARD II PG when a non-toxic coolant formulation is required.

Additional Recommended Coolants

The following engine coolant is also recommended:

- John Deere COOL-GARD II Concentrate in a 40—60% mixture of concentrate with quality water.

IMPORTANT: When mixing coolant concentrate with water, do not use less than 40% or greater than 60% concentration of coolant. Less than 40% gives inadequate additives for corrosion protection. Greater than 60% can result in coolant gelation and cooling system problems.

Other Coolants

Other ethylene glycol or propylene glycol base coolants may be used if they meet the following specification:

COOL-GARD is a trademark of Deere & Company

¹Coolant analysis may extend the service interval of other "Coolants" to a maximum not to exceed the interval of Cool-Gard II coolants. Coolant analysis means taking a series of coolant samples at 1000 hour increments beyond the normal service interval until either the data indicate the end of useful coolant life or the maximum service interval of Cool-Gard II is reached.

- Pre-mix coolant meeting ASTM D6210 requirements
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Coolant concentrate meeting ASTM D6210 requirements in a 40—60% mixture of concentrate with quality water

If coolant meeting one of these specifications is unavailable, use a coolant concentrate or pre-mix coolant that has a minimum of the following chemical and physical properties:

- Provides cylinder liner cavitation protection according to either the John Deere Cavitation Test Method or a fleet study run at or above 60% load capacity
- Is formulated with a nitrite-free additive package
- Is formulated with a 2-ethylhexanoic acid (2-EHA) free additive package
- Protects the cooling system metals (cast iron, aluminum alloys, and copper alloys such as brass) from corrosion

Water Quality

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

Coolant Drain Intervals

Drain and flush the cooling system and refill with fresh coolant at the indicated interval, which varies with the coolant used.

When COOL-GARD II or COOL-GARD II PG is used, the drain interval is 6 years or 6000 hours of operation.

If a coolant other than COOL-GARD II or COOL-GARD II PG is used, reduce the drain interval to 2 years or 2000 hours of operation.¹

IMPORTANT: Do not use cooling system sealing additives or antifreeze that contains sealing additives.

Do not mix ethylene glycol and propylene glycol base coolants.

Do not use coolants that contain nitrites.

Water Quality for Mixing with Coolant Concentrate

Engine coolants are a combination of three chemical components: ethylene glycol (EG) or propylene glycol (PG) antifreeze, inhibiting coolant additives, and quality water.

Water quality is important to the performance of the cooling system. Deionized or demineralized water is recommended for mixing with ethylene glycol and propylene glycol base engine coolant concentrate.

All water used in the cooling system should meet the following minimum specifications for quality:

Chlorides	<40 mg/L
Sulfates	<100 mg/L
Total solids	<340 mg/L
Total dissolved hardness	<170 mg/L
pH	5.5—9.0

IMPORTANT: Do not use bottled drinking water because it often contains higher concentrations of total dissolved solids.

Freeze Protection

The relative concentrations of glycol and water in the engine coolant determine its freeze protection limit.

Ethylene Glycol	Freeze Protection Limit
40%	-24°C (-12°F)
50%	-37°C (-34°F)
60%	-52°C (-62°F)
Propylene Glycol	Freeze Protection Limit
40%	-21°C (-6°F)
50%	-33°C (-27°F)
60%	-49°C (-56°F)

DO NOT use a coolant-water mixture greater than 60% ethylene glycol or 60% propylene glycol.

DX,COOL19 -19-13JAN18-1/1

Operating in Warm Temperature Climates

John Deere engines are designed to operate using recommended engine coolants.

Always use a recommended engine coolant, even when operating in geographical areas where freeze protection is not required.

IMPORTANT: Water may be used as coolant in emergency situations only.

Foaming, hot surface aluminum and iron corrosion, scaling, and cavitation occur when water is used as the coolant, even when coolant conditioners are added.

Drain cooling system and refill with recommended engine coolant as soon as possible.

DX,COOL6 -19-17FEB20-1/1

Testing Coolant Freeze Point

The use of a handheld coolant refractometer is the quickest, easiest, and most accurate method to determine coolant freeze point. This method is more accurate than a test strip or a float-type hydrometer which can produce poor results.

A coolant refractometer is available through your John Deere dealer under the SERVICEGARD™ tool program. Part number 75240 provides an economical solution to accurate freeze point determination in the field.

To use this tool:

1. Allow cooling system to cool to ambient temperatures.
2. Open radiator cap to expose coolant.
3. With the included dropper, collect a small coolant sample.
4. Open the lid of the refractometer, place one drop of coolant on the window and close the lid.
5. Look through the eyepiece and focus as necessary.
6. Record the listed freeze point for the type of coolant (ethylene glycol coolant or propylene glycol) being tested.



SERVICEGARD™ Part Number 75240

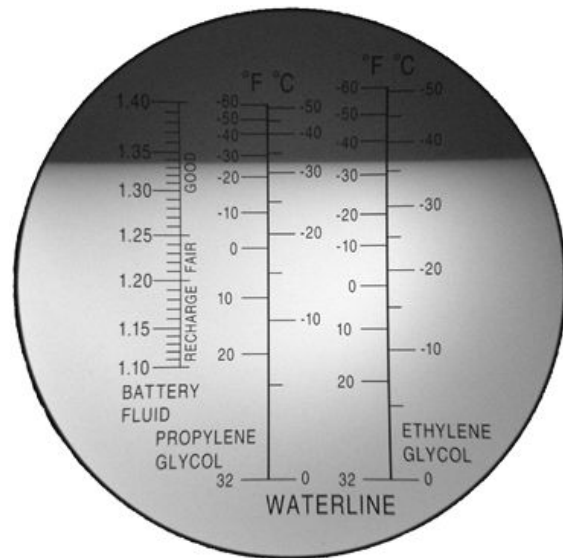


Image with a Drop of 50/50 Coolant Placed on the Refractometer Window

SERVICEGARD is a trademark of Deere & Company

DX,COOL,TEST -19-13JUN13-1/1


Disposing of Coolant

Improperly disposing of engine coolant can threaten the environment and ecology.

Use leakproof containers when draining fluids. Do not use food or beverage containers that may mislead someone into drinking from them.

Do not pour waste onto the ground, down a drain, or into any water source.

Inquire on the proper way to recycle or dispose of waste from your local environmental or recycling center, or from your John Deere engine distributor or servicing dealer.

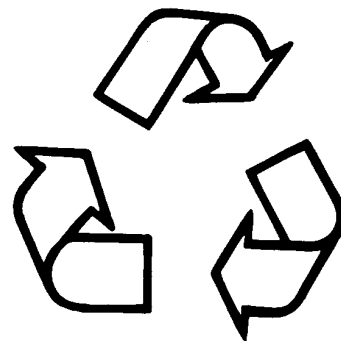


Recycle Waste


RG,RG34710,7543 -19-26APR18-1/1

Instrument Panel and Diagnostic Gauge

Instrument Panels

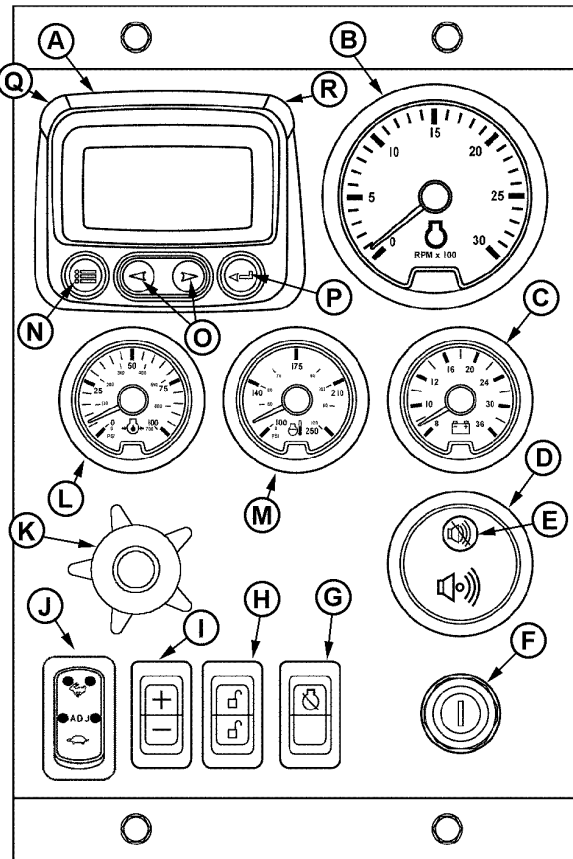

Full-Featured Instrument Panel

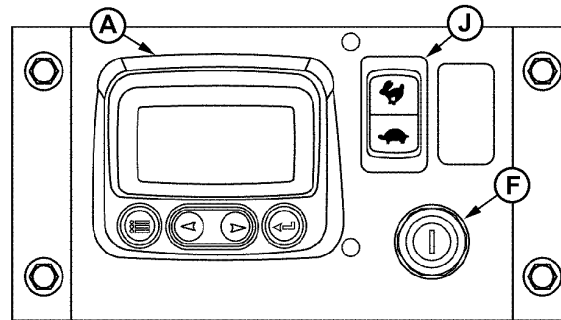

Basic Instrument Panel

RG13277 —UN—22OCT03

RG13276 —UN—28OCT03

- | | | | |
|---------------------------------|---------------------------------------|--------------------------------------|-------------------------------------|
| A—Diagnostic Gauge/Hour Meter | F—Key Switch | K—Analog Throttle Control (Optional) | Q—Amber “WARNING” Indicator Light |
| B—Tachometer | G—Override Shutdown Rocker Switch | L—Oil Pressure Gauge | R—Red “STOP ENGINE” Indicator Light |
| C—Voltmeter (Optional) | H—Bump Enable Rocker Switch | M—Coolant Temperature Gauge | |
| D—Audible Alarm (Optional) | I—Speed Select Rocker Switch | N—Menu Key | |
| E—Audible Alarm Override Button | J—High-Low Speed Select Rocker Switch | O—Arrow Keys | |
| | | P—Enter Key | |

John Deere PowerTech Plus™ OEM Engines have an electronic control system, which has the following controls and gauges as shown. The following information applies only to those controls and gauges supplied by John Deere. Refer to your engine application manual for specific guidelines if John Deere-sourced controls and instrumentation are not used.

Following is a brief description of the available optional electronic controls and gauges found on John Deere provided instrument panels. Refer to manufacturer’s literature for information on controls not provided by Deere.

Instrument Panel (Continued)

A—Diagnostic Gauge/Hour Meter

The diagnostic gauge (A) displays diagnostic trouble codes (DTCs) as they are accessed. Other information

on the engine can be accessed using the touch keys (N, O and P). The hour meter feature shows the operating hours of the engine and should be used as a guide for scheduling periodic maintenance. If the diagnostic gauge receives a trouble code from an engine control unit, the current display will switch to a warning or shutdown (depending on the severity of the code) screen that will display the trouble code number, the description of the code and the corrective action needed.

B—Tachometer

The tachometer (B) indicates engine speed in hundreds of revolutions per minute (rpm).

C—Voltmeter (Optional)

Continued on next page

OMRGP15.0000120 -19-12SEP06-1/3

The voltmeter (C) indicates system battery voltage. The amber "Warning" light (Q) will illuminate when battery voltage is too low for proper operation of the fuel injection system.

D—Audible Alarm (Optional)

The audible alarm (D) will sound whenever any of these abnormal conditions exist: low oil pressure, high coolant temperature, water-in-fuel, high fuel temperature, or high manifold temperatures. This includes all signals that light up the amber "warning" indicator (intermittent alarm) or the red "stop engine" indicator (steady alarm).

E—Audible Alarm Override Button

The optional audible alarm has an override button (E) that silences the audible alarm for approximately two minutes when pressed.

F—Key Start Switch

The three-position key start switch (F) controls the engine electrical system. When the key switch is turned clockwise to "START", the engine will crank. When the engine starts, the key is released and returns to the "ON" (RUN) position.

G—Override Shutdown Rocker Switch

Switch will be present, but may not be active, depending on engine controller (ECU) options originally selected. If switch is active, pressing the upper half of the override shutdown switch (G) will override an engine shutdown signal. The switch must be pressed within 30 seconds to prevent undesired shutdown of engine. Pressing this switch will override the engine shutdown for 30 seconds at a time to move vehicle to a safe location.

H—Bump Speed Enable Rocker Switch

This is a three-position switch (H) with the center position as "OFF" (locked). With this switch in the "OFF" position, the speed select switch (I) is also locked, to prevent accidental changes in operating speed. Pressing upper or lower half of switch (H) will unlock or enable the bump speed switch to take effect using speed select switch (I).

I—Speed Select Rocker Switch

The speed select switch (I) is used to bump engine speed up (+) or down (-) in small increments during operation. This switch must be used with the bump speed enable switch (H) in the unlocked position (top or bottom half of button depressed).

J—High-Low Speed Select Rocker Switch

The high-low speed select switch (J) is used to set the engine operating speeds at slow (turtle) or fast (rabbit). Factory preset idle speeds can also be adjusted using bump speed enable switch (H) with speed select switch (I).

The basic instrument panel will have the high-low speed select switch only. Press and hold up (+) or down (-) to adjust engine speed as desired. The engine speed selected will not be held in the memory. To adjust engine speeds, See Changing Engine Speed in Section 20.

How To Select Preset Operating Speeds (Bump Speeds)

First select Turtle (Slow) or Adj by pressing speed select switch (J) to "Turtle" (slow) or "Adj"(center). Then you can press either the upper or lower portion of the bump speed enable switch (H) to unlock the setting. The bump speed enable must be held down as the speed select switch (J) is used to change the setting by pressing (+) to increase speed or (-) to decrease speed.

Once the slow idle speed has been set, the bump speed enable **switch must be pressed and released three times within two seconds to commit the new operating speed to memory**. If not done, the engine's new speed will only be effective until the key switch is shut off. Then the speed will revert back to the previous setting.

The fast idle speed is not adjustable. It will always go back to the factory preset fast idle speed.

K—Analog Throttle Control (Optional)

The throttle control (K) is used to control engine speed. This control is available only on engines with analog throttle.

L—Engine Oil Pressure Gauge

The oil pressure gauge (L) indicates engine oil pressure. An audible alarm (D) warns the operator if engine oil pressure falls below a safe operating pressure.

M—Engine Coolant Temperature Gauge

The engine coolant temperature gauge (M) indicates engine coolant temperature. An audible alarm (D) warns the operator if coolant temperature rises above the preset safe operating temperature.

N—Menu Key

The menu key is pressed to either enter or exit the menu screens on the diagnostic gauge.

O—Arrow Keys

Use the arrow keys (O) to change the display on the window of the diagnostic gauge and to access engine performance data.

Pressing the left arrow to scroll to the left or upward or the right arrow to scroll to the right or downward. This will allow you to view various engine parameters and any diagnostic trouble codes that occur.

Refer to the following story for accessing engine information on the diagnostic gauge using the touch keys.

P—Enter Key

The enter key is pressed to select the parameter that is highlighted on the screen.

Q—Amber "WARNING" Indicator Light

Continued on next page

OMGRP15,0000120 -19-12SEP06-2/3

When light comes on, an abnormal condition exists. It is not necessary to shutdown engine immediately, but problem should be corrected as soon as possible. Screen on diagnostic gauge will display the problem and the solution needed.

PowerTech Plus is a trademark of Deere & Company

R—Red “STOP ENGINE” Indicator Light

When light comes on, stop engine immediately or as soon as safely possible to prevent engine damage. Correct problem before restarting.

OMRGP15,0000120 -19-12SEP06-3/3

PV101 Instrument Panels

Interim tier 4 / Stage III B John Deere PowerTech OEM Engines have an electronic control system, which has the following controls and gauges as shown. The following information applies only to those controls and gauges supplied by John Deere. Refer to your engine application manual for specific guidelines if John Deere-sourced controls and instrumentation are not used.

NOTE: This manual only covers operation of engine with a John Deere control system.

Following is a brief description of the available optional electronic controls and gauges found on John Deere provided instrument panels. Refer to manufacturer's literature for information on controls not provided by Deere.

A—Diagnostic Gauge/Hour Meter

The diagnostic gauge (A) displays diagnostic trouble codes (DTCs) as they are accessed. Other information on the engine can be accessed using the touch keys (N, O, and P). The hour meter feature shows the operating hours of the engine and should be used as a guide for scheduling periodic maintenance. If the diagnostic gauge receives a trouble code from an engine control unit, the current display will switch to a warning or shutdown (depending on the severity of the code) screen that will display the trouble code number, the description of the code and the corrective action needed.

B—Tachometer

The tachometer (B) indicates engine speed in hundreds of revolutions per minute (rpm). **C—Voltmeter (Optional)**

The voltmeter (C) indicates system battery voltage. The amber "Warning" light (Q) will illuminate when battery voltage is too low for proper operation of the fuel injection system.

D—Audible Alarm (Optional)

The audible alarm (D) will sound whenever low oil pressure, high coolant temperature, or water-in-fuel conditions exist. This includes all signals that light up the amber "WARNING" indicator (intermittent alarm) or the red "STOP ENGINE" indicator (steady alarm).


E—Audible Alarm Override Button

The optional audible alarm has an override button (E) that silences the audible alarm for approximately two minutes when pressed.

F—Key Start Switch

The three-position key start switch (F) controls the engine electrical system. From the "OFF" position when the key switch is turned clockwise to "START", the engine will crank. When the engine starts, the key is released and returns to the "ON" (RUN) position.

G—Override Shutdown Rocker Switch

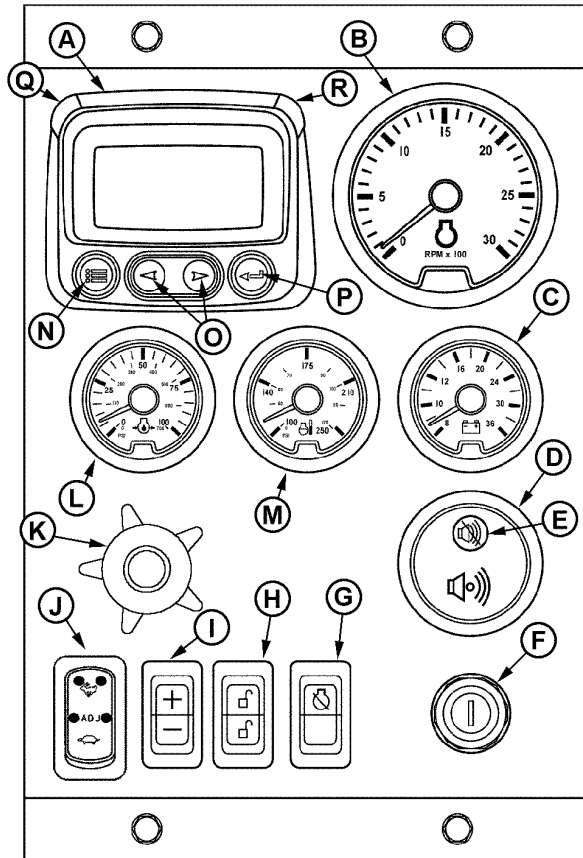

Full-Featured Instrument Panel

- | | |
|--|--|
| A—Diagnostic Gauge/Hour Meter | J—High-Low Speed Select Rocker Switch |
| B—Tachometer | K—Analog Throttle Control (Optional) |
| C—Voltmeter (Optional) | L—Oil Pressure Gauge |
| D—Audible Alarm (Optional) | M—Coolant Temperature Gauge |
| E—Audible Alarm Override Button | N—Menu Key |
| F—Key Switch | O—Arrow Key (2 used) |
| G—Override Shutdown Rocker Switch | P—Enter Key |
| H—Bump Enable Rocker Switch | Q—Amber "WARNING" Indicator Light |
| I—Speed Select Rocker Switch | R—Red "STOP ENGINE" Indicator Light |

Switch will be present, but may not be active, depending on engine control unit (ECU) options originally selected. If switch is active, pressing the upper half of the override shutdown switch (G) will override an engine shutdown signal. The switch must be pressed within 30 seconds to prevent undesired shutdown of engine. Pressing this switch will override the ECU engine shutdown command for 30 seconds at a time to move vehicle to a safe location.

H—Bump Speed Enable Rocker Switch

Continued on next page

JR74534.00002C7 -19-16AUG21-1/2

This is a three-position switch (H) with the center position as "OFF" (locked). With this switch in the "OFF" position, the speed select switch (I) is also locked, to prevent accidental changes in operating speed. Pressing upper or lower half of switch (H) will unlock or enable the bump speed switch to take effect using speed select switch (I).

I—Speed Select Rocker Switch

The speed select switch (I) is used to bump engine speed up (+) or down (-) in small increments during operation. This switch must be used with the bump speed enable switch (H) in the unlocked position (top or bottom half of button depressed).

J—High-Low Speed Select Rocker Switch

The high-low speed select switch (J) is used to set the engine operating speeds at slow (turtle) or fast (rabbit). Factory preset idle speeds can also be adjusted using bump speed enable switch (H) with speed select switch (I).

The basic instrument panel will have the high-low speed select switch only. Press and hold up (+) or down (-) to adjust engine speed as desired. The engine speed selected will not be held in the memory. To adjust engine speeds, See Changing Engine Speeds in Section 20.

How To Select Preset Operating Speeds (Bump Speeds)

First select "Turtle" (slow) or "Adj" by pressing speed select switch (J) to "Turtle" (slow) or "Adj"(center). Then you can press either the upper or lower portion of the bump speed enable switch (H) to unlock the setting. The bump speed enable must be held down as the speed select switch (J) is used to change the setting by pressing (+) to increase speed or (-) to decrease speed.

Once the slow idle speed has been set, the bump speed enable **switch must be pressed and released three times within two seconds to commit the new operating speed to memory.** If not done, the engine's new speed will only be effective until the key switch is shut off. Then the speed will revert back to the previous setting.

The fast idle speed is not adjustable. It will always go back to the factory preset fast idle speed.

K—Analog Throttle Control (Optional)

The throttle control (K) is used to control engine speed. This control is available only on engines with analog throttle.

L—Engine Oil Pressure Gauge

The oil pressure gauge (L) indicates engine oil pressure. An audible alarm (D) warns the operator if engine oil pressure falls below a safe operating pressure.

M—Engine Coolant Temperature Gauge

The engine coolant temperature gauge (M) indicates engine coolant temperature. An audible alarm (D) warns the operator if coolant temperature rises above the preset safe operating temperature.

N—Menu Key

The menu key is pressed to either enter or exit the menu screens on the diagnostic gauge (A).

O—Arrow Keys

Use the arrow keys (O) to change the display on the window of the diagnostic gauge (A) and to access engine performance data.

Pressing the left arrow to scroll to the left or upward or the right arrow to scroll to the right or downward. This will allow you to view various engine parameters and any diagnostic trouble codes that occur.

Refer to the following procedure for accessing engine information on the diagnostic gauge using the touch keys.

P—Enter Key

The enter key (P) is pressed to select the parameter that is highlighted on the screen.

Q—Amber "WARNING" Indicator Light

When light is illuminated, an abnormal condition exists. It is not necessary to shut down the engine immediately, but the problem should be corrected as soon as possible.

R—Red "STOP ENGINE" Indicator Light

When light is illuminated, stop engine immediately or as soon as safely possible to prevent engine damage. Correct problem before restarting.

JR74534,00002C7 -19-16AUG21-2/2

PV101 Diagnostic Gauge — Using

The diagnostic gauge (A) allows the operator to monitor engine functions, view diagnostic trouble codes (DTCs), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.


The menu key (B) allows the operator to access the main menu of the diagnostic gauge. For more information see PV101 Diagnostic Gauge — Main Menu in Section 15. This key also allows the operator to cancel an option and go back to the previous menu or home menu.

The arrow keys (C) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The enter key (D) allows the operator to access menu items selected by the arrow keys (C) and confirm changes made by the operator.

The red “STOP ENGINE” indicator light (E) allows the operator to visually see when a condition exists which requires immediate operator action and service.

The amber “WARNING” indicator light (F) allows the operator to visually see when a condition exists which requires operator action.

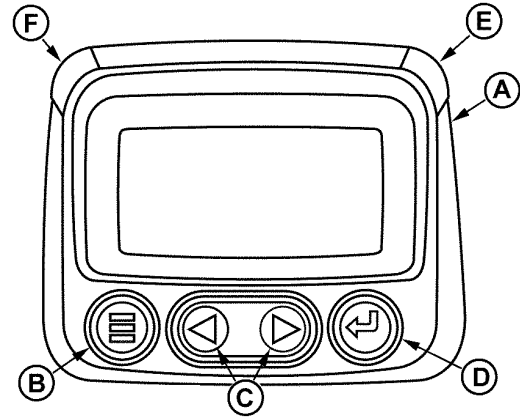

Diagnostic Gauge

A—Diagnostic Gauge
B—Menu Key
C—Arrow Keys

D—Enter Key
E—Red “STOP ENGINE”
Indicator Light
F—Amber “WARNING”
Indicator Light

RG13132 —UN—09SEP03

BL90236,000002A -19-16AUG21-1/1

PV101 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the menu key (B) to access the main menu.

Use the arrow keys (C) and enter key (D) to view menu items displayed:


- Go to 4-up display
- Exhaust filter
- Engine speed control
- Languages
- Stored codes
- Engine configuration
- Setup 1-up display
- Setup 4-up display
- Select units
- Adjust backlight
- Adjust contrast
- Utilities

Listed are examples of features available in main menu items.

In Utilities:

- Gauge data
- Remove all gauges
- Software version
- Modbus setup
- Fault conversion

- Select engine ECU
- Clear machine hours
- Performance data
- Interactive tests
- Reset trip
- Set function instance
- ECU software update

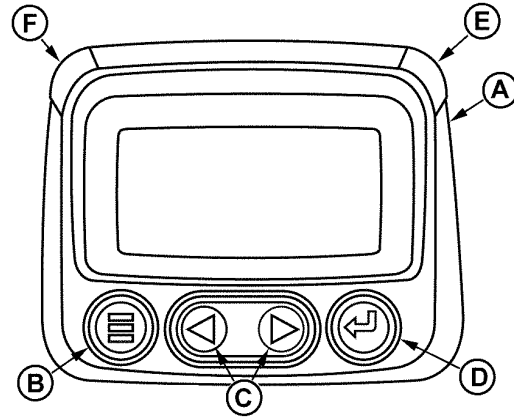

A—Diagnostic Gauge
B—Menu Key
C—Arrow Key (2 used)

D—Enter Key
E—Red “STOP ENGINE”
Indicator Light
F—Amber “WARNING”
Indicator Light

RG13132 —UN—09SEP03

JR74534,00002C8 -19-16AUG21-1/1

PV101 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to EXHAUST FILTER
3. Press select key
4. Press arrow keys to scroll up or down to AUTO EXH FLT CLEAN
5. Press select key to enable auto exhaust filter cleaning

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle
2. Press menu key
3. Press arrow keys to scroll up or down to EXHAUST FILTER
4. Press select key
5. Press arrow keys to scroll up or down to REQUEST EXH FLT CLEAN
6. Press select key to request a manual/parked exhaust filter cleaning
7. Follow directions on display and ensure all conditions are met
8. Press select key to CONFIRM all conditions are met

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to EXHAUST FILTER
3. Press select key
4. Press arrow keys to scroll up or down to DISABLE EXH FLT CLEAN
5. Press select key to disable exhaust filter cleaning

Fault Codes — Active

To view active fault code information:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FAULTS
3. Press select key
4. Press arrow keys to scroll up or down to ACTIVE FAULTS
5. Press select key
6. Press arrow keys to scroll through available faults

Fault Codes — Stored

To view stored fault code information:

1. Press menu key on diagnostic gauge
2. Press arrow keys to scroll up or down to FAULTS
3. Press select key
4. Press arrow keys to scroll up or down to STORED FAULTS
5. Press select key
6. Press arrow keys to scroll up or down to VIEW
7. Press select key
8. Press arrow keys to scroll through available faults

BL90236,0000025 -19-02JUN16-1/1

DG14 Diagnostic Gauge — Using


The diagnostic gauge (A) allows the operator to monitor engine functions, view diagnostic trouble codes (DTCs), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.

The home menu key (B) allows the operator to access the main menu of the diagnostic gauge. For more information, see DG14 Diagnostic Gauge — Main Menu in Section 15. This key also allows the operator to cancel an option and go back to the previous menu or home menu.

The arrow keys (C) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The check mark select key (D) allows the operator to access menu items selected by the arrow keys (C) and confirm changes made by the operator.

The indicator lights (E) allows the operator to visually see the presence of an active DTC.

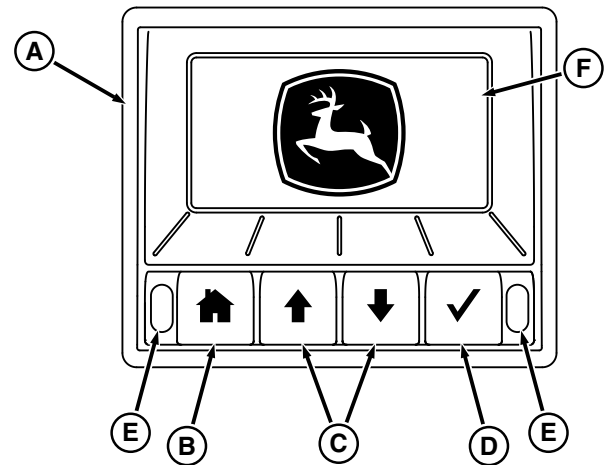

DG14 Diagnostic Gauge

A—Diagnostic Gauge
B—Home Menu Key
C—Arrow Key (2 used)

D—Check Mark Select Key
E—Indicator Light (2 used)
F—Display

RG27904—UN—25FEB16

BL90236,0000028 -19-19AUG21-1/1

DG14 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge menu screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the home menu key (B) to access the main menu.

Use the arrow keys (C) and select key (D) to view menu items displayed:

- Function
- Display
- Utility
- Setup

Listed are examples of features available in main menu items.

In Function:

- View DTC
- Reset trip (FT4 Only)
- Exhaust regeneration (IT4 & FT4 Only)
- ECU software updates

In Display:


- Adjust backlight
- Adjust indicator brightness
- Display option setup

In Utility:

- Full parameter list
- Software data
- Select units
- Select language

In Setup:

- Select analog input
- Select digital input
- Select digital output

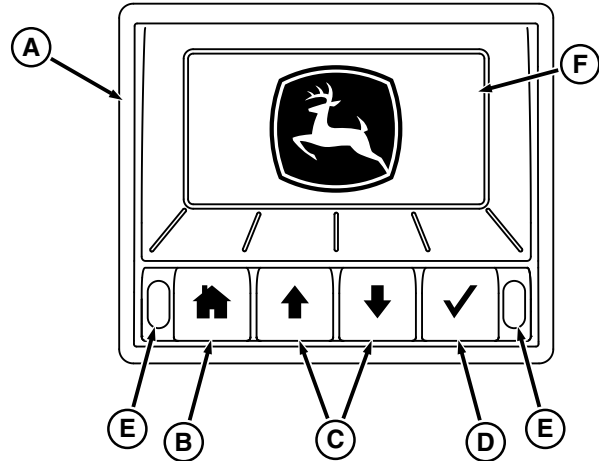

Diagnostic Gauge

A—Diagnostic Gauge
B—Home Menu Key
C—Arrow Key (2 used)

D—Check Mark Select Key
E—Indicator Light (2 used)
F—Display

- Alarm functionality
- Add J1939 gauge
- Set RS485 messaging
- Set engine source address
- Set function instance
- Harness diagnostics
- TSC control (password protected)

Key Code for Password Protected Screens

Numeric values are assigned to keys on diagnostic gauge as identified below:

- 1 — Home Menu Key
- 2 — Up Arrow Key
- 3 — Down Arrow Key
- 4 — Check Mark Select Key

BL90236,0000029 -19-19AUG21-1/1

RG27904 —UN—25FEB16

DG14 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press home menu key on diagnostic gauge.
2. Press arrow keys to scroll up or down to FUNCTION.
3. Press check mark select key.
4. Press arrow keys to scroll up or down to EXHAUST REGENERATION.
5. Press check mark select key.
6. Press arrow keys to scroll up or down to AUTOMATIC.
7. Press check mark select key to enable auto exhaust filter cleaning.

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle.
2. Press home menu key on diagnostic gauge.
3. Press arrow keys to scroll up or down to FUNCTION.
4. Press check mark select key.
5. Press arrow keys to scroll up or down to EXHAUST REGENERATION.
6. Press check mark select key.
7. Press arrow keys to scroll up or down to FORCED.
8. Press check mark select key to request a manual/parked exhaust filter cleaning.
9. Follow directions on display and ensure all conditions are met.
10. Press check mark select key to CONFIRM all conditions are met.

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press home menu key on diagnostic gauge.

2. Press arrow keys to scroll up or down to FUNCTION.
3. Press check mark select key.
4. Press arrow keys to scroll up or down to EXHAUST REGENERATION.
5. Press check mark select key.
6. Press arrow keys to scroll up or down to INHIBIT.
7. Press check mark select key to disable exhaust filter cleaning.
8. Press check mark select key to continue after the warning has been acknowledged.

Fault Codes — Active

To view active fault code information:

1. Press home menu key on diagnostic gauge.
2. Press arrow keys to scroll up or down to FUNCTION.
3. Press check mark select key.
4. Press arrow keys to scroll up or down to VIEW FAULT CODES.
5. Press check mark select key.
6. Press arrow keys to scroll up or down to ACTIVATE.
7. Press check mark select key.
8. Press arrow keys to scroll through available faults.

Fault Codes — Stored

To view stored fault code information:

1. Press (home) menu key on diagnostic gauge.
2. Press arrow keys to scroll up or down to FUNCTION.
3. Press (check mark) select key.
4. Press Arrow keys to scroll up or down to VIEW FAULT CODES.
5. Press (check mark) select key.
6. Press arrow keys to scroll up or down to STORED.
7. Press (check mark) select key.
8. Press Arrow keys to scroll through available faults.

BL90236,0000026 -19-19AUG21-1/1

PV480 Instrument Panel

John Deere PowerTech™ OEM engines have an electronic control system, which has controls and gauges as shown. The following information applies only to those controls and gauges supplied by John Deere. Refer to your engine application manual for specific guidelines if John Deere-sourced controls and instrumentation are not used.

The following is a brief description of the available optional electronic controls and gauges found on John Deere provided instrument panels. Refer to manufacturer's literature for information on controls not provided by John Deere.

Instrument Panel

A — Diagnostic Gauge

The diagnostic gauge (A) allows the operator to view fuel level, DEF level, engine parameters, diagnostic trouble codes (DTCs), and other engine functions. Gauge is linked to the electronic control system and its sensors. This allows the operator to monitor engine functions and to troubleshoot the engine systems when needed.

B — Arrow Keys

The arrow keys (B) allow the operator to select menu items.

C — Menu Key

The menu key (C) allows the operator to access the main menu of the diagnostic gauge.

D — Select Key


The select key (D) allows the operator to access menu items selected by the arrow keys (B) and confirm changes made by the operator.

E — Exit Key

The exit key (E) allows the operator to cancel an option and to go back to the previous menu.

F — Key Switch

PowerTech is a trademark of Deere & Company

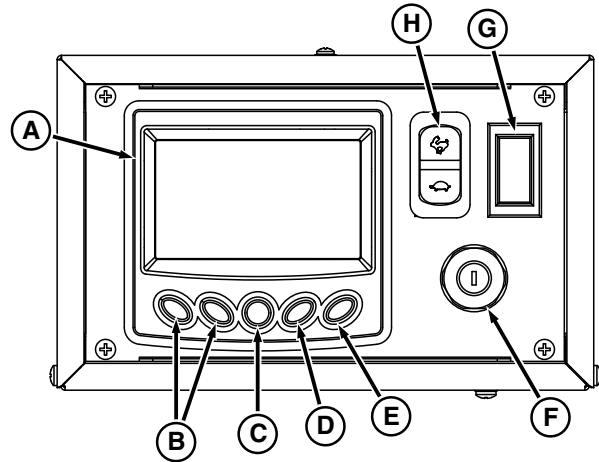

PV480 Instrument Panel

A—Diagnostic Gauge
B—Arrow Key (2 used)
C—Menu Key
D—Select Key

E—Exit Key
F—Key Switch
G—Cover
H—Speed Select Rocker Switch

The three-position key switch (F) controls the engine electrical system. When the key switch is turned clockwise to "START", the engine cranks. When the engine starts, the key switch is released and returns to the "ON" (RUN) position.

G — Cover

The cover (G) hides an expansion slot for an additional switch.

H — Speed Select Rocker Switch

The speed select rocker switch (H) is used to bump engine speed up (+) or down (-) in small increments during operation.

RG23644 —UN—27AUG13

BL90236,0000003 -19-19AUG21-1/1

PV480 Diagnostic Gauge — Using


The diagnostic gauge (A) allow the operator to monitor engine functions, view diagnostic trouble codes (DTCs), and perform preliminary diagnostics. The gauge is linked to the electronic control system and sensors.

The arrow keys (B) allows the operator to scroll between menu items. The arrow keys automatically change from up and down, to left and right depending on the menu item to be selected.

The menu key (C) allows the operator to access the main menu of the diagnostic gauge. For more information, see PV480 Diagnostic Gauge — Main Menu in Section 15.

The select key (D) allows the operator to access menu items selected by the arrow keys (B) and confirm changes made by the operator.

The exit key (E) allows the operator to cancel an option and to go back to the previous menu.

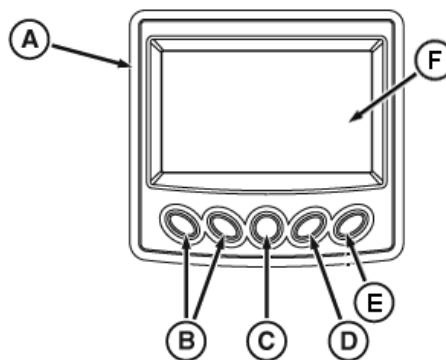

PV480 Diagnostic Gauge

A—Diagnostic Gauge
B—Arrow Key (2 used)
C—Menu Key

D—Select Key
E—Exit Key
F—Display

RG23474 —UN—06JUN13

BL90236,0000006 -19-19AUG21-1/1

PV480 Diagnostic Gauge — Main Menu

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens.

The main menu is the starting point in accessing engine information and configuring the diagnostic gauge. Press the menu key (C) to access the main menu.

Use the arrow keys (B) and select key (D) to view menu items displayed:

- User Settings
- Faults
- Exhaust Filter
- Start Options
- Service
- Utilities

Listed are examples of features available in main menu items.

In User Settings:

- Date
- Time
- Language
- Units
- Brightness
- Ambient Light

In Check Faults:

- ActiveDTCs
- Stored DTCs

In Exhaust Filter:

- Status
- Auto exhaust filter clean
- Disable exhaust filter clean
- Request exhaust filter clean

In Start Options:


- Auto features
- Manual features
- Clock start
- Temperature start

In Service:

- Data list screens
- Engine hours
- Data logger
- Service reminders
- Harness diagnostics
- Component identification

In Utilities:

- System settings
- Pressure governing
- ECU software update
- Advanced settings (password protected)

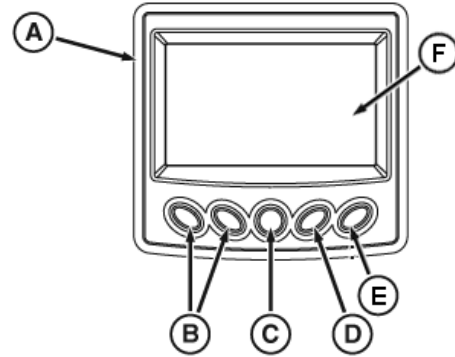

PV480 Diagnostic Gauge

A—Diagnostic Gauge
B—Arrow Key (2 used)
C—Menu Key

D—Select Key
E—Exit Key
F—Display

RG23474—UN—06JUN13

BL90236,0000001 -19-19AUG21-1/1

PV480 Diagnostic Gauge — Essential Menus

Automatic Exhaust Filter Cleaning

To enable auto exhaust filter cleaning mode:

1. Press Menu key on diagnostic gauge.
2. Press Arrow keys to scroll up or down to EXHAUST FILTER.
3. Press Select key.
4. Press Arrow keys to scroll up or down to AUTO EXH FLT CLEAN.
5. Press Select key to enable auto exhaust filter cleaning.

Manual/Parked Exhaust Filter Cleaning

To request a manual/parked exhaust filter cleaning:

1. Reduce engine speed to slow idle.
2. Press Menu key.
3. Press Arrow keys to scroll up or down to EXHAUST FILTER.
4. Press Select key.
5. Press Arrow keys to scroll up or down to REQUEST EXH FLT CLEAN.
6. Press Select key to request a manual/parked exhaust filter cleaning.
7. Follow directions on display and ensure all conditions are met.
8. Press Select key to CONFIRM all conditions are met.

Disable Exhaust Filter Cleaning

To disable the auto exhaust filter cleaning mode:

1. Press Menu key on diagnostic gauge.
2. Press Arrow keys to scroll up or down to EXHAUST FILTER.
3. Press Select key.
4. Press Arrow keys to scroll up or down to DISABLE EXH FLT CLEAN.
5. Press Select key to disable exhaust filter cleaning.

Fault Codes — Active

To view active fault code information:

1. Press Menu key on diagnostic gauge.
2. Press Arrow keys to scroll up or down to FAULTS.
3. Press Select key.
4. Press Arrow keys to scroll up or down to ACTIVE FAULTS.
5. Press Select key.
6. Press Arrow keys to scroll through available faults.

Fault Codes — Stored

To view stored fault code information:


1. Press Menu key on diagnostic gauge.
2. Press Arrow keys to scroll up or down to FAULTS.
3. Press Select key.
4. Press Arrow keys to scroll up or down to STORED FAULTS.
5. Press Select key.
6. Press Arrow keys to scroll up or down to VIEW.
7. Press Select key.
8. Press Arrow keys to scroll through available faults.

BL90236,0000024 -19-19AUG21-1/1

Main Menu Navigation


NOTE: The engine does not need to be running to navigate the diagnostic gauge screens. If engine start up is desired, See Starting The Engine. All of the engine values illustrated on the diagnostic gauge indicate the engine is running.

1. Turn the key switch to the ON position. Starting at the single or four engine parameter display, press the "Menu" key.

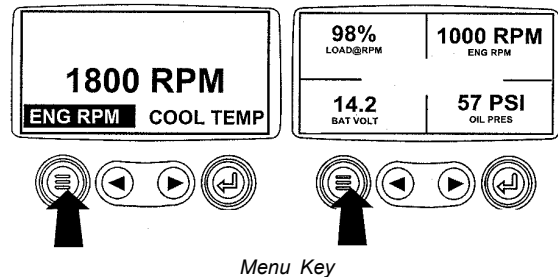

OURGP11,00000A9 -19-27MAY16-1/5



2. The first seven items of the "Main Menu" will be displayed.

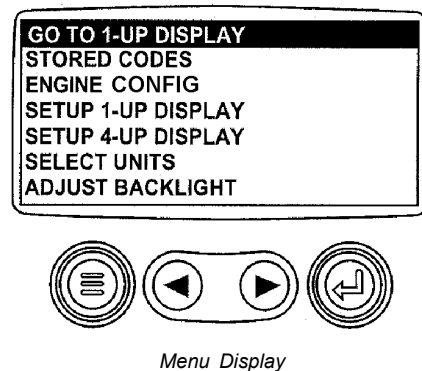

Continued on next page

OURGP11,00000A9 -19-27MAY16-2/5

3. Pressing the "Arrow" keys will scroll through the menu selections.

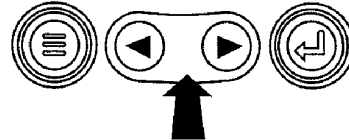
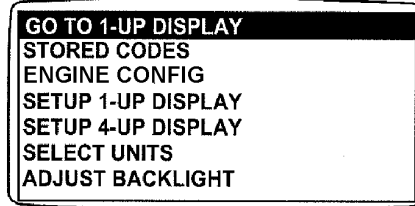


Main Menu Items

OURGP11,00000A9 -19-27MAY16-3/5

RG13161 —UN—02OCT03

4. Pressing the right arrow key will scroll down to reveal the last items of "Main Menu" screen, highlighting the next item down.

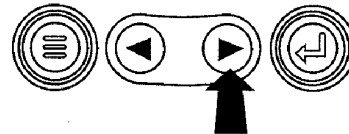
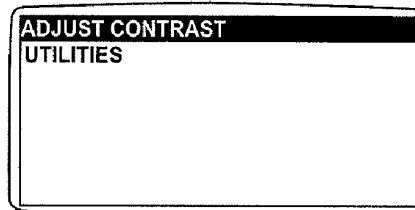


Last Items On Main Menu

OURGP11,00000A9 -19-27MAY16-4/5

RG13162 —UN—26SEP03

5. Use the arrow keys to scroll to the desired menu item or press the "Menu Button" to exit the main menu and return to the engine parameter display.

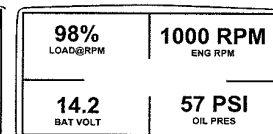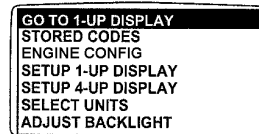

Use Arrow Buttons To Scroll / Quadrant Display

OURGP11,00000A9 -19-27MAY16-5/5


RG13163 —UN—02OCT03

Engine Configuration Data

NOTE: The engine configuration data is a read only function.

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens. If engine start up is desired, See Starting The Engine. All of the engine values illustrated on the diagnostic gauge indicate the engine is running.

1. Turn the key switch to the ON position. Starting at the single or four engine parameter display, press the "Menu" key.


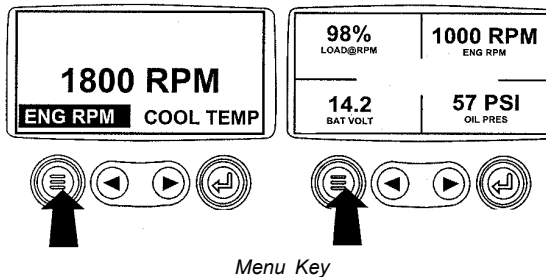


Menu Key

OURGP11,00000AB -19-12SEP06-1/6

RG13159—UN—26SEP03

 2. The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Engine Config" is highlighted.

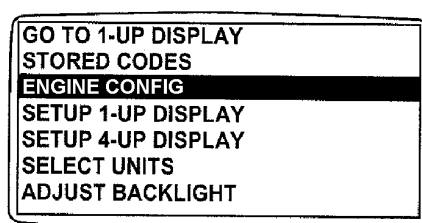


Select Engine Configuration

OURGP11,00000AB -19-12SEP06-2/6

RG13164—UN—07OCT03

3. Once "Engine Config" menu item has been highlighted, press the "Enter" key to view the engine configuration data.

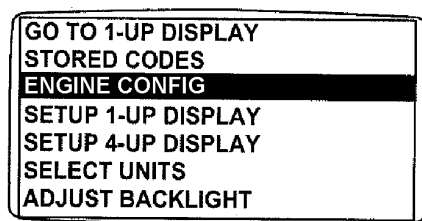


Enter Key

Continued on next page

OURGP11,00000AB -19-12SEP06-3/6

RG13165—UN—02OCT03

- Use the "Arrow" keys to scroll through the engine configuration data.

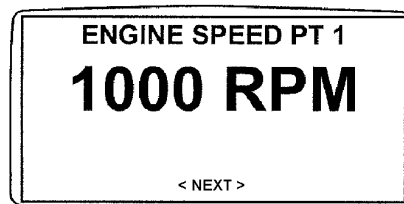


Use Arrow Keys To Scroll

OURGP11,00000AB -19-12SEP06-4/6

RG13166 —UN—29SEP03

- Press the "Menu" key to return to the main menu.

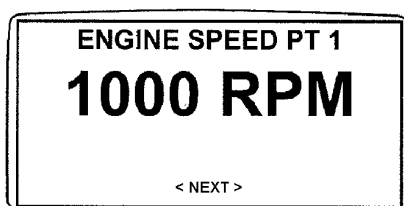


Return To Main Menu

OURGP11,00000AB -19-12SEP06-5/6

RG13167 —UN—29SEP03

- Press the "Menu" key to exit the main menu and return to the engine parameter display.

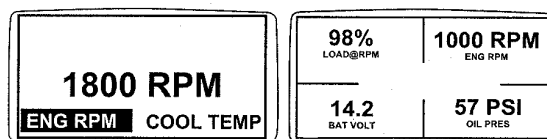

Exit Main Menu

OURGP11,00000AB -19-12SEP06-6/6


RG13159 —UN—26SEP03

Accessing Stored Trouble Codes

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens. If engine start up is desired, See *Starting The Engine*. All of the engine values illustrated on the diagnostic gauge indicate the engine is running.

For description of trouble codes, see chart in *Troubleshooting Section*.

- Turn the key switch to the ON position. Starting at the single or four engine parameter display, press the "Menu" key.

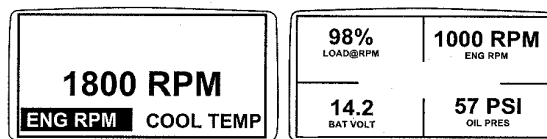


Menu Key

Continued on next page

OURGP11,00000AC -19-12SEP06-1/6

RG13159 —UN—26SEP03

- The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Stored Codes" is highlighted.


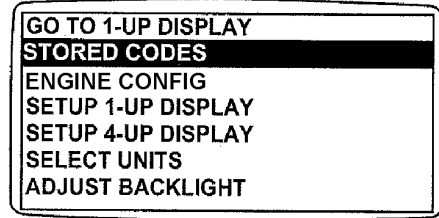


Select Stored Codes

OURGP11,00000AC -19-12SEP06-2/6

RG13168 —UN—02OCT03

- Once the "Stored Codes" menu item has been highlighted press the "Enter" key to view the stored codes.

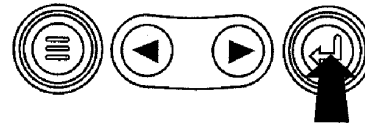
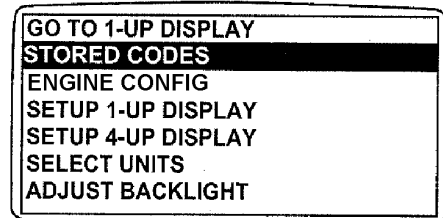


Enter Key

OURGP11,00000AC -19-12SEP06-3/6

RG13169 —UN—02OCT03

 - If the word "Next" appears above the "Arrow" keys, there are more stored codes that may be viewed. Use the "Arrow" key to scroll to the next stored code.

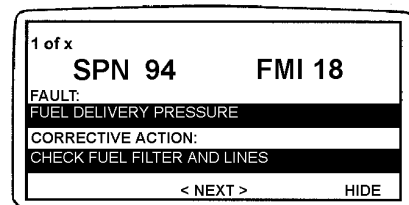



Use Arrow Keys To Scroll

Continued on next page

OURGP11,00000AC -19-12SEP06-4/6

RG13245 —UN—02OCT03

 - Press the "Menu" key to return to the main menu.


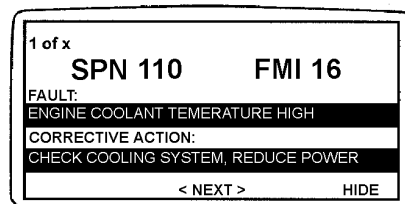


Return To Main Menu

OURGP11,00000AC -19-12SEP06-5/6

RG13246 —UN—02OCT03

 - Press the "Menu" key to exit the main menu and return to the engine parameter display.

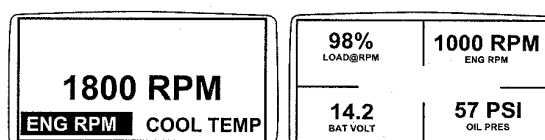

Exit Main Menu

OURGP11,00000AC -19-12SEP06-6/6


RG13159 —UN—26SEP03

Accessing Active Trouble Codes

NOTE: The engine does not need to be running to navigate the diagnostic gauge screens. If engine start up is desired, See *Starting The Engine*. All of the engine values illustrated on the diagnostic gauge indicate the engine is running.

For description of trouble codes, see chart in *Troubleshooting Section*.

- During normal operation the single or four parameter screen will be displayed.

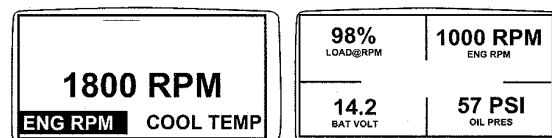


Normal Operation

OURGP11,00000AD -19-27MAY16-1/7

RG13172 —UN—26SEP03

- When the diagnostic gauge receives a trouble code from an engine control unit, the single or four parameter screen will be replaced with the "Warning" message. The SPN and FMI number will be displayed along with a description of the problem and the corrective action needed.

IMPORTANT: Ignoring active trouble codes can result in severe engine damage.

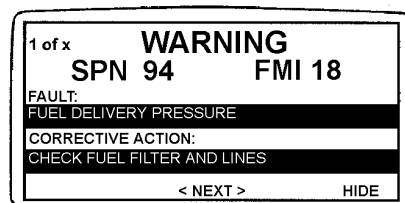


Active Trouble Codes Displayed

Continued on next page

OURGP11,00000AD -19-27MAY16-2/7

RG13240 —UN—30SEP03

3. If the word "Next" appears above the arrow keys, there are more trouble codes that can be viewed by using the arrow keys to scroll to the next trouble code.

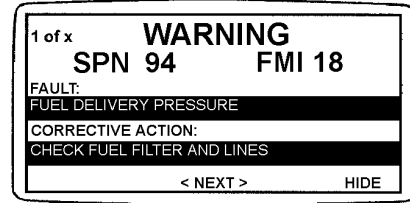



Use Arrow Keys To Scroll

OURGP11,00000AD -19-27MAY16-3/7

RG13241 —UN—30SEP03

IMPORTANT: Ignoring active trouble codes can result in severe engine damage.

 4. To acknowledge and hide the code and return to the single or four parameter display, press the "Enter" Key.

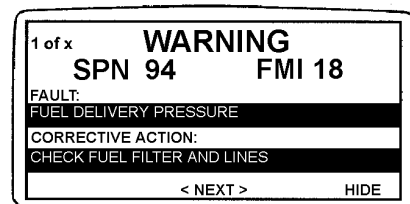


Hide Trouble Codes

OURGP11,00000AD -19-27MAY16-4/7

RG13242 —UN—30SEP03

5. The display will return to the single or four parameter display, but the display will contain the warning icon. Pressing the "Enter" key will redisplay the hidden trouble code.

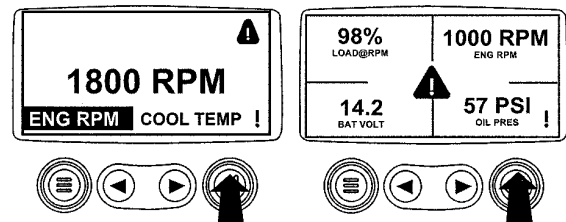



Active Trouble Code Icon

OURGP11,00000AD -19-27MAY16-5/7

RG13176 —UN—26SEP03

IMPORTANT: Ignoring active trouble codes can result in severe engine damage.

 6. Pressing the "Enter" key once again will hide the trouble code and return the screen to the single or four parameter display.

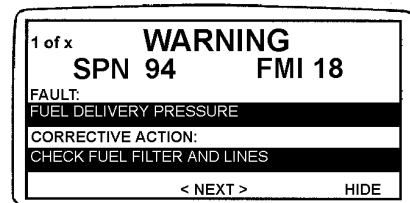


Enter Key

Continued on next page

OURGP11,00000AD -19-27MAY16-6/7

RG13242 —UN—30SEP03

- The single or four parameter screen will display the warning icon until the trouble code condition is corrected.

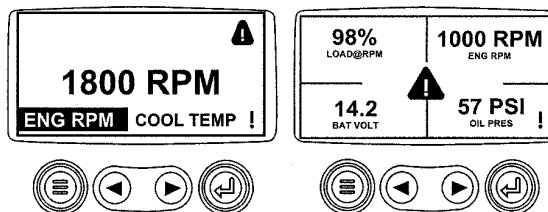


Active Trouble Code Condition

OURGP11,00000AD -19-27MAY16-7/7

RG13243 —UN—01OCT03

Engine Shutdown Codes

- During normal operation the single or four parameter screen will be displayed.

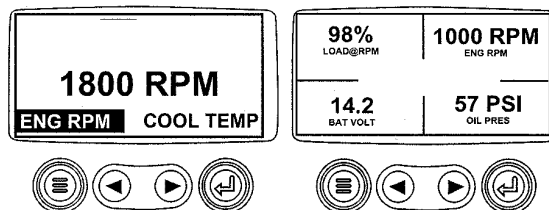


Normal Operation

OURGP11,00000AE -19-27MAY16-1/6

RG13172 —UN—26SEP03

- When the diagnostic gauge receives a severe trouble code from an engine control unit, the single or four parameter screen will be replaced with the "Shutdown" message. The SPN and FMI number will be displayed along with a description of the problem and the corrective action needed.

If the word "Next" appears above the arrow keys, there are more trouble codes that can be viewed by using the arrow keys to scroll to the next trouble code.

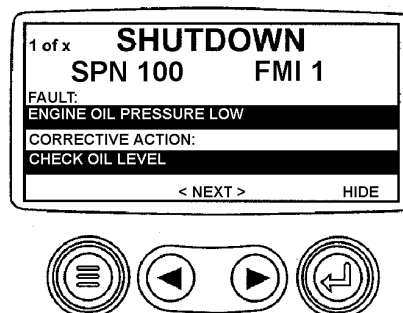


Shutdown Message

OURGP11,00000AE -19-27MAY16-2/6

RG13238 —UN—29SEP03

- To acknowledge and hide the trouble code and return to the single or four parameter display, press the "Enter" key".

IMPORTANT: Ignoring the shutdown message can result in severe engine damage.

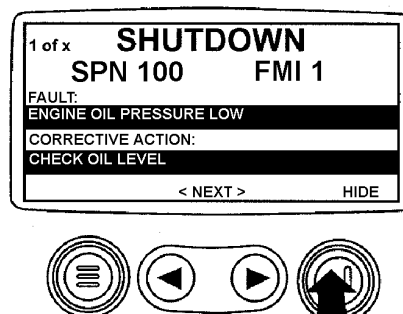

Hide Trouble Code


Continued on next page

OURGP11,00000AE -19-27MAY16-3/6

RG13239 —UN—29SEP03

- The display will return to the single or four parameter display, but the display will contain the "Shutdown" icon. Pressing the "Enter" key will redisplay the hidden trouble code.

IMPORTANT: Ignoring the shutdown message can result in severe engine damage.

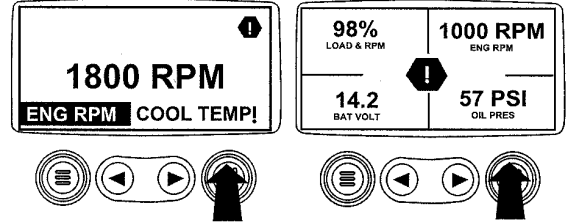


Flashing Shutdown Icon

OURGP11,00000AE -19-27MAY16-4/6

RG13179—UN—26SEP03

- Pressing the "Enter" key once again will hide the trouble code and return the screen to the single or four parameter display.

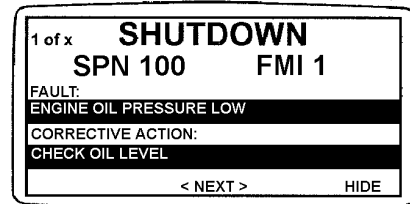


Redisplay Trouble Code

OURGP11,00000AE -19-27MAY16-5/6

RG13239—UN—29SEP03

- The single or four parameter screen will display the shutdown icon until the trouble code condition is corrected.

IMPORTANT: Ignoring the shutdown message can result in severe engine damage.

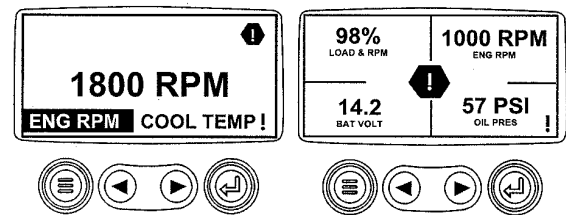


Shutdown Icon

OURGP11,00000AE -19-27MAY16-6/6

RG13180—UN—26SEP03

Adjusting Backlighting

- Turn the key switch to the ON position. Starting at the single or four engine parameter display, press the "Menu" key.

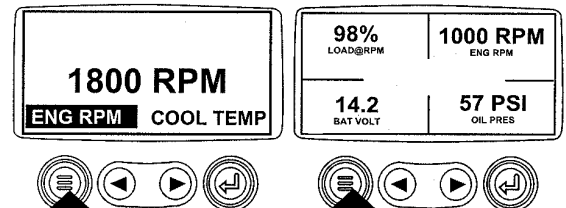



Menu Key

Continued on next page

OURGP11,0000237 -19-23AUG10-1/6

RG13159—UN—26SEP03

 - The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Adjust Backlight" is highlighted.


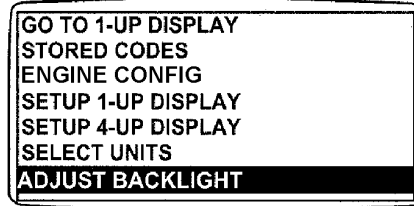


Select Adjust Backlight

OURGP11,0000237 -19-23AUG10-2/6

RG13181 —UN—02OCT03

 - Once the "Adjust Backlight" menu item has been highlighted, press the "Enter" key to activate the "Adjust Backlight" function.

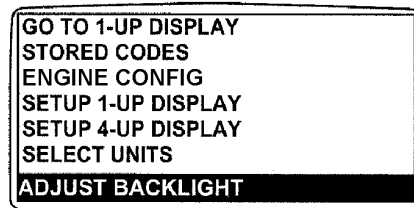


Press Enter Key

OURGP11,0000237 -19-23AUG10-3/6

RG13182 —UN—02OCT03

- Use the "Arrow" keys to select the desired backlight intensity.

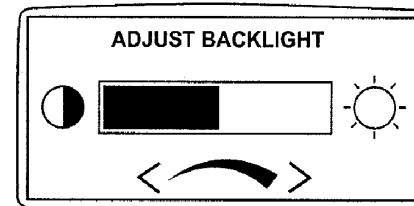


Adjust Backlight Intensity

Continued on next page

OURGP11,0000237 -19-23AUG10-4/6

RG13183 —UN—29SEP03

5. Press the "Menu" key to return to the main menu.

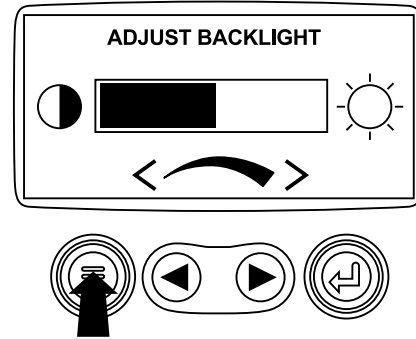


Return to Main Menu

OURGP11,0000237 -19-23AUG10-5/6

RG19048 —UN—23AUG10

6. Press the "Menu" key to exit the main menu and return to the engine parameter display.

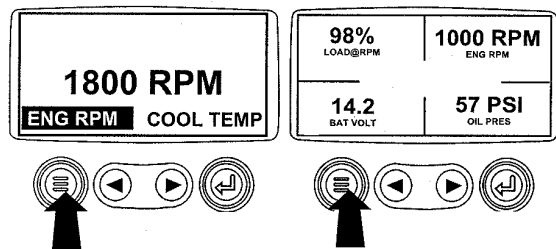


Exit Main Menu

OURGP11,0000237 -19-23AUG10-6/6

RG13159 —UN—26SEP03

Adjusting Contrast

1. Turn the key switch to the ON position. Starting at the single or four engine parameter display press the "Menu" key.

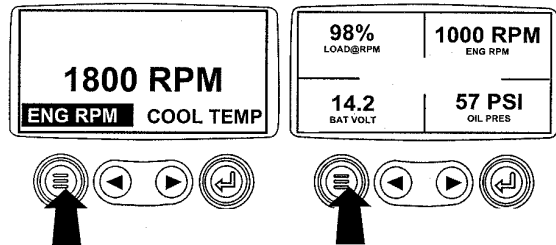


Menu Key

OURGP11,00000AF -19-12SEP06-1/6

RG13159 —UN—26SEP03

2. The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Adjust Contrast" is highlighted.

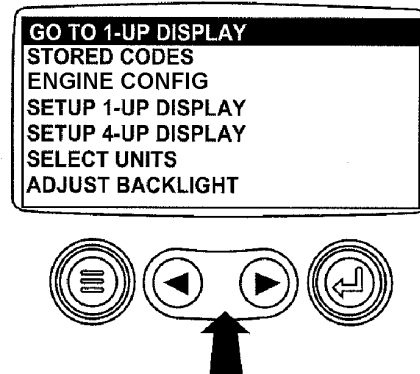



Select Adjust Contrast

Continued on next page

OURGP11,00000AF -19-12SEP06-2/6

RG13161 —UN—02OCT03

 3. Once the "Adjust Contrast" menu item has been highlighted, press the "Enter" key to activate the "Adjust Contrast" function.

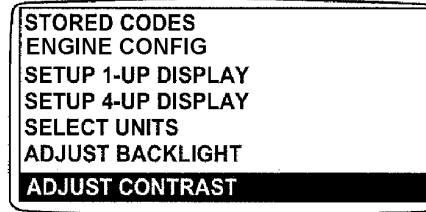


Press Enter Key

OURGP11,00000AF -19-12SEP06-3/6

RG13185 —UN—02OCT03

4. Use the "Arrow" keys to select the desired contrast intensity.


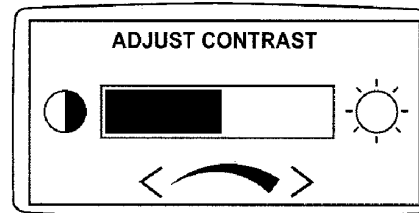


Adjust Contrast Intensity

OURGP11,00000AF -19-12SEP06-4/6

RG13186 —UN—29SEP03

 5. Press the "Menu" key to return to the main menu.

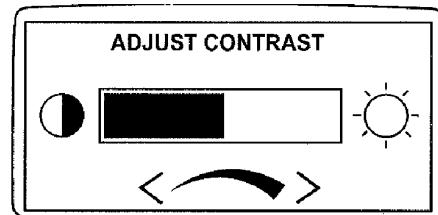


Return To Main Menu

Continued on next page

OURGP11,00000AF -19-12SEP06-5/6

RG13187 —UN—26SEP03

- Press the "Menu" key to exit the main menu and return to the engine parameter display.

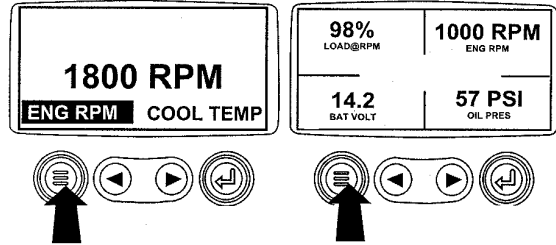


Exit Main Menu

OURGP11,00000AF -19-12SEP06-6/6

RG13159—UN—26SEP03

Selecting Units Of Measurement

- Turn the key switch to the ON position. Starting at the single or four engine parameter display, press the "Menu" key.

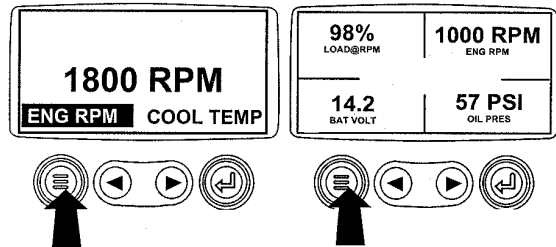


Menu Key

OURGP11,00000B0 -19-27MAY16-1/7

RG13159—UN—26SEP03

- The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Select Units" is highlighted.

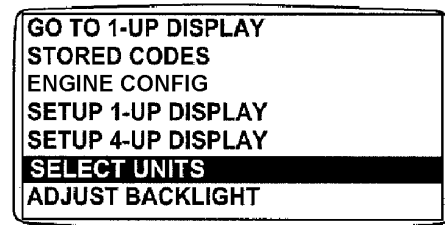


Select Units

OURGP11,00000B0 -19-27MAY16-2/7

RG13188—UN—02OCT03

- Once the "Select Units" menu item has been highlighted press the "Enter" key to access the "Select Units" function.

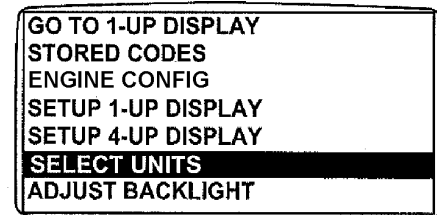


Press Enter Key

Continued on next page

OURGP11,00000B0 -19-27MAY16-3/7

RG13189—UN—02OCT03

4. There are three choices for units of measurement, English, Metric kPa or Metric Bar.
- English is for Imperial units, with pressures displayed in PSI and temperatures in °F.
- Metric kPa and Metric bar are for IS units, with pressures displayed in kPa and bar respectively, and temperatures in °C.
- Use the "Arrow" keys to highlight the desired units of measurement.

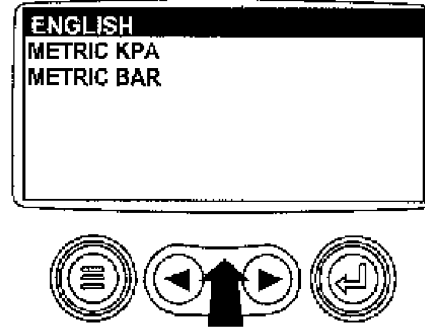


Select Desired Units

OURGP11,00000B0 -19-27MAY16-4/7

RG13190 —UN—26SEP03

5. Press the "Enter" key to select the highlighted units.

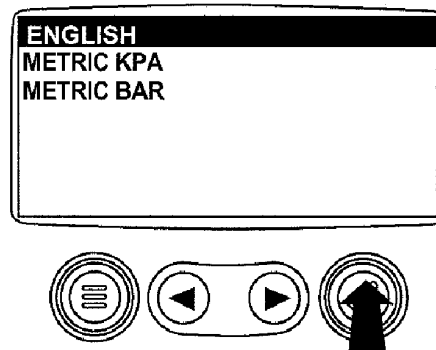


Press Enter Key to Select

OURGP11,00000B0 -19-27MAY16-5/7

RG13191 —UN—30SEP03

6. Press the "Menu" key to return to the main menu.

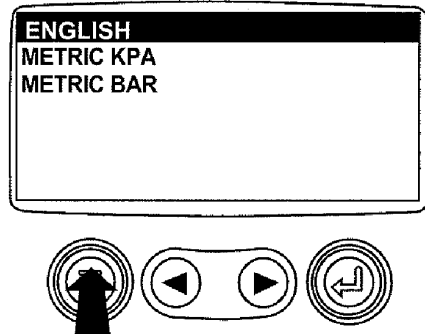


Return To Main Menu

Continued on next page

OURGP11,00000B0 -19-27MAY16-6/7

RG13192 —UN—26SEP03

7. Press the "Menu" key to return to the engine parameter display.

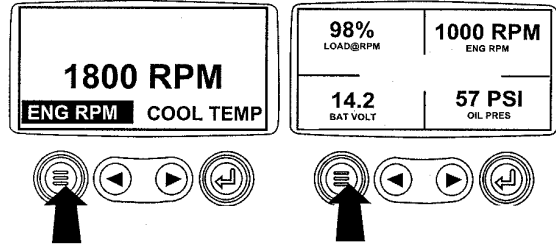


Press Menu Key

OURGP11,00000B0 -19-27MAY16-7/7

RG13159—UN—26SEP03

Setup 1-Up Display

1. Turn the key switch to the ON position. Starting at the single engine parameter display, press the "Menu" key.

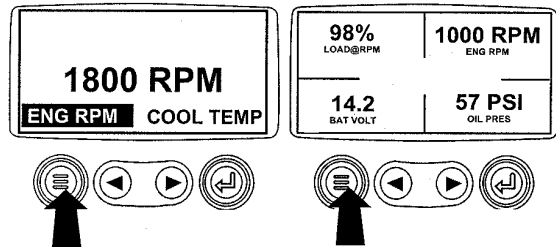


Menu Key

OURGP11,00000B1 -19-27MAY16-1/18

RG13159—UN—26SEP03

2. Use the "Arrow" keys to scroll through the menu until "Setup 1-Up Display" is highlighted.

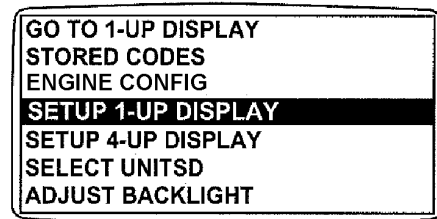


Setup 1-Up Display

OURGP11,00000B1 -19-27MAY16-2/18

RG13193—UN—02OCT03

3. Once "Setup 1-Up Display" menu item has been highlighted press the "Enter" key to access the "Setup 1-Up Display" function.

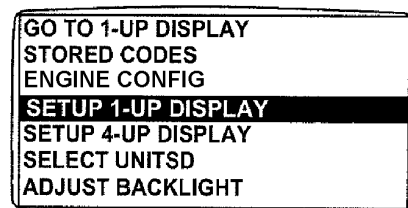



Press Enter Key

Continued on next page

OURGP11,00000B1 -19-27MAY16-3/18

RG13194—UN—02OCT03

 4. Three options are available for modification of the 1-Up Display.
- a. **Use Defaults** – This option contains the following engine parameters for display: Engine Hours, Engine Speed, Battery Voltage, % Load, Coolant Temperature and Oil Pressure.
 - b. **Custom Setup** – This option contains a list of engine parameters. Engine parameters from this list can be selected to replace any or all of the default parameters. This option can be used to add parameters available for scrolling in the 1-Up Display.
 - c. **Automatic Scan** – Selecting the scan function will allow the 1-Up Display to scroll through the selected set of parameters one at a time, momentarily pausing at each.

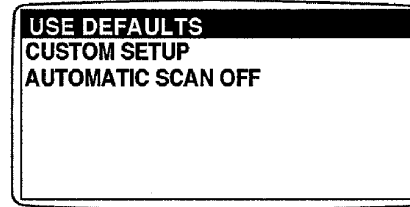


1-Up Display Options

OURGP11,00000B1 -19-27MAY16-4/18

RG13196 —UN—26SEP03

5. **Use Defaults** - To select "Use Defaults" use the Arrow keys to scroll to and highlight "Use Defaults" in the menu display.


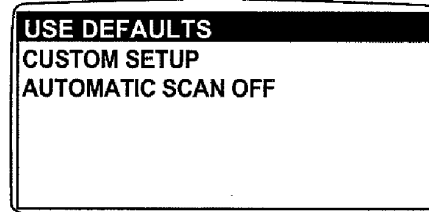


Select Defaults

OURGP11,00000B1 -19-27MAY16-5/18

RG13195 —UN—26SEP03

 6. Press the "Enter" key to activate the "Use Defaults" function.

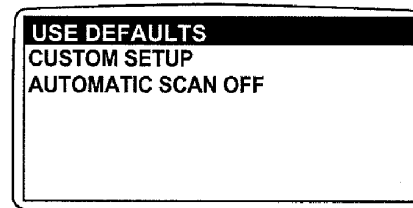



Defaults Selected

Continued on next page

OURGP11,00000B1 -19-27MAY16-6/18

RG13197 —UN—29SEP03

 7. The display parameters are reset to the factory defaults, then the display will return to the "Setup 1-Up Display" menu.

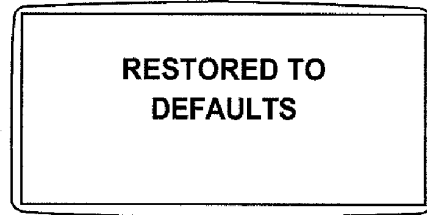


Restored To Defaults

OURGP11,00000B1 -19-27MAY16-7/18

RG13149 —UN—24SEP03

8. **Custom Setup** - To perform a custom setup of the 1-Up Display, use the arrow buttons to scroll to and highlight "Custom Setup" on the display.

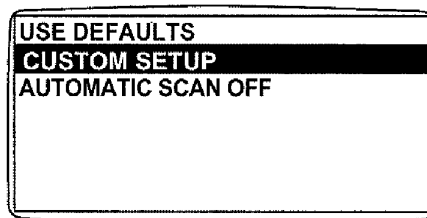


Select Custom Setup

OURGP11,00000B1 -19-27MAY16-8/18

RG13198 —UN—26SEP03

9. Press the "Enter" key to display a list of engine parameters.

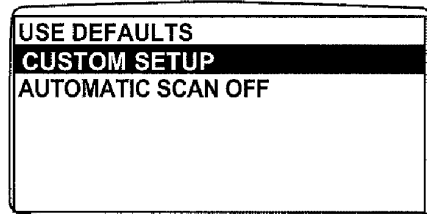


Engine Parameters

Continued on next page

OURGP11,00000B1 -19-27MAY16-9/18

RG13199 —UN—26SEP03

10. Use the "Arrow" keys to scroll to and highlight a selected parameter (parameter with a number to right of it).

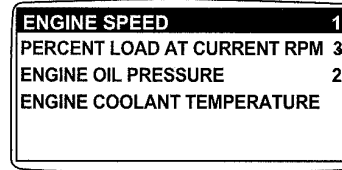

This number indicates the order of display for the parameters and that the parameter is selected for display.





Select Parameters

OURGP11,00000B1 -19-27MAY16-10/18

RG13150 —UN—24SEP03

 11. Press the "Enter" key to deselect the selected parameter, removing it from the list of parameters being displayed on the 1-Up Display.

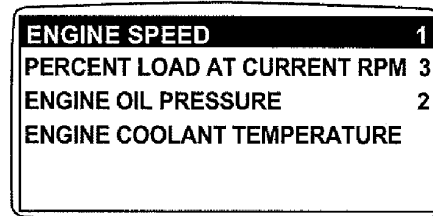


Deselect Parameters

OURGP11,00000B1 -19-27MAY16-11/18

RG13219 —UN—26SEP03

12. Use the "Arrow" keys to scroll and highlight the desired parameter that has not been selected for display (parameter without a number to right of it).

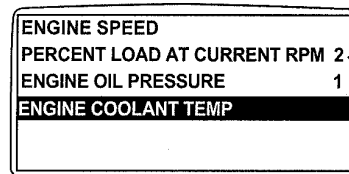

Note that the numbers now indicate the new order of display for the parameters.





Select Desired Parameters

Continued on next page

OURGP11,00000B1 -19-27MAY16-12/18

RG13151 —UN—24SEP03

 13. Press the "Enter" key to select the parameter for inclusion in the Single Engine Parameter Display.
14. Continue to scroll through and select additional parameters for the custom 1-Up Display. Press the "Menu" key at any time to return to the "Custom Setup" menu.


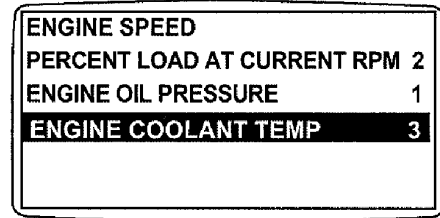


Select Parameters For Display

OURGP11,00000B1 -19-27MAY16-13/18

RG13220 —UN—26SEP03

 15. **Automatic Scan** - Selecting the scan function will allow the 1- Up Display to scroll through the selected set of parameters one at a time. Use the "Arrow" keys to scroll to the "Automatic Scan" function.


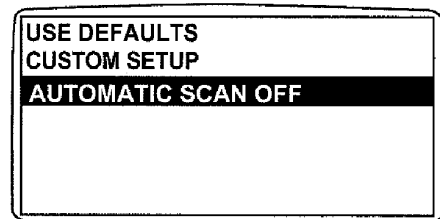


Automatic Scan Off

OURGP11,00000B1 -19-27MAY16-14/18

RG13221 —UN—26SEP03

 16. Press the "Enter" key to toggle the "Automatic Scan" function on.

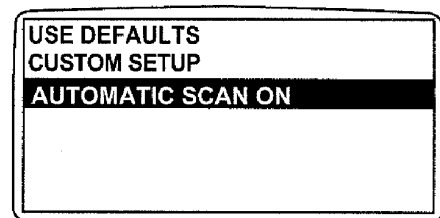


Automatic Scan On

Continued on next page

OURGP11,00000B1 -19-27MAY16-15/18

RG13222 —UN—26SEP03

17. Press the "Enter" key again to toggle the "Automatic Scan" function off.


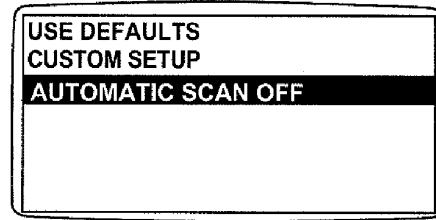


Automatic Scan Off

OURGP11,00000B1 -19-27MAY16-16/18

RG13223 —UN—26SEP03

 18. Once the "Use Defaults", "Custom Setup" and "Automatic Scan" functions have been set, press the "Menu" key to return to the main menu.


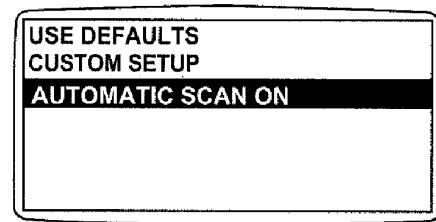


Menu Key

OURGP11,00000B1 -19-27MAY16-17/18

RG13224 —UN—26SEP03

 19. Press the "Menu" key to exit the main menu and return to the engine parameter display.

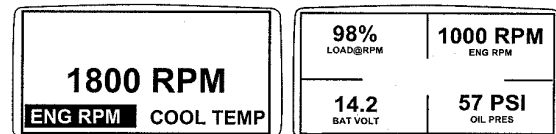



Exit Main Menu

OURGP11,00000B1 -19-27MAY16-18/18

RG13159 —UN—26SEP03

Setup 4-Up Display

 1. Turn the key switch to the ON position. From the single or four engine parameter display, press the "Menu" key.

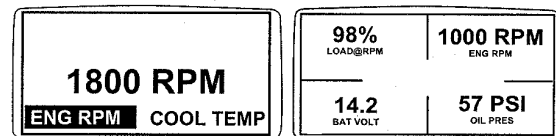


Menu Key

Continued on next page

OURGP11,00000B2 -19-12SEP06-1/14

RG13159 —UN—26SEP03

2. The main menu will be displayed. Use the "Arrow" keys to scroll through the menu until "Setup 4-Up Display" is highlighted.


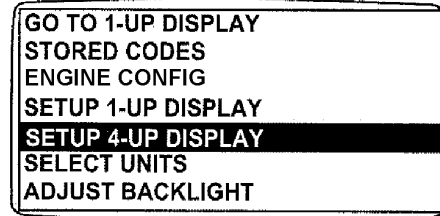


Select Setup 4-Up Display

OURGP11,00000B2 -19-12SEP06-2/14

RG-13225 —UN—02OCT03

 3. Once the "Setup 4-Up Display" menu item has been highlighted, press the "Enter" key to activate the "Setup 4-Up Display" menu.


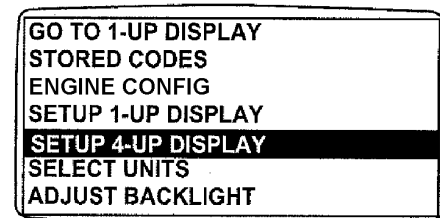


Press Enter Key

OURGP11,00000B2 -19-12SEP06-3/14

RG-13226 —UN—02OCT03

 4. Two options are available for the 4-Up Display.
 - a. **Use Defaults** – This option contains the following engine parameters for display: Engine Speed, Battery Voltage, Coolant Temperature and Oil Pressure.
 - b. **Custom Setup** – This option contains a list of engine parameters. Engine parameters from this list can be selected to replace any or all of the default parameters.

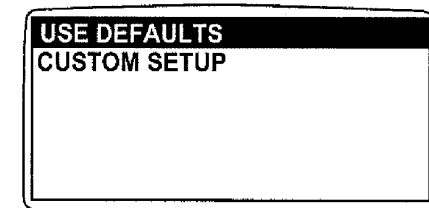


Select Factory Defaults

Continued on next page

OURGP11,00000B2 -19-12SEP06-4/14

RG-13244 —UN—02OCT03

5. To reset the display parameters to the factory defaults, scroll to and highlight "Use Defaults". Press the "Enter" key to activate the "Use Defaults" function. A message indicating the display parameters are reset to the factory defaults will be displayed, then the display will return to the "Setup 4-Up Display" menu.

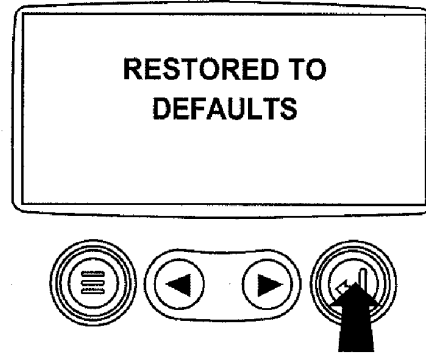


Restored To Defaults

OURGP11,00000B2 -19-12SEP06-5/14

RG13149 —UN—24SEP03

6. **Custom Setup** - To perform a custom setup of the 4-Up Display, use the arrow buttons to scroll to and highlight "Custom Setup" on the display.

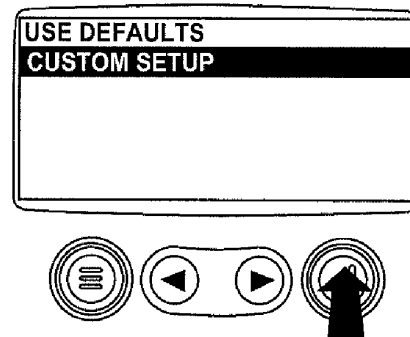


Custom Setup

OURGP11,00000B2 -19-12SEP06-6/14

RG13227 —UN—26SEP03

7. The quadrant with the highlighted parameter value is the current selected parameter. Use the "Arrow" keys to highlight the value in the quadrant you wish to change to a new parameter.

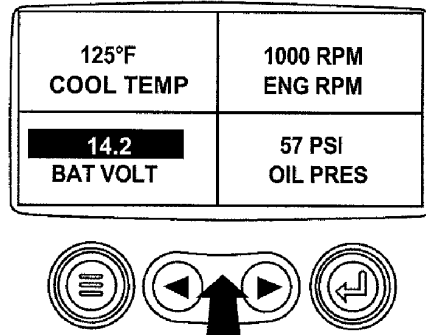

Select Parameters

Continued on next page

OURGP11,00000B2 -19-12SEP06-7/14

RG13228 —UN—26SEP03

8. Press the "Enter" key and a list of engine parameters will be displayed.

125°F COOL TEMP	1000 RPM ENG RPM
14.2 BAT VOLT	57 PSI OIL PRES



List Of Engine Parameters

OURGP11,00000B2 -19-12SEP06-8/14

RG13229 —UN—26SEP03

9. The parameter that is highlighted is the selected parameter for the screen. Use the "arrow" keys to highlight the new parameter to be placed in the "4-Up Display".

ENGINE SPEED	3
ENGINE HOURS	
ENGINE COOLANT TEMPERATURE	1
BATTERY POTENTIAL	
ENGINE OIL TEMPERATURE	2
ENGINE OIL PRESSURE	4

The number to the right of the parameter indicates the quadrant in which it is displayed.
1. = Upper Left Quadrant
2. = Lower Left Quadrant
3. = Upper Right Quadrant
4. = Lower Right Quadrant




Select Desired Engine Parameter

OURGP11,00000B2 -19-12SEP06-9/14

RG13230 —UN—26SEP03

10. Press the "Enter" key to change the selected parameter in the quadrant to the new parameter.

ENGINE SPEED	3
ENGINE HOURS	
ENGINE COOLANT TEMPERATURE	1
BATTERY POTENTIAL	
ENGINE OIL TEMPERATURE	2
ENGINE OIL PRESSURE	4

 

Enter Selected Parameter

OURGP11,00000B2 -19-12SEP06-10/14

RG13231 —UN—26SEP03

11. Use the "Menu" keys to return to the "4-Up Custom Setup" screen.

ENGINE SPEED	3
ENGINE HOURS	
ENGINE COOLANT TEMPERATURE	1
BATTERY POTENTIAL	
ENGINE OIL TEMPERATURE	2
ENGINE OIL PRESSURE	4

Note the number to the right of the selected parameter indicating that the parameter is now assigned to that display location.



Return To 4-Up Custom Setup

Continued on next page

OURGP11,00000B2 -19-12SEP06-11/14

RG13232 —UN—26SEP03

12. The selected quadrant has now changed to the new selected parameter.

125°F COOL TEMP	1000 RPM ENG RPM
143°F OIL TEMP	57 PSI OIL PRES



4-Up Display


OURGP11,00000B2 -19-12SEP06-12/14

RG13153 —UN—24SEP03

13. Repeat the parameter selection process until all spaces are as desired.

14. Press the "Menu" key to return to the main menu.

125°F COOL TEMP	1000 RPM ENG RPM
143°F OIL TEMP	57 PSI OIL PRES

 

Return To Main Menu

OURGP11,00000B2 -19-12SEP06-13/14

RG13154 —UN—24SEP03

15. Press the "Menu" key to exit the main menu and return to the engine parameter display.

GO TO 1-UP DISPLAY
STORED CODES
ENGINE CONFIG
SETUP 1-UP DISPLAY
SETUP 4-UP DISPLAY
SELECT UNITS
ADJUST BACKLIGHT

125% COOL TEMP	1000 RPM ENG RPM
143°F OIL TEMP	57 PSI OIL PRES



Select Remaining Parameters

OURGP11,00000B2 -19-12SEP06-14/14

RG13155 —UN—07OCT03

John Deere PowerSight

John Deere PowerSight is a web based service that allows remote access to machine data. John Deere PowerSight is accessible from a laptop, desktop or mobile device.

John Deere PowerSight works by combining a controller that includes cellular communication and GPS antennas. Machine data is collected by the controller and wirelessly transferred to a data server, where it is made available on a website.

John Deere PowerSight allows you to:


- Stay informed on machine location and hours
- Protect assets with Geofence and Curfew alerts
- Keep assets running with maintenance tracking and preventive maintenance plans
- Track and analyze machine and fuel usage
- Conduct remote machine diagnostics and programming

For more information and availability, contact an authorized John Deere dealer or servicing dealer.

BL90236,0000031 -19-13FEB14-1/1


Engine Operation

Engine Break-In Service

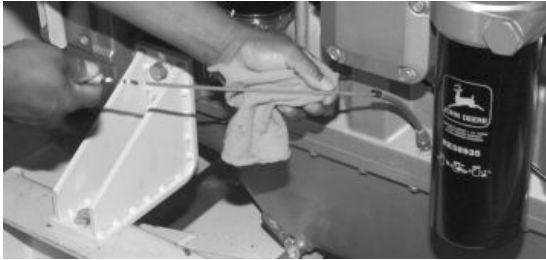

Check Engine Oil

RG9924 —UN—17NOV99

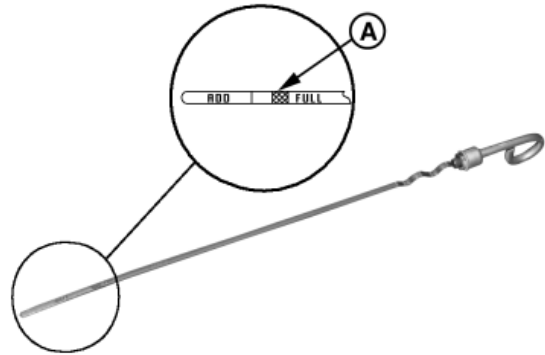

Crosshatch Pattern on Dipstick

RG8707A —UN—03SEP99

A—Crosshatch Pattern

The engine is ready for normal operation. However, extra care during the first 100 hours of operation will result in more satisfactory long-term engine performance and life. DO NOT exceed 100 hours of operation with break-in oil.

1. This engine is factory-filled with John Deere DIESEL ENGINE BREAK-IN OIL (SAE 10W-30). Operate the engine at heavy loads with minimal idling during the break-in period.
2. If the engine has significant operating time at idle, constant speeds, and/or light load usage, or makeup oil is required in the first 100 hour period, a longer break-in period may be required. In these situations, an additional 100 hour break-in period is recommended using a new change of John Deere DIESEL ENGINE BREAK-IN OIL and a new John Deere oil filter.

IMPORTANT: DO NOT add makeup oil until the oil level is **BELOW** the **ADD** mark on dipstick. John Deere **ENGINE BREAK-IN OIL (TY22041)** should be used to make up any oil consumed during the break-in period.

3. Check engine oil level more frequently during engine break-in period. If oil must be added during this period, John Deere DIESEL ENGINE BREAK-IN OIL

is preferred. See DIESEL ENGINE BREAK-IN OIL, in Fuels, Lubricants, and Coolant Section for other oils allowed.

IMPORTANT: Do not use PLUS-50 oil or engine oils meeting any of the following during the first 100 hours of operation of a new or rebuilt engine:

API CJ-4	API CF
API CI-4 PLUS	ACEA E7
API CI-4	ACEA E6
API CH-4	ACEA E5
API CG-4	ACEA E4
API CF-4	ACEA E3
API CF-2	

These oils will not allow the engine to break-in properly.

DO NOT fill above the crosshatch pattern (A) or the **FULL** mark, whichever is present. Oil levels anywhere within the crosshatch are considered in the acceptable operating range.

Continued on next page


OURGP11,0000070 -19-01DEC14-1/3

4. During the first 20 hours, avoid prolonged periods of engine idling or sustained maximum load operation. If engine will idle longer than 5 minutes, stop engine.
5. Before the first 100 hours (maximum), change engine oil and replace engine oil filter (A). (See CHANGING ENGINE OIL AND REPLACING FILTER in Lubrication and Maintenance/500 Hour/12 Month Section.) Fill crankcase with the normal seasonal viscosity grade oil. (See DIESEL ENGINE OIL, in Fuels, Lubricants, and Coolant Section.)

NOTE: Some increase in oil consumption may be expected when low viscosity oils are used. Check oil levels more frequently.

If temperature is below 0°C (32°F), it may be necessary to use cold weather starting aids (See COLD WEATHER OPERATION, later in this section).

If air temperature is below -25°C (-13°F), use an engine block heater.

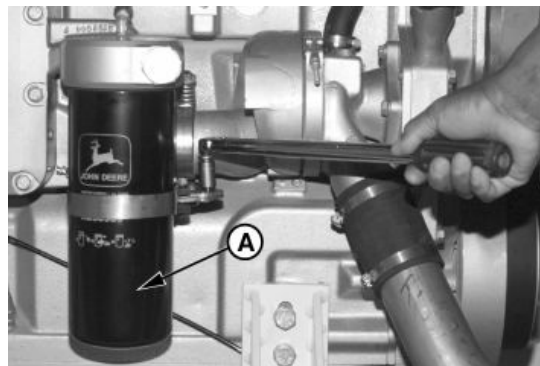

Replace Engine Oil Filter

A—Oil Filter

RG8709A —UN—03SEP99

OURGP11,0000070 -19-01DEC14-2/3

6. Watch coolant temperature gauge (A) closely. If coolant temperature rises above 100°C (212°F), reduce load on engine. Unless temperature drops quickly, stop the engine and determine the cause before resuming operation.

NOTE: When the coolant temperature gauge reads approximately 112°C (234°F), the engine will shutdown automatically, if equipped with safety controls.


7. Watch oil pressure gauge (B) for pressure within specification.

Specification

Engine Oil ¹ —Minimum	
Pressure at No Load	
(Idle).....	138 kPa (1.38 bar) (20 psi)
Engine Oil—Maximum	
Pressure at Full Load	
(Rated Speed).....	310 kPa (3.1 bar) (45 psi)
Engine Coolant—Tem-	
perature Range.....	82°—92°C (180°—197°F)

8. Check poly-vee belt for proper alignment and seating in pulley grooves.

¹ At normal operating sump temperature of 105°C (220°F).

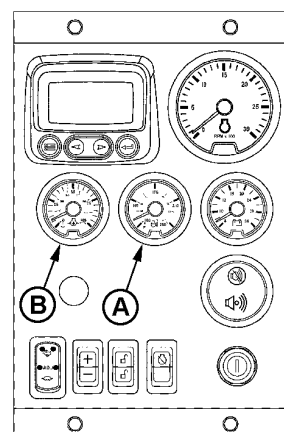

Watch Coolant Temperature and Oil Pressure on Panel


A—Engine Coolant Temperature Gauge

B—Oil Pressure Gauge

RG13720 —UN—11NOV04


OURGP11,0000070 -19-01DEC14-3/3

Auxiliary Gear Drive Limitations

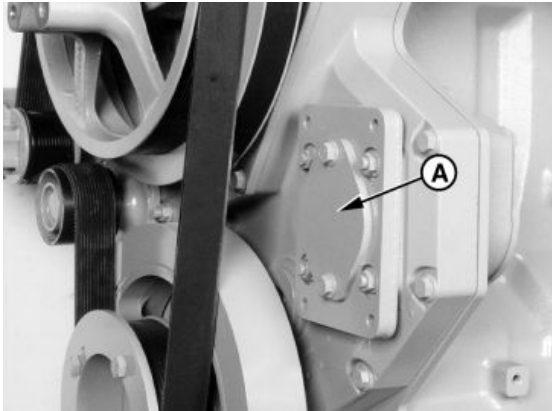


SAE Drive "A"

RG8715 —UN—03SEP99

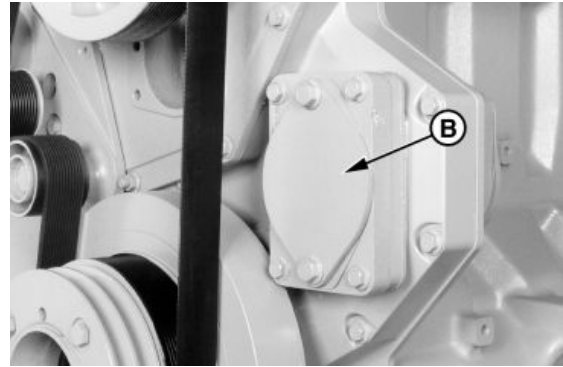


SAE Drive "B" Front

RG8750 —UN—03SEP99

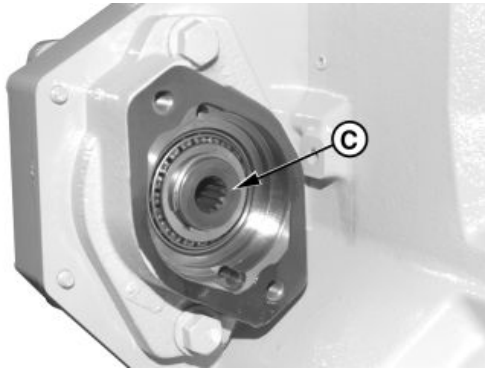

SAE Drive "B" Rear

RG10429A —UN—30NOV99

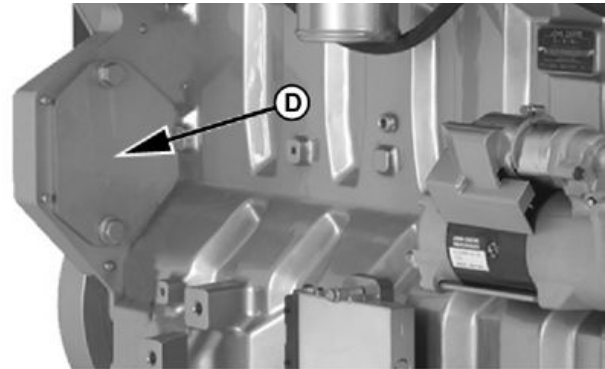

SAE Drive "C"

RG13888 —UN—19MAY05

A—SAE "A"
B—SAE "B" Front

C—SAE "B" Rear

D—SAE "C"

IMPORTANT: When attaching an air compressor, hydraulic pump, or other accessory to be driven by the auxiliary gear drive (engine timing gear train at front of engine), power requirements of the accessory must be limited to values listed below:

SAE Drive	Continuous Power (Maximum)	Intermittent Power (Maximum)
A.....	26 kW (35 hp)	30 kW (40 hp)
B or (A + B) or (B + B)	52 kW (70 hp)	60 kW (80 hp)
C.....	52 kW (70 hp)	60 kW (80 hp)

OURGP12,0000122 -19-12SEP06-1/1

Generator Set (Standby) And All Other OEM Engine Applications

To ensure that your engine will deliver efficient standby operation when needed, start engine and run at rated

speed (with 50%—70% load) for 30 minutes every 2 weeks. DO NOT allow engine to run for an extended period of time with no load.

RK80614,0000558 -19-23FEB15-1/1


Starting the Engine

The following instructions apply to the optional controls and instruments available through the John Deere Parts Distribution Network. The controls and instruments for your engine may be different from those shown here; always follow manufacturer's instructions.

CAUTION: Before starting engine in a confined building, install proper outlet exhaust ventilation equipment. Always use safety approved fuel storage and piping.

NOTE: If temperature is below 0°C (32°F), it may be necessary to use cold weather starting aids. (See COLD WEATHER OPERATION in this group.)

1. Perform all prestarting checks outlined in Lubrication and Maintenance/Daily section later in this manual.

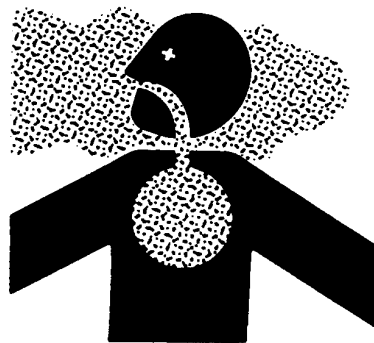

Use Proper Ventilation

2. Open the fuel supply shut-off valve, if equipped.
3. Disengage power to any engine drivelines.

OMRGP15,0000122 -19-12SEP06-1/3

4. Set slow idle as follows:


Panels with high-low speed select rocker switch (B) only: Set slow speed by pressing lower half of switch.

Panels with optional analog throttle(s) (A) : Set high-low speed select rocker switch to slow (turtle), then push in on analog throttle handle or turn full counterclockwise to set analog throttle(s) to slow speed.

IMPORTANT: Do not operate the starter for more than 30 seconds at a time. To do so may overheat the starter. If the engine does not start the first time, wait at least 2 minutes before trying again. If engine does not start after four attempts, see Troubleshooting section.

A—Analog Throttle Control (Optional)

B—Speed Select Rocker Switch

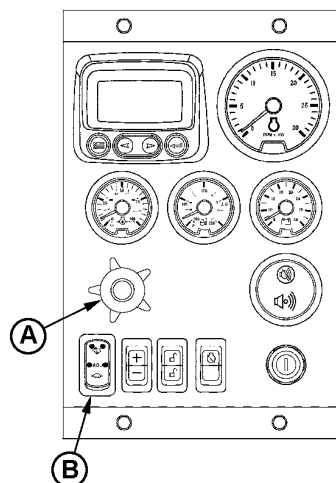

Analog Throttle Control and Speed Select Switch

Continued on next page

OMRGP15,0000122 -19-12SEP06-2/3

TS220 —UN—15APR13

RG13722 —UN—11NOV04

5. **All Engines** - Turn the key switch to the ON position. The "Wait To Start Preheating" message will be displayed when ambient temperatures require preheating (for engines with preheating options). The timer will display minutes and seconds, counting down to zero. Once the timer has reach 0:00 and the "Wait to Start" message is no longer displayed, you may start the engine.

Turn the key start switch (A) clockwise to crank the engine. When the engine starts, release the key switch so that it returns to the "ON" position.


IMPORTANT: If the key switch is released before the engine starts, wait until the starter and the engine stop turning before trying again. This will prevent possible damage to the starter and/or flywheel.

6. After engine starts, idle engine at not more than 1200 rpm until warm. (See WARMING ENGINE later in this section).

Panels with high-low speed select rocker switch (B) only: Set rpm using bump speed enable switch (C) with speed select rocker switch (D).

Panels with optional analog throttle (E): Set either high-low speed select switch (B) or analog throttle (E) to slow speed, and set desired speed with remaining control.

NOTE: Engine control unit (ECU) reads the higher of the high-low speed select rocker switch or the analog throttle speed settings.

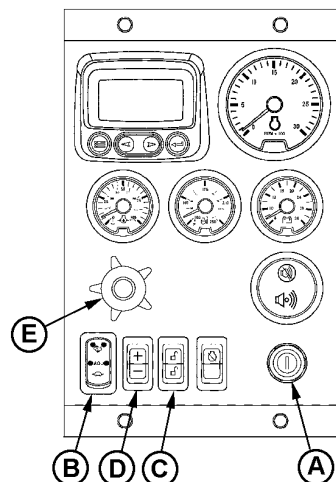

Start And Idle On Panel

- | | |
|---------------------------------------|--------------------------------------|
| A—Key Start Switch | D—Speed Select Rocker Switch |
| B—High-Low Speed Select Rocker Switch | E—Analog Throttle Control (Optional) |
| C—Bump Speed Enable Rocker Switch | |

7. Check all gauges for normal engine operation. If operation is not normal, stop the engine and determine the cause. (For normal gauge pressures and temperatures, see BREAK-IN SERVICE earlier in this section.)

OMRGP15,0000122 -19-12SEP06-3/3

Restarting Engine Which Has Run Out Of Fuel

Fill the fuel tank and then bleed the fuel system before restarting engine (refer to Service as Required section, BLEEDING FUEL SYSTEM).

OURGP11,000004E -19-12SEP06-1/1


RG13723 —UN—11NOV04

Warming Engine

IMPORTANT: To ensure proper lubrication, operate engine at or below 1200 rpm with no load for 1—2 minutes. Extend this period 2—4 minutes when operating at temperatures below freezing.

Engines used in generator set applications where the ECU is programmed to lock engine at a specified speed, may not have a slow idle function. Operate these engines at high idle for 1 to 2 minutes before applying the load. This procedure does not apply to standby generator sets where the engine is loaded immediately upon reaching rated speed.

1. Check oil pressure gauge (A) as soon as engine starts. If gauge needle does not rise to minimum oil pressure of 138 kPa (1.38 bar) (20 psi) within 5 seconds, stop the engine and determine the cause. Normal engine oil pressure is 310 ± 103 kPa (3.10 ± 1.03 bar) (45 ± 15 psi) at rated full-load speed (1500—2100 rpm) with oil at normal operating temperature of 115°C (240°F).
2. Watch coolant temperature gauge (B). Do not place engine under full load until it is properly warmed up. The normal engine coolant temperature range is $82^{\circ}\text{—}92^{\circ}\text{C}$ ($180^{\circ}\text{—}197^{\circ}\text{F}$).

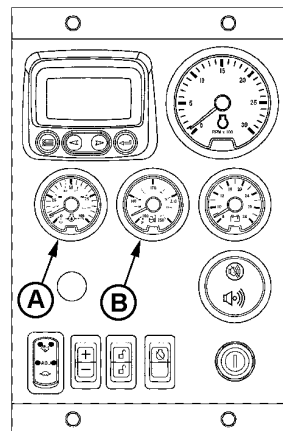

Oil Pressure and Coolant Temperature Gauges On Panel

A—Engine Oil Pressure Gauge B—Engine Coolant Temperature Gauge

NOTE: It is a good practice to operate the engine under a lighter load and at lower speeds than normal for the first few minutes after start-up.

OMRGP15,0000124 -19-12SEP06-1/1

Normal Engine Operation

Observe engine coolant temperature and engine oil pressure. Temperatures and pressures will vary between engines and with changing operating conditions, temperatures, and loads.

Normal engine coolant operating temperature range is $82^{\circ}\text{—}92^{\circ}\text{C}$ ($180^{\circ}\text{—}197^{\circ}\text{F}$). If coolant temperature rises above 100°C (212°F), reduce load on engine. Unless temperature drops quickly, stop engine and determine cause before resuming operation.

Normal engine oil pressure at slow idle should be at least 138 kPa (20 psi) and should rise to 310 kPa (45 psi) at rated speed.

Operate the engine under a lighter load and at slower than normal speed for first 15 minutes after start-up. DO NOT run engine at slow idle.

IMPORTANT: Should the engine die while operating under load, immediately remove load and restart the engine. Overheating of the turbocharger parts may occur when oil flow is stopped.

Stop engine immediately if there are any signs of part failure. Symptoms that may be early signs of engine problems are:

- Sudden drop in oil pressure
- Abnormal coolant temperatures
- Unusual noise or vibration
- Sudden loss of power
- Excessive black exhaust
- Excessive fuel consumption
- Excessive oil consumption
- Fluid leaks

NOTE: These engines meet emission standards with an exhaust gas recirculation system and a variable geometry turbocharger. A revving sound may be heard for an instant after starting, as the variable geometry turbocharger recycles. This is normal.

OURGP11,000004F -19-19SEP06-1/1

Cold Weather Operation

CAUTION: Ether injector starting fluid is highly flammable. DO NOT use starting fluid on engines equipped with air intake heaters.

DO NOT use starting fluid near fire, sparks, or flames. DO NOT incinerate or puncture a starting fluid container.

IMPORTANT: Engines with Rear PTO- Turn off or unload all pumps, auxiliary drives, and compressors before cold weather starting to reduce drag on engine.

Engines may be equipped with coolant heaters or ether injectors as cold weather starting aids.

Starting aids are required below 0°C (32°F). They will enhance starting performance above these temperatures and may be needed to start applications that have high parasitic loads during cranking and/or start acceleration to idle.

Using correct grade of oil (per engine and machine operator's manual) is critical to achieving adequate cold weather cranking speed. Synthetic oils have improved flow at low temperatures.


Other cold weather starting aids are required at temperatures below -25°C (-13°F) or at altitudes above 1500 m (5000 ft).

1. Follow steps 1—4 as listed under STARTING THE ENGINE, earlier in this section, then proceed as follows according to the instrument (gauge) panel on your engine.
2. Use cold weather starting aids as needed. Follow supplier instructions for starting aid provided on your engine. A booster battery can be connected if needed (see USING A BOOSTER BATTERY OR CHARGER, later in this section).
3. Follow remaining steps 5—7 as listed earlier in "Starting Engine" section.

Additional information on cold weather operation is available from your authorized servicing dealer.



Handle Starting Fluid with Care

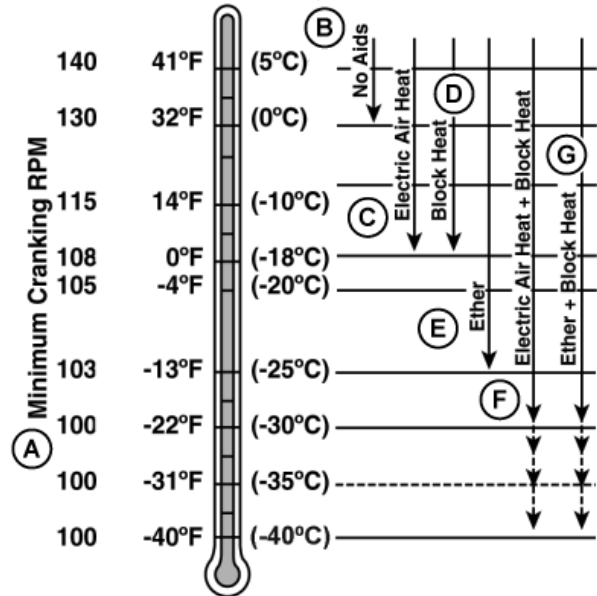

Cold Weather Starting Guidelines

- | | |
|------------------------|------------------------------------|
| A—Minimum Cranking RPM | E—Ether |
| B—No Aids | F—Electric Air Heat and Block Heat |
| C—Electric Air Heat | G—Ether and Block Heat |
| D—Block Heat | |

OURGP11,0000051 -19-16DEC10-1/1

TS1356—UN—18MAR92

RG19813—UN—15DEC10

Changing Engine Speed

NOTE: On engines with **2-position** throttles, speeds are not adjustable. These throttles allows operation only at the preset rated speed or at idle using the single switch (A).

Changing from slow to fast speed using Standard High-Low Speed Select Rocker Switch (A) (If Equipped):

- For slow speed, press lower half of switch (indicated by turtle symbol).
- For fast speed, press upper half of switch (indicated by rabbit symbol).

NOTE: To adjust preset fast or slow speeds for High-Low Speed Select Rocker Switch:

1. Select fast (rabbit) or slow (turtle) position on High-Low Speed Select Rocker Switch (A).
2. Press and hold top or bottom half of Bump Speed Enable Rocker Switch (B) while using Speed Select Rocker Switch (C).
3. Use Speed Select Rocker Switch (C) to bump engine speed up (+) or down (-).


NOTE: Once the speed has been set, the Bump Speed Enable Switch (B) must be pressed and released three times within two seconds to commit the new slow or fast speed to memory. If not done, the engine's new slow or fast speed will only be effective until the key switch is shut off. Then the speed will revert to its previous setting.

Changing from slow to fast speed using Adjustable High-Low Speed Select Rocker Switch (A) (If Equipped):

Instrument panels have an adjustable **three-position** rocker switch (A) that can be used to select slow idle, fast idle, or an adjustable ("ADJ") intermediate speed.

- For slow speed, press lower half of rocker switch (indicated by turtle symbol).
- For fast speed, press upper half of rocker switch (indicated by rabbit symbol).

NOTE: To adjust preset fast or slow speeds with adjustable High-Low Speed Select Rocker Switch:

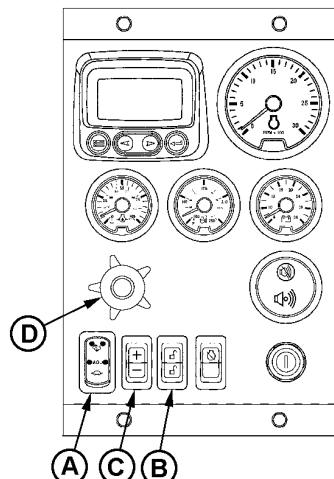

Changing Engine Speed with Full-Featured Panel

- | | |
|---------------------------------------|--------------------------------------|
| A—High-Low Speed Select Rocker Switch | C—Speed Select Rocker Switch |
| B—Bump Speed Enable Rocker Switch | D—Analog Throttle Control (Optional) |

1. Select middle position (ADJ) or slow (turtle) position on the optional Adjustable Three-State Speed Select Rocker Switch (A).
2. Press and hold top or bottom half of Bump Speed Enable Rocker Switch (B) while using Speed Select Rocker Switch (C).
3. Use Speed Select Rocker Switch (C) to bump engine speed up (+) or down (-).

NOTE: Slow (turtle) position is factory preset at low engine idle, while middle (ADJ) position is factory set at high engine idle.

NOTE: Once the speed has been set, the Bump Speed Enable Switch (B) must be pressed and released three times within two seconds to commit the new slow or fast speed to memory. If not done, the engine's new slow or fast speed will only be effective until the key is shut off. Then the speed will revert to its previous setting.

Continued on next page

OMRGP15,0000126 -19-12SEP06-1/3

RG13725 —UN—11NOV04


Changing engine speed using optional analog throttle control (D)

NOTE: Pushing in on analog throttle will immediately take engine to slow idle speed.

1. Set High-Low Speed Select Rocker Switch (A) to low speed position.
2. Turn analog throttle clockwise to increase speed or counterclockwise to decrease speed.

NOTE: Engine Control Unit (ECU) reads the higher of the High-Low Speed Select Rocker Switch or the Analog Throttle(s) Speed Settings. With High-Low switch at low speed, Analog Throttle(s) will control speed higher than low idle setting.

- | | |
|---------------------------------------|--------------------------------------|
| A—High-Low Speed Select Rocker Switch | C—Speed Select Rocker Switch |
| B—Bump Speed Enable Rocker Switch | D—Analog Throttle Control (Optional) |

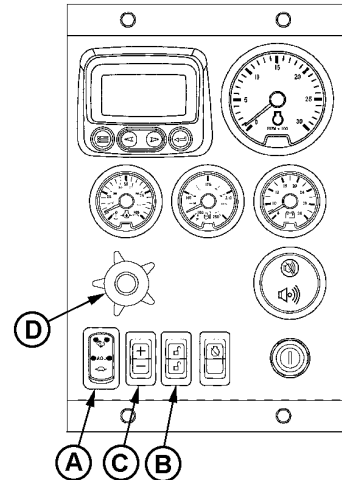

Changing Engine Speed with Full-Featured Panel

OMRGP15.0000126 -19-12SEP06-2/3

RG13725 —UN—11NOV04


Changing engine speeds on engines equipped with the Basic Instrument Panel

The basic instrument panel has a “ramp” throttle switch (E) with a spring loaded return to the center rest position (Off).

To increase the engine speed, press and hold upper half of rocker switch (E) (indicated by rabbit symbol) to increase or ramp up the engine speed to desired speed. Release the rocker switch.

Press lower half of rocker switch (indicated by turtle symbol) to decrease or ramp down the engine speed to desired speed. Release the rocker switch.

The settings will not be stored.

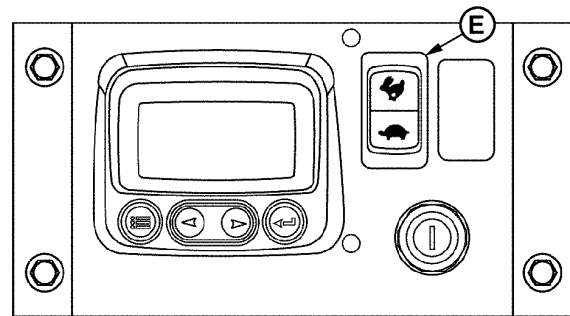

Changing Engine Speed With Basic Panel

- E—High-Low Speed Select Rocker Switch

OMRGP15.0000126 -19-12SEP06-3/3

RG13289 —UN—30OCT03

Avoid Excessive Engine Idling

Prolonged idling may cause the engine coolant temperature to fall below its normal range. This, in turn, causes crankcase oil dilution, due to incomplete fuel combustion, and permits formation of gummy deposits on valves, pistons, and piston rings. It also promotes rapid accumulation of engine sludge and unburned fuel in the exhaust system.

Once an engine is warmed to normal operating temperatures, engine should be idled at slow idle speed.

Slow idle speed for this engine is 850 rpm at factory. If an engine will be idling for more than 5 minutes, stop and restart later.

NOTE: Generator set applications where the ECU is locked at a specified speed may not have a slow idle function. These engines will idle at no-load governed speed (high idle).

RG, RG34710, 7554 -19-12SEP06-1/1

Stopping the Engine

1. Pull PTO clutch lever rearward (away from engine) to disengage clutch, if equipped.

IMPORTANT: Before stopping an engine that has been operating at working load, idle engine at least 2 minutes at 1000—1200 rpm to cool hot engine parts.

Engines in generator set applications where the ECU is locked at a specified speed and no slow idle function is available, run engine for at least 2 minutes at fast idle and no load.

2. Run engine at 1000—1200 rpm for at least 2 minutes to cool.


Panels with high-low speed select rocker switch (B) only: Set rpm using bump speed enable switch (C) with speed select rocker switch (D).

Panels with optional analog throttle (E): Set either high-low speed select switch (B) or analog throttle control (E) to slow idle, and set desired speed with remaining control.

NOTE: Engine control unit (ECU) reads the higher of the high-low speed select rocker switch or the analog throttle speed settings.

3. Push in on analog throttle control handle (if equipped) so that engine goes to slow idle, or set slow speed with high-low speed select rocker switch.
4. Turn key start switch (A) to “OFF” position to stop the engine. Remove ignition key.

IMPORTANT: Make sure that exhaust stack rain cap (F) is installed when engine is not running. This will prevent water and dirt from entering engine.

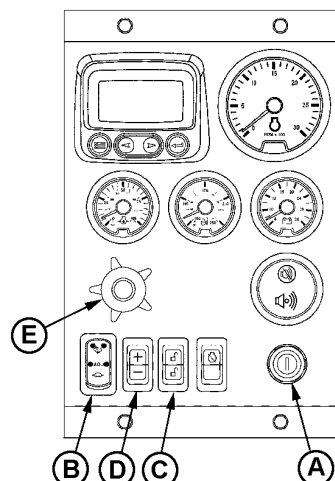

Stopping the Engine (Full-Featured Panel Shown)



Exhaust Stack Rain Cap

- | | |
|---------------------------------------|--------------------------------------|
| A—Key Start Switch | D—Speed Select Rocker Switch |
| B—High-Low Speed Select Rocker Switch | E—Analog Throttle Control (Optional) |
| C—Bump Speed Enable Rocker Switch | F—Exhaust Stack Rain Cap |

OMRGP15,0000127 -19-12SEP06-1/1

RG13723 —UN—11NOV04

RG9933 —UN—18NOV99

Using a Booster Battery or Charger

A 12 volt booster battery can be connected in parallel (B) with battery(ies) on the unit to aid in cold weather starting. ALWAYS use heavy-duty jumper cables.

Series:

- Amps = Same as single battery
- Volts = Twice as a single battery

Parallel:

- Amps = Twice as a single battery
- Volts = Same as a single battery

CAUTION: Gas given off by battery is explosive. Keep sparks and flames away from battery. Before connecting or disconnecting a battery charger, turn charger off. Make last connection and first disconnection at a point away from battery. Always connect **NEGATIVE (—)** cable last and disconnect this cable first.

IMPORTANT: Be sure that polarity is correct before making connections. Reversed polarity will damage electrical system. Always connect positive to positive and negative to ground. Always use 12 volt booster battery for 12 volt electrical systems and 24 volt booster battery(ies) for 24 volt electrical systems.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**


1. Connect booster battery or batteries to produce the required system voltage for your engine application.

NOTE: To avoid sparks, **DO NOT** allow the free ends of jumper cables to touch the engine.

2. Connect one end of jumper cable to the **POSITIVE (+)** post of the booster battery.
3. Connect the other end of the jumper cable to the **POSITIVE (+)** post of battery connected to starter.



Exploding Battery

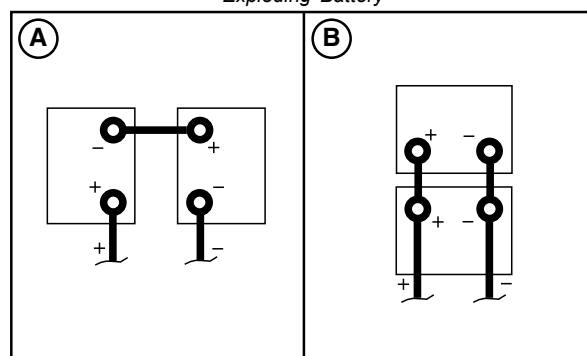

A—Series

B—Parallel

4. Connect one end of the other jumper cable to the **NEGATIVE (—)** post of the booster battery.
5. ALWAYS complete the hookup by making the last connection of the **NEGATIVE (—)** cable to a good ground on the engine frame and away from the battery(ies).
6. Start the engine. Disconnect jumper cables immediately after engine starts. Disconnect **NEGATIVE (—)** cable first.

RG, RG34710, 7556 -19-17DEC13-1/1

TS204 —UN—15APR13

RG24885 —UN—17DEC13

Lubrication and Maintenance

Required Emission-Related Information

Service Provider

A qualified repair shop or person of the owner's choosing may maintain, replace, or repair emission control devices and systems with original or equivalent replacement parts. However, warranty, recall, and all other services paid for by John Deere must be performed at an authorized John Deere service center.


DX,EMISSIONS,REQINFO -19-12JUN15-1/1

Observe Service Intervals

Using hour meter (A) on diagnostic gauge as a guide, perform all services at the hourly intervals indicated on following pages. At each scheduled maintenance interval, perform all previous maintenance operations in addition to the ones specified. Keep a record of hourly intervals and services performed, using charts provided in Lubrication and Maintenance Records section.

IMPORTANT: Recommended service intervals are for normal operating conditions. Perform maintenance at interval which occurs first, for example, either at 500 hours of operation OR every 12 months. Service MORE OFTEN if engine is operated under adverse conditions. Neglecting maintenance can result in failures or permanent damage to the engine.

A—Hour Meter

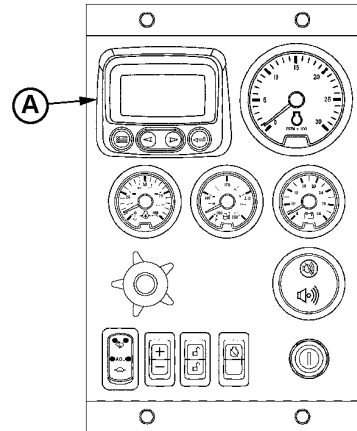

Hour Meter On Panel

OURGP12,0000136 -19-11OCT06-1/1

RG13728—UN—11NOV04

Use Correct Fuels, Lubricants, and Coolant

IMPORTANT: Use only fuels, lubricants, and coolants meeting specifications outlined in Fuels, Lubricants, and Coolant section when servicing your John Deere Engine.

Consult your John Deere engine distributor, servicing dealer or your nearest John Deere Parts Network for recommended fuels, lubricants, and coolant. Also available are necessary additives for use when operating engines in tropical, arctic, or any other adverse conditions.



John Deere Parts Network

RG,RG34710,7558 -19-12SEP06-1/1

TS100—UN—23AUG88

Lubrication and Maintenance Service Interval Chart—Industrial Unit and Generator (Prime Power)

Item	Lubrication and Maintenance Service Intervals				
	Daily	500 Hours of Operation/or Every 12 Months	2000 Hours of Operation/or Every 24 Months	2500 Hours of Operation	As Required
Check Engine Oil and Coolant Level	•				
Check Fuel Filter/Water Separator Bowl	•				
Check Air Cleaner Dust Unloader Valve & Restriction Indicator Gauge ^a	•				
Visual Walkaround Inspection	•				
Service Fire Extinguisher		•			
Service Battery		•			
Change Engine Oil and Replace Oil Filter ^{b,c}		•			
Check Coolant Pump Weep Hole Foam Filter		•			
Replace Fuel Filters/Clean Water Separator ^d		•			
Check Engine Speeds		•			
Check Engine Mounts		•			
Clean Crankcase Vent Hose and Valve		•			
Check Air Intake Hoses, Connections, & System		•			
Check Engine Ground Connection		•			
Check Automatic Belt Tensioners and Belt Wear		•			
Check Cooling System		•			
Coolant Solution Analysis; Add SCAs as Required		•			
Pressure Test Cooling System		•			
Check Crankshaft Vibration Damper ^e			•		
Flush and Refill Cooling System ^f			•		
Test Thermostats			•		
Adjust Engine Valve Clearance & EUI Preload ^g				•	
Replace Air Cleaner Elements					•
Bleed Fuel System					•
Replace Alternator and Fan Belts					•
Check Fuses					•
Check Air Compressors (If Equipped)					•
Check Rear Power Take-Off (PTO) (If Equipped)					•

^a Replace primary air cleaner element when restriction indicator shows a vacuum of 625 mm (25 in) H₂O.

^b During engine break-in, change the oil and filter for the first time after 100 hours of operation (maximum).

^c Service intervals depend on sulfur content of the diesel fuel, oil pan capacity, and the oil and filter used. (See DIESEL ENGINE OIL AND FILTER SERVICE INTERVALS, in Fuels, Lubricants, and Coolant Section.)

^d Replace fuel filters when audible alarm sounds and trouble codes indicate plugged fuel filter (low fuel pressure). If no alarm sounds during a 12 month interval, replace fuel filters at that time, or after every 500 hours of operation.

^e Replace crankshaft damper at 4500 hours or 60 months, whichever occurs first.

^f If John Deere COOL-GARD is used, the flushing interval may be extended to 3000 hours of operation or every 36 months. If John Deere COOL-GARD is used and the coolant is tested annually AND additives are replenished as needed by adding a supplemental coolant additive, the flushing interval may be extended to 5000 hours of operation or every 60 months, whichever occurs first.

^g This one-time adjustment is required after first 2500 hours of operation for all new and overhauled engines.

OURGP11,0000052 -19-02NOV15-1/1

Lubrication and Maintenance Service Interval Chart—Generator (Standby) Applications

NOTE: The service intervals in the Lubrication and Maintenance sections that follow reflect standard

engines. Use service intervals listed below for generator (standby) applications. Match service items below to titles in Lubrication and Maintenance sections for procedures.

Item	Lubrication and Maintenance Service Intervals				
	Every 2 Weeks	500 Hours of Operation/or Every 12 Months	2000 Hours of Operation/or Every 24 Months	2500 Hours of Operation	As Required
Operate Engine at Rated Speed and 50%—70% Load a Minimum of 30 Minutes	•				
Check Engine Oil and Coolant Level	•				
Check Fuel Filter/Water Separator Bowl	•				
Check Air Cleaner Dust Unloader Valve & Restriction Indicator Gauge ^a	•				
Visual Walkaround Inspection	•				
Service Fire Extinguisher		•			
Service Battery		•			
Change Engine Oil and Replace Oil Filter ^{b,c}		•			
Check Coolant Pump Weep Hole Foam Filter		•			
Check Engine Mounts		•			
Replace Fuel Filters/Clean Water Separator ^d		•			
Check Engine Ground Connection		•			
Clean Crankcase Vent Hose and Valve		•			
Check Air Intake Hoses, Connections, & System		•			
Check Engine Ground Connection		•			
Check Automatic Belt Tensioners and Belt Wear		•			
Check Cooling System		•			
Coolant Solution Analysis; Add SCAs as Required		•			
Pressure Test Cooling System		•			
Check Crankshaft Vibration Damper ^e			•		
Flush and Refill Cooling System ^f			•		
Test Thermostats			•		
Adjust Engine Valve Clearance and EUI Preload ^g				•	
Replace Air Cleaner Elements					•
Bleed Fuel System					•
Replace Alternator and Fan Belts					•
Check Fuses					•
Check Air Compressors (If Equipped)					•
Check Rear Power Take-Off (PTO) (If Equipped)					•

^a Replace primary air cleaner element when restriction indicator shows a vacuum of 625 mm (25 in) H₂O.

^b During engine break-in, change the oil and filter for the first time after 100 hours of operation (maximum).

^c Service intervals depend on sulfur content of the diesel fuel, oil pan capacity, and the oil and filter used. (See DIESEL ENGINE OIL AND FILTER SERVICE INTERVALS, in Fuels, Lubricants, and Coolant Section.)

^d Replace fuel filters when audible alarm sounds and trouble codes indicate plugged fuel filter (low fuel pressure). If no alarm sounds during a 12 month interval, replace fuel filters at that time, or after every 500 hours of operation.

^e Replace crankshaft damper at 4500 hours or 60 months, whichever occurs first.

Continued on next page

OURGP11,0000053 -19-02NOV15-1/2

Lubrication and Maintenance

^f If John Deere COOL-GARD is used, the flushing interval may be extended to 3000 hours of operation or every 36 months. If John Deere COOL-GARD is used and the coolant is tested annually AND additives are replenished as needed by adding a supplemental coolant additive, the flushing interval may be extended to 5000 hours of operation or every 60 months, whichever occurs first.

^g This one-time adjustment is required after first 2500 hours of operation for all new and overhauled engines.

OURGP11,0000053 -19-02NOV15-2/2

Lubrication & Maintenance — Daily

Daily Prestarting Checks

Do the following BEFORE STARTING THE ENGINE for the first time each day:

IMPORTANT: DO NOT add makeup oil until the oil level is **BELOW** the ADD mark.


1. Check engine oil level on dipstick. Add as required, using seasonal viscosity grade oil. (See DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant section for oil specifications.)

Oil may be added at timing gear cover filler cap (A) or oil pan filler adapter ports (B), if equipped.


IMPORTANT: DO NOT fill above the top of crosshatch area (C) on the dipstick. Oil levels anywhere within crosshatch are considered in the acceptable operating range.

A—Timing Cover Filler Cap
B—Oil Pan Filler Adapter Port


C—Crosshatch Area of Dipstick

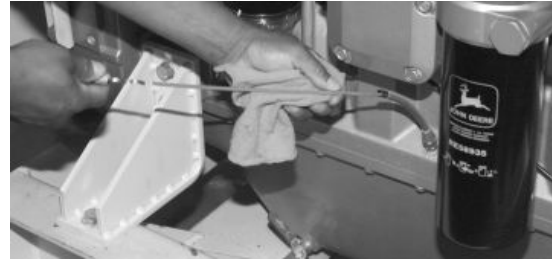


Check Engine Oil

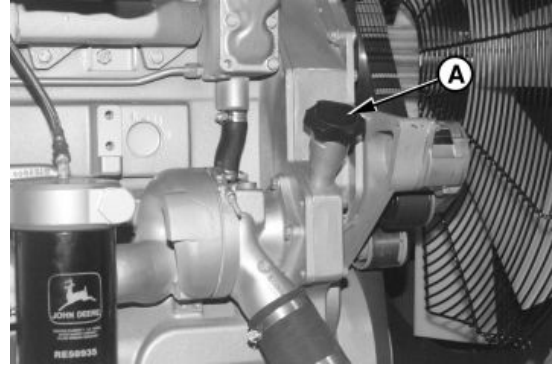

Timing Gear Cover Filler Cap

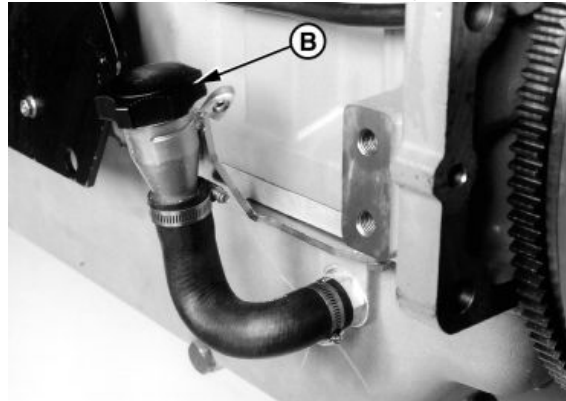

Oil Pan Filler Adapter Ports

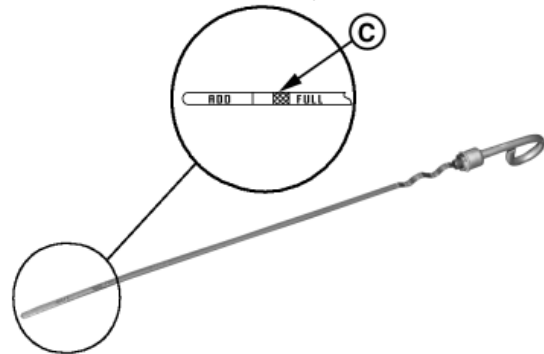

Do Not Fill Above Top Mark

Continued on next page

RG, RG34710, 7561 -19-12SEP06-1/4

RG9924 —UN—17NOV99

RG8724 —UN—03SEP99

RG8751 —UN—03SEP99

RG8707B —UN—03SEP99

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Only remove filler cap when engine is cold or when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.


2. Check the coolant level when engine is cold. Coolant level should be at bottom of filler neck. Fill radiator (A) with proper coolant solution if level is low. (See ADDING COOLANT in Service as Required section.) Check overall cooling system for leaks.

Refer to your vehicle's operator's manual for recommendations for non-John Deere supplied accessories.

A—Radiator



High-Pressure Fluids

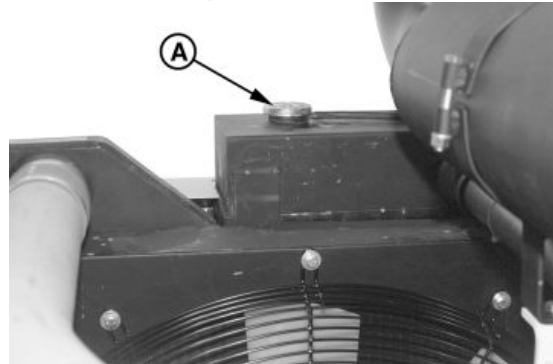

Fill Radiator

Continued on next page

RG, RG34710, 7561 -19-12SEP06-2/4

TS281 —UN—15APR13

RG8735A —UN—03SEP99

- RG, RG34710, 7561 -19-12SEP06-3/4

RG, RG34710, 7561 -19-12SEP06-4/4

Lubrication & Maintenance — 500 Hours/12 Months

Servicing Fire Extinguisher

A fire extinguisher (A) is available from your authorized servicing dealer or engine distributor.

Read and follow the instructions which are packaged with it. The extinguisher should be inspected at least every 500 hours of engine operation or every 12 months. Once extinguisher is operated, no matter how long, it must be recharged. Keep record of inspections on the tag which comes with the extinguisher instruction booklet.

A—Fire Extinguisher



Fire Extinguisher

OURGP12,00000B9 -19-12SEP06-1/1

RW4918 —UN—15DEC88

Servicing Battery

CAUTION: Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded **NEGATIVE (—)** battery clamp first and replace it last.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

1. On regular batteries, check electrolyte level. Fill each cell to bottom of filler neck with distilled water.

NOTE: Low-maintenance or maintenance-free batteries should require little additional service. However, electrolyte level can be checked by cutting the center section of decal on dash-line, and removing cell plugs. If necessary, add clean, soft water to bring level to bottom of filler neck.

2. Keep batteries clean by wiping them with a damp cloth. Keep all connections clean and tight. Remove



Exploding Battery

any corrosion, and wash terminals with a solution of 1 part baking soda and 4 parts water. Tighten all connections securely.

NOTE: Coat battery terminals and connectors with a mixture of petroleum jelly and baking soda to retard corrosion.

3. Keep battery fully charged, especially during cold weather. If a battery charger is used, turn charger off before connecting charger to battery(ies). Attach **POSITIVE (+)** battery charger lead to **POSITIVE (+)** battery post. Then attach **NEGATIVE (—)** battery charger lead to a good ground.

Continued on next page

OURGP11,0000054 -19-16SEP13-1/2

TS204 —UN—15APR13

⚠ CAUTION: Sulfuric acid in battery electrolyte is poisonous. It is strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid the hazard by:

1. Filling batteries in a well-ventilated area.
2. Wearing eye protection and rubber gloves.
3. Avoiding breathing fumes when electrolyte is added.
4. Avoiding spilling or dripping electrolyte.
5. Using proper jump start procedure.

If you spill acid on yourself:

1. Flush your skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush your eyes with water for 10—15 minutes. Get medical attention immediately.

If acid is swallowed:

1. Drink large amounts of water or milk.
2. Then drink milk of magnesia, beaten eggs, or vegetable oil.
3. Get medical attention immediately.

In freezing weather, run engine at least 30 minutes to ensure thorough mixing after adding water to battery.


Replacement battery(ies) must meet or exceed the following recommended capacities¹ at —18°C (0°F):

Specification

12-Volt System—Minimum Battery Capacity—Cold Cranking
 Amps.....1900 Minimum
 Reserve Capacity (Minutes).....350 Minimum

24-Volt System—Minimum Battery Capacity—Cold Cranking
 Amps.....925 Minimum
 Reserve Capacity (Minutes).....275 Minimum

¹ Total recommended capacity based on batteries connected in series or parallel.

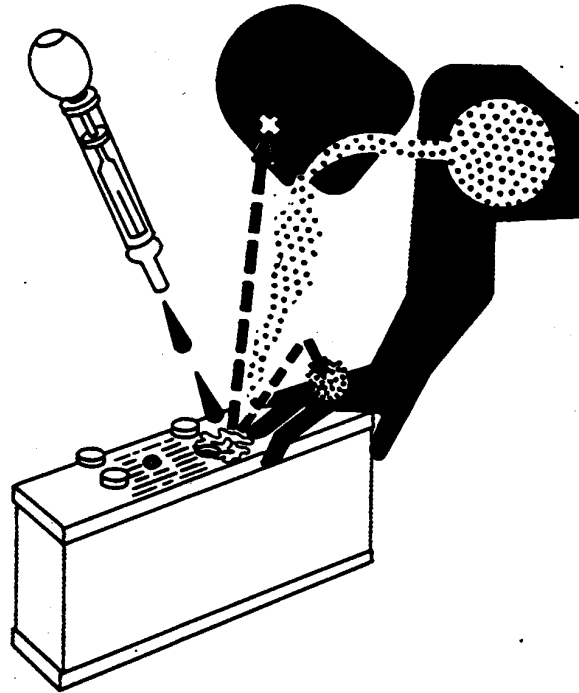

Sulfuric Acid

TS203 —UN—23AUG88

OURGP11,0000054 -19-16SEP13-2/2

Changing Engine Oil and Replacing Oil Filter

IMPORTANT: Changing engine oil and filter every 500 hours or 12 months depends on the following requirements:

- Engine equipped with an extended drain interval oil pan.
- Use of diesel fuel with sulfur content less than 0.50% (5000 ppm) is strongly recommended.
- Use of premium oil John Deere PLUS-50, ACEA E7 or ACEA E6.
- Perform engine oil analysis to determine the actual extended service life of ACEA E7 and ACEA E6 oils.
- Use of the approved John Deere oil filter.

The oil and filter change interval is reduced if ANY of the above listed requirements are not followed. (Refer to DIESEL ENGINE OIL AND FILTER SERVICE INTERVALS, in Fuels, Lubricants, and Coolant Section.)

NOTE: During **break-in**, change engine oil and filter for the first time before **100** hours maximum of operation.

OILSCAN® and OILSCAN PLUS® are John Deere sampling programs to help you monitor machine performance and identify potential problems before they cause serious damage. OILSCAN™ and OILSCAN PLUS™ kits are available from your John Deere dealer. Oil samples should be taken prior to the oil change. Refer to instructions provided with kit.

CAUTION: Metal surfaces of engine may be hot to the touch after shutdown.


Change engine oil as follows:

NOTE: Drain plug location may vary, depending on the application.

1. Run engine approximately 5 minutes to warm up oil. Shut off engine.
2. Remove oil pan drain plug (A).
3. Drain crankcase oil from engine while warm.

NOTE: For more complete draining of oil, wait to install oil pan drain plug until filter oil is drained back (see following procedure).

OILSCAN is a trademark of Deere & Company
OILSCAN PLUS is a trademark of Deere & Company

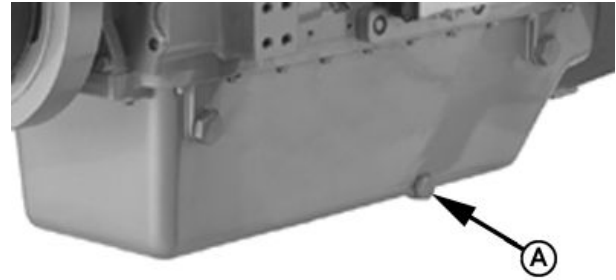

Engine Oil Drain Plug

RG13884 — UN — 19MAY05


Continued on next page

OURGP11,0000055 -19-13OCT06-1/3

4. Remove and discard oil filter element using a suitable filter wrench (A).
5. Remove oil filter packing and clean filter mounting pad.

IMPORTANT: Filtration of oils is critical to proper lubrication. Always change filter regularly. Use filter meeting John Deere performance specifications.

6. Oil new packing and install new filter element onto filter housing. Hand tighten element according to values printed on filter element. If values are not provided, tighten element approximately 1/2—3/4 turn after packing contacts filter housing. **DO NOT** overtighten filter element.

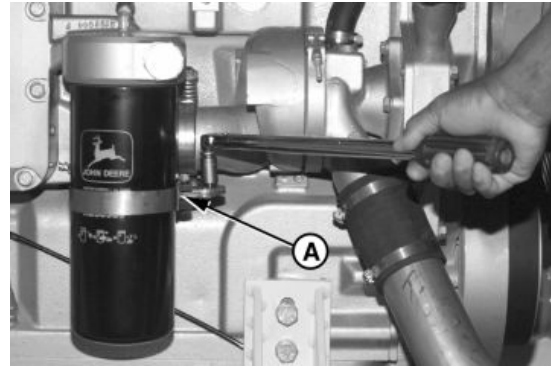

Remove Filter Element Using Wrench

A—Filter Wrench

RG8709B —UN—03SEP99

OURGP11,0000055 -19-13OCT06-2/3

7. Inspect drain plug O-ring. Replace if necessary.
8. Install oil pan drain plug. Torque plug to specifications.

Specification

Oil drain plug (1-1/4 in.)—Torque.....	46 N·m (34 lb-ft)
Oil drain plug (1-1/2 in.)—Torque.....	64 N·m (47 lb-ft)


9. Fill engine crankcase with correct John Deere engine oil through timing gear cover fill port (A) or oil pan fill port (B) depending on engine application. (See DIESEL ENGINE OIL in Fuels, Lubricants, and Coolant section for determining correct engine oil.)

To determine the correct oil fill quantity for your engine, see ENGINE CRANKCASE OIL FILL QUANTITIES in the Specifications section.


NOTE: Crankcase oil capacity may vary slightly. **ALWAYS** fill crankcase to full mark or within crosshatch on dipstick, whichever is present. **DO NOT** overfill.

IMPORTANT: Immediately after completing any oil change, crank engine for 30 seconds without permitting engine to start. This will help ensure adequate lubrication to engine components before engine starts.

10. Start engine and run to check for possible leaks.
11. Stop engine and check oil level after 10 minutes. Oil level reading should be within crosshatch of dipstick.

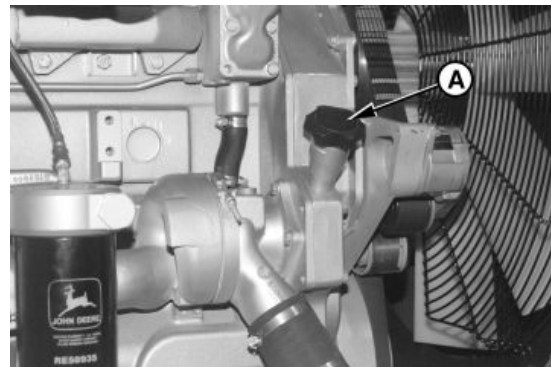

Timing Gear Cover Fill Port

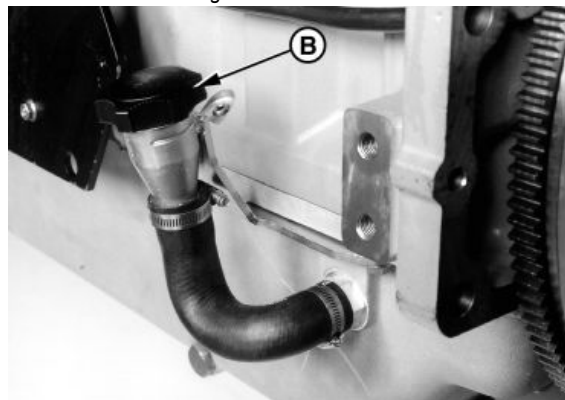

Oil Pan Adapter Fill Port

A—Timing Cover Fill Port

B—Oil Pan Adapter Fill Port

RG8724 —UN—03SEP99

RG8751 —UN—03SEP99

OURGP11,0000055 -19-13OCT06-3/3

Visually Inspecting Coolant Pump


Inspect Weep Hole

1. Remove foam filter (if equipped) from coolant pump weep hole (A) as shown.
2. Inspect weep hole for oil or coolant leakage.

- Oil leakage indicates a damaged rear seal.
- Coolant leakage indicates a damaged front seal.

Repair or replace complete coolant pump assembly if leakage is detected.

A—Weep Hole

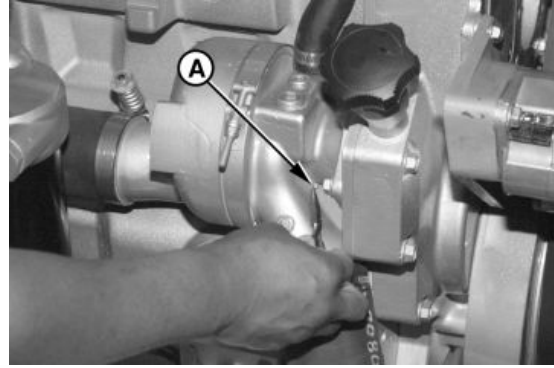

Coolant Pump Weep Hole

OURGP11,0000080 -19-11OCT06-1/1

RG8718A —UN—12JUL99

Replacing Fuel Filters/Cleaning Water Separator (Earlier Engines)


CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting fuel or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.


IMPORTANT: Primary fuel filter (A) and final fuel filter (B) must both be replaced whenever audible alarm sounds and trouble code indicates plugged filter (fuel supply pressure moderately/extremely low). Replace both fuel filters at 12 month intervals (or every 500 hours) if no alarm/code indications occur.

A—Primary Fuel Filter

B—Final Fuel Filter

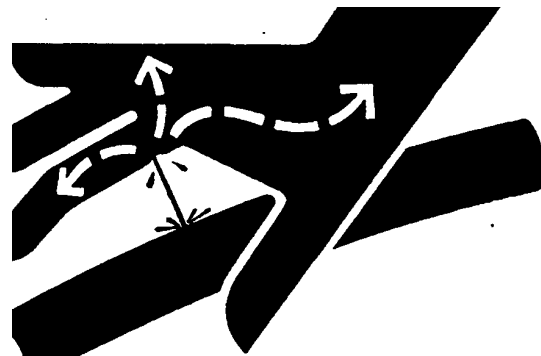

High Pressure Fluids

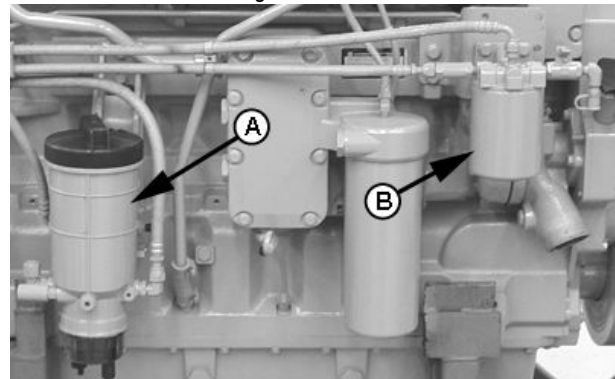

Primary and Final Fuel Filters (Earlier Engines)

Continued on next page

OURGP12,000011B -19-26FEB08-1/7

X9811 —UN—23AUG88

RG13899 —UN—14JUN05

Remove Primary Fuel Filter Element (Earlier Engines)

CAUTION: If engine has been running, engine and fuel filter housing may be hot.

1. Close fuel shut-off valve (if equipped).
2. Clean entire area surrounding fuel filter assembly to keep debris from entering fuel system.
3. Remove cap from fuel filter housing by turning counterclockwise by hand.




Remove Primary Fuel Filter

OURGP12,000011B -19-26FEB08-2/7

RG10302 —UN—27MAY04

4. Relieve vacuum in filter housing by operating hand primer until fuel filter “pops-up”. If filter does not “pop-up” after about 30 strokes of primer, a small screwdriver may be used as shown to **carefully** pry under filter flange to relieve vacuum in the housing.

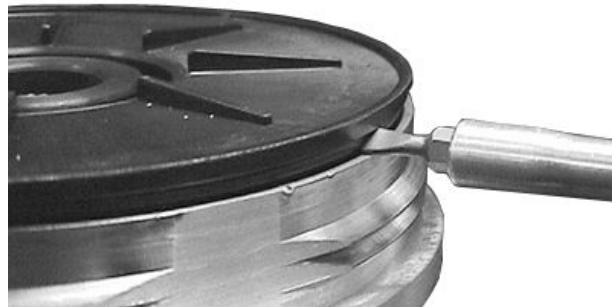

Relieve Vacuum

OURGP12,000011B -19-26FEB08-3/7

RG10303 —UN—27MAY04

5. Lift filter element up in housing until filter seal clears inlet tube inside housing. Continue to hold filter suspended straight up in top of housing to drain fuel from filter.
6. Allow fuel to drain completely from filter into housing. Carefully begin rotating filter from housing as shown until completely upside down to ensure minimum leakage from fuel filter.
7. Place filter in container suitable for diesel fuel.

IMPORTANT: Reusing fuel filter once removed from housing may result in trapped air in the filter. This may cause fuel to overflow from the filter housing during insertion of filter element, and/or cause the engine to stall and not restart without additional system purging.



Remove Filter Element

OURGP12,000011B -19-26FEB08-4/7

RG10304 —UN—02SEP99

Continued on next page


Remove And Clean Water Separator Bowl (Earlier Engines)

1. Disconnect wiring connector from water-in-fuel sensor.
2. Drain fuel from separator bowl.
3. Position a strap wrench (A) as close as possible to top edge of separator bowl. While applying pressure with strap wrench, grip bowl and twist with other hand as shown to remove bowl.
4. Clean separator bowl and dry it.
5. Install separator bowl and tighten by hand until seal makes contact. Hand tighten to the following specification:

Specification

Water Separator	
Bowl-To-Filter	
Housing—Torque.....	5 N·m (44 lb-in.)

6. Connect wiring to water-in-fuel sensor.

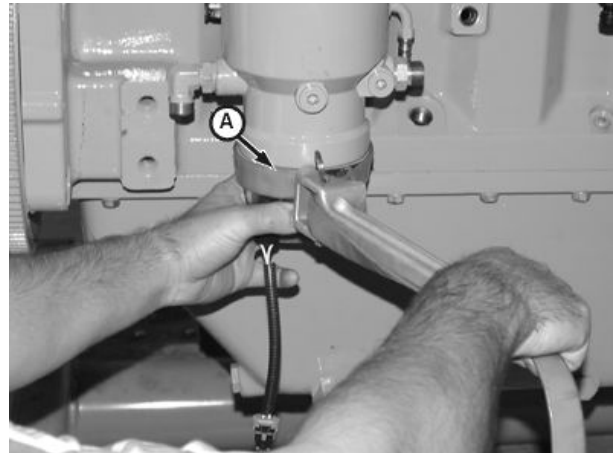

Removing Water Separator Bowl

A—Strap Wrench

RG10351—UN—13SEP99

OURGP12.000011B -19-26FEB08-5/7


Install New Primary Fuel Filter Element (Earlier Engines)

1. Check to ensure that the fuel level in the filter housing is between the MIN (B) and MAX (A) fuel levels indicated on the outside of the housing and on the corresponding marks on the center tube. If the fuel is below the MIN level, then carefully open the fuel supply shut-off valve a small amount (if equipped) to add fuel.

Operate the hand primer to add more fuel if required or if the unit is not equipped with a fuel supply shut-off valve.

IMPORTANT: Fuel level below the MIN indication may result in trapped air in the filter causing the engine to stall and not restart without additional system purging. Fuel level above the MAX indication may cause fuel to overflow from the filter housing during insertion of filter element.

2. Insert new (dry) fuel filter into filter housing.
3. Reinstall fuel filter cap and tighten to “handtight” condition.

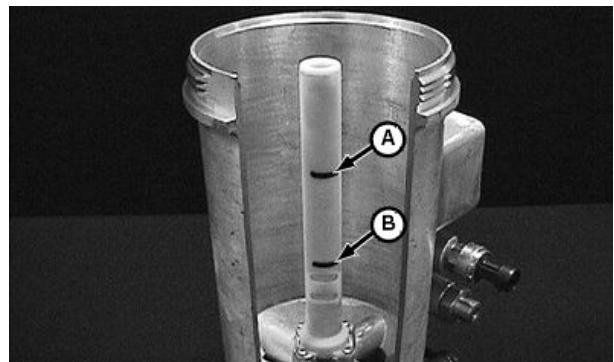

Fuel Level In Filter Housing

A—Maximum Level (2 1/2
Inches from Top of
Housing)

B—Minimum Level (5 Inches
from Top of Housing)

RG10305—UN—02SEP99

Continued on next page


OURGP12.000011B -19-26FEB08-6/7

Replace Final Fuel Filter (Earlier Engines)

IMPORTANT: Always replace both filters at the same time.

1. Clean entire area surrounding fuel filter assembly to keep debris from entering fuel system.
2. Remove final fuel filter using a suitable filter wrench.
3. Lubricate packing on new final fuel filter with diesel fuel, and install filter onto base. Tighten 1/2 turn after packing contacts base.
4. Open fuel supply shut-off valve (if equipped).
5. Restart engine and allow to run for five minutes minimum.

NOTE: Under normal conditions, fuel system bleeding is not required. Priming system with hand primer is normally sufficient. If necessary to bleed the system, see **BLEEDING FUEL SYSTEM in Service as Required** section.

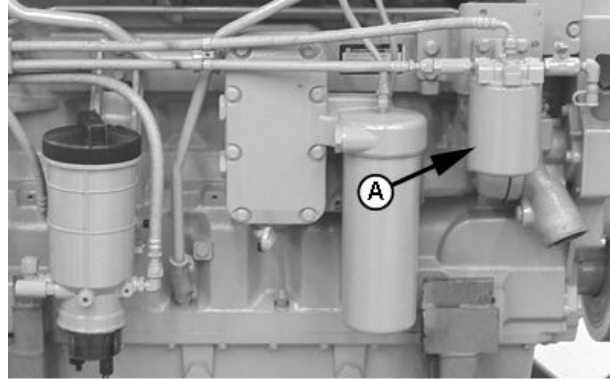

Final Fuel Filter (Earlier Engines)

A—Final Fuel Filter

RG13900 —UN—14JUN05

OURGP12,000011B -19-26FEB08-7/7

Replacing Fuel Filters/Cleaning Water Separator (Later Engines)

CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting fuel or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.


IMPORTANT: Primary fuel filter (B) and final fuel filter (A) must both be replaced whenever audible alarm sounds and trouble code indicates plugged filter (fuel supply pressure moderately/extremely low). Replace both fuel filters at 12 month intervals (or every 500 hours) if no alarm/code indications occur.

NOTE: The “ship away” final fuel filter that the engine is shipped with may be shorter compared to the “service” final fuel filter. The shorter filter is required to provide clearance during manufacturing.


Remove Primary Fuel Filter (Later Engines)

CAUTION: If engine has been running, engine and fuel filter housing may be hot.

1. Close fuel shut-off valve (if equipped).
2. Clean entire area surrounding fuel filter assembly to keep debris from entering fuel system.

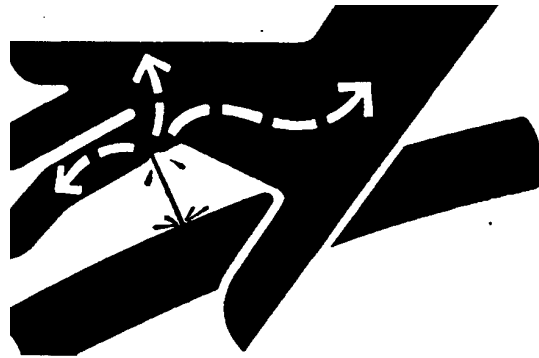

High Pressure Fluids

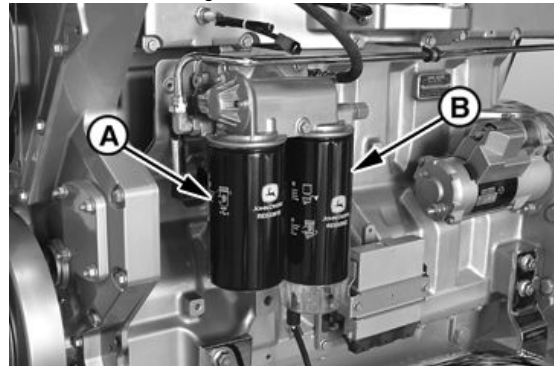

A—Final Fuel Filter

B—Primary Fuel Filter

3. Disconnect wiring connector from water-in-fuel sensor.
4. Drain fuel from separator bowl into suitable container.
5. Remove primary fuel filter by turning counterclockwise by hand or using suitable filter wrench.

Continued on next page

BK34394,00000E1 -19-29FEB08-1/2

X9811 —UN—23AUG88

RG15746 —UN—25FEB08

Remove And Clean Water Separator Bowl (Later Engines)

1. Remove water separator bowl from primary fuel filter by turning counterclockwise by hand or using a suitable strap wrench.
2. Clean separator bowl and dry it.
3. Lubricate new water separator bowl seal with thin film of oil or fuel, and hand tighten to primary fuel filter.

Specification

Water Separator

Bowl-To-Primary Fuel

Filter—Torque..... Hand Tighten to Primary Fuel Filter

Install New Primary Fuel Filter (Later Engines)

1. Lubricate new primary fuel filter seal with thin film of oil or fuel.
2. Screw filter into header by turning clockwise until the seal contacts the header.
3. When seal contacts the header, tighten clockwise to the following specification:

Specification

Primary Fuel


Filter—Torque..... Seal Contact + 1/2 to 3/4
Turn, Lubricated with Oil or Fuel

4. Connect water-in-fuel sensor connector.

Replace Final Fuel Filter (Later Engines)

IMPORTANT: Always replace both filters at the same time.

1. Clean entire area surrounding fuel filter assembly to keep debris from entering fuel system.
2. Remove final fuel filter using a suitable filter wrench.
3. Lubricate new final fuel filter seal with thin film of oil or fuel, and screw filter into header by turning clockwise until the seal contacts the header.
4. When seal contacts the header, tighten clockwise to the following specification:

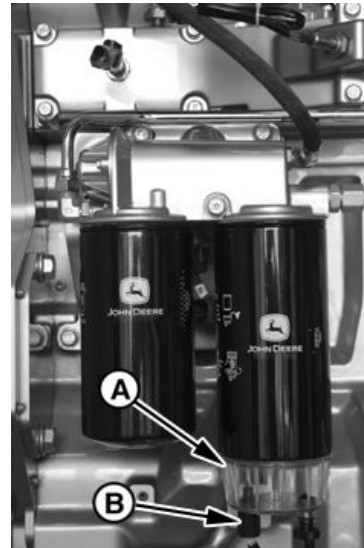

A—Water Separator Bowl

B—Water-In-Fuel Sensor

Specification

Final Fuel

Filter—Torque..... Seal Contact + 1
Turn, Lubricated with Oil or Fuel

5. Open fuel supply shut-off valve (if equipped).
6. Turn ignition key to the ON position for 120 seconds to allow the system to prime itself.
7. Restart engine and allow to run for five minutes minimum.

NOTE: Under normal conditions, fuel system bleeding is not required. The auto prime feature is normally sufficient. If necessary to bleed the system, see BLEEDING FUEL SYSTEM in Service as Required section.


BK34394,00000E1 -19-29FEB08-2/2

RG15747 —UN—26FEB08

Checking and Adjusting Engine Speeds

Use tachometer on the diagnostic gauge (A) to verify engine speeds. (Refer to **ENGINE POWER RATINGS AND FUEL SYSTEM SPECIFICATIONS** in Specifications Section later in this manual for engine speed specifications.) If engine speed adjustment is required, see your authorized servicing dealer or engine distributor.

A—Diagnostic Gauge

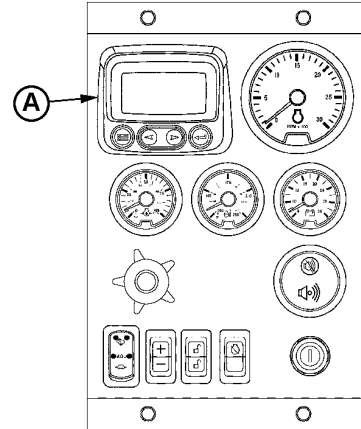

Using Tachometer to Check Engine Speeds

OURGP12,0000090 -19-12SEP06-1/1


RG13728 —UN—11NOV04

Checking Engine Mounts

Engine mounting is the responsibility of the vehicle or generator manufacturer. Follow manufacturer's guidelines for mounting specifications.

IMPORTANT: Use only Grade SAE 8 or higher grade of hardware for engine mounting.

1. Check the engine mounting brackets (A), vibration isolators, and mounting bolts on support frame and engine block for tightness. Tighten as necessary.
2. Inspect overall condition of vibration isolators, if equipped. Replace isolators, as necessary, if rubber has deteriorated or mounts have collapsed.

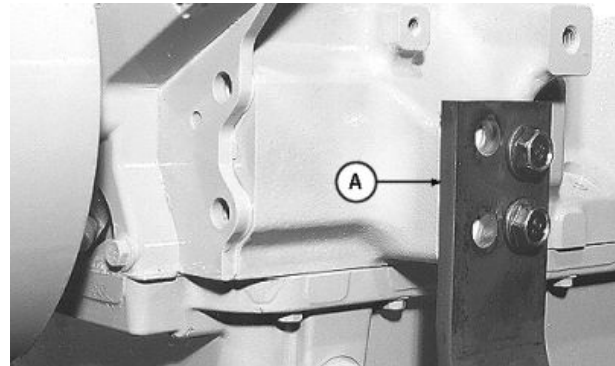

Engine Mounting

A—Mounting Bracket


OURGP11,0000110 -19-11OCT06-1/1

RG9905 —UN—06JAN99

Checking Crankcase Vent Tube and Valve

1. Loosen clamp on crankcase vent hose (A).
2. Remove crankcase vent valve (not shown) from rocker arm cover.
3. Remove crankcase vent valve from crankcase vent hose and clean hose. Ensure hose is not plugged.
4. Shake crankcase vent valve. If free movement of valve is heard while shaking, valve can be reused. Replace valve if rattle is not heard.
5. Install the valve and vent hose. Attach valve with two screws. Tighten hose clamp securely.

A—Crankcase Vent Tube

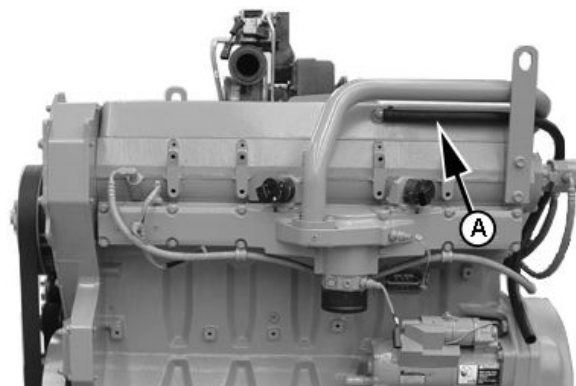

Crankcase Vent Tube

OURGP11,0000056 -19-11OCT06-1/1

RG14342 —UN—27JUL05

Checking Air Intake System

IMPORTANT: The air intake system must not leak. Any leak, no matter how small, may result in internal engine damage due to abrasive dirt and dust entering the intake system.

1. Inspect all intake hoses (piping) for cracks. Replace as necessary.
2. Check clamps on piping which connect the air cleaner to the engine. Tighten clamps as necessary. This will help prevent dirt from entering the air intake system through loose connections, causing internal engine damage.
3. If engine has a rubber dust unloader valve (A), inspect the valve on bottom of air cleaner for cracks or plugging. Replace as necessary.



Rubber Dust Unloader Valve

A—Dust Unloader Valve

RG8717A —UN—12JUL99

RG, RG34710, 7569 -19-16SEP13-1/2

4. Test air filter restriction indicator (B) for proper operation. Replace indicator as necessary.

IMPORTANT: ALWAYS REPLACE primary air cleaner element when air filter restriction indicator is torn or visibly dirty, or when it exceeds specifications or service interval. A clogged air cleaner element will cause excessive intake restriction and a reduced air supply to the engine.


5. Remove and inspect primary air cleaner element. Service as necessary. (See [Replacing Air Cleaner Filter Elements](#) in the Service As Required Section.)

If equipped with air intake restriction indicator gauge (B), check gauge and service air cleaner if it exceeds specifications.

Specification

Maximum Air Intake
Restriction—Vacuum.....25 in. (625 mm)
H₂O (6.25 kPa) (0.06 bar) (1.0 psi)

If not equipped with air filter restriction indicator, replace air cleaner elements at 500 hours or 12 months, whichever occurs first.

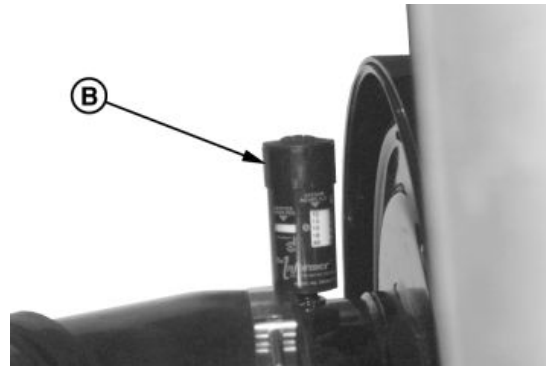

Air Restriction Indicator

B—Air Restriction Indicator

RG8719A —UN—12JUL99

RG, RG34710, 7569 -19-16SEP13-2/2

Check Engine Electrical Ground Connection

Check engine ground connection to ensure it is tight and clean. See [ELECTRICAL SYSTEM LAYOUT](#) in Troubleshooting Section for ground location.

This inspection is necessary to prevent electrical arc, which can result in engine damage.

OURGP11,0000111 -19-12SEP06-1/1

Checking Belt Tensioner Spring Tension and Belt Wear


Belt drive systems equipped with automatic (spring) belt tensioners cannot be adjusted or repaired. The automatic belt tensioners are designed to maintain proper belt tension over the life of the belt. If tensioner spring tension is not within specification, replace tensioner assembly.

Checking Belt Wear

The belt tensioner is designed to operate within the limit of arm movement provided by the cast stops (A and B) when correct belt length and geometry is used.

Visually inspect cast stops (A and B) on belt tensioner assembly.

If the tensioner stop on swing arm (A) is hitting the fixed stop (B), check mounting brackets (alternator, belt tensioner, idler pulley, etc.) and the belt length. Replace belt as needed (see [REPLACING FAN/ALTERNATOR V-BELTS](#) in *Service as Required* section).

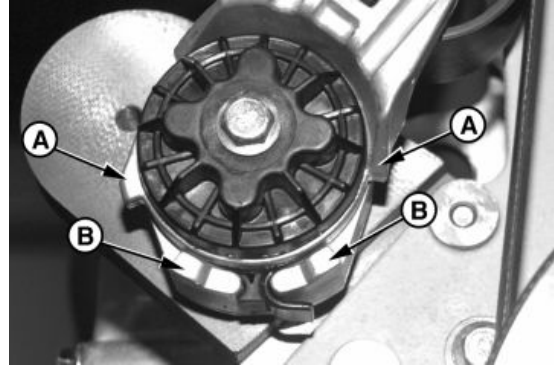

Upper Tensioner Shown, Lower Tensioner Similar

A—Swing Arm Cast Stops

B—Fixed Cast Stops

OURGP12.000013B -19-12SEP06-1/3

RG8742—UN—03SEP99

Checking Upper Tensioner Spring Tension


NOTE: While belt is loosened, inspect pulleys and bearings. Rotate and feel for hard turning or any unusual sounds. If pulleys or bearings need replacement, see your John Deere dealer.

A belt tension gauge will not give an accurate measure of the belt tension when automatic spring tensioner is used. Measure tensioner spring tension using a torque wrench and procedure outlined below:


1. Release tension on belt using a long-handled 1/2-in. drive tool in square hole in end of tensioner arm. Remove belt from pulleys.
2. Release tension on tensioner arm and remove drive tool.
3. Put a mark (A) on swing arm of tensioner as shown.
4. Measure 21 mm (0.83 in.) from first mark (A) and put a second mark (B) on tensioner mounting base.
5. Rotate the swing arm using a torque wrench until marks (A and B) are aligned.
6. Record torque wrench measurement and compare with specification below. Replace tensioner assembly as required.

Specification

Upper Spring
Tension—Torque..... 18–23 N·m (13–17 lb-ft)

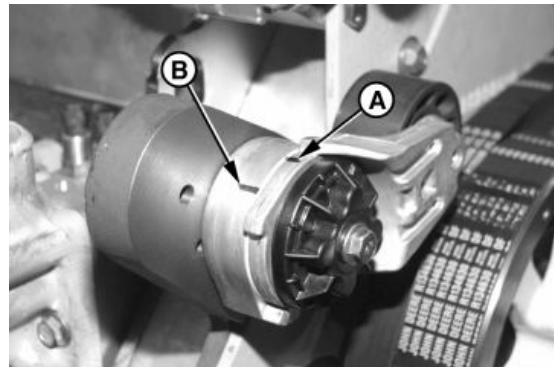

Marks on Tensioner

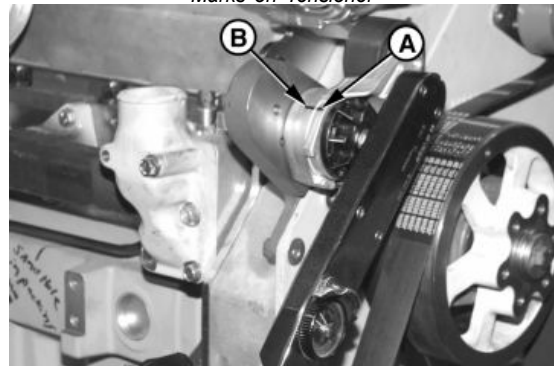

Align Marks

A—Mark on Swing Arm

B—Mark on Tensioner
Mounting Base

Continued on next page

OURGP12.000013B -19-12SEP06-2/3

RG8727—UN—10DEC97

RG8726—UN—10DEC97

Checking Lower Tensioner Spring Tension

A belt tension gauge will not give an accurate measure of the belt tension when automatic spring tensioner is used. Measure tensioner spring tension using a torque wrench and procedure outlined below:


1. Release tension on belt using a long-handled 3/4-in. drive tool in tensioner arm. Remove belt from pulleys.
2. Release tension on tensioner arm and remove drive tool.
3. Put a mark (A) on swing arm of tensioner as shown.
4. Measure 25 mm (1.0 in.) from first mark (A) and put a second mark (B) on tensioner mounting base.
5. Rotate the swing arm using a torque wrench until marks (A and B) are aligned.
6. Record torque wrench measurement and compare with specification below. Replace tensioner assembly as required.

Specification


Lower Spring
Tension—Torque..... 81–99 N·m (60–73 lb-ft)

A—Mark on Swing Arm

B—Mark on Tensioner
Mounting Base

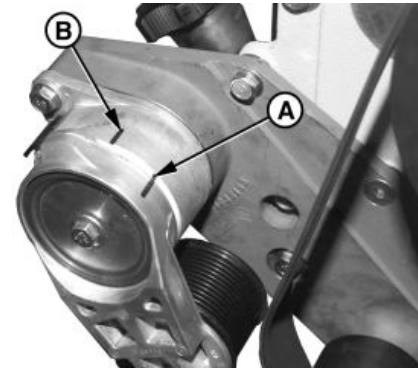

Marks on Tensioner

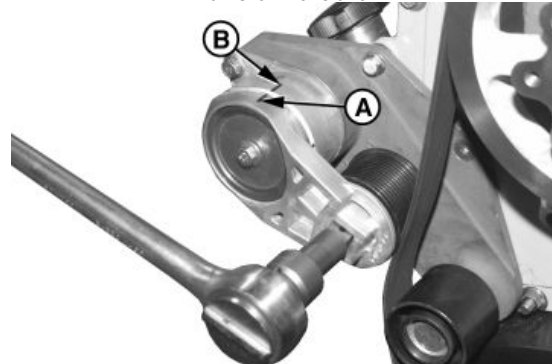

Align Marks

RG8728 —UN—10DEC97

RG8729 —UN—10DEC97

OURGP12,000013B -19-12SEP06-3/3


Checking Cooling System

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: Air must be expelled from cooling system when system is refilled. Loosen temperature sending unit fitting or plug in thermostat housing to allow air to escape when filling system. Retighten fitting or plug when all the air has been expelled. Cooling system must be free of air by time engine coolant temperature reaches 80°C (176°F) or damage to EGR cooler may result.

1. Visually check entire cooling system for leaks. Tighten all clamps securely.

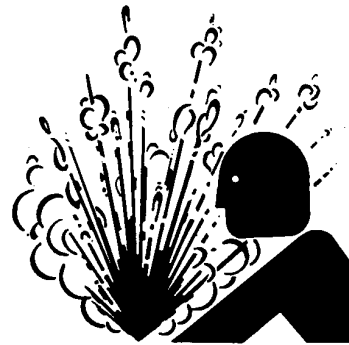

High-Pressure Fluids

2. Thoroughly inspect all cooling system hoses for hard, flimsy, or cracked condition. Replace hoses if any of the above conditions are found.

TS281 —UN—15APR13

OURGP11,0000057 -19-12SEP06-1/1

Testing Diesel Engine Coolant

Maintaining adequate concentrations of glycol and inhibiting additives in the coolant is critical to protect the engine and cooling system against freezing, corrosion, and cylinder liner erosion and pitting.

Test the coolant solution at intervals of 12 months or less and whenever excessive coolant is lost through leaks or overheating.

Coolant Test Strips

Coolant test strips are available from your John Deere dealer. These test strips provide a simple, effective method to check the freeze point and additive levels of your engine coolant.

When Using John Deere COOL-GARD II

John Deere COOL-GARD II Premix™, COOL-GARD II PG Premix and COOL-GARD II Concentrate are maintenance free coolants for up to six years or 6000 hours of operation, provided that the cooling system is topped off using only John Deere COOL-GARD II Premix or COOL-GARD II PG premix. Test the coolant condition annually with coolant test strips designed for use with John Deere COOL-GARD II coolants. If the test strip chart indicates that additive is required, add John Deere COOL-GARD II Coolant Extender as directed.

COOL-GARD is a trademark of Deere & Company

Add only the recommended concentration of John Deere COOL-GARD II Coolant Extender. DO NOT add more than the recommended amount.

When Using Nitrite-Containing Coolants

Compare the test strip results to the supplemental coolant additive (SCA) chart to determine the amount of inhibiting additives in your coolant and whether more John Deere Liquid Coolant Conditioner should be added.

Add only the recommended concentration of John Deere Liquid Coolant Conditioner. DO NOT add more than the recommended amount.


Coolant Analysis

For a more thorough evaluation of your coolant, perform a coolant analysis. The coolant analysis can provide critical data such as freezing point, antifreeze level, pH, alkalinity, nitrite content (cavitation control additive), molybdate content (rust inhibitor additive), silicate content, corrosion metals, and visual assessment.


Contact your John Deere dealer for more information on coolant analysis.

DX,COOL9 -19-11APR11-1/1

Replenishing Supplemental Coolant Additives (SCAs) Between Coolant Changes

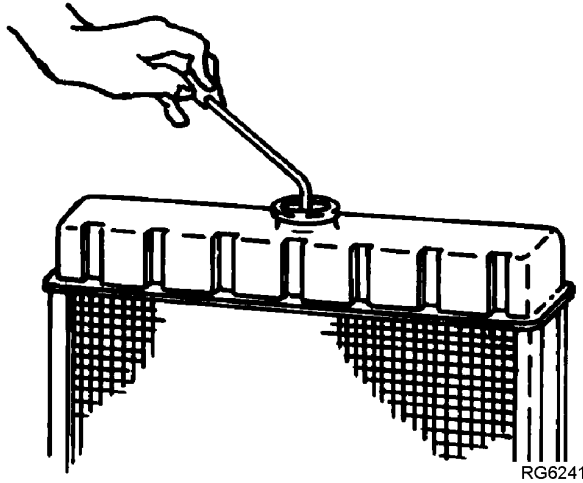

Radiator Coolant Check

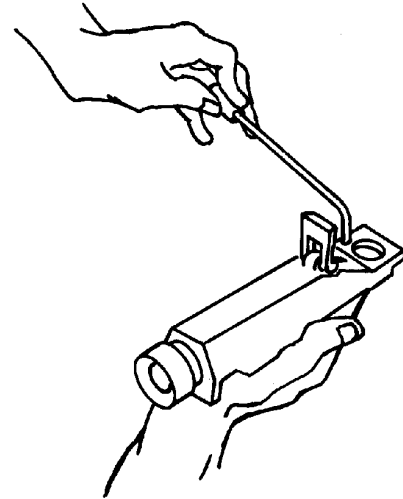

JT07298 Coolant/Battery Tester

IMPORTANT: Do not add supplemental coolant additives when the cooling system is drained and refilled with John Deere ANTIFREEZE/SUMMER COOLANT or John Deere COOL-GARD®.

NOTE: If a system is to be filled with coolant that does not contain SCAs, the coolant must be precharged. Determine the total system capacity and premix with 3% John Deere Coolant Conditioner.

Through time and use, the concentration of coolant additives is gradually depleted during engine operation. Periodic replenishment of inhibitors is required, even when John Deere ANTIFREEZE/SUMMER COOLANT is used. The cooling system must be recharged with additional supplemental coolant additives available in the form of liquid coolant conditioner.

Maintaining the correct coolant conditioner concentration (SCAs) and freeze point is essential in your cooling system to protect against rust, liner pitting and corrosion, and freeze-ups due to incorrect coolant dilution.

John Deere LIQUID COOLANT CONDITIONER is recommended as a supplemental coolant additive in John Deere engines.

DO NOT mix one brand of SCA with a different brand.

Test the coolant solution at 500 hours or 12 months of operation using either John Deere coolant test strips or a

*COOL-GARD is a registered trademark of Deere & Company
COOLSCAN is a registered trademark of Deere & Company.*

COOLSCAN® analysis. If a COOLSCAN® analysis is not available, recharge system per instructions printed on label of John Deere Liquid Coolant Conditioner.

IMPORTANT: ALWAYS maintain coolant at correct level and concentration. DO NOT operate engine without coolant for even a few minutes.

If frequent coolant makeup is required, the glycol concentration should be checked with JT07298 Coolant/Battery Tester to ensure that the desired freeze point is maintained. Follow manufacturer's instructions provided with refractometer.

Add the manufacturer's recommended concentration of supplemental coolant additive. DO NOT add more than the recommended amount.


The use of non-recommended supplemental coolant additives may result in additive drop-out and gelation of the coolant.

If other coolants are used, consult the coolant supplier and follow the manufacturer's recommendation for use of supplemental coolant additives.


See DIESEL ENGINE COOLANT and additional information on coolant additives in Fuels, Lubricants and Coolants earlier in this manual for proper mixing of coolant ingredients before adding to the cooling system.

OMRGP15,000012F -19-12SEP06-1/1

Pressure Testing Cooling System

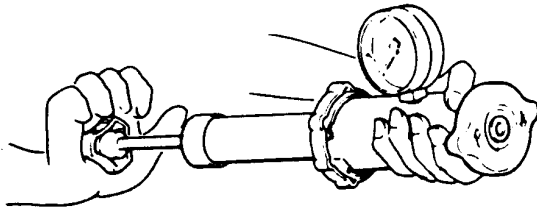

D05104ST Tester

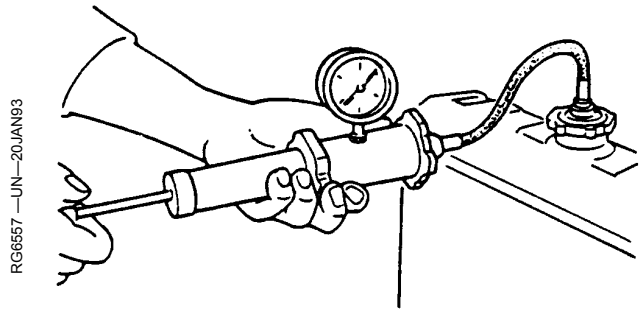

Connect Gauge and Adapter to Filler Neck

A pressurized cooling system is required to protect engine from cavitation and oxidizing of coolant.

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

Test Radiator Cap

1. Remove radiator cap and attach to D05104ST Tester as shown.
2. Pressurize cap to following specifications.¹

Specification

Radiator Cap—Test

Pressure..... 103 kPa (1.03 bar) (15 psi)

Gauge should hold pressure for 10 seconds within the normal range if cap is acceptable. If gauge does not hold pressure, replace radiator cap.

3. Remove the cap from gauge, turn it 180°, and retest cap. This will verify that the first measurement was accurate.

¹Test pressures recommended are for Deere OEM cooling system for 13.5 L engines. On specific vehicle applications, test cooling system and pressure cap according to the recommended pressure for that vehicle.

Test Cooling System

NOTE: Engine should be warmed up to test overall cooling system.

1. Allow engine to cool; carefully remove radiator cap.
2. Fill radiator with coolant to normal operating level.

IMPORTANT: DO NOT apply excessive pressure to cooling system. Doing so may damage radiator and hoses.

3. Connect gauge and adapter to filler neck. Pressurize cooling system to the following specifications.¹

Specification

Cooling System—Test

Pressure..... 103 kPa (1.03 bar) (15 psi)

4. With pressure applied, check all cooling system hose connections, radiator, and engine for leaks.

If leakage is detected, correct as necessary and pressure test system again. If no leakage is detected, but the gauge indicated a drop in pressure, contact your engine distributor or servicing dealer for further diagnostics.

OMRGP15.0000130 -19-12SEP06-1/1

Checking Crankshaft Vibration Damper

IMPORTANT: Crankshaft vibration damper is not repairable and should be replaced every 4500 hours or 60 months, whichever occurs first

1. Remove belts (shown removed).
2. Carefully inspect crankshaft vibration damper for cracks.
3. Grasp crankshaft vibration damper with both hands and attempt to turn it in both directions. If rotation is felt, crankshaft vibration damper is defective and should be replaced.
4. Check crankshaft vibration damper radial runout by positioning dial indicator so probe (A) contacts crankshaft vibration damper outer diameter.
5. With engine at operating temperature, rotate crankshaft using JDG820 flywheel rotation tool.
6. Note dial indicator reading. If runout exceeds specification, replace crankshaft vibration damper.


Specification

Crankshaft Vibration
Damper—Maximum
Radial Runout..... 0.76 mm (0.030 in)

A—Dial Indicator Probe



Check Crankshaft Vibration Damper

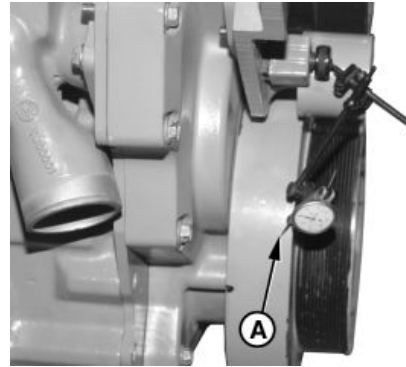

Measure Crankshaft Vibration Damper Runout

RG8536 —UN—20MAY98

RG8537 —UN—10DEC97

OURGP12,000013C -19-06NOV15-1/1

Testing Thermostats Opening Temperature


To Remove Thermostats

⚠ CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns. **DO NOT** drain coolant until it has cooled below operating temperature. Always loosen radiator pressure cap or drain valve slowly to relieve pressure.


1. Visually inspect area around thermostat housing for leaks.
2. Remove radiator pressure cap and partially drain cooling system.
3. Remove six cap screws (A) from thermostat housing and remove housing (if not previously done).
4. Remove gasket and remove thermostats (B).
5. Test each thermostat for proper opening temperature.

A—Cap Screws

B—Thermostats

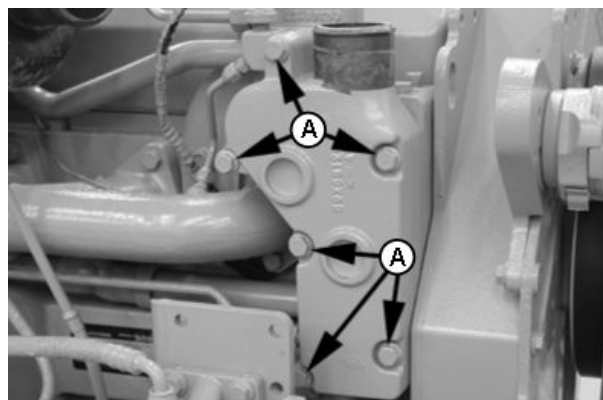

Remove Thermostat Housing

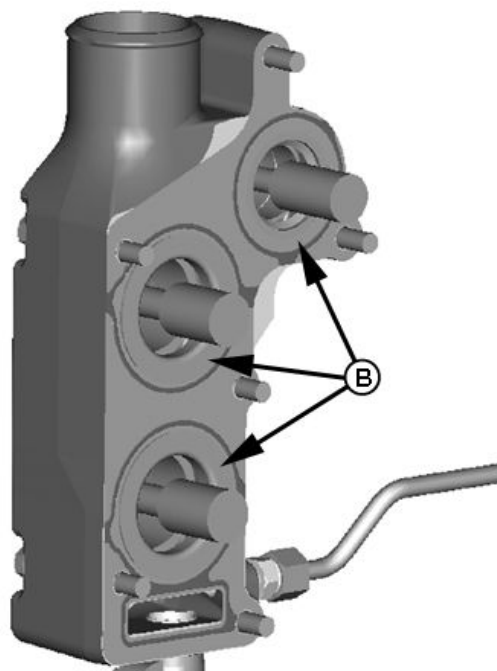

Remove Gasket and Thermostats

Continued on next page

OURGP12.0000127 -19-29FEB08-1/3

RG14338 —UN—05JUL05

RG13886 —UN—14JUN05

Testing Thermostats Opening Temperature

1. Remove thermostats.
2. Visually inspect thermostats for corrosion or damage. Replace thermostats as a matched set as necessary.
3. Inspect thermostat with ball valve in vent notch. If ball valve movement is restricted, and cleaning does not free ball valve, replace thermostat.


CAUTION: DO NOT allow thermostat or thermometer to rest against the side or bottom of container when heating water. Either may rupture if overheated.

4. Suspend thermostat and a thermometer in a container of water.
5. Stir the water as it heats. Observe opening action of thermostat and compare temperatures with specification given in chart below.

NOTE: Due to varying tolerances of different supplies, initial opening and full open temperatures may vary slightly from specified temperatures.

ENGINE/EGR THERMOSTAT TEST SPECIFICATIONS

Rating	Initial Opening (EGR/Engine)	Full Open (Nominal)
82°C (180°F)	80—83°C (176—182°F)/ 80—84°C (176—183°F)	92°C (197°F)

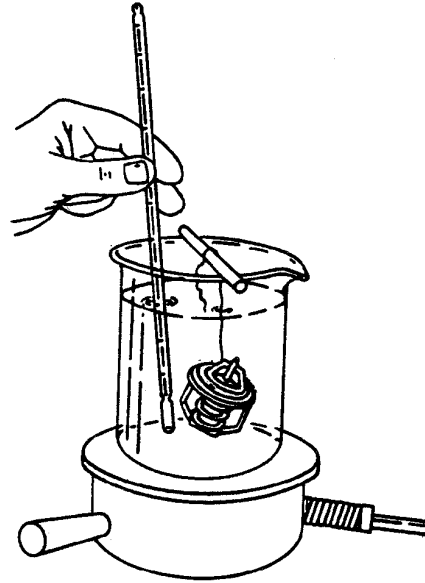

Thermostat and Thermometer in Water

6. Remove thermostat and observe its closing action as it cools. In ambient air the thermostat should close completely. Closing action should be smooth and slow.
7. If any one thermostat is defective, replace all thermostats.

Continued on next page

OURGP12,0000127 -19-29FEB08-2/3

RG5971 —UN—23NOV97

To Install Thermostats

IMPORTANT: Top thermostat has a vent notch with ball valve for air bleeding. Ball valve **MUST** BE installed at 12 o'clock position.

1. Clean all gasket material from thermostat housing and housing mounting surfaces.
2. Install smaller (EGR) thermostat (A) in top position with ball valve at 12 o'clock position (B). Install two larger (engine) thermostats (C) in lower positions.
3. Install a **new** gasket on thermostat housing.
4. Install thermostat housing using cap screws (D) and tighten to specifications.


Specification

Thermostat Housing Cap


Screws—Torque..... 85±9 N·m (63±7 lb-ft)

5. Pressure test the cooling system a second time to be sure thermostat cover gasket is sealing properly (See Pressure Test Cooling System in Lubrication And Maintenance 500 Hour/12 Months).

A—Smaller (EGR) Thermostat
B—Ball Valve at 12 O'Clock Position
C—Larger (Engine) Thermostats
D—Cap Screws

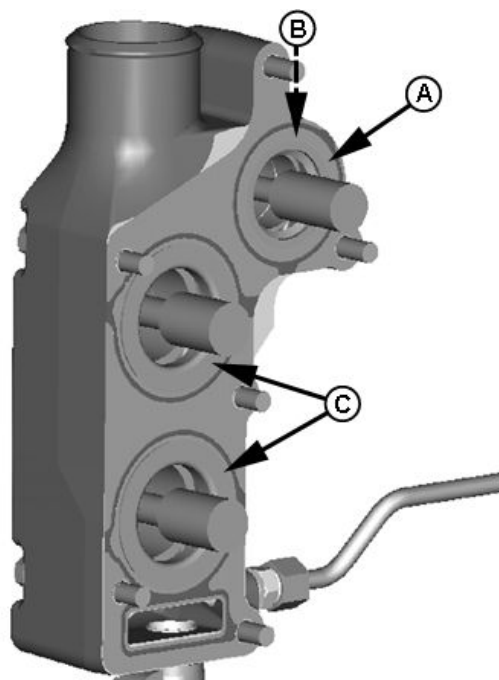

Install Thermostats

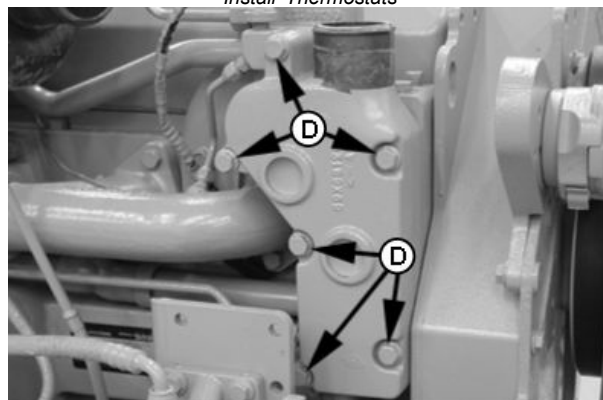

Install Thermostat Housing

OURGP12,0000127 -19-29FEB08-3/3

RG14339 —UN—15JUL05

RG14340 —UN—15JUL05

Lubrication & Maintenance — 2500 Hours

Checking and Adjusting Engine Valve Clearance and Electronic Unit Injector Preload

Have your John Deere engine distributor or servicing dealer adjust intake and exhaust valve clearance and electronic unit injector (EUI) preload.



RG13889 —UN—19MAY05

Check Valve Clearance

OMRGP15,0000131 -19-19SEP13-1/1

Do Not Modify Fuel System

IMPORTANT: Modification or alteration of the unit fuel injectors in ways not recommended by the manufacturer will terminate the warranty obligation to the purchaser.


In addition, tampering with fuel system which alters emission-related equipment on engines may result in fines or other penalties, per EPA regulations or other local emission laws.

OMRGP15,0000132 -19-29OCT10-1/1

Service as Required

Additional Service Information

This is not a detailed service manual. If you want more detailed service information, contact your John Deere dealer or engine distributor.

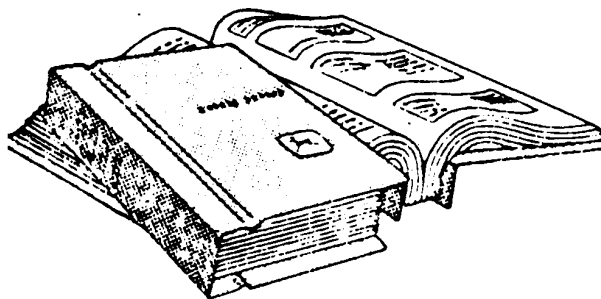

Component Technical Manuals

OURGP11,0000048 -19-23AUG10-1/1

RG4624 —UN—15DEC88

Adding Coolant

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

IMPORTANT: Never pour cold liquid into a hot engine, as it may crack cylinder head or block. DO NOT operate engine without coolant for even a few minutes.


John Deere Cooling System Sealer may be added to the radiator to stop leaks on a temporary or emergency basis only. DO NOT use any other stop-leak additives in the cooling system. Leaks should be permanently repaired as quickly as possible.

Air must be expelled from cooling system when coolant is added. Cooling system must be free of air by time engine coolant temperature reaches 80°C (176°F) or damage to EGR cooler may result.


1. Loosen temperature sending unit fitting or plug in thermostat housing to allow air to escape when filling system.

IMPORTANT: When adding coolant to the system, use the appropriate coolant solution. (See DIESEL ENGINE COOLANTS, SUPPLEMENTAL ADDITIVE INFORMATION in Fuels, Lubricants, and Coolant section for mixing of coolant ingredients before adding to cooling system.)

Do not overfill cooling system. A pressurized system needs space for heat expansion without overflowing at top of radiator.

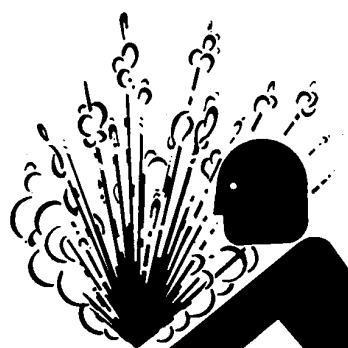

High-Pressure Fluid

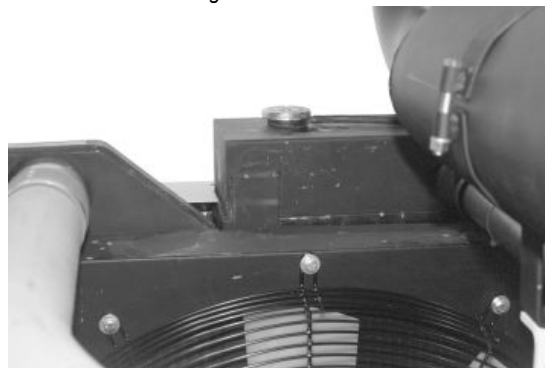

Fill Cooling System

2. Fill until coolant level touches bottom of radiator filler neck or to "FULL HOT" mark on coolant recovery tank..
3. Check freeze temperature protection.
4. Tighten plugs and fittings after filling cooling system.
5. Run engine for 10 minutes to remove any air from system. Top off coolant level if required.

OURGP11,000005A -19-12OCT06-1/1

TS281 —UN—15APR13

RG8735 —UN—03SEP99

Pre-Start Cleaning Guide

CAUTION: Avoid injury. Before cleaning machine, allow ample time for hot surfaces to cool.

IMPORTANT: Avoid machine damage. Do not direct high-pressure spray from hose output directly at or close to electrical connections and sensors.

Cleaning as needed is recommended. Clean more frequently during heavy machine use, and when weather conditions are dry.

- Check enclosed areas daily. Clean the engine and other enclosed areas of equipment to remove debris and any buildup of oil and grease. Keep the engine and engine compartment free of combustible material.
- Check for debris buildup daily on and around intake systems, exhaust systems, and intercooler piping systems. Verify that there are no holes or leaks in intake or exhaust systems. Do not allow debris to build up near hot exhaust components. Verify that hot exhaust components are cleaned as often as environmental conditions require.
- Inspect cooling system daily to determine whether cooling system needs cleaning. Visible buildup of

residue that blocks airflow may degrade machine performance and requires more frequent cleaning depending on environmental conditions.

- Inspect difficult to observe areas daily as conditions may require additional cleaning care to remove debris.
- Check for oil and fuel leaks daily. Replace or repair sources of leaks, including gaskets, seals, breather tubes, fittings, and fluid lines.

Maintenance and Service Reminders

- Keep surfaces free of grease and oil.
- Clean up hydraulic and other fluid leaks.
- Fuel Lines — Check for leaks, cracks, and kinks.
- Fuel Pumps — Check fittings, especially compression ring couplings, for cracks and leaks.
- Fuel Injectors — Check pressure and return lines for signs of leaks.
- When servicing fuel filter or draining water separator, avoid fuel spills. Immediately clean up any fuel spill.
- Check for transmission case venting system seepage, transmission case leakage, power steering cylinder leakage, or power steering line leakage.
- Check for loose electrical connectors, damaged wiring, corrosion, or poor connections.

ZE59858,0000009 -19-07JUL20-1/1

Flushing and Refilling Cooling System

CAUTION: Explosive release of fluids from pressurized cooling system can cause serious burns.


Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

NOTE: Coolant drain intervals can vary greatly depending on coolant type used and maintenance performed. Please see the section *Fuels, Lubricants, and Coolants* earlier in this manual for specific interval information.


Drain old coolant, flush the entire cooling system, test thermostats, and fill with recommended clean coolant.

1. Pressure test entire cooling system and pressure cap if not previously done. (See PRESSURE TESTING COOLING SYSTEM, in *Lubrication and Maintenance/500 Hour/12 Month* section.)
2. Slowly open the engine cooling system filler cap or radiator cap (A) to relieve pressure and allow coolant to drain faster.

A—Radiator Cap

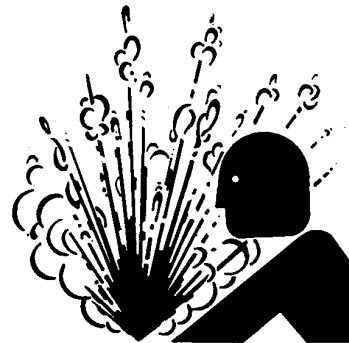

High-Pressure Fluids

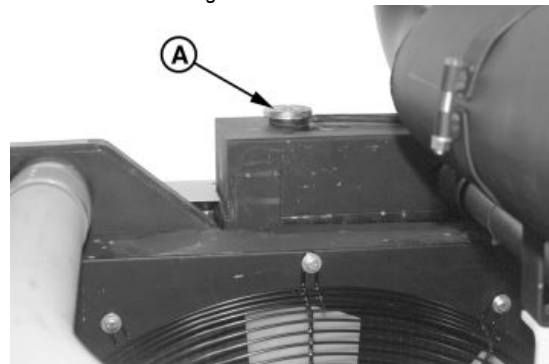

Radiator Cap

TS281 —UN—15APR13


RG8735A —UN—03SEP99

Continued on next page

JR74534,0000375 -19-13APR11-1/5

3. Open oil cooler housing drain valve (A) on right side of engine. Drain all coolant from engine block.

A—Drain Valve

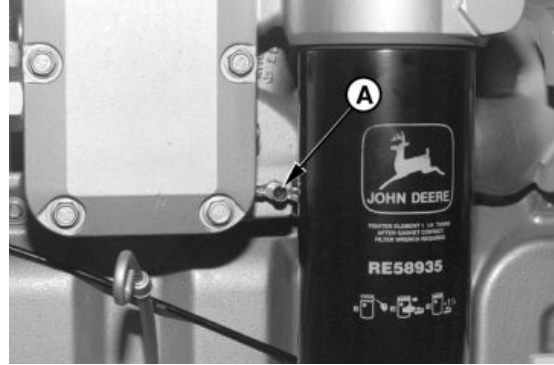


Oil Cooler Housing Drain Valve

JR74534,0000375 -19-13APR11-2/5

RG8708A —UN—21JUL99

4. Open radiator drain valve (B) and drain all coolant from radiator.

B—Drain Valve

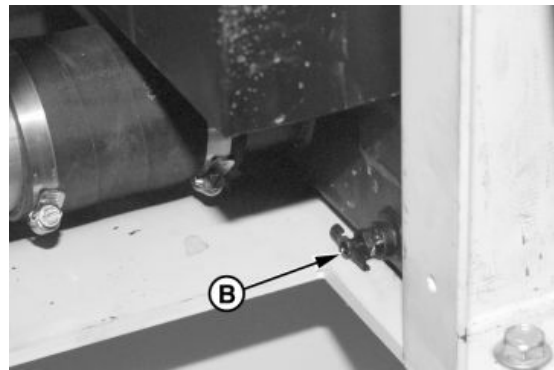

Radiator Drain Valve

Continued on next page

JR74534,0000375 -19-13APR11-3/5

RG8730 —UN—03SEP99

5. Remove six cap screws (A) from thermostat housing and remove housing. Remove three thermostats. Install housing (without thermostats) using old gasket and tighten cap screws to specifications.

Specification

Thermostat Cover Cap

Screws—Torque..... 50±10 N·m (37±7 lb-ft)

6. Test thermostat opening temperature. (See TESTING THERMOSTATS OPENING TEMPERATURE later in this section.)
7. Close all drain valves after coolant has drained.


CAUTION: Do not run engine longer than 10 minutes. Doing so may cause engine to overheat which may cause burns when radiator water is draining.

8. Fill the cooling system with clean water. Run the engine about 10 minutes to stir up possible rust or sediment.
9. Stop engine, pull off lower radiator hose and remove radiator cap. Immediately drain the water from system before rust and sediment settle.
10. After draining water, close drain valves. Reinstall radiator cap and radiator hose and clamp. Fill the cooling system with clean water and a heavy duty

FLEETGUARD is a registered trademark of Cummins Engine Company, Inc.

RESTORE is a trademark of Fleetguard Inc.

RESTORE PLUS is a trademark of Fleetguard Inc.

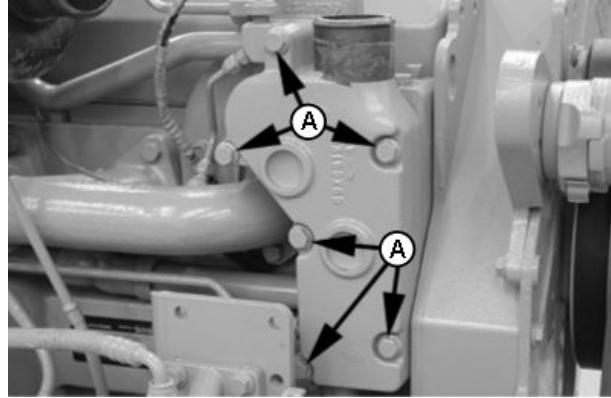

Remove Thermostats

A—Cap Screws

cooling system cleaner such as FLEETGUARD® RESTORE™ and RESTORE PLUS™. Follow manufacturer's directions on label.

11. After cleaning the cooling system, drain cleaner and fill with water to flush the system. Run the engine about 10 minutes, remove radiator cap and pull off lower radiator hose, then drain out flushing water.

JR74534,0000375 -19-13APR11-4/5

12. Close all drain valves on engine and radiator. Reinstall radiator hose and tighten clamps securely. Install thermostats using a new gasket.

IMPORTANT: Air must be expelled from cooling system when system is refilled. Loosen temperature sending unit fitting or plug in thermostat housing to allow air to escape when filling system. Retighten fitting or plug after filling cooling system. Cooling system must be free of air by time engine coolant temperature reaches 80°C (176°F) or damage to EGR cooler may result.

13. Refill cooling system with fresh coolant until coolant touches bottom of filler neck. (See following specification for cooling system capacity.) Install radiator cap.

Specification

6135HF—Capacity..... 18.3 L (19.3 qt)

14. Run engine until it reaches operating temperature. This mixes the solution uniformly and circulates it



Flush Cooling System

through the entire system. The normal engine coolant temperature range is 82°—92°C (180°—197°F).

15. After running engine, check coolant level and entire cooling system for leaks.
16. Inspect fan belt for wear and check belt tension (See Checking Belt Tensioner in Lubrication And Maintenance 500 Hour/12 Months.

JR74534,0000375 -19-13APR11-5/5

Replacing Air Cleaner Filter Elements

IMPORTANT: ALWAYS REPLACE primary air cleaner element when air restriction indicator shows a vacuum of 625 mm (25 in.) H₂O, is torn, or visibly dirty.

NOTE: This procedure applies to John Deere air cleaner kits. Refer to manufacturer's instructions for servicing air cleaners not supplied by John Deere.

1. Remove wing nut (A) and remove canister cover and primary filter assembly (B) from canister.

IMPORTANT: Remove secondary (safety) air cleaner element (E) ONLY for replacement. DO NOT attempt to clean, wash, or reuse secondary element. Replacement of secondary element is usually necessary ONLY when primary element has a hole in it or restriction indicator green dot (•) has disappeared from window.


2. Thoroughly clean all dirt from inside canister.
3. Squeeze dust unloader valve (C) on canister to remove all dust.
4. Observe secondary (safety) element restriction indicator/retaining nut (D). If green dot (•) has disappeared from window, replace secondary element.
5. To replace secondary element, remove restriction indicator/retaining nut and secondary element. Immediately replace secondary element with new element to prevent dust from entering air intake system. Tighten restriction indicator/retaining nut to specifications.

Specification


Air Filter Restriction
Indicator/Retaining
Nut—Torque..... 14 N·m (10 lb-ft)

A—Wing Nut
B—Primary Filter Assembly
C—Unloader Valve


D—Restriction Indicator/Retaining Nut
E—Secondary Air Cleaner Element

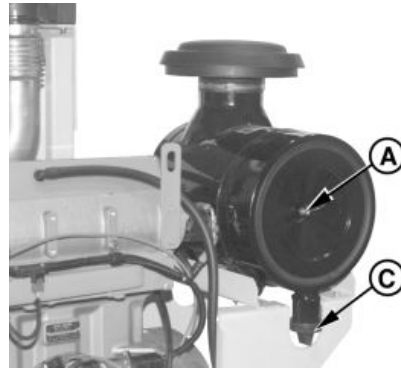

Wing Nut and Unloader Valve

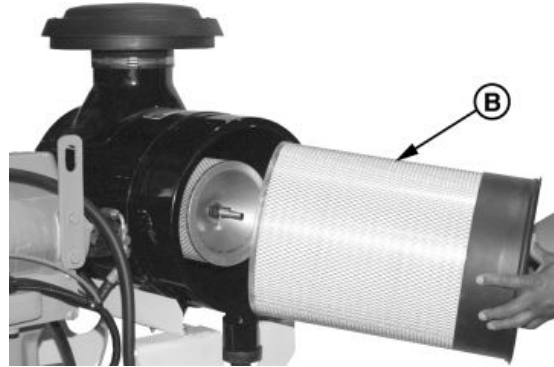

Replacing Primary Air Filter Element

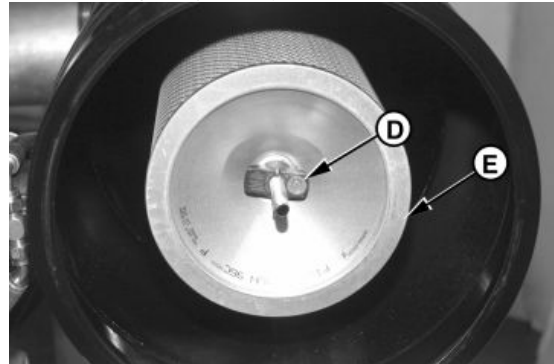

Indicator/Retaining Nut for Replacing Secondary Air Filter Element

Continued on next page

RG, RG34710, 7591 -19-12SEP06-1/2

RG8731 —UN—03SEP99

RG8732 —UN—03SEP99


RG8733 —UN—03SEP99

6. Install new primary assembly element and tighten wing nut securely.

IMPORTANT: Whenever the air cleaner has been serviced or had cover removed, **ALWAYS** fully depress the air restriction indicator reset button (if equipped) to assure accurate readings.

7. If equipped, fully depress air restriction indicator reset button (A) and release to reset indicator.

A—Air Restriction Indicator Reset Button

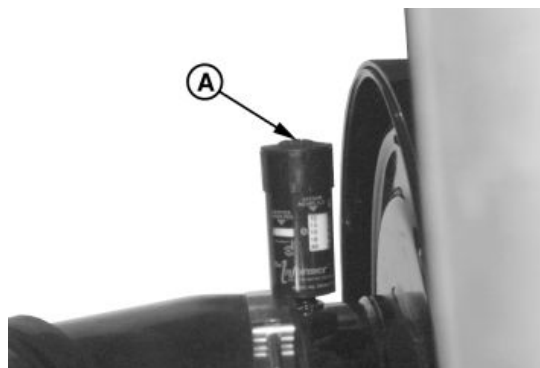

Air Restriction Indicator Reset Button

RG8719B —UN—03SEP99

RG, RG34710, 7591 -19-12SEP06-2/2

Draining Fuel Filter Water Separator Bowl


Your engine is equipped with a sensor that detects the presence of water in separator bowl mounted below fuel filter. This sensor will illuminate the red “STOP ENGINE” warning light (A) on instrument panel and also sound an audible alarm (B). A diagnostic trouble code (DTC) displayed on the diagnostic gauge will indicate that there is water in the fuel bowl (see LISTING OF DIAGNOSTIC TROUBLE CODES in Section 55).

ALWAYS STOP ENGINE IMMEDIATELY and drain water separator bowl when these warnings occur.

1. Drain water and contaminants from water separator sediment bowl by opening drain valve (C) and operating primer until fuel is clear of water.
2. Close drain valve.

A—Warning Light
B—Audible Alarm

C—Drain Valve

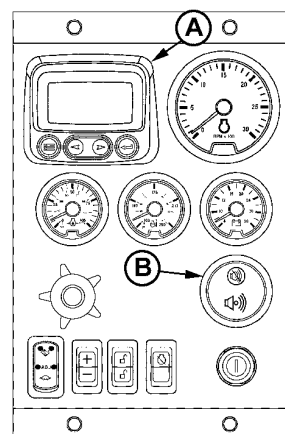

Warning Light And Audible Alarm On Panel



Draining Fuel Sediment Bowl (Earlier Engines shown)

RG13882 —UN—06MAY05

RG12773 —UN—23JAN03

OMRGP15,0000133 -19-29FEB08-1/1

Bleeding Fuel System (Earlier Engines)


CAUTION: Escaping fluid under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting fuel or other lines. Tighten all connections before applying pressure. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard or paper to search for leaks. Do not use your hand.

If any fluid is injected into the skin, it must be surgically removed within a few hours by a doctor familiar with this type injury or gangrene may result. Doctors unfamiliar with this type of injury may call the Deere & Company Medical Department in Moline, Illinois, or other knowledgeable medical source.


IMPORTANT: Fuel filter must be replaced whenever audible alarm sounds and trouble code indicates plugged filter (fuel supply pressure moderately/extremely low). Replace fuel filter at 12 month intervals (or every 500 hours) if no alarm/code indications occur.

NOTE: Under normal conditions, fuel system bleeding is not required. Priming system with hand primer (B) is normally sufficient. If necessary to bleed the system, use the following procedure.

1. Drain water and contaminants from water separator sediment bowl by opening drain valve (C) and operating primer (B) until fuel is clear of water.
2. Attach an open line to diagnostic port (A) and place end of line in suitable container for diesel fuel.
3. Pump hand primer (B) until a steady flow of fuel (without bubbles) comes out of line.

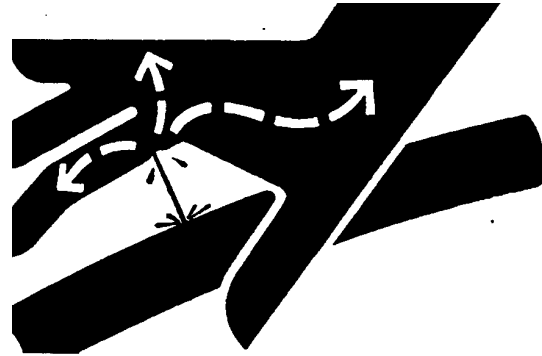

High Pressure Fluids

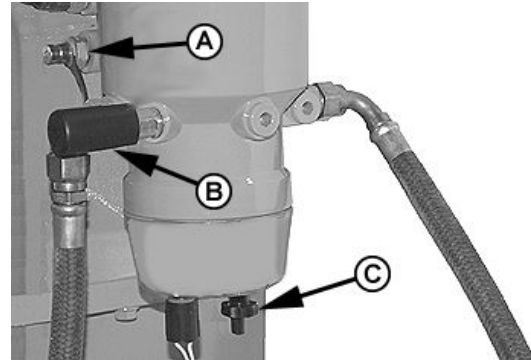

Bleeding Fuel System

A—Diagnostic Port
B—Hand Primer

C—Water Drain Valve

4. Disconnect line from diagnostic port.
5. Start engine and run for five minutes.

NOTE: If engine will not start after bleeding, contact your servicing dealer for an air bleed kit.

OURGP11,000005C -19-12SEP06-1/1

Bleeding Fuel System (Later Engines)

NOTE: Normally, the fuel system on these engines is self-priming and self-bleeding, and does not require a bleeding procedure by the operator.

If engine will not start after filter changes, turn ignition key ON for 60 seconds to prime the fuel system. It may be necessary to turn the key off and on again to reprime the system before starting.

OURGP11,000005D -19-11OCT06-1/1

X9811—UN—23AUG88


RG12829—UN—24JAN03

Replacing Fan/Alternator V-Belts

Refer to CHECKING BELT TENSIONER SPRING TENSION AND BELT WEAR in Lubrication and Maintenance/500 Hour/12 Month section to determine if V-belts need replacing.

NOTE: While belt is removed, inspect pulleys and bearings. Rotate and feel for hard turning or any unusual sounds. If pulleys or bearings need replacement, see your John Deere dealer.

NOTE: This engine is equipped with automatic belt tensioners which do not require adjustment.

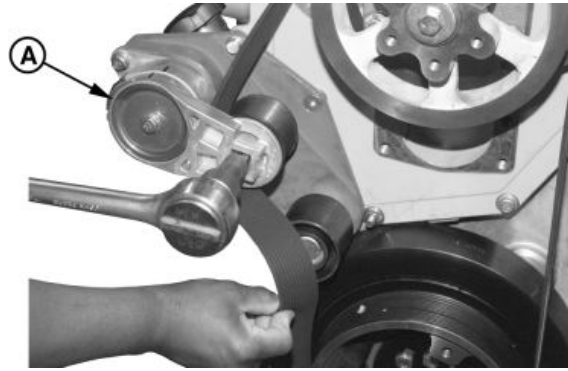

Lower Tensioner

RG8743—UN—03SEP99

To Replace Lower V-Belt

IMPORTANT: ALWAYS replace belts as a matched set.

1. Release tension on lower belt using a 3/4-in. drive tool in square hole in end of lower tensioner arm (A).
2. Remove V-belt from pulleys and discard belt.
3. Install new belt; be sure that belt is correctly seated in all pulley grooves. (See V-BELT ROUTING, later in this section.)
4. Release belt tensioner to apply tension to belt. Remove drive tool.
5. Visually check belt alignment before starting engine.
6. Start engine and visually check belt alignment.


A—Lower Tensioner Arm

OURGP12,000013D -19-12SEP06-1/2

To Replace Upper V-Belt

IMPORTANT: ALWAYS replace belts as a matched set.

1. Remove lower V-belt as detailed earlier.
2. Release tension on upper V-belt using a 1/2-in. drive tool in upper tensioner arm (A).
3. Remove V-belt from pulleys and discard belt.
4. Install new belt; be sure that belt is correctly seated in all pulley grooves. (See V-BELT ROUTING, later in this section.)
5. Slowly release belt tensioner to apply tension to belt. Remove drive tool.
6. Check belt alignment before starting engine.
7. Install lower V-belt as detailed earlier.
8. Start engine and visually check belt alignment.

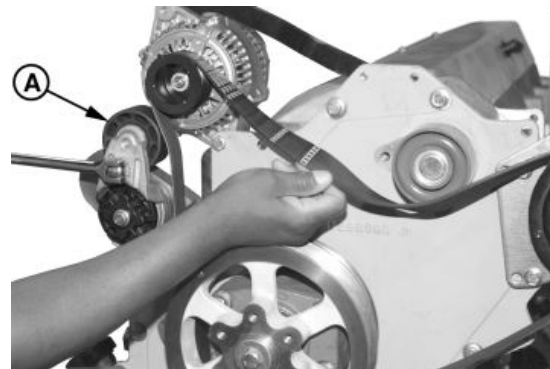


Upper Tensioner

A—Upper Tensioner Arm

RG8744—UN—03SEP99


OURGP12,000013D -19-12SEP06-2/2

V-Belt Routing

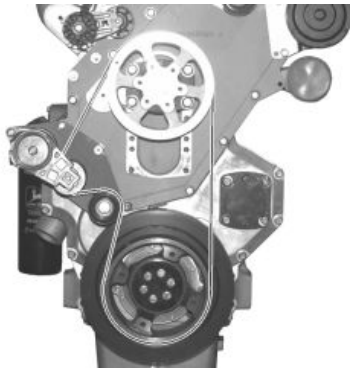

Lower V-Belt

RG8745 —UN—03SEP99

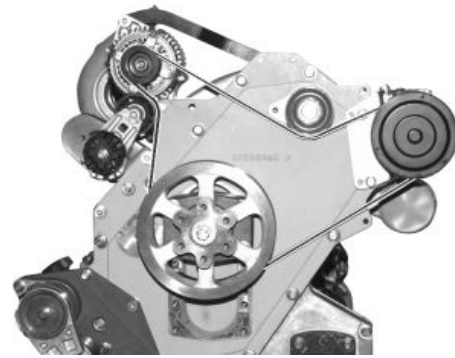

Upper V-Belt

RG8746 —UN—03SEP99

Lower V-belt MUST BE removed before removing upper V-belt. Reverse sequence for V-belt installation.

RG, RG34710, 7595 -19-12SEP06-1/1

Checking Fuses

The main system fuse is located in the engine wiring harness. See ENGINE WIRING DIAGRAM in Troubleshooting section.

1. Open fuse holder in wiring harness.

2. Check fuse and replace as necessary with appropriate fuse.

Fuses are also provided in wiring for engine control unit (ECU) (20-amp) and fuel filters (15-amp). (See ENGINE WIRING DIAGRAM in Troubleshooting Section.)


OMRGP15,0000134 -19-08NOV10-1/1

Air Compressors

Air compressors are offered as options with John Deere OEM engines to provide compressed air to operate air-powered devices like vehicle air brakes.

Air compressors are engine-driven piston types. They are either air cooled or cooled with engine coolant. The compressors are lubricated with engine oil. The compressor runs continuously as gear or spline driven by the auxiliary drive of the engine but has "loaded" and "unloaded" operating modes. This is controlled by the vehicle's air system (refer to vehicle technical manual for complete air system checks and services).

See your John Deere engine distributor or servicing dealer for diagnostic and troubleshooting information. If diagnosis leads to an internal fault in the compressor, replace the complete compressor as a new or remanufactured unit.

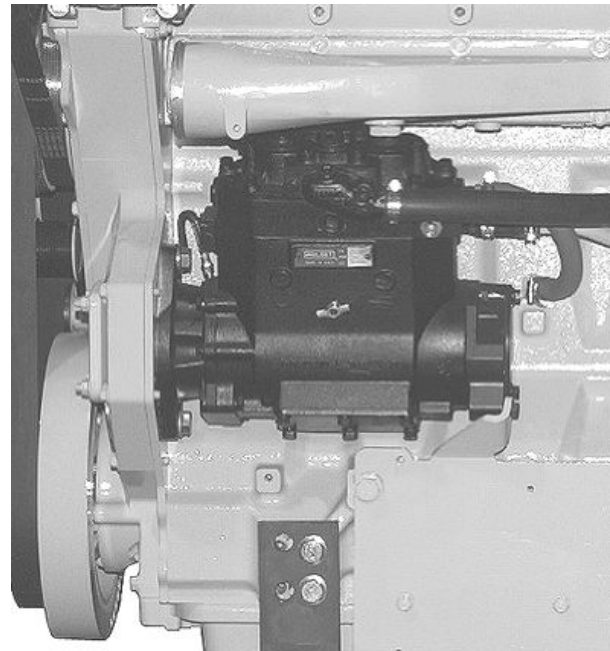

Air Compressor (Optional)

RG9530 —UN—24MAR99

DPSG, RG34710, 104 -19-12SEP06-1/1

Rear Power Take-Off (PTO)

CAUTION: Entanglement in rotating driveline can cause serious injury or death. Keep shield on PTO driveshaft between clutch housing and the engine driven equipment at all times during engine operation. Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments.

If option 9201 or 9207 is ordered to make the rear PTO compatible with other manufacturer's drivelines, be sure that proper shielding is in place before operation.

CAUTION: Metal surfaces of PTO housing may be hot to the touch during operation or at shutdown.

The optional engine rear power take-off (PTO) from John Deere transfers engine power to auxiliary equipment or moving components which may be mounted on the vehicle or trailed behind. It is an engine-driven PTO which operates whenever the engine is running.

IMPORTANT: An additional 4.0 L (4.2 qt.) of oil must be added to the crankcase for lubrication of the rear PTO option. (See **ENGINE CRANKCASE OIL FILL QUANTITIES** in the Specifications section.)

Proper performance of the power take-off unit will be related to the care it is given. Periodically check for any oil leaks that may occur.

If the power take-off does not work properly, contact your authorized servicing dealer or engine distributor.



Rotating Drivelines



John Deere Rear PTO (Optional)

TS 1644 —UN—22AUG95

RG12593 —UN—06SEP02

OUOD006,0000065 -19-12SEP06-1/1

Troubleshooting

General Troubleshooting Information

Troubleshooting engine problems can be difficult. A list of possible engine problems that may be encountered is provided in this section accompanied by possible causes and corrections.

An engine wiring diagram is provided later in this section to help isolate electrical problems on power units using John Deere wiring harness and instrument (gauge) panel. The illustrated diagrams and troubleshooting information are of a general nature; final design of the overall system for your engine application may be different. See your engine distributor or servicing dealer if you are in doubt.

The engine control unit (ECU) has the ability to detect problems internally and in the electronic control system. This includes determining if any of the sensor input voltages are too high or too low, if the camshaft and crankshaft position sensor inputs are valid, and if the unit injector solenoids are responding properly.

If the ECU detects a problem with the electronic control system a diagnostic trouble code (DTC) specific to the failed system will be stored in the ECU's memory.


There are two types of DTC's:

- Active
- Inactive (stored)

Active DTCs indicate that the failure is occurring. These type of failures are sometimes called "hard" failures. They can be accessed on the diagnostic gauge (A) on the instrument panel.

Inactive DTCs indicate that a failure has occurred in the past, but is not currently occurring. This type of "stored" DTC can be caused by an "intermittent" failure. These could be problems such as a bad connection or a wire intermittently shorting to ground.

If a sensor or wiring fails and a DTC is active for the sensor, the ECU will use a substitute "limp home" value in its calculations to continue engine operation.

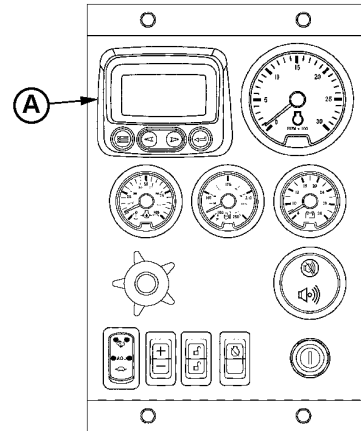

Diagnostic Gauge On Panel

A—Diagnostic Gauge

NOTE: All engines have electronic control systems which may send diagnostic trouble codes to signal problems (see DISPLAYING OF DIAGNOSTIC TROUBLE CODES, later in this section).

To access DTC's with the diagnostic gauge, see Section 15 of this manual.

1. If fault codes are present, perform the suggested corrective actions.
2. If this does not correct the engine problem, contact your servicing dealer.
3. If engine has problems but no fault codes are displayed, refer to ENGINE TROUBLESHOOTING later in this section for problems and solutions.

OMRGP15,0000135 -19-12SEP06-1/1

RG13728 —JUN—11NOV04

Instrument Panel Method for Retrieving Diagnostic Trouble Codes


IMPORTANT: Care should be used during diagnostic procedures to avoid damaging the terminals of connectors, sensors, and actuators. Probes should not be poked into or around the terminals or damage will result. Probes should only be touched against the terminals to make measurements.

Diagnosis of the Deere electronic control system on engines with Deere electronic instrument panel should be performed as follows:

1. Make sure all engine mechanical and other systems not related to the electronic control system are operating properly. (See ENGINE TROUBLESHOOTING later in this section.)

NOTE: Diagnostic gauge (A) uses the menu key (B) to access various engine functions, two arrow keys (C) to scroll through the engine parameter list and view the menu list, and an enter key (D) for selecting highlighted items.

2. Read and record DTC(s) displayed on LCD of diagnostic gauge (A). For procedure to access diagnostic trouble codes, refer to "Using Diagnostic Gauge to Access Engine Information", earlier in this manual.

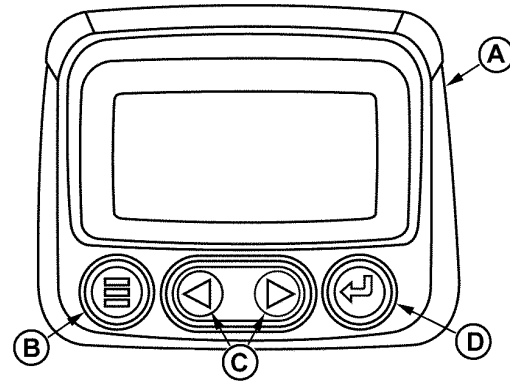

Trouble Code Display On Instrument Panel

A—Diagnostic Gauge
B—Menu Key

C—Arrow Keys
D—Enter Key

3. Go to the **LISTING OF DIAGNOSTIC TROUBLE CODES (DTCs)** later in this section, to interpret to the DTC(s) present.

4. Contact your nearest engine distributor or servicing dealer with a list of DTC(s) so that necessary repairs can be made.

OURGP12,000013E -19-12SEP06-1/1

Displaying Of Diagnostic Trouble Codes (DTCs)

SPN/FMI CODES

Stored and active diagnostic trouble codes are output on the diagnostic gauge on the Deere electronic instrument panel according to the J1939 standard as a two-part code as shown on the tables on the following pages.

The first part is a Suspect Parameter Number (SPN) followed by a Failure Mode Identifier (FMI) code. In order to determine the exact failure, both parts (SPN and FMI) of the code are needed.

The SPN identifies the system or the component that has the failure; for example SPN 000110 indicates a failure in the engine coolant temperature circuit.

The FMI identifies the type of failure that has occurred; for example FMI 03 indicates value above normal. Combining SPN 000110 with FMI 03 yields a fault code "engine coolant temperature input voltage too high". A corrective action will also be displayed, "check sensor and wiring". If this check does not solve the engine fault, contact your servicing dealer.

Always contact your servicing dealer for help in correcting unsolved diagnostic trouble codes which are displayed for your engine.

OURGP12,00000F0 -19-24AUG10-1/1

Listing of Diagnostic Trouble Codes (DTCs)

NOTE: Not all of these codes are used in all engine applications.

NOTE: If the corrective actions below do not solve the engine fault, contact your servicing dealer.

SPN	FMI	Fault	Corrective Action
0000 28	03	Throttle #3 Voltage Out of Range High	Check Sensor and Wiring
	04	Throttle #3 Voltage Out of Range Low	Check Sensor and Wiring
0000 29	03	Throttle #2 Voltage Out of Range High	Check Sensor and Wiring
	04	Throttle #2 Voltage Out of Range Low	Check Sensor and Wiring
0000 91	03	Throttle #1 Signal Out of Range High	Check Sensor and Wiring
	04	Throttle #1 Signal Out of Range Low	Check Sensor and Wiring
	09	Throttle #1 Communication Signal Erratic	Check Sensor and Wiring
0000 94	01	Fuel Pressure Voltage Out of Range-Most Low	Check Sensor and Wiring
	03	Low Pressure Fuel Signal Out of Range High	Check Sensor and Wiring
	04	Low Pressure Fuel Signal Out of Range Low	Check Sensor and Wiring
	10	When The Engine Is Motoring And The High Pressure Pump Is Off, The Rail Pressure Drops Too Fast	Check Sensor and Wiring
	13	Rail Pressure Test Has Failed	Check Sensor and Wiring
	17	Low Fuel Pressure Signal Slightly Low	Check Fuel Supply and Prime System
0000 97	03	Water in Fuel Signal Out Of Range High	Check Sensor and Wiring
	04	Water in Fuel Signal Out Of Range Low	Check Sensor and Wiring
	16	Water in Fuel Detected	Stop and Drain Water Separator
0001 00	01	Engine Oil Pressure Extremely Low	Check Oil Level
	03	Engine Oil Pressure Signal Out of Range High	Check Sensor and Wiring
	04	Engine Oil Pressure Signal Out of Range Low	Check Sensor and Wiring
	18	Engine Oil Pressure Signal Moderately Low	Check Oil Level
	31	Engine Oil Pressure Invalid	Contact Servicing Dealer
0001 02	02	Intake Manifold Pressure Signal Invalid	Check Sensor and Wiring
	03	Intake Manifold Pressure Signal Out of Range	Check Sensor and Wiring
	04	Intake Manifold Pressure Signal Out of Range Low	Check Sensor and Wiring
0001 03	00	Turbocharger Speed Signal Extremely High	Check Sensor and Wiring
	05	Turbocharger Speed Sensor Circuit Has High Resistance	Check Sensor and Wiring
	08	Turbocharger Speed Missing	Check Sensor and Wiring
	31	Turbocharger Speed Signal Missing	Check Sensor and Wiring
0001 05	00	Intake Manifold Air Temperature Signal Extremely High	Check Air Cleaner, Aftercooler, or Ambient Temperature
	03	Intake Manifold Air Temperature Signal Out Of Range High ...	Check Sensor and Wiring
	04	Intake Manifold Air Temperature Signal Out Of Range Low	Check Sensor and Wiring
	15	Intake Manifold Air Temperature Signal Slightly High	Check Sensor and Wiring

Continued on next page

OURGP11,000005E -19-12OCT06-1/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
	16	Intake Manifold Air Temperature Signal Moderately High	Check Air Cleaner, Aftercooler, or Ambient Temperature
0001 07	00	Air Filter Pressure Differential Extremely High	Check for Plugged Air Filter
0001 08	02	Barometric Pressure Signal Invalid	Check for Plugged Air Filter
0001 10	00	Engine Coolant Temperature Signal Extremely High.....	Check Cooling System, Reduce Power
	03	Engine Coolant Temperature Signal Out Of Range High.....	Check Sensor and Wiring
	04	Engine Coolant Temperature Signal Out Of Range Low	Check Sensor and Wiring
	15	Engine Coolant Temperature Signal Slightly High	Check Cooling System, Reduce Power
	16	Engine Coolant Temperature Signal Moderately High	Check Cooling System, Reduce Power
	17	Engine Coolant Temperature Signal Slightly Low.....	Check Cooling System
0001 11	01	Loss Of Coolant Detected	Check Operator's Manual
0001 57	01	Low-Pressure Fuel Pressure Low - Most Severe Level	Check Sensor and Wiring
	03	Fuel Rail Pressure Signal Out of Range High	Check Sensor and Wiring
	04	Fuel Rail Pressure Signal Out of Range Low	Check Sensor and Wiring
	16	Low-Pressure Fuel Pressure High	Check Sensor and Wiring
	18	Low-Pressure Fuel Pressure Low - Moderately Severe Level ..	Check Sensor and Wiring
0001 58	17	ECU Power Down Error	Contact Servicing Dealer
0001 74	00	Fuel Temperature Signal Extremely High.....	Add Fuel or Switch Fuel Tanks
	03	Fuel Temperature Signal Out of Range High	Check Sensor and Wiring
	04	Fuel Temperature Signal Out of Range Low	Check Sensor and Wiring
	16	Fuel Temperature Signal Moderately High	Check Sensor and Wiring
0001 89	31	Engine Speed Derate Condition Exists	Contact Servicing Dealer
0001 90	00	Engine Speed Extremely High	Reduce Engine Speed
0002 37	02	VIN Security Data Invalid	Contact Servicing Dealer
	13	VIN Option Code Security Data Conflict	Contact Servicing Dealer
	31	VIN Security Data Missing	Contact Servicing Dealer
0004 12	00	EGR Temperature Signal Extremely High	Check Sensor and Wiring
	03	EGR Temperature Signal Out of Range High	Check Sensor and Wiring
	04	EGR Temperature Signal Out of Range Low	Check Sensor and Wiring
	15	EGR Temperature Signal Slightly High	Check Sensor and Wiring
	16	EGR Temperature Signal Moderately High	Check Sensor and Wiring
0006 11	03	Injector Shorted to Power	Check Wiring
	04	Injector Shorted to Ground	Check Wiring
0006 29	13	ECU Programming Error	Contact Servicing Dealer
	19	ECU Failure.....	Contact Servicing Dealer

Continued on next page

OURGP11,000005E -19-12OCT06-2/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
0006 32	02	Fuel Shutoff Valve Error	Check Sensor and Wiring
	05	Fuel Shutoff Valve Failure	Check Sensor and Wiring
	11	Fuel Shutoff Valve Open or Shorted	Check Sensor and Wiring
0006 36	02	Engine Position Sensor Signal Invalid	Check Sensor and Wiring
	05	Engine Position Sensor Circuit Has High Resistance	Check Sensor and Wiring
	06	Engine Position Sensor Circuit Has Low Resistance	Check Sensor and Wiring
	08	Engine Position Sensor Signal Missing	Check Sensor and Wiring
	10	Engine Position Sensor Signal Rate Of Charge Abnormal	Check Sensor and Wiring
0006 37	02	Engine Timing Sensor Signal Invalid	Check Sensor and Wiring
	05	Engine Position Sensor Circuit Has High Resistance	Check Sensor and Wiring
	06	Engine Position Sensor Circuit Has Low Resistance	Check Sensor and Wiring
	07	Engine Timing And Position Signals Out Of Sync	Check Sensor and Wiring
	08	Engine Timing Sensor Signal Missing	Check Sensor and Wiring
	10	Crank Position Input Pattern Error	Check Sensor and Wiring
0006 39	13	CAN Bus Failure	Check Sensor and Wiring
0006 40	11	External Engine Protection Input	Check Sensor and Wiring
	13	External Derate Commanded	Check Sensor and Wiring
0006 41	04	VGT Actuator Supply Voltage Out of Range Low	Check Sensor and Wiring
	12	VGT Actuator Communication Error	Check Sensor and Wiring
	13	VGT Actuator Learn Error	Check Sensor and Wiring
	16	Turbo Actuator Temperature Moderately High	Check Sensor and Wiring
0006 44	02	External Speed Command Output	Check Sensor and Wiring
0006 51	05	Injector #1 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #1 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #1 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #1 Calibration Fault	Check Injector Wiring or Injector Solenoid
0006 52	05	Injector #2 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #2 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #2 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #2 Calibration Fault	Check Injector Wiring or Injector Solenoid
0006 53	05	Injector #3 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #3 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #3 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #3 Calibration Fault	Check Injector Wiring or Injector Solenoid

Continued on next page

OURGP11.000005E -19-12OCT06-3/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
0006 54	05	Injector #4 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #4 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #4 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #4 Calibration Fault	Check Injector Wiring or Injector Solenoid
0006 55	05	Injector #5 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #5 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #5 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #5 Calibration Fault	Check Injector Wiring or Injector Solenoid
0006 56	05	Injector #6 Circuit Has High Resistance	Check Injector Wiring or Injector Solenoid
	06	Injector #6 Has Low Resistance	Check Injector Wiring or Injector Solenoid
	07	The Injector Fuel Flow At Cylinder #6 Is Lower Than Expected.	Injector Failed or Flow Limiter Closed
	13	Injector #6 Calibration Fault	Check Injector Wiring or Injector Solenoid
0006 76	03	Glow Plug Relay	Contact Servicing Dealer
	05	Glow Plug Relay	Contact Servicing Dealer
0007 29	03	Inlet Air Heater Signal Received When Not Expected	Contact Servicing Dealer
	04	Inlet Air Heater Signal Not Received When Expected	Contact Servicing Dealer
0008 33	02	Rack Position Sensor Error.....	Contact Servicing Dealer
	03	Rack Position Sensor Voltage High.....	Contact Servicing Dealer
	04	Rack Position Sensor Voltage Low	Contact Servicing Dealer
0008 34	02	Rack Actuator Error	Contact Servicing Dealer
	03	Rack Actuator Voltage High	Contact Servicing Dealer
	05	Rack Actuator Voltage Open	Contact Servicing Dealer
	06	Rack Actuator Voltage Grounded	Contact Servicing Dealer
	07	Rack Actuator Position Error	Contact Servicing Dealer
	07	Rack Actuator Position Error	Contact Servicing Dealer
0009 70	02	Auxiliary Engine Shutdown Switch Signal Invalid.....	Check Switch And Wiring
	11	External Engine Protection Shutdown Switch Signal Active	Check Switch And Wiring
	31	External Shutdown Commanded	Check Switch And Wiring
	31	External Derate Commanded	Check Switch And Wiring
0009 71	31	External Derate Commanded	Check Switch And Wiring
	31	External Derate Commanded	Check Switch And Wiring
0010 41	02	Start Signal Indicator Failure	Check Switch And Wiring
	03	Start Signal Indicator Active	Check Switch And Wiring
0010 75	05	Low Pressure Fuel Pump Circuit Has High Resistance	Contact Servicing Dealer
	06	Fuel Transfer Pump Current High or Grounded Circuit (Racor Fuel Pump Only).....	Contact Servicing Dealer
	08	Fuel Transfer Pump Failure	Contact Servicing Dealer

Continued on next page

OURGP11,000005E -19-12OCT06-4/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
0010 76	12	Low Pressure Fuel Pump Error Detected	Contact Servicing Dealer
	00	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	01	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	02	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	03	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	05	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	06	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	07	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	10	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
	13	Fuel Injection Pump Control Error.....	Contact Servicing Dealer
0010 77	07	Fuel Injection Pump Controller.....	Contact Servicing Dealer
	11	Fuel Injection Pump Controller.....	Contact Servicing Dealer
	12	Fuel Injection Pump Controller.....	Contact Servicing Dealer
	19	Fuel Injection Pump Controller.....	Contact Servicing Dealer
	31	Fuel Injection Pump Controller.....	Contact Servicing Dealer
0010 78	07	Fuel Injection Pump Speed/Position Sensor Error.....	Contact Servicing Dealer
	11	Fuel Injection Pump Speed/Position Sensor Error.....	Contact Servicing Dealer
	31	Fuel Injection Pump Speed/Position Sensor Failure	Contact Servicing Dealer
0010 79	03	Sensor Supply Voltage 3 Out of Range High	Check Wiring
	04	Sensor Supply Voltage 3 Out of Range Low	Check Wiring
0010 80	03	The Sensor Supply Voltage To The Rail Pressure Sensor Is Too High	Check Wiring
	04	The Sensor Supply Voltage To The Rail Pressure Sensor Is Too Low.....	Check Wiring
0011 09	31	Engine Not Available or Condition Exists	Check Fault Codes
0011 10	31	Engine Protection Shutdown	Check Fault Codes
0011 36	00	ECU Temperature Signal Extremely High	Check Sensor and Wiring
	16	ECU Temperature Signal Moderately High.....	Check Sensor and Wiring
0011 72	03	Compressor Inlet Temperature Signal Out of Range High	Check Sensor and Wiring
	04	Compressor Inlet Temperature Signal Out of Range Low.....	Check Sensor and Wiring
0011 80	00	Turbine Inlet Temperature Signal Extremely High	Contact Servicing Dealer
	16	Turbine Inlet Temperature Signal Moderately High	Contact Servicing Dealer
0013 47	05	The Circuit To Pump Solenoid #1 Is Open, Shorted To Ground, Or Overloaded	Check Pump Wiring
	07	High Pressure Fuel Pump Not Able to Meet Required Rail Pressure.....	Check Fuel Filter and Lines
	10	Pump Element #1 Is Not Delivering Expected Fuel Flow	Check Fuel Filter and Lines
0013 48	05	The Circuit To Pump Solenoid #2Is Open, Shorted To Ground, Or Overloaded	Contact Servicing Dealer

Continued on next page

OURGP11.000005E -19-12OCT06-5/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
	10	Pump Element #2 Is Not Delivering Expected Fuel Flow	Check Fuel Filter and Lines
0014 85	02	ECU Main Relay Pump Error	Contact Servicing Dealer
0015 68	02	Requested Torque Curve Signal Unreliable	Contact Servicing Dealer
0015 69	31	Engine In Derate Condition.....	Check Fault Codes
0016 39	01	Fan Speed Signal Missing	Contact Servicing Dealer
	16	Fan Speed Moderately High	Contact Servicing Dealer
	18	Fan Speed Moderately Low	Contact Servicing Dealer
0020 00	06	Fuel Injection Pump Control Valve Error.....	Contact Servicing Dealer
	13	Security Violation Controller Not Installed	Contact Servicing Dealer
0020 05	09	ACU Message Missing	Contact Servicing Dealer
	14	Communication Error	Contact Servicing Dealer
0020 30	09	VLC Message Missing.....	Contact Servicing Dealer
0020 71	09	CCU Message Missing	Contact Servicing Dealer
0026 30	00	Charge Air Cooler Outlet Temperature Signal Extremely High	Check Sensor and Wiring
	03	Charge Air Cooler Outlet Temperature Signal Out of Range High	Check Sensor and Wiring
	04	Charge Air Cooler Outlet Temperature Signal Out of Range Low	Check Sensor and Wiring
	15	Charge Air Cooler Outlet Temperature Signal Slightly High	Check Sensor and Wiring
	16	Charge Air Cooler Outlet Temperature Signal Moderately High	Check Sensor and Wiring
0026 59	02	EGR Mass Flow Rate Data Invalid.....	Contact Servicing Dealer
	15	EGR Mass Flow Rate Data Slightly High	Contact Servicing Dealer
	17	EGR Mass Flow Rate Data Slightly Low.....	Contact Servicing Dealer
0027 90	16	Calculated Turbine Outlet Temperature Moderately High	Contact Servicing Dealer
0027 91	02	EGR Valve Position Signal Invalid	Contact Servicing Dealer
	03	EGR Valve Position Signal Out of Range High.....	Check Sensor and Wiring
	04	EGR Valve Position Signal Out of Range Low	Check Sensor and Wiring
	07	EGR Valve Not Reaching Expected Position	Contact Servicing Dealer
	13	ERG Valve Calibration Change Error.....	Contact Servicing Dealer
	31	EGR Valve Calibration Change Over A Long Time.....	Contact Servicing Dealer
0027 95	07	VGT Actuator Not Reaching Expected Position.....	Contact Servicing Dealer
0035 09	03	Sensor Supply #1 Voltage Out of Range High	Check Sensor and Wiring
	04	Sensor Supply #1 Voltage Out of Range Low	Check Sensor and Wiring

Continued on next page

OURGP11,000005E -19-12OCT06-6/7

Troubleshooting

SPN	FMI	Fault	Corrective Action
0035 10	03	Sensor Supply #2 Voltage Out of Range High	Check Sensor and Wiring
	04	Sensor Supply #2 Voltage Out of Range Low	Check Sensor and Wiring
0035 11	03	Sensor Supply #3 Voltage Out of Range High	Check Sensor and Wiring
	04	Sensor Supply #3 Voltage Out of Range Low	Check Sensor and Wiring
0035 12	03	Sensor Supply #4 Voltage Out of Range High	Check Sensor and Wiring
	04	Sensor Supply #4 Voltage Out of Range Low	Check Sensor and Wiring
0035 13	03	Sensor Supply #5 Voltage Out of Range High	Check Sensor and Wiring
	04	Sensor Supply #5 Voltage Out of Range Low	Check Sensor and Wiring
0038 22	02	EGR Valve Position Signal Invalid	Check Sensor and Wiring
	03	Valve Position Signal Out of Range High	Check Sensor and Wiring
	04	EGR Valve Position Signal Out of Range Low	Check Sensor and Wiring
	07	EGR Valve Not Reaching Expected Position	Contact Servicing Dealer
	13	ERG Valve Calibration Change Error.....	Contact Servicing Dealer
	31	EGR Valve Calibration Change Over A Long Time.....	Contact Servicing Dealer
0649 81	02	EGR Valve Sensor] Voltage (Second)-Error	Check Wiring
	03	EGR Valve Sensor Voltage (Second)-High.....	Check Wiring
	04	EGR Valve Sensor Voltage (Second)-Low	Check Wiring
	05	EGR Valve Sensor Current (Second)-Low or Open Circuit	Check Wiring
	06	EGR Valve Sensor Voltage (Second)-Low or Grounded Circuit	Check Wiring
	07	EGR Valve (Second)-Error	Check Wiring
	13	EGR Valve Out of Calibration (Second).....	Check Wiring
	14	EGR Valve Drive Current (Second)-High	Check Wiring
	31	EGR Valve Position (Second)-Error	Check Wiring

Fault Code Listing in Ascending SPN/FMI Codes

NOTE: Diagnostic gauge on instrument panel may also display text for communication faults, for example, "CAN BUS FAILURE". Contact your servicing dealer.

OURGP11,000005E -19-12OCT06-7/7

Intermittent Fault Diagnostics

Intermittent faults are problems that periodically "go away". A problem such as a terminal that intermittently doesn't make contact can cause an intermittent fault. Other intermittent faults may be set only under certain operating conditions such as heavy load, extended idle etc. When diagnosing intermittent faults, take special note of the condition of wiring and connectors since a high percentage of intermittent problems originate here. Check for loose, dirty or disconnected connectors. Inspect the wiring routing looking for possible shorts caused by contact with external parts (for example, rubbing against sharp sheet metal edges). Inspect the connector vicinity looking for wires that have pulled out of connector terminals, damaged connectors, poorly positioned terminals, and corroded or damaged terminals. Look for broken wires, damaged splices, and wire-to-wire shorts. Use good judgement if component replacement is thought to be required.

NOTE: The Engine Control Unit (ECU) is the component **LEAST** likely to fail.

Suggestions for diagnosing intermittent faults:

If diagnostic charts on preceding pages indicate that the problem is intermittent, try to reproduce the operating conditions that were present when the Diagnostic Trouble Code (DTC) set.

If a faulty connection or wire is suspected to be the cause of the intermittent problem: clear DTCs, then check the connection or wire by wiggling it while watching the diagnostic gauge to see if the fault resets.

Possible Causes of Intermittent Faults:

1. Faulty connection between sensor or actuator and harness.
2. Faulty contact between terminals in connector.
3. Faulty terminal/wire connection.

Electromagnetic interference (EMI) from an improperly installed 2-way radio, etc. can cause faulty signals to be sent to the ECU.


NOTE: Refer to wiring diagrams later in this section as a guide to connections and wires.

OURGP12,000011D -19-12SEP06-1/1

Displaying Diagnostic Gauge Software

NOTE: The following steps can be used to display the software version of the diagnostic gauge if needed by your dealer for troubleshooting. This is a read only function.


1. Starting at the single or four engine parameter display, press the "Menu" key.

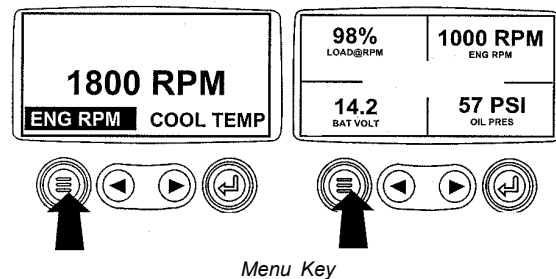

Menu Key

OMRGP15,000013F -19-12NOV10-1/4

2. The main menu will be displayed. Use the "Arrow" key to scroll through the menu until "Utilities" is highlighted.

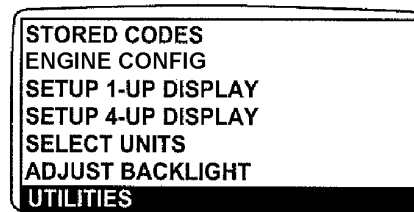

Select Utilities



Continued on next page

OMRGP15,000013F -19-12NOV10-2/4

RG13159 —UN—26SEP03

RG13234 —UN—22OCT03

 - Once "Utilities" is highlighted, press "Enter" to activate the utilities function.

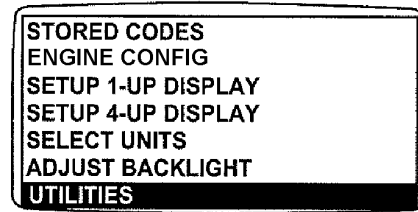

Select Utilities

OMRGP15,000013F -19-12NOV10-3/4

RG13237 —UN—22OCT03

- Scroll to the "Software Version". Press "Enter" to view the software version. Press the menu button twice to return to the main menu.



Software Version

OMRGP15,000013F -19-12NOV10-4/4

RG13236 —UN—13OCT03

Engine Troubleshooting

NOTE: Before troubleshooting the engine, first retrieve any fault codes on the diagnostic gauge display

and perform the corrective actions. (See earlier in this section.) If any problems remain, use the following charts to solve engine problems.

Symptom	Problem	Solution
Engine Will Not Crank	Weak battery	Replace battery.
	Corroded or loose battery connections	Clean battery terminals and connections.
	Defective main switch or start safety switch	Repair switch as required.
	Starter solenoid defective	Replace solenoid.
	Starter defective	Replace starter.
Hard to Start or Will Not Start	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Slow cranking speed	Check for problem in the charging/starting system.
	Too high viscosity crankcase oil	Drain crankcase oil and replace with correct viscosity oil.
	Electronic control system problem or basic engine problem	See your John Deere engine distributor or servicing dealer.
Engine Misfiring or Runs Irregularly	Electronic control system problem or basic engine problem	See your John Deere engine distributor or servicing dealer.
Lack of Engine Power	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Plugged fuel filter	Replace fuel filters.
	Engine overloaded	Reduce engine load.
	Improper crankcase oil	Drain crankcase oil and replace with correct viscosity oil.
	Electronic control system problem or basic engine problem	See your John Deere engine distributor or servicing dealer.
	Poor EGR valve (if equipped) wiring harness connection	Check EGR valve wiring harness for good connection (make sure it clicks).
	Engine overloaded	Reduce engine load.
Black or Gray Exhaust Smoke	Engine overloaded	Reduce engine load.

Continued on next page

OURGP11.0000073 -19-29FEB08-1/2

Symptom	Problem	Solution
	Engine burning oil	See <u>LUBRICATION SYSTEM TROUBLESHOOTING</u> , later in this section.
	Air cleaner restricted or dirty	Replace air cleaner element as required.
	Defective muffler/exhaust piping (causing back-pressure)	Replace muffler or defective piping.
	Electronic control system problem or basic engine problem	See your John Deere engine distributor or servicing dealer.
White Exhaust Smoke	Engine compression too low	Determine cause of low compression and repair as required. See your John Deere engine distributor or servicing dealer.
	Defective thermostat(s) (does not close)	Test thermostats; replace thermostats as required. (See Service as Required section.)
	Coolant entering combustion chamber (failed cylinder head gasket or cracked cylinder head)	Repair or replace as required. See your John Deere engine distributor or servicing dealer.
Engine Idles Poorly	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Air leak on suction side of air intake system	Check hose and pipe connections for tightness; repair as required.
	Electronic control system problem or basic engine problem	See your John Deere engine distributor or servicing dealer.

OURGP11,0000073 -19-29FEB08-2/2

Engine Troubleshooting (Continued)

Symptom	Problem	Solution
Excessive Fuel Consumption	Poor fuel quality	Drain fuel and replace with quality fuel of the proper grade.
	Engine overloaded	Reduce engine load.
	Air cleaner restricted or dirty	Replace air cleaner element as required.
	Compression too low	Determine cause of low compression and repair as required.
	Leaks in fuel supply system	Locate source of leak and repair as required.
Abnormal Engine Noise	Worn main or connecting rod bearings	Determine bearing clearance. See your John Deere engine distributor or servicing dealer.
	Excessive crankshaft end play	Check crankshaft end play. See your John Deere engine distributor or servicing dealer.
	Loose main bearing caps	Check bearing clearance; replace bearings and bearing cap screws as required. See your John Deere engine distributor or servicing dealer.
	Worn connecting rod bushings and piston pins	Inspect piston pins and bushings. See your John Deere engine distributor or servicing dealer.
	Scored pistons	Inspect pistons. See your John Deere engine distributor or servicing dealer.
	Worn timing gears or excess backlash	Check timing gear backlash. See your John Deere engine distributor or servicing dealer.
	Excessive valve clearance	Check and adjust valve clearance. See your John Deere engine distributor or servicing dealer.

Continued on next page

OMRGP15,000013A -19-11NOV10-1/2

Symptom	Problem	Solution
Abnormal Engine Noise <i>NOTE: Variable geometry turbocharger recycles after starting engine, causing a momentary revving sound in the engine. This is normal.</i> <i>Do not confuse the whine heard during turbocharger run down with noise which indicates a bearing failure. The whine heard during turbocharger run down is normal.</i>	Worn camshaft lobes	Inspect camshaft. See your John Deere engine distributor or servicing dealer.
	Worn rocker arm shaft(s)	Inspect rocker arm shafts. See your John Deere engine distributor or servicing dealer.
	Insufficient engine lubrication	See <u>LUBRICATION SYSTEM TROUBLESHOOTING</u> , later in this section.
	Turbocharger noise	See <u>AIR INTAKE SYSTEM TROUBLESHOOTING</u> , later in this section.

OMRGP15,000013A -19-11NOV10-2/2

Electrical Troubleshooting

Symptom	Problem	Solution
Undercharged system	Excessive electrical load from added accessories.	Remove accessories or install higher output alternator.
	Excessive engine idling.	Increase engine rpm when heavy electrical load is used.
	Poor electrical connections on battery, ground strap, starter, or alternator.	Inspect and clean as necessary.
	Defective battery.	Test batteries.
	Defective alternator.	Test charging system.
Battery used too much water	Cracked battery case.	Check for moisture and replace as necessary.
	Battery charging rate too high.	Test charging system.
Batteries will not charge	Loose or corroded connections.	Clean and tighten connections.
	Sulfated or worn-out batteries.	See your authorized servicing dealer or engine distributor.
	Stretched belt or defective belt tensioner.	Adjust belt tension or replace belts.
Starter will not crank	Engine drivelines engaged.	Disengage engine drivelines.
	Loose or corroded connections.	Clean and tighten loose connections.
	Low battery output voltage or discharged battery.	Charge or replace batteries.
	Faulty start circuit relay.	See your authorized servicing dealer or engine distributor.
	Blown fuse.	Replace fuse.
		Clean battery terminals and connections.
	Defective main switch or start safety switch	Repair switch as required.
	Starter solenoid defective	Replace solenoid.
	Starter defective	Replace starter.

Continued on next page

OURGP11,0000074 -19-19SEP06-1/2

Troubleshooting

Symptom	Problem	Solution
Starter cranks slowly	Low battery output.	Charge batteries.
	Crankcase oil too heavy.	Use proper viscosity oil.
	Loose or corroded connections.	Clean and tighten loose connections.
Starter and hour meter functions; rest of electrical system does not function	Blown fuse on magnetic switch.	Replace fuse.
Entire electrical system does not function	Faulty battery connection.	Clean and tighten connections.
	Sulfated or worn-out batteries.	Replace batteries.
	Blown fuse.	Replace fuse.

OURGP11,0000074 -19-19SEP06-2/2

Lubrication System Troubleshooting

Symptom	Problem	Solution
Low Oil Pressure	Low crankcase oil level	Fill crankcase to proper oil level.
	Crankcase oil level too high	Fill crankcase to proper oil level.
	Faulty pressure sensor	Replace sensor. See your John Deere engine distributor or servicing dealer.
	Clogged oil cooler or filter	Remove and inspect oil cooler. See your John Deere engine distributor or servicing dealer.
	Excessive oil temperature	Remove and inspect oil cooler. See your John Deere engine distributor or servicing dealer.
	Defective oil pump	Remove and inspect oil pump. See your John Deere engine distributor or servicing dealer.
	Incorrect oil	Drain crankcase and refill with correct oil.
	Oil pressure regulating valve failure	Remove and inspect oil pressure regulating valve. See your John Deere engine distributor or servicing dealer.
	Broken piston spray nozzle	Replace piston spray nozzle. See your John Deere engine distributor or servicing dealer.
	Clogged oil pump screen or cracked pick-up tube	Remove oil pan and clean screen/replace pick-up tube.
High Oil Pressure	Excessive main or connecting rod bearing clearance	Determine bearing clearance. See your John Deere engine distributor or servicing dealer.
	Improper oil classification	Drain crankcase and refill with correct oil.
	Faulty pressure sensor	Replace sensor. See your John Deere engine distributor or servicing dealer.

Continued on next page

OURGP11,0000075 -19-10NOV10-1/3

Symptom	Problem	Solution
	Oil pressure regulating valve bushing loose (wanders)	Remove and inspect oil pressure regulating valve. See your John Deere engine distributor or servicing dealer.
	Improperly operating regulating valve	Remove and inspect oil pressure regulating valve. See your John Deere engine distributor or servicing dealer.
	Plugged piston spray nozzle	Replace piston spray nozzle. See your John Deere engine distributor or servicing dealer.
	Stuck or damaged filter bypass valve	Remove and inspect filter bypass valve. See your John Deere engine distributor or servicing dealer.
	Stuck or damaged oil cooler bypass valve	Remove and inspect oil cooler bypass valve. See your John Deere engine distributor or servicing dealer.
Excessive Oil Consumption	Too low viscosity crankcase oil	Drain crankcase and refill with correct viscosity oil.
	Crankcase oil level too high	Drain oil until oil level is correct.
	External oil leak(s)	Determine source of oil leak(s) and repair as required.
	Oil control rings not seated	See your John Deere engine distributor or servicing dealer.
	Oil control rings worn or broken	Replace piston rings. See your John Deere engine distributor or servicing dealer.
	Scored cylinder liners or pistons	Remove and inspect cylinders and liners; replace as required. See your John Deere engine distributor or servicing dealer.
	Worn valve guides or stems	Inspect and measure valve stems and valve guides; repair as required. See your John Deere engine distributor or servicing dealer.
	Excessive oil pressure	See High Oil Pressure above.
Continued on next page		OURGP11.0000075 -19-10NOV10-2/3

Symptom	Problem	Solution
	Piston ring grooves excessively worn	Remove and inspect pistons. See your John Deere engine distributor or servicing dealer.
	Piston rings sticking in ring grooves	Remove and inspect pistons. See your John Deere engine distributor or servicing dealer.
	Insufficient piston ring tension	Remove and inspect pistons. See your John Deere engine distributor or servicing dealer.
	Piston ring gaps not staggered	Remove and inspect pistons. See your John Deere engine distributor or servicing dealer.
	Front and/or rear crankshaft oil seal faulty	Replace oil seals. See your John Deere engine distributor or servicing dealer.
		See <u>LOW PRESSURE FUEL SYSTEM TROUBLESHOOTING</u> later in this section.
Fuel in Oil		See <u>LOW PRESSURE FUEL SYSTEM TROUBLESHOOTING</u> later in this section.
Coolant in Oil		See <u>COOLING SYSTEM TROUBLESHOOTING</u> later in this section.

OURGP11,0000075 -19-10NOV10-3/3

Cooling System Troubleshooting

Symptom	Problem	Solution
Engine Overheats	Lack of coolant in cooling system	Fill cooling system to proper level.
	Radiator core and/or side screens dirty	Clean radiator as required.
	Engine overloaded	Reduce engine load.
	Too low crankcase oil level	Fill crankcase to proper oil level.
	Loose or defective fan belt	Replace fan belt as required. Check belt tensioner. (See Lubrication and Maintenance 500 Hour/12 Month section.)
	Defective thermostat(s)	Test thermostat opening temperature; replace thermostats as required. (See Lubrication and Maintenance 2000 Hour/24 Month section.)
	Damaged cylinder head gasket	Replace cylinder head gasket. See your John Deere engine distributor or servicing dealer.
	Defective coolant pump	Replace coolant pump. See your John Deere engine distributor or servicing dealer.
Coolant in Crankcase	Defective radiator cap	Replace radiator cap as required.
	Cylinder head gasket defective	Replace cylinder head gasket. See your John Deere engine distributor or servicing dealer.
	Cylinder head or block cracked	Locate crack, repair/replace components as required.
	Cylinder liner seals leaking	Remove and inspect cylinder liners. See your John Deere engine distributor or servicing dealer.
	Leaking oil cooler	Pressure test oil cooler; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Defective oil cooler O-rings	Remove and inspect oil cooler O-rings; replace as required. See your John Deere engine distributor or servicing dealer.

Continued on next page

OMRGP15,000013B -19-10DEC10-1/2

Troubleshooting

Symptom	Problem	Solution
Coolant Temperature Below Normal	Faulty coolant pump seal; weep hole plugged; coolant leaking through bearing	Replace coolant pump seals. See your John Deere engine distributor or servicing dealer.
	Faulty injector sleeve O-ring and EUI O-rings faulty	Remove suspected EUI; replace O-rings as required. See your John Deere engine distributor or servicing dealer.
	Defective thermostat(s)	Test thermostats; replace thermostats as required. (See Service as Required section.)

OMRGP15,000013B -19-10DEC10-2/2

Air Intake and Exhaust System Troubleshooting

If turbocharger requires replacement, determine what caused the failure of the defective unit, and correct the

condition. This will prevent an immediate repeat failure of the replacement unit.

Symptom	Problem	Solution
Hard to Start or Will Not Start		See ENGINE TROUBLESHOOTING earlier in this section.
Engine Misfiring or Runs Irregularly		See ENGINE TROUBLESHOOTING earlier in this section.
Black or Grey Exhaust Smoke		See ENGINE TROUBLESHOOTING earlier in this section.
Lack of Engine Power		See ENGINE TROUBLESHOOTING earlier in this section.
Turbocharger "Screams"	Air leak in intake manifold.	Check intake manifold gasket and manifold; repair as required. See your John Deere engine distributor or servicing dealer.
Turbocharger Noise or Vibration <i>NOTE: Variable geometry turbocharger recycles after starting engine, causing a momentary revving sound in the engine. This is normal.</i> <i>Do not confuse the whine heard during run down with noise which indicates a bearing failure.</i>	Bearings not lubricated (insufficient oil pressure)	Determine cause of lack of lubrication; repair as required. See your John Deere engine distributor or servicing dealer.
	Air leak in engine intake or exhaust manifold	Check intake and exhaust manifold gaskets and manifolds; repair as required. See your John Deere engine distributor or servicing dealer.
	Improper clearance between turbine wheel and turbine housing	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Broken blades (or other wheel failures)	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
Oil on Turbocharger Compressor Wheel or in Compressor Housing (Oil Being Pushed or Pulled through Center Housing)	Excessive crankcase pressure.	Determine cause of excessive crankcase pressure; repair as required. See your John Deere engine distributor or servicing dealer.

Continued on next page

OURGP11,000005F -19-10NOV10-1/3

Symptom	Problem	Solution
Oil in Intake Manifold or Dripping from Turbocharger Housing	Air intake restriction	Determine cause of intake restriction; repair as required. See your John Deere engine distributor or servicing dealer.
	Drain tube restriction	Determine cause of drain tube restriction; repair as required. See your John Deere engine distributor or servicing dealer.
	Excessive crankcase pressure	Determine cause of excessive crankcase pressure; repair as required. See your John Deere engine distributor or servicing dealer.
	Air intake restriction	Determine cause of intake restriction; repair as required. See your John Deere engine distributor or servicing dealer.
	Drain tube restriction	Determine cause of drain tube restriction; repair as required. See your John Deere engine distributor or servicing dealer.
	Damaged or worn housing bearings	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Unbalance of rotating assembly	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Damage to turbine or compressor wheel or blade	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Dirt or carbon build-up on wheel or blade	Check for air intake leaks (post air filter). Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Bearing wear	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Oil starvation or insufficient lubrication	Determine cause of lack of lubrication; repair as required. See your John Deere engine distributor or servicing dealer.

Continued on next page

OURGP11,000005F -19-10NOV10-2/3

Troubleshooting

Symptom	Problem	Solution
Turbocharger Turbine Wheel Drag	Shaft seals worn	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Carbon build-up behind turbine wheel caused by coked oil or combustion deposits	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Dirt build-up behind compressor wheel caused by air intake leaks	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.
	Bearing seizure or dirty, worn bearings	Inspect turbocharger; repair/replace as required. See your John Deere engine distributor or servicing dealer.


OURGP11,000005F -19-10NOV10-3/3

Low Pressure Fuel System Troubleshooting

Symptom	Problem	Solution
Fuel in Oil	Cracked or worn electronic unit injector (EUI) O-ring	Remove suspected EUI; replace EUI O-ring as required. See your John Deere engine distributor or servicing dealer.
	Cracked cylinder head	Locate crack; repair/replace components as required. See your John Deere engine distributor or servicing dealer.
Fuel Aeration	EUI hold-down clamp loose	Tighten hold-down clamp cap screw to proper torque. See your John Deere engine distributor or servicing dealer.
	Cracked or worn electronic unit injector (EUI) O-ring	Remove suspected EUI; replace EUI O-ring as required. See your John Deere engine distributor or servicing dealer.
Fuel Pressure Low	Plugged fuel filter	Replace fuel filter.
	Restricted fuel line	Locate restriction; repair as required.
	Faulty fuel transfer pump	Remove fuel transfer pump; repair/replace pump as required. See your John Deere engine distributor or servicing dealer.

RG,RG34710,7605 -19-12SEP06-1/1

Electrical System Layout

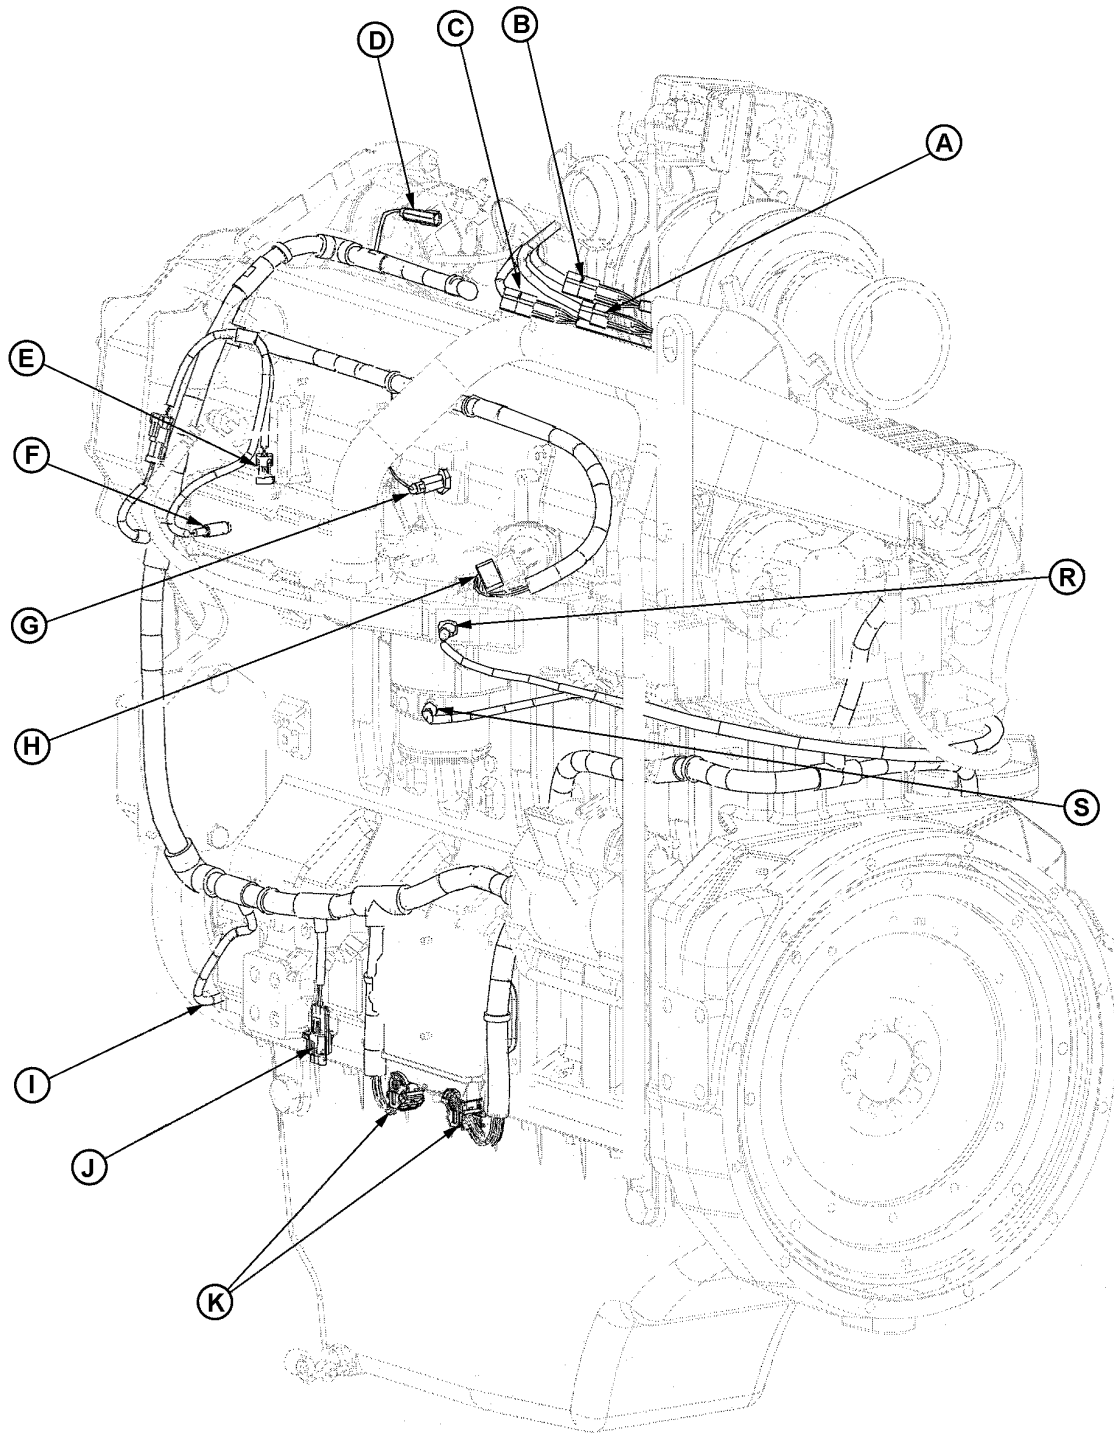


Electrical System Layout- Left Side

OMRGP15.0000136 -19-12SEP06-1/1

RG14343 —UN—12AUG05

Electrical System Layout- Continued

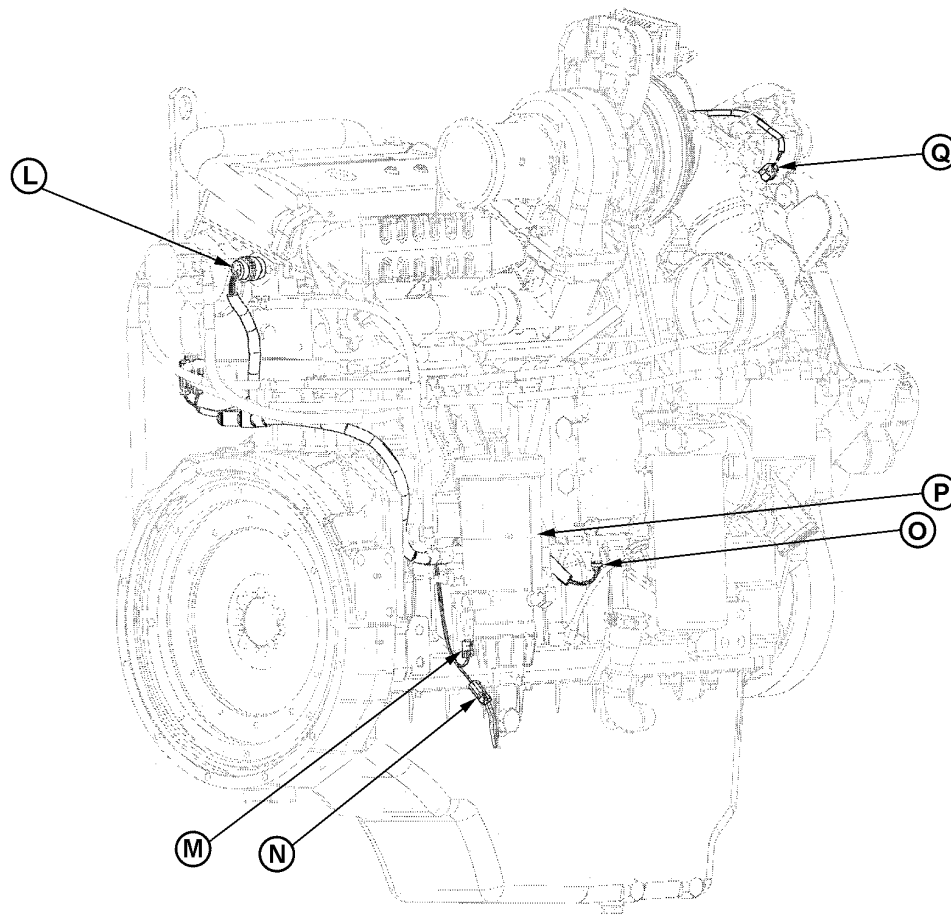

Electrical System Layout- Right Side

- | | | | |
|--|--------------------------------------|--|----------------------------------|
| A—Turbocharger Air Inlet Temperature Sensor Lead | E—Manifold Air Pressure (MAP) Sensor | J—Auxiliary Connector | P—Fuel Pressure Sensor |
| B—Turbocharger Actuator Connector Lead | F—EGR Temperature Sensor | K—Engine Control Unit (ECU) Connectors | Q—Coolant Temperature Sensor |
| C—Turbocharger Speed Sensor Lead | G—Engine Position (Cam) Sensor | L—Unit Injection Connector | R—Exhaust Air Temperature Sensor |
| D—Alternator Connector | H—Rear EGR Valve Connector | M—Fuel Temperature Sensor | S—Manifold Inlet Air Sensor |
| | I—Timing (Crank) Sensor | N—Water-In-Fuel Sensor | |
| | | O—Oil Pressure Sensor | |

OURGP11,0000079 -19-25SEP06-1/1

RG14344 —UN—05AUG05

Precautions for Welding on Vehicles Equipped with Electronic Engine Control Unit (ECU)

IMPORTANT: ALWAYS disconnect engine control unit (ECU) connectors and engine control system-to-vehicle ground before welding. High currents or electrostatic discharge in electronic components from welding may cause permanent damage.

1. Remove the ground connection for the engine control system-to-vehicle frame.
2. Disconnect the connectors from the ECU.
3. Connect the welder ground close to the welding point and be sure ECU or other electronic components are not in the ground path.



Welding Precautions

TS953—UN—15MAY90


DPSG,RG34710,102 -19-12SEP06-1/1

Precautions for Electrical System When Steam Cleaning Engine

IMPORTANT: Do not steam clean any electrical or electronic components while steam cleaning the engine as it could damage sensitive parts.

OURGP11,000012A -19-24AUG10-1/1

Engine Wiring Diagram (Engines With Full-Featured Instrument Panel)

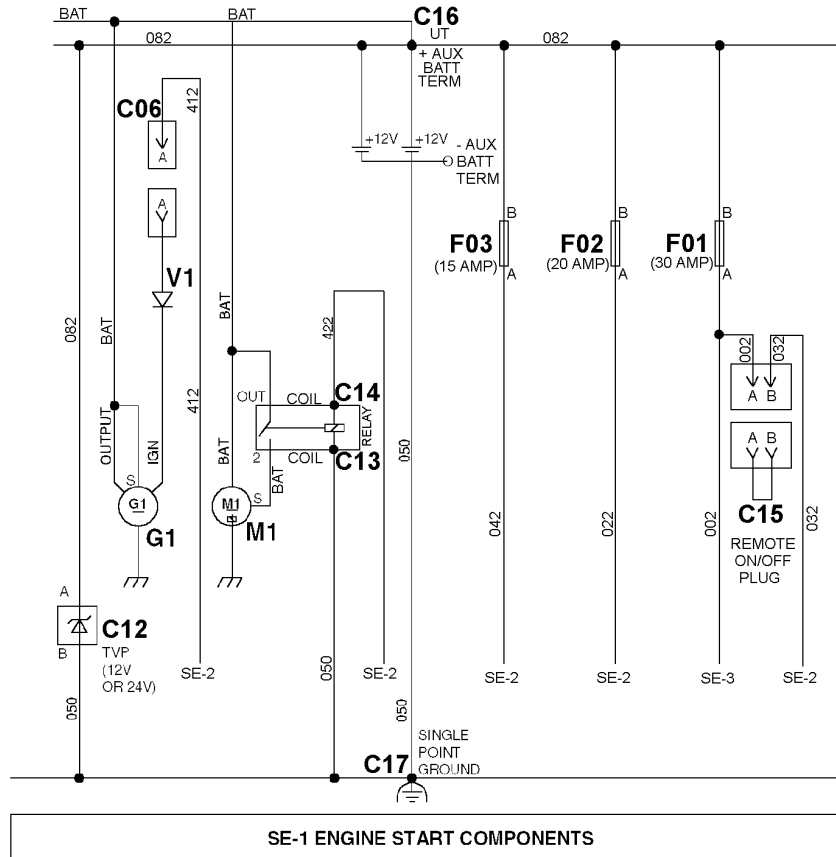

B1—Analog Throttle
 C06—Alternator Harness Connector
 C12—Transient Voltage Protector
 C13—Starter Relay
 C14—Starter Relay
 C15—Remote On/Off
 C16—Battery
 C17—Single Point Ground

F01—Fuse (30 Amp)(System)
 F02—Fuse (20 Amp)(ECU)
 F03—Fuse (15 Amp)(Fuel Filter)
 G1—Alternator
 M1—Starter Motor
 P1—Optional Gauge
 P2—Optional Gauge
 P3—Oil Pressure Gauge


P4—Coolant Temperature Gauge
 P5—Tachometer Display
 P6—Hour Meter/Diagnostic Gauge
 S1—Ignition Key Switch
 S2—Speed Select Switch (Momentary)
 S3—Bump Enable Switch (Momentary)

S4—High-Low Speed Select Switch
 S5—Override Shutdown Switch (Momentary)
 V1—Diode
 X1—Vehicle Harness Connector
 X4—CAN Terminator
 X5—Analog Throttle Connector

OURGP12,00000EC -19-12SEP06-1/1


RG13874—JUN—08APR05

 PN=160



- OURGP11,0000071 -19-19SEP06-1/1

Engine Wiring Diagram (Engines With Full-Featured Instrument Panel) (Continued)

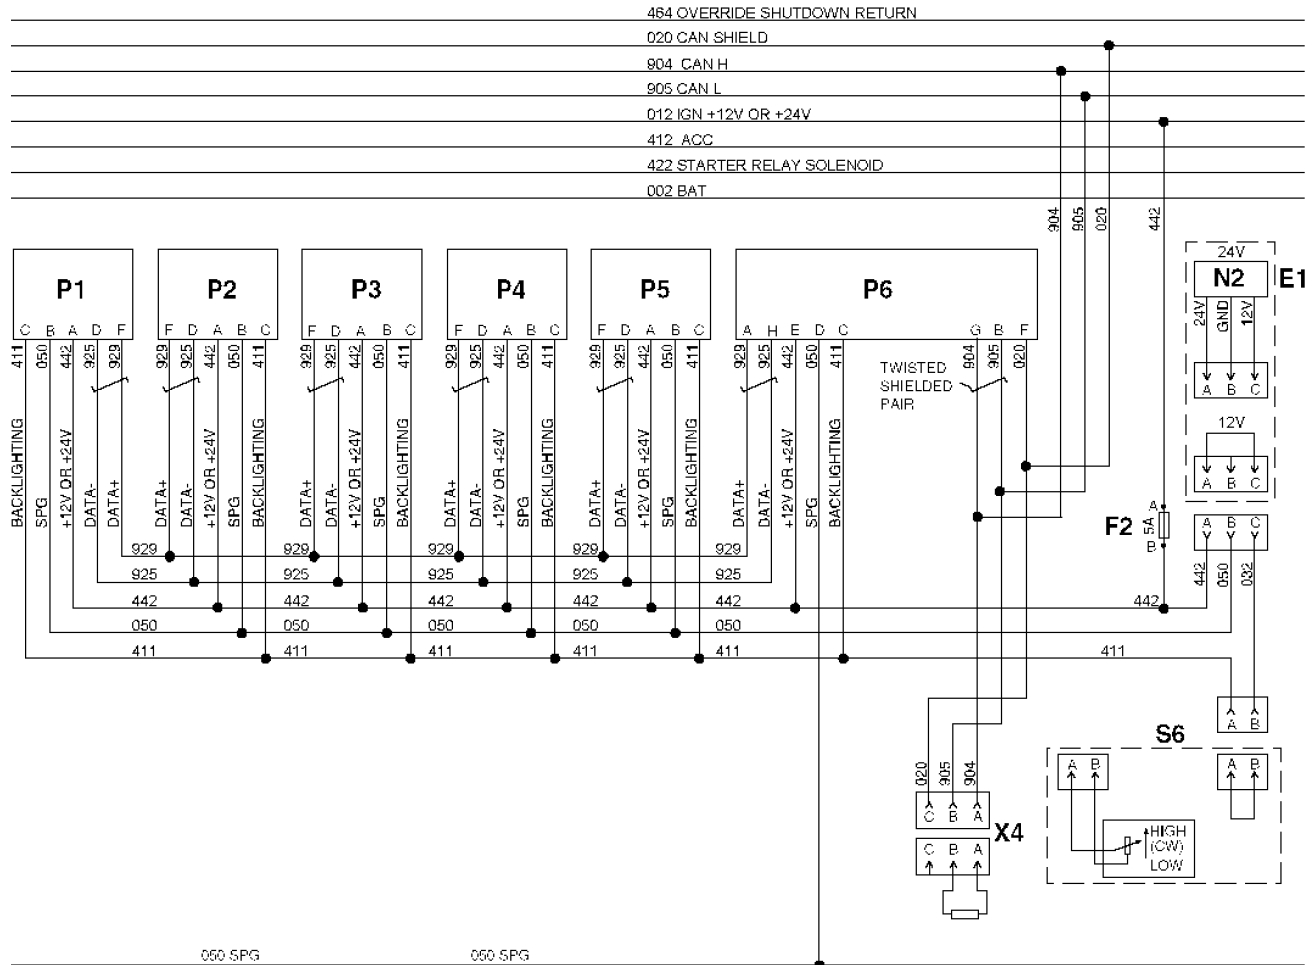

SE-2 INSTRUMENT PANEL (CONTINUED)

- | | | | |
|---|------------------------------|---|----------------------------------|
| E1—Back Light Regulator (24V) or Plug (12V) | P1—Optional Gauge | P5—Tachometer Display | S6—Dimmer Control or Jumper Plug |
| F2—Fuse (5 Amp) | P2—Optional Gauge | P6—Hourmeter/Diagnostic Meter | |
| N2—Voltage Regulator (for 24V Operation) | P3—Oil Pressure Gauge | S5—Override Shutdown Switch (Momentary) | X4—CAN Terminator |
| | P4—Coolant Temperature Gauge | | |

OURGP11,0000072 -19-25SEP06-1/1

RG10040A—19—13NOV01

Storage

Engine Storage Guidelines

IMPORTANT: Special considerations should be taken prior to storage when using BioDiesel. See BioDiesel Fuel in the Fuels, Lubricants, and Coolant Section.

1. John Deere engines can be stored outside for up to three months with no long-term preparation if covered by a waterproof covering. No outside storage is recommended without a waterproof covering.
2. John Deere engines can be stored in a standard overseas shipping container for up to three months with no long-term preparation.
3. John Deere engines can be stored inside for up to six months with no long-term preparation.
4. John Deere engines expected to be stored more than six months **must** have long-term storage preparation. See Preparing Engine for Long-Term Storage in the Storage Section.

OURGP12,00000DF -19-04FEB15-1/1

Preparing Engine for Long Term Storage

IMPORTANT: Any time your engine will not be used for over six months, the following recommendations for storing it and removing it from storage will help to minimize corrosion and deterioration.

IMPORTANT: Long-term storage is not advised when using BioDiesel. For storage longer than one year, use straight hydrocarbon fuel.

If BioDiesel must be used it is recommended the blend not exceed B7 and a high-quality fuel stabilizer be used. Storage should not exceed one year.

For more information see BioDiesel Fuel in the Fuels, Lubricants, and Coolants Section.

NOTE: The following storage preparations are used for long term engine storage up to one year. After that, the engine should be started, warmed up, and retreated for an extended storage period.

1. Change engine oil and replace filter. See [Changing Engine Oil and Replacing Oil Filter](#) in Lubrication and Maintenance/500 Hour Section. Used oil will not give adequate protection. Add one ounce of rust preventive oil to the engine crankcase for every quart of oil. This rust preventive oil should be an SAE 10W oil with 1-4 percent morpholine or equivalent vapor corrosion inhibitor, such as NOX RUST VCI-10 OIL from Daubert Chemical Company, Inc.
2. Service air cleaner. See [Replacing Air Cleaner Filter Elements](#) in the Service As Required Section.

IMPORTANT: Avoid damage to the engine cooling system components. Engine cooling system must be drained, flushed, and refilled for prolong storage of more than one year.

3. Draining and flushing of cooling system is not necessary if engine is to be stored only for several months. However, for extended storage periods of a year or longer, it is recommended that the cooling system be drained, flushed, and refilled. Refill with appropriate coolant. See [Adding Coolant](#) in the Service As Required Section.
4. Pour three ounces of rust preventive oil into the turbocharger intake. (It may be necessary to temporarily install a short intake elbow on the turbocharger inlet to receive the oil.)
5. Prepare a tank with a solution of diesel fuel and rust preventive oil, at ten ounces of rust preventive oil per gallon of diesel fuel.
6. Remove existing lines/plugs as required, and run a temporary line from the tank to the engine fuel intake,
7. Crank the engine several revolutions with starter (do not allow the engine to start). This will allow rust preventive oil solution to circulate.
8. Remove temporary lines installed in Step 6 above, and replace any lines/plugs previously removed.



RG35531 —UN—22MAR22



RG35532 —UN—22MAR22

Effects of Prolong Storage of Coolant — More Than One Year

and another temporary line from the fuel return to the tank, so rust preventive oil solution is circulated through the injection system during cranking.

NOTE: One gallon of fuel/oil solution can be used to treat 100 engines; two gallons to treat 200 engines, etc. The oil could then be replenished by adding an additional five ounces of rust preventive oil per gallon of solution. However, starting over with a new solution is recommended to dispose of any water or other impurities.

9. Loosen, or remove and store, fan/alternator poly-vee belt.
10. Remove and clean batteries. Store them in a cool, dry place and keep them fully charged.
11. Disengage the clutch for any driveline.

12. Clean the exterior of the engine with salt-free water and touch up any scratched or chipped painted surfaces with a good quality paint.
13. Coat all exposed (machined) metal surfaces with grease or corrosion inhibitor if not feasible to paint.
14. Seal all openings on engine with plastic bags and tape.
15. Store the engine in a dry protected place. If engine must be stored outside, cover it with a waterproof canvas or other suitable protective material and use a strong waterproof tape.

OURGP11,0000060 -19-23MAR22-2/2

Removing Engine from Long-Term Storage

Refer to the appropriate section for detailed services listed below or have your authorized servicing dealer or engine distributor perform services that you may not be familiar with.

1. Remove all protective coverings from engine. Unseal all openings in engine and remove covering from electrical systems.
2. Remove the batteries from storage. Install batteries (fully charged) and connect the terminals.
3. Install fan/alternator belts if removed.
4. Fill fuel tank.
5. Perform all appropriate prestarting checks. (See DAILY PRESTARTING CHECKS in Engine Operating Guidelines Section.)

IMPORTANT: DO NOT operate starter more than 30 seconds at a time. Wait at least 2 minutes for starter to cool before trying again.

6. Crank engine for 20 seconds with starter (do not allow the engine to start). Wait 2 minutes and crank engine an additional 20 seconds to assure bearing surfaces are adequately lubricated.
7. Start engine and run at low idle and no load for several minutes. Warm up carefully and check all gauges before placing engine under load.
8. On the first day of operation after storage, check overall engine for leaks and check all gauges for correct operation.

RG, RG34710, 4094 -19-12SEP06-1/1

Specifications

General OEM Engine Specifications

ITEM	6135HF485 (13.5L)
Number of Cylinders	6
Bore	132 mm (5.2 in.)
Stroke	165 mm (6.5 in.)
Displacement	13.5 L (824 cu in.)
Compression Ratio	17.5:1 (Low Power Engines) 16.0:1 (High Power Engines)
Aspiration	Turbocharged
Engine Firing Order	1-5-3-6-2-4
Valves Per Cylinder	2 Intake 2 Exhaust
Battery 12-Volt System Capacity 12-Volt System Reserve 24-Volt System Capacity 24-Volt System Reserve	1900 CCA 250 Minutes 925 CCA 275 Minutes
Thermostat Start To Open Temperature	80°C (176°F)
Thermostat Fully Open Temperature	92°C (197°F)
Coolant Capacity ^a	18 L (19 qt)
Recommended Radiator Pressure Cap	103 kPa (15 psi)
Crankcase Oil Fill Capacity	See "Engine Crankcase Oil Fill Quantities" later in this section.
Oil Pressure At Rated Speed With Oil Warmed to 105°C (220°F) (Maximum)	310 kPa (3.1 bar) (45 psi)
Oil Pressure At Low Idle (Minimum)	138 kPa (1.4 bar) (20 psi)
Length	1334 mm (52.5 in.)
Width	775 mm (30.5 in.)
Height	1350 mm (53.1 in.)
Weight (dry)	3292 kg (1493 lb)
ITEM	6135HF475 (13.5L)
Number of Cylinders	6
Bore	132 mm (5.2 in.)
Stroke	165 mm (6.5 in.)
Displacement	13.5 L (824 cu in.)
Compression Ratio	16.0:1
Aspiration	Turbocharged

Continued on next page

OMRGP15,0000141 -19-01DEC14-1/3

Specifications

ITEM	6135HF475 (13.5L)
Engine Firing Order	1-5-3-6-2-4
Valves Per Cylinder	2 Intake 2 Exhaust
Battery 12-Volt System Capacity 12-Volt System Reserve 24-Volt System Capacity 24-Volt System Reserve	1900 CCA 250 Minutes 925 CCA 275 Minutes
Thermostat Start To Open Temperature	80°C (176°F)
Thermostat Fully Open Temperature	92°C (197°F)
Coolant Capacity ^a	18 L (19 qt)
Recommended Radiator Pressure Cap	103 kPa (15 psi)
Crankcase Oil Fill Capacity	See "Engine Crankcase Oil Fill Quantities" later in this section.
Oil Pressure At Rated Speed With Oil Warmed to 105°C (220°F) (Maximum)	310 kPa (3.1 bar) (45 psi)
Oil Pressure At Low Idle (Minimum)	138 kPa (1.4 bar) (20 psi)
Length	1334 mm (52.5 in.)
Width	877 mm (34.5 in.)
Height	1512 mm (59.5 in.)
Weight (dry)	1493 kg (3292 lb)
ITEM	6135HFG75 (13.5L)
Number of Cylinders	6
Bore	132 mm (5.2 in.)
Stroke	165 mm (6.5 in.)
Displacement	13.5 L (824 cu in.)
Compression Ratio	16.0:1
Aspiration	Turbocharged
Engine Firing Order	1-5-3-6-2-4
Valves Per Cylinder	2 Intake 2 Exhaust
Battery 12-Volt System Capacity 12-Volt System Reserve 24-Volt System Capacity 24-Volt System Reserve	1900 CCA 250 Minutes 925 CCA 275 Minutes
Thermostat Start To Open Temperature	82°C (180°F)
Thermostat Fully Open Temperature	92°C (197°F)

Continued on next page

OMRGP15,0000141 -19-01DEC14-2/3

Specifications

ITEM	6135HF475 (13.5L)
Coolant Capacity ^a	18 L (19 qt)
Recommended Radiator Pressure Cap	103 kPa (15 psi)
Crankcase Oil Fill Capacity	See "Engine Crankcase Oil Fill Quantities" later in this section.
Oil Pressure At Rated Speed With Oil Warmed to 105°C (220°F) (Maximum)	310 kPa (3.1 bar) (45 psi)
Length	1362 mm (54 in.)
Width	857 mm (34 in.)
Height	1210 mm (48 in.)
Weight (dry)	1334 kg (2941 lb)

^aCoolant capacity may vary with different engine applications.

OMRGP15,0000141 -19-01DEC14-3/3

Specifications

Engine Power Ratings And Fuel System Specifications

vehicle application requirements. Refer to your machine operator's manual for engine speeds that are different from those preset at the factory

Engine speeds listed are preset to factory specification.
Slow idle speed may be reset depending upon specific

Engine Model	Fuel System Option Codes	Electronic Software Option Codes	System Voltage	Power Rating @ Rated Speed kW (hp)	Rated Speed (rpm)	Slow Idle (rpm)	Fast Idle (rpm)
6135HF485 Industrial	1669	7219	12V	448 (600)	2100	900	2300
	1669	7220	24V	448 (600)	2100	900	2300
	1669	7221	12V	410 (550)	2100	900	2300
	1669	7222	24V	410 (550)	2100	900	2300
	1669	7223	12V	410 (550) ^a	2100	900	2300
	1669	7224	24V	410 (550) ^a	2100	900	2300
	1669	7225	12V	392 (525) ^a	2100	900	2300
	1669	7226	24V	392 (525) ^a	2100	900	2300
	1669	7227	12V	373 (500)	2100	900	2300
	1669	7228	24V	373 (500)	2100	900	2300
	1669	7229	12V	373 (500) ^a	2100	900	2300
	1669	7230	24V	373 (500) ^a	2100	900	2300
	1669	7231	12V	373 (500) ^a	1900	900	2100
	1669	7232	24V	373 (500) ^a	1900	900	2100
	1669	7233	12V	336 (450)	2100	900	2300
	1669	7234	24V	336 (450)	2100	900	2300
	1669	7235	12V	336 (450) ^a	2100	900	2300
	1669	7236	24V	336 (450) ^a	2100	900	2300
	1669	7237	12V	336 (450) ^a	1900	900	2100
	1669	7238	24V	336 (450) ^a	1900	900	2100
	1669	7239	12V	317 (425) ^a	2100	900	2300
	1669	7240	24V	317 (425) ^a	2100	900	2300
	1669	7241	12V	298 (400)	2100	900	2300
	1669	7242	24V	298 (400)	2100	900	2300
	1669	7243	12V	298 (400) ^a	2100	900	2300
	1669	7244	24V	298 (400) ^a	2100	900	2300
	1669	7245	12V	298 (400) ^a	1900	900	2100
	1669	7246	24V	298 (400) ^a	1900	900	2100
	1669	7247	12V	261 (350)	2100	900	2300
	1669	7248	24V	261 (350)	2100	900	2300
	1669	7249	12V	261 (350) ^a	2100	900	2300
	1669	7250	24V	261 (350) ^a	2100	900	2300
	1669	7251	12V	261 (350) ^a	1900	900	2100
	1669	7252	24V	261 (350) ^a	1900	900	2100

Continued on next page

JR74534.0000373 -19-13APR11-1/2

Specifications

Engine Model	Fuel System Option Codes	Electronic Software Option Codes	System Voltage	Power Rating @ Rated Speed kW (hp)	Rated Speed (rpm)	Slow Idle (rpm)	Fast Idle (rpm)
6135HF485 GenSet	1669	7253	12V	401 (538)	1800	900	1850
	1669	7254	24V	401 (538)	1800	900	1850
	1669	7255	12V	460 (617)	1800	900	1850
	1669	7256	24V	460 (617)	1800	900	1850
	1669	7266	12V	345 (463)	1800	900	1850
	1669	7267	24V	345 (463)	1800	900	1850
6135HF475 GenSet	1676	7268	12V	475 (354)	1500	1000	N/A
	1676	7269	24V	475 (354)	1500	1000	N/A
	1676	7270	12V	543 (405)	1500	1000	N/A
	1676	7271	24V	543 (405)	1500	1000	N/A
	1676	7272	12V	611 (456)	1500	1000	N/A
	1676	7273	24V	611 (456)	1500	1000	N/A
	1676	72DA	12V	443 (330)	1800	1000	N/A
	1676	72DB	24V	443 (330)	1800	1000	N/A
	1676	72DC	12V	483 (360)	1800	1000	N/A
	1676	72DD	24V	483 (360)	1800	1000	N/A
	1676	72DE	12V	563 (420)	1800	1000	N/A
	1676	72DF	24V	563 (420)	1800	1000	N/A
	1676	72DG	12V	617 (460)	1800	1000	N/A
	1676	72DH	24V	617 (460)	1800	1000	N/A
6135HFC75 GenSet	1676	72S1	12V	563 (420)	1800	1000	N/A
	1676	72S2	24V	563 (420)	1800	1000	N/A

^a These industrial engines have a power bulge which allows for INTERMITTENT operation above rated power.

JR74534.0000373 -19-13APR11-2/2

Engine Crankcase Oil Fill Quantities



Option Code Label

To determine the crankcase oil fill quantity for your engine, refer to the oil pan option code (A) located on the engine option code label affixed to the valve cover. The first two digits of the code (19) identify the oil pan group. The last two digits of each code identify the specific oil pan on your engine.

Listed below are engine crankcase oil fill quantities with filter change for each oil pan option code and PTO configuration:

Engine Model	Oil Pan Option Codes	Crankcase Oil Capacity ^a
6135HF (Without John Deere Rear PTO)	1915, 1917, 1918 1914	40.0 L (42.3 qt.) 60.0 L (63.4 qt.)

^a Crankcase oil capacity may vary slightly from amount shown. ALWAYS fill crankcase to within crosshatch area on dipstick. DO NOT overfill.


NOTE: If engine is equipped with John Deere PTO, add an additional 4 L (4.2 qt) of oil to lubricate PTO gear train.

JR74534,0000372 -19-13APR11-1/1

RG14341 —UN—26JUL05

Unified Inch Bolt and Screw Torque Values

 TS1671 —UN—01MAY03




Bolt or Screw Size	SAE Grade 1 ^a				SAE Grade 2 ^b				SAE Grade 5, 5.1 or 5.2				SAE Grade 8 or 8.2			
	Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d		Hex Head ^c		Flange Head ^d	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
1/4	3.1	27.3	3.2	28.4	5.1	45.5	5.3	47.3	7.9	70.2	8.3	73.1	11.2	99.2	11.6	103
													N·m	lb·ft	N·m	lb·ft
5/16	6.1	54.1	6.5	57.7	10.2	90.2	10.9	96.2	15.7	139	16.8	149	22.2	16.4	23.7	17.5
									N·m	lb·ft	N·m	lb·ft				
3/8	10.5	93.6	11.5	102	17.6	156	19.2	170	27.3	20.1	29.7	21.9	38.5	28.4	41.9	30.9
					N·m	lb·ft	N·m	lb·ft								
7/16	16.7	148	18.4	163	27.8	20.5	30.6	22.6	43	31.7	47.3	34.9	60.6	44.7	66.8	49.3
	N·m	lb·ft	N·m	lb·ft												
1/2	25.9	19.1	28.2	20.8	43.1	31.8	47	34.7	66.6	49.1	72.8	53.7	94	69.3	103	75.8
9/16	36.7	27.1	40.5	29.9	61.1	45.1	67.5	49.8	94.6	69.8	104	77	134	98.5	148	109
5/8	51	37.6	55.9	41.2	85	62.7	93.1	68.7	131	96.9	144	106	186	137	203	150
3/4	89.5	66	98	72.3	149	110	164	121	230	170	252	186	325	240	357	263
7/8	144	106	157	116	144	106	157	116	370	273	405	299	522	385	572	422
1	216	159	236	174	216	159	236	174	556	410	609	449	785	579	860	634
1-1/8	305	225	335	247	305	225	335	247	685	505	751	554	1110	819	1218	898
1-1/4	427	315	469	346	427	315	469	346	957	706	1051	775	1552	1145	1703	1256
1-3/8	564	416	618	456	564	416	618	456	1264	932	1386	1022	2050	1512	2248	1658
1-1/2	743	548	815	601	743	548	815	601	1665	1228	1826	1347	2699	1991	2962	2185

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

TS1741 —UN—22MAY18

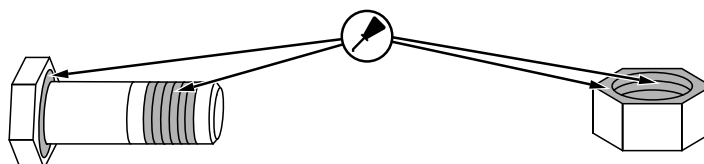

^aGrade 1 applies for hex cap screws over 6 in (152 mm) long, and for all other types of bolts and screws of any length.

^bGrade 2 applies for hex cap screws (not hex bolts) up to 6 in (152 mm) long.


^cHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^dHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

DX,TORQ1 -19-09MAY22-1/1

Metric Bolt and Screw Torque Values

TS1742 —UN—31MAY18

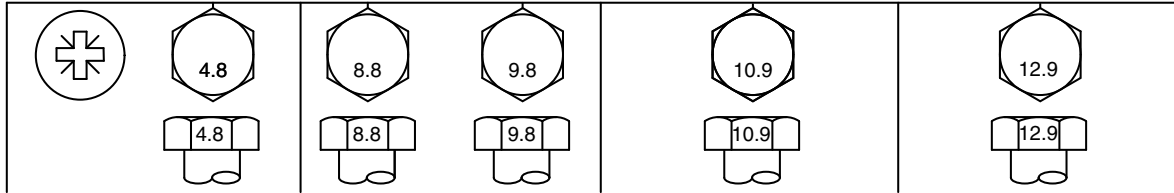


Bolt or Screw Size	Class 4.8				Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b		Hex Head ^a		Flange Head ^b	
	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in	N·m	lb·in
M6	3.6	31.9	3.9	34.5	6.7	59.3	7.3	64.6	9.8	86.7	10.8	95.6	11.5	102	12.6	112
									N·m	lb·ft	N·m	lb·ft	N·m	lb·ft	N·m	lb·ft
M8	8.6	76.1	9.4	83.2	16.2	143	17.6	156	23.8	17.6	25.9	19.1	27.8	20.5	30.3	22.3
			N·m	lb·ft	N·m	lb·ft	N·m	lb·ft								
M10	16.9	150	18.4	13.6	31.9	23.5	34.7	25.6	46.8	34.5	51	37.6	55	40.6	60	44.3
	N·m	lb·ft														
M12	—	—	—	—	55	40.6	61	45	81	59.7	89	65.6	95	70.1	105	77.4
M14	—	—	—	—	87	64.2	96	70.8	128	94.4	141	104	150	111	165	122
M16	—	—	—	—	135	99.6	149	110	198	146	219	162	232	171	257	190
M18	—	—	—	—	193	142	214	158	275	203	304	224	322	245	356	263
M20	—	—	—	—	272	201	301	222	387	285	428	316	453	334	501	370
M22	—	—	—	—	365	263	405	299	520	384	576	425	608	448	674	497
M24	—	—	—	—	468	345	518	382	666	491	738	544	780	575	864	637
M27	—	—	—	—	683	504	758	559	973	718	1080	797	1139	840	1263	932
M30	—	—	—	—	932	687	1029	759	1327	979	1466	1081	1553	1145	1715	1265
M33	—	—	—	—	1258	928	1398	1031	1788	1319	1986	1465	2092	1543	2324	1714
M36	—	—	—	—	1617	1193	1789	1319	2303	1699	2548	1879	2695	1988	2982	2199

The nominal torque values listed are for general use only with the assumed wrenching accuracy of 20%, such as a manual torque wrench. DO NOT use these values if a different torque value or tightening procedure is given for a specific application. For lock nuts, for stainless steel fasteners, or for nuts on U-bolts, see the tightening instructions for the specific application.

Replace fasteners with the same or higher property class. If higher property class fasteners are used, tighten these to the strength of the original.

- Make sure that fastener threads are clean.
- Apply a thin coat of Hy-Gard™ or equivalent oil under the head and on the threads of the fastener, as shown in the following image.
- Be conservative with the amount of oil to reduce the potential for hydraulic lockup in blind holes due to excessive oil.
- Properly start thread engagement.

TS1741 —UN—22MAY18

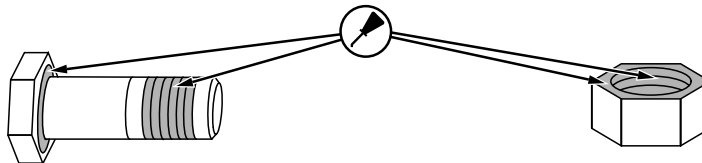

^aHex head column values are valid for ISO 4014 and ISO 4017 hex head, ISO 4162 hex socket head, and ISO 4032 hex nuts.

^bHex flange column values are valid for ASME B18.2.3.9M, ISO 4161, or EN 1665 hex flange products.

Lubrication and Maintenance Records

Using Lubrication and Maintenance Records

Refer to specific Lubrication and Maintenance section for detailed service procedures.

1. Keep a record of the number of hours you operate your engine by regular observation of hour meter.
2. Check your record regularly to learn when your engine needs service.
3. DO ALL the services within an interval section. Write the number of hours (from your service records) and

the date in the spaces provided. For a complete listing of all items to be performed and the service intervals required, refer to the quick-reference chart near the front of the Lubrication and Maintenance section.

IMPORTANT: The service recommendations covered in this manual are for the accessories that are provided by John Deere. Follow manufacturer's service recommendations for servicing engine-driven equipment not supplied by Deere.

RG, RG34710, 7621 -19-12SEP06-1/1

Daily (Prestarting) Service

NOTE: Refer to DAILY PRESTARTING CHECKS in Lubrication and Maintenance/Daily section.

- Check engine oil level.

- Check coolant level.
- Check fuel filter/water separator.
- Check air cleaner dust unloader valve and air restriction indicator, if equipped.
- Visual walkaround inspection.

RG, RG34710, 7622 -19-30SEP10-1/1

500 Hours of Operation/or 12 Months Service

- Service fire extinguisher.
- Service battery.
- Change engine oil and oil filter.¹²
- Check coolant pump weep hole.
- Replace fuel filters.
- Check and adjust engine speeds.

- Check engine mounts.
- Clean crankcase vent hose and valve.
- Check air intake hoses, connections, and system.
- Check engine ground connection.
- Check automatic belt tensioner and belt wear.
- Pressure test overall cooling system and radiator cap.

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

¹During engine break-in, change the oil and filter for the first time after a minimum of 100 hours of operation (500 hours maximum).

²Service intervals depend on sulfur content of the diesel fuel, oil pan capacity, and the oil and filter used. (See DIESEL ENGINE OIL AND FILTER SERVICE INTERVALS, in Fuels, Lubricants, and Coolant Section.)

OURGP11, 0000066 -19-12JUN13-1/1

2000 Hours of Operation/or 24 Months Service

- Test thermostats.

- Check crankshaft vibration damper.

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

JR74534,0000376 -19-13APR11-1/1

2500 Hours of Operation Service

- Have your authorized servicing dealer or engine distributor check and adjust valve clearance and electronic unit injector (EUI) preload.

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

RG, RG34710,7626 -19-19SEP13-1/1

Service as Required

- Flush and refill cooling system.¹
- Add coolant.
- Replace air cleaner filter elements.
- Clean fuel filter water separator bowl.

- Bleed fuel system.
- Replace fan/alternator V-belts.
- Check fuses.
- Service air compressor. (See your John Deere dealer.)
- Service rear PTO (See your John Deere dealer.)

Hours									
Date									
Hours									
Date									
Hours									
Date									
Hours									
Date									

¹ When John Deere COOL-GARD is used, the flushing interval is 3000 hours or 36 months. The drain interval may be extended to 5000 hours or 60 months of operation provided that the coolant is tested annually AND additives are replenished, as needed, by adding a supplemental coolant additive.

JR74534,0000377 -19-13APR11-1/1

Warranty

John Deere Warranty in OEM Applications

Overview

This section focuses on John Deere engines marketed in products manufactured by companies other than John Deere or its affiliates, and on John Deere repower engines in all applications. Herein appears the original warranty applicable to the engine as delivered to the retail purchaser on or after 1 May 2010. The following is information about the warranty and warranty service.

NOTE: "John Deere" means John Deere Power Systems with respect to users in the United States, John Deere Canada ULC with respect to users in Canada, and Deere & Company or its subsidiary responsible for making John Deere equipment in other countries where the user is located.

Promptly register the engine online at <https://warrantyregistration.deere.com/WarrantyReg/web/WarrantyReg>.

When Warranty Service Is Needed

The nearest dealer stands ready with genuine parts and trained and equipped personnel should the need arise. If following the Operator's Manual delivered with the engine/machine are not adequate to correct an engine problem, contact the nearest John Deere service dealer for assistance. Authorized engine service dealers can be found at: <https://www.deere.com> or <https://www.deere.ca> (click on "Find a Dealer").

NOTE: When requesting warranty service, the purchaser must be prepared to provide proof that the engine is within the warranty period.

The following information is always required: Engine serial number, date of delivery, engine owner, name and location of dealer and specific person contacted, date of contact, nature of engine problem, and outcome of the service dealer contact.

Given that normally it is the dealer contacted who in the end provides the service required, maintaining a purchaser-dealer relationship of mutual respect from the beginning is always helpful.

Privacy Notice

At John Deere privacy is important. We collect, use, and disclose personal information in accordance with the John Deere privacy statement. For instance, we collect, use, and disclose personal information to provide the products and services requested; to communicate with the customer (examples include warranty and product improvement programs) and to meet safety and legal requirements; and for marketing and promotional purposes. Sometimes, we may ask our John Deere affiliates, dealers, or business partners to do work for us, which involves personal information. For complete details on privacy rights and to obtain a copy of the John Deere Privacy Statement, visit our website at <https://www.deere.com> or <https://www.deere.ca>.

Warranty Duration

Unless otherwise provided in writing by John Deere, John Deere makes the following warranty to the first retail purchaser and each subsequent purchaser (if purchase is made prior to the expiration of applicable warranty) of each John Deere new off-highway engine marketed as part of a product manufactured by a company other than John Deere or its affiliates and on each John Deere engine used in an off-highway repower application:

- 12 months, unlimited hours of use, or
- 24 months and before the accumulation of 2000 hours of use

NOTE: In the absence of a functional hourmeter, hours of use are determined on the basis of 12 hours of use per calendar day.

Warranty Coverage

This warranty applies to the engine and to integral components and accessories sold by John Deere, and delivered to the first retail purchaser on or after 1 May 2010.

All John Deere-warranted parts and components of John Deere engines which, as delivered to the purchaser, are defective in materials and/or workmanship will be repaired or replaced, as John Deere elects. Warrantable repairs will be made without charge for parts or engine repair labor, including reasonable labor costs to remove and reinstall non-engine parts or components of the equipment in which the engine is installed. If necessary, reasonable labor costs for engine removal and reinstallation will also be included. All coverage is based on the defect appearing within the warranty period as measured from the date of delivery to the first retail purchaser.

Obtaining Warranty Service

Warranty service must be requested of the nearest authorized John Deere engine service outlet before the expiration of the warranty. An *authorized* service outlet is a John Deere engine distributor, a John Deere engine service dealer, or a John Deere equipment dealer selling and servicing equipment with an engine of the type covered by this warranty. (See When Warranty Service is Needed.)

Authorized service outlets will use only new or remanufactured parts or components furnished or approved by John Deere.

NOTE: Authorized engine service locations are listed on the Internet at <https://www.deere.com> or <https://www.deere.ca> (click on "Find a Dealer").

At the time of requesting warranty service, the purchaser must be prepared to present evidence of the date of delivery of the engine.

Continued on next page

CM22194,00011A1 -19-10MAY22-1/3

John Deere reimburses authorized service outlets for limited travel expenses incurred in making warranty service repairs in non-John Deere applications when travel is performed. The limit, as of the date of publication of this booklet, is US\$400.00 (US\$500.00 if engine is marine) or equivalent. **If distances and travel times are greater than reimbursed by John Deere, the service outlet will charge the purchaser for the difference.**

Warranty Exclusions

John Deere's obligations will not apply to components and accessories that are not furnished or installed by John Deere, nor to failures caused by such items, except as required by law.

Purchaser's Responsibilities

The cost of normal maintenance and depreciation.

Consequences of negligence, misuse, or accident involving the product, or improper application, installation, or storage.

Consequences of service performed by someone other than an authorized John Deere engine service outlet.

Consequences of any product modification or alteration not approved by John Deere, including, but not limited to, tampering with engine fuel and air delivery systems.

Consequences of failure of non-product components.

Consequences of fuels, lubricants, or coolants that fail to meet the specifications and requirements listed in the Operator's Manual.

The effects of cooling system neglect as manifested in cylinder liner or cylinder block cavitation ("pitting", "erosion", "electrolysis").

Any premium for overtime labor requested by the purchaser.

Costs of transporting the product or the equipment in which it is installed to and from the location at which the warranty service is performed, if such costs are in excess of the travel reimbursement payable to the dealer had the warranty service been performed at the product's location.

Costs incurred in gaining access; for example, overcoming physical barriers such as walls, fences, floors, decks, or similar structures impeding access to the product, rental of cranes or similar, or construction of ramps or lifts or protective structures for product removal and reinstallation.

Incidental travel costs including meals, lodging, and similar, and any travel time or mileage costs in excess of the maximum allowance.

Service outlet costs incurred in solving or attempting to solve non-warrantable problems.

Services performed by a party other than an authorized John Deere service dealer.

Charges by dealers for initial start-up and inspection deemed unnecessary by John Deere when an Operator's Manual is supplied with the product are followed.

Costs related to interpretation or translation services.

No Representations or Implied Warranty

Where permitted by law, neither John Deere nor any company affiliated with it makes any guaranties, warranties, conditions, representations or promises, express or implied, oral or written, as to the nonoccurrence of any defect or the quality of performance of its engines other than those set forth in this booklet, and DOES NOT MAKE ANY IMPLIED WARRANTY OR CONDITIONS OF MERCHANTABILITY OR FITNESS otherwise provided for in the Uniform Commercial Code or required by any Sale of Goods Act or any other statute. This exclusion includes fundamental terms. In no event will a John Deere engine distributor or engine service dealer, John Deere equipment dealer, or John Deere or any company affiliated with John Deere be liable for incidental or consequential damages or injuries including, but not limited to, loss of profits, loss of crops, rental of substitute equipment or other commercial loss, damage to the equipment in which the engine is installed or for damage suffered by purchaser as a result of fundamental breaches of contract or breach of fundamental terms, unless such damages or injuries are caused by the gross negligence or intentional acts of the foregoing parties.

Remedy Limitation

The remedies set forth in this warranty are the purchaser's exclusive remedies in connection with the performance of, or any breach of guaranty, condition, or warranty in respect of new John Deere engines. In the event the warranty fails to correct purchaser's performance problems caused by defects in workmanship and/or materials, purchaser's exclusive remedy shall be limited to payment by John Deere of actual damages in an amount not to exceed the cost of the engine.

No Seller's Warranty

No person or entity, other than John Deere, who sells the engine or product in which the engine has been installed makes any guaranty or warranty of its own on any engine warranted by John Deere unless it delivers to the purchaser a separate written guaranty certificate specifically guaranteeing the engine, in which case John Deere shall have no obligation to the purchaser. Neither original equipment manufacturers, engine or equipment distributors, engine or equipment dealers, nor any other person or entity, has any authority to make any representation or promise on behalf of John Deere or to modify the terms or limitations of this warranty in any way.

Replacement Parts Warranty

John Deere and John Deere Reman parts and components (excluding replacement engines) installed during engine warranty service are warranted for the remaining warranty period of the engine or the applicable warranty term for the installed service part, whichever is greater. A new or remanufactured engine replacing a failed engine under warranty is warranted for 90 days or the remaining warranty period of the original engine, whichever is greater.

Warranty Transfer

The remainder of the original engine warranty and the emissions control-related warranty may be transferred to a subsequent owner of the engine. The Engine Warranty Transfer card should be used to report the transfer to John Deere. If a card is not available, contact your Dealer or simply send the following Information to JDPS Warranty Administration at Diesel-US@JohnDeere.com.

1. The complete 13-character engine serial number.
2. The name and mailing address of the original purchaser.
3. Delivery date to the original purchaser.
4. Hours at the time of transfer.
5. Date of transfer to the new owner.
6. Name and mailing address of the new owner.
7. How the engine/drivetrain being used, that is, what equipment it powers, by manufacturer and model.
8. Equipment it powers, by manufacturer and model.

Purchased Extended Warranty

Extended warranty may be purchased on most engines in many areas of the world. John Deere engine distributors and equipment dealers, and dealers of manufacturers using John Deere engines in their products, have details. John Deere may also be contacted at U.S.A. fax number 1-309-749-0816, or in Europe fax number 33.2.38.84.62.66.

Emissions Warranties

Emissions warranties appear in the Operator's Manual furnished with the engine/machine. **(Warning: Statutes providing severe penalties for tampering with emissions controls may apply at the user's location.)** John Deere may also be contacted at U.S.A. fax number 1-309-749-0816; or in Europe fax number 33.2.38.84.62.66.

Local Warranty Requirements

Warranties required by local statutes will be furnished by the seller.

Option Codes (Engine Manufacturing Configuration)

When in need of engine replacement parts, your authorized John Deere service dealer will must know the corresponding "Option Codes" for your engine. The option code label on the engine rocker arm cover may become damaged over time. By recording the four-digit codes when the engine is new, and storing this manual where it can be found when parts are needed, fast, accurate parts ordering and service will be assured. See Engine Option Codes in Section 01.

Should there be a question about an engine option code, note the engine serial number and call 1-800-JDENGINE from the U.S.A. or Canada, or fax U.S.A. number 1-309-749-0816; or E-mail at diesel-us@johndeere.com, Attention: Warranty Administration; or in Europe fax number 33.2.38.84.62.66, or E-mail at saranservice@johndeere.com.

Registering the Engine for Warranty

Completion and submission of the John Deere Engine Warranty Registration form (cut out sheet found in this manual) is important. John Deere will not deny warranty service on an engine within its warranty period if the engine has not been registered. However, registering your engine will assure your servicing dealer that the engine is within the warranty period.

The easiest way to register your engine is via the Internet. Go to website <https://www.johndeere.com/enginewarranty>. You can use the sheet in this manual to gather the information needed to register the warranty.

NOTE: Information provided on the form must be legible!


Typing is preferred, but legible handwritten reports are acceptable. "Block" numbers and Roman alphabet letters should be used. For example: 1,2,3,4 and A, B, C, D.

All requested information should be given. Much of it contributes to reports, including those required by governments.

The purchaser's telephone number or E-mail address allows John Deere to make contact should there be questions concerning the registration. The purchaser should sign and date the form.

CM22194,00011A1 -19-10MAY22-3/3

Emissions Control System Certification Label

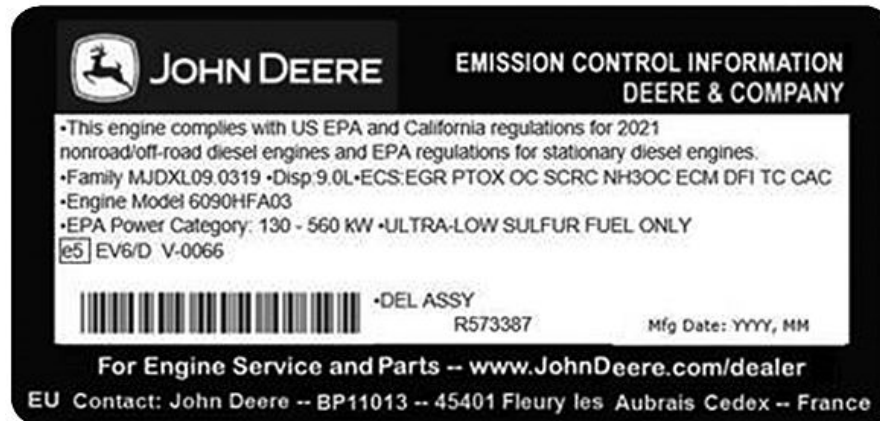

Engine Emissions Label

⚠ CAUTION: Statutes providing severe penalties for tampering with emissions controls may apply to the user or dealer.

The emissions warranty applies to those engines marketed by John Deere that have been certified by the United States Environmental Protection Agency (EPA) and/or California Air Resources Board (CARB); and used in the United States and Canada in Non-road equipment. The presence of an emissions label like the one shown signifies that the engine has been certified with the EPA and/or CARB. The EPA and CARB warranties only apply to new engines having the certification label affixed to the engine and sold as stated above in the geographic areas. The presence of an EU number signifies that the engine has been certified with the European Union countries per Regulation (EU) 2016/1628 and supplementing legislation. The EPA and/or CARB emissions warranties do not apply to the EU countries.

The emissions label has applicable US EPA and/or CARB regulatory year. The regulatory year determines which warranty statement is applicable to engine. See "EPA Non-road Emissions Control Warranty Statement—Compression Ignition" and "CARB Non-road Emissions Control Warranty Statement—Compression Ignition". For additional regulatory year warranty statements, see www.JohnDeere.com or contact the nearest John Deere service dealer for assistance.

Emission Control System(s) Laws

The U.S. EPA and California ARB prohibit the removal or rendering inoperative of any device or element of design installed on or in engines/equipment in compliance with applicable emission regulations prior to or after the sale and delivery of the engines/equipment to the ultimate purchaser.

DX,EMISSIONS,LABEL -19-05FEB21-1/1

RG33429 —UN—04FEB21

EPA Non-road Emissions Control Warranty Statement—Compression Ignition

DXLOGOV1 —UN—28APR09



JOHN DEERE

U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission- related components include engine parts developed to control emissions related to the following:

Air-Induction System	Aftertreatment Devices
Fuel System	Crankcase Ventilation Valves
Ignition System	Sensors
Exhaust Gas Recirculation Systems	Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

Continued on next page

DX,EMISSIONS,EPA -19-12DEC12-1/2



JOHN DEERE

**U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT
YOUR WARRANTY RIGHTS AND OBLIGATIONS**

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission- related components include engine parts developed to control emissions related to the following:

Air-Induction System
Fuel System
Ignition System
Exhaust Gas Recirculation Systems

Aftertreatment Devices
Crankcase Ventilation Valves
Sensors
Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

DX,EMISSIONS,EPA -19-12DEC12-2/2

TS1721 —UN—15JUL13

CARB Non-road Emissions Control Warranty Statement—Compression Ignition

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-1/8

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-2/8

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-3/8

RG29280 —UN—02FEB17

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-4/8

RG29281 —UN—27FEB17

Emissions Control Warranty Statement 2022 through 2024

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and California regulations for nonroad/off-road diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2022 through 2024 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB. John Deere warrants that this engine is free from defects in materials and workmanship which would cause the failure of emissions warranted parts to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. This applies to all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-5/8

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (14Apr20)

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-6/8

Emissions Control Warranty Statement 2022 through 2024

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and California regulations for nonroad/off-road diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2022 through 2024 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB. John Deere warrants that this engine is free from defects in materials and workmanship which would cause the failure of emissions warranted parts to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. This applies to all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-26AUG20-7/8

RG32758 —UN—19AUG20

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (14Apr20)

DX,EMISSIONS,CARB -19-26AUG20-8/8

RG32759 —UN—19AUG20

Index

	Page		Page
A			
Additional Service Information	50-1	Pressure test	35-17
Air cleaner, replace elements	50-5	Troubleshooting	55-21
Air compressor	50-9	Crankcase vent tube, clean and inspect	35-11
Air intake system		Crankshaft vibration damper	40-1
Check	35-12		
Troubleshooting	55-23	D	
Auxiliary gear drive, limitations	20-3	Daily prestarting checks	30-1
Avoid static electricity risk when fueling	05-6	DG14 Diagnostic Gauge	
B		Essential Menus	15-10
Batteries		Main Menu	15-9
Charge/boost	20-11	Using	15-8
Battery		Diagnostic Gauge Software	55-10
Capacities	35-1	Diagnostic procedure	55-2
Service	35-1	Diagnostic trouble codes (DTCs)	
Battery Handling, Safety		Active engine service codes, viewing	15-19
Safety, Battery Handling	05-7	Diagnosisg intermittent faults	55-10
Belts, fan and alternator		Instrument panel	55-2
Checking belt tensioner	35-13	List of codes	55-3
Replacing	50-8	Stored service codes, viewing	15-17
Routing	50-9	Diesel engine oil	
Biodiesel fuel	10-3	Tier 3 and stage IIIA	10-7
Bleed fuel system	50-7	Diesel engines, cold weather effect	10-5
Bolt and screw torque values		Diesel fuel	10-1
Metric	65-8	Supplemental additives	10-2
Unified inch	65-7	Diesel fuel, testing	10-4
Break-in engine oil		DTC, Diagnostic Trouble Codes	55-2
Non-Emissions certified and certified tier		DTCs (Diagnostic Trouble Codes)	
1, tier 2, tier 3, stage I, stage II, and stage III	10-6	List of codes	55-3
Break-in, engine	20-1	View active service codes	15-19
C		View stored service codes	15-17
Chart, service interval (generator standby)	25-3	E	
Chart, service interval (industrial)	25-2	Effect of cold weather on diesel engines	10-5
Cleaning Engine	55-28	Electrical	
Cold weather aids	20-7	Troubleshooting	55-16
Compressor, air	50-9	Electrical system layout	55-26
Configuration data, viewing	15-16	Emergency Stationary Regulations	01-5
Coolant		Emission system	
Adding	50-1	Certification label	75-4
Diesel engine		Emissions	
Engine with wet sleeve cylinder liners	10-11	Required language	
Disposing	10-13	EPA	25-1
Mixing with concentrate, water quality	10-12	Emissions Label	01-5
Replenishing supplemental additives	35-16	Emissions Regulations	01-5
Testing	35-15	Engine	
Testing freeze point	10-13	Adjust speed	35-11
Warm temperature climates	10-12	Break-in	20-1
Coolant pump, inspect	35-5	Changing speed	20-8
Cooling system		Check ground connection	35-12
Adding coolant	50-1	Daily prestarting checks	30-1
Check	35-14	Idling	20-9
Flush and refill	50-2	Normal operation	20-6
		Running out of fuel	20-5
		Starting	20-4

Continued on next page

F

Fan belt	
Check tensioner	35-13
Replace	50-8
Routing	50-9
Filter	
Fuel, replace	35-5
Fire extinguisher, service	35-1
Foreword	-4
Fuel	
Biodiesel	10-3
Diesel	10-1
Handling and storing	10-2
Lubricity	10-2
Fuel filter	
Drain water separator	50-6
Water separator bowl	35-7
Fuel Filters	
Filters, Fuel	10-4
Fuel system	
Bleeding	50-7
Draining water separator bowl	50-6
Troubleshooting	55-25
Fuel System Modifications	45-1
Fuel system, bleed	50-7
Fuels, lubricants and coolant	25-1
Fuse, checking	50-9

Generator set (standby) applications..... 20-3

John Deere PowerSight..... 15-37

M

Continued on next page

	Page		Page
Maintenance Checklist, 500 hour	70-1	Safety, Avoid High-Pressure Fluids	
Maintenance Checklist, Daily	70-1	Avoid High-Pressure Fluids	05-10
Maintenance interval chart (generator standby)	25-3	Safety, Handle Fuel Safely, Avoid Fires	
Maintenance interval chart (industrial)	25-2	Avoid Fires, Handle Fuel Safely	05-4
Metric bolt and screw torque values	65-8	Safety, lubricants	10-10
Mixing lubricants	10-10	Serial number	
		Engine	01-1
O		Engine Control Unit (ECU)	01-4
Oil		Rear PTO	01-4
Engine		Service	
Tier 3 and stage IIIA	10-7	2000 hour/24 month	40-1
Oil filter, change	35-3	2500 hour	45-1
Oil filters	10-10	500 hour/12 month	35-1
Operating engine		500 hours/12 months	
Break-in	20-1	Checking air intake system	35-12
Cold weather	20-7	Servicing battery	35-1
Normal operation	20-6	As required	
Warming engine	20-6	Pre-start cleaning guide	50-2
		Daily	30-1
P		Fire extinguisher	35-1
Power ratings	65-4	Records	70-1
Power Take-Off (PTO), Rear	50-10	Service codes (DTCs)	
Pre start cleaning		List of codes	55-3
Guide	50-2	Service Information, Additional	50-1
PTO (Rear), serial number	01-4	Service intervals	
PV101 Diagnostic Gauge		Chart (generator standby)	25-3
Essential Menus	15-8	Chart (industrial)	25-2
Main Menu	15-7	Engine oil and filter	10-9
Using	15-6	General information	25-1
PV101 Instrument Panel		Signal words, understand	05-1
Component function	15-4	Software, Diagnostic Gauge	55-10
PV480 Diagnostic Gauge		Specifications	
Essential Menus	15-14	Damper	40-1
Main menu	15-13	Engine crankcase oil fill	65-6
Using	15-12	Fuel injection pump and power ratings	65-4
PV480 Instrument Panel		General OEM	65-1
Component function	15-11	Starting engine	20-4
		Steam Cleaning Engine	55-28
R		Stopping engine	20-10
Radiator cap, pressure test	35-17	Storage	
Rear Power Take-Off (PTO)	50-10	Guidelines	60-1
Rear PTO serial number	01-4	Long term	60-2
Recordkeeping		Storing engine	
Engine Control Unit (ECU) serial number	01-4	Removing from storage	60-3
Engine serial number	01-1	Storing fuel	10-2
Rear PTO serial number	01-4	Supplemental coolant additives	
Refueling, avoid static electricity risk	05-6	Replenishing	35-16
Running out of fuel	20-5		
		T	
S		Testing diesel fuel	10-4
Safety		Thermostats, remove, test and install	40-2
Protect against noise	05-7	Torque charts	
Safe maintenance, practice	05-9	Metric	65-8
		Unified inch	65-7
		Trademarks	-7
		Trouble codes	
		Intermittent	55-10

Continued on next page

	Page		Page
Trouble Codes, Display	55-2	Replace.....	50-8
Troubleshooting		Routing.....	50-9
Air intake system.....	55-23	Valve clearance and EUI preload, check and adjust ..	45-1
Cooling system	55-21	Ventilation tube, crankcase, clean and inspect.....	35-11
Electrical	55-16	Vibration damper, checking	40-1
Engine.....	55-12		
Fuel system.....	55-25	W	
General information	55-1	Warranty	
Lubrication system.....	55-18	Information and registration	-3
Turbocharger	55-23	Non-road emissions control warranty	
Troubleshooting, Engine.....	55-14	statement--compression ignition	
		CARB	75-7
U		EPA	75-5
Unified inch bolt and screw torque values	65-7	OEM applications.....	75-1
Units of measure, changing.....	15-26	Water pump, inspect.....	35-5
		Water separator bowl	35-7
V		Welding precautions	55-28
V-belts			
Checking belt tensioner	35-13		

