

KOHLER® ContinuousClean Technology

QUICK START GUIDE

A cleaner flush begins here.


Our ContinuousClean technology automatically dispenses cleaning solution with every flush, fighting germs to keep your bowl cleaner longer.

ContinuousClean XT

This two-tab system is battery operated with three settings, and is designed to automatically dispense cleaning solution for up to one year with standard use.

- 1 First remove the lid of the toilet. Then get started by installing two AAA batteries (included).

(Batteries are not required for the ContinuousClean system to work, only for the indicator light.)

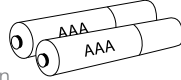

The batteries power the blue ContinuousClean indicator light that lets you know the system is working, and it will alert you (with a red light) when the cleaning agent is running low.

- 2 Unlatch and remove the cover of the reservoir system.



- 3 Insert two puck-style cleaning tablets. Be careful not to touch the tablets.



Liquid or powder cleaners won't work in this system. Please follow the handling instructions provided on your preferred tablet packaging, and DO NOT handle the tablets directly.

Note: During toilet installation, Kohler recommends inserting toilet cleaning tablets prior to turning on the water to the toilet.

- 4 Set the dial to your preferred setting.

 This is the recommended setting that evenly dispenses the cleaning agent with every flush.

+ If you want more cleaning agent added to your flush, choose this setting. This this setting may result in a stronger scent from the cleaning agent when flushing.

- If you want less cleaning agent added to your flush, choose this setting. Rest assured, you will still be fighting germs with every flush; however, with a lower setting of cleaning solution you may need to clean the bowl sooner than you would using the recommended setting.



- 5 Replace the reservoir cover and lock into place.



- 6 Place the lid back on the toilet. Then check that the indicator light is working when you flush.

You should see a blue pulse (*one second in duration*), which indicates the system is working properly and cleaning solution is being delivered with each flush.



ContinuousClean ST

This single tab system is mechanically operated, no batteries required. Simply add a single cleaning tablet to automatically dispense cleaning solution for up to six months.

- 1 First remove the lid of the toilet.



- 2 Unlatch and remove the cover of the reservoir system.



- 3 Insert single puck-style cleaning tablet. Be careful not to touch the tablet.



Liquid or powder cleaners won't work in this system. Please follow the handling instructions provided on your preferred tablet packaging, and DO NOT handle the tablets directly.

Note: During toilet installation, Kohler recommends inserting toilet cleaning tablets prior to turning on the water to the toilet.

- 4 Replace the reservoir cover and lock into place.



- 5 Place the lid back on the toilet.



- 6 The toilet will now begin dispensing cleaning solution with every flush.

