# C3-230 Cleansing Toilet Seat

Quick-Start Guide (Icons as seen on remote and manual control)







# ..(3).....

## As you sit



#### Heated Seat

Tap seat temp to adjust seat temperature

#### Deodorizer

Carbon filter automatically traps odors to help keep the space fresh

## Stainless Steel Cleansing Wand

Wand rinses itself before use

# As you use it

#### LCD Touch-Screen Remote

Control your experience by pressing the icons

### Warm-Water Cleansing

Tap *rear* (a) or *front* (b) to begin cleansing

Tap *wand* (c) to move water position forward/backward

Tap *stop* (d) when you feel clean

### Water Pressure, Temperature & Motion

Tap *pressure* (a) to adjust water pressure
Tap *water temp* (b) to adjust water temperature
Tap *pulsate oscillate* (c) to adjust water stream



## Warm-Air Dryer

Tap *dryer* (a) to activate dryer
Tap *dryer* again to adjust speed
Tap *stop* (b) when you feel ready

## What else does it do?

## Stainless Steel Cleansing Wand

Wand rinses itself before and after use plus UV light automatically cleans wand every 24 hours

## Nightlight

Automatic nightlight helps you find the toilet in low light conditions

For more information, visit KOHLER.com/IntelligentToilets