

Kitchen Faucet

Voice Commands

Use this document as a guide to understanding how to use voice commands to control your Sensate kitchen faucet with KOHLER Konnect™. Start by waking up your smart device and then activating a command. Note: When using your smart speaker, you must “ask Kohler to” complete the action. For example:

Amazon Alexa: “Alexa, ask Kohler to turn on my kitchen faucet.”

Google Assistant: “Hey Google, turn on my kitchen faucet.”

Siri: “Siri, ask Kohler to turn on my kitchen faucet.”*

Examples of Commands for Sensate Kitchen Faucet With KOHLER Konnect

On/Off Setting

Turn on/start my faucet
Turn on/start the faucet
Turn off/stop my faucet
Turn off/stop the faucet
Begin my/the faucet
End my/the faucet

Activating Presets

Fill my sink
Begin my sink
Start my sink
Fill my coffee pot
Begin my coffee pot
Start my coffee pot

Water Usage*§

Check my water usage
Tell my water usage
How much water have I used

Dispensing Measured Amounts†

Give me 1 cup of water
Dispense 1 cup of water
Pour 1 cup of water
Give me 16 ounces of water
Dispense 16 ounces of water

Pour 16 ounces of water
Give me 2 liters of water
Dispense 2 liters of water
Pour 2 liters of water

*Siri can be used across your Apple devices and is limited to on/off control.

†When dispensing measured amounts, the minimum volume is 8 ounces; accuracy may vary depending on water pressure and flow rate.

§Water usage is measured when water flow beyond the flow sensor exceeds 0.5 gallons per minute for three seconds. The KOHLER Konnect app should not be relied upon for water leak detection.