

PURPOSE:

To replace the valve cartridge assembly.

- Screwdriver
- Pliers
- 3/32" Hex wrench

1. Shut off the water supply. Lift faucet handle to relieve water pressure.
2. Loosen the setscrew, and remove the handle. Remove the cap and sphere. Unthread the bonnet.
3. Gently pull valve from faucet body.
4. Insert the new valve making sure to line up posts on valve with holes in faucet body.
5. Reinstall the bonnet, sphere, cap, handle, and setscrew.
6. Turn on the water supply.

