KOHLER®

INSTALLATION INSTRUCTIONS

| 18358T-CL 18359T-CL 18360T-CL |
| 18361T-CL 15990T-CL 15991T-CL   Katalyst Air Shower Head |
| 15992T-CL 15993T-CL 15994T-CL |
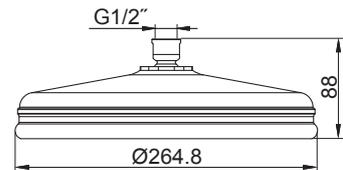
BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
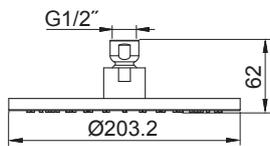
Please leave these instructions for the consumer. They contain important information.
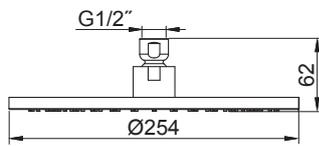
NOTES:
1. Flush the water supply pipes thoroughly to remove debris.
2. Recommended working pressure: 2 to 5 bar.
3. The highest working pressure for spray is 0.5MPa(5 bar). If it exceeds 0.5MPa(5 bar), a pressure reducer is needed. The highest water and environment temperature is 60ºC. Please keep handspray, shower head and the shower arm away from heater, or it may become damaged and cause injury to the user.
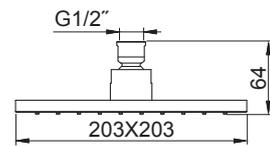
ROUGH-IN DIMENSIONS

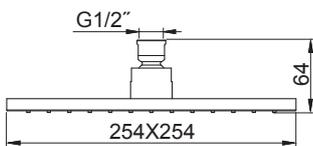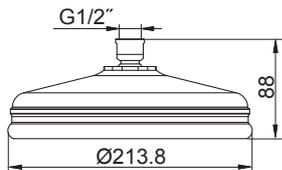### 18358T-CL
G1/2″
62
Ø203.2

18359T-CL
G1/2″
62
Ø254

18360T-CL
G1/2″
64
203X203

18361T-CL
G1/2″
64
254X254

15990T-CL
G1/2″
88
Ø213.8

15991T-CL
G1/2″
88
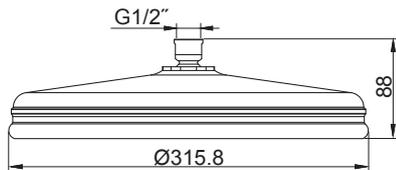Ø264.8

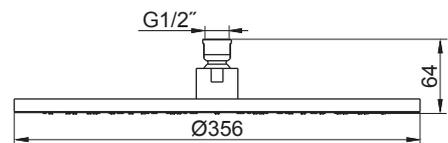### 15992T-CL
G1/2″
62
Ø304.8

15993T-CL
G1/2″
88
Ø315.8

15994T-CL
G1/2″
64
Ø356

INSTALLATION

Flush both water supplies through the shower arm(2, not provided) for about one minute before the showerhead(1) is installed. Apply tape or sealant to the exposed end of the shower arm. Tighten the showerhead with a strap wrench.

Before installation, install restrictor(3) if needed. Take out washer(4) and install restrictor as the figure shown, reinstall washer.
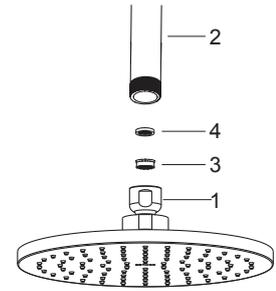
CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

SERVICE PARTS

77420

1218903
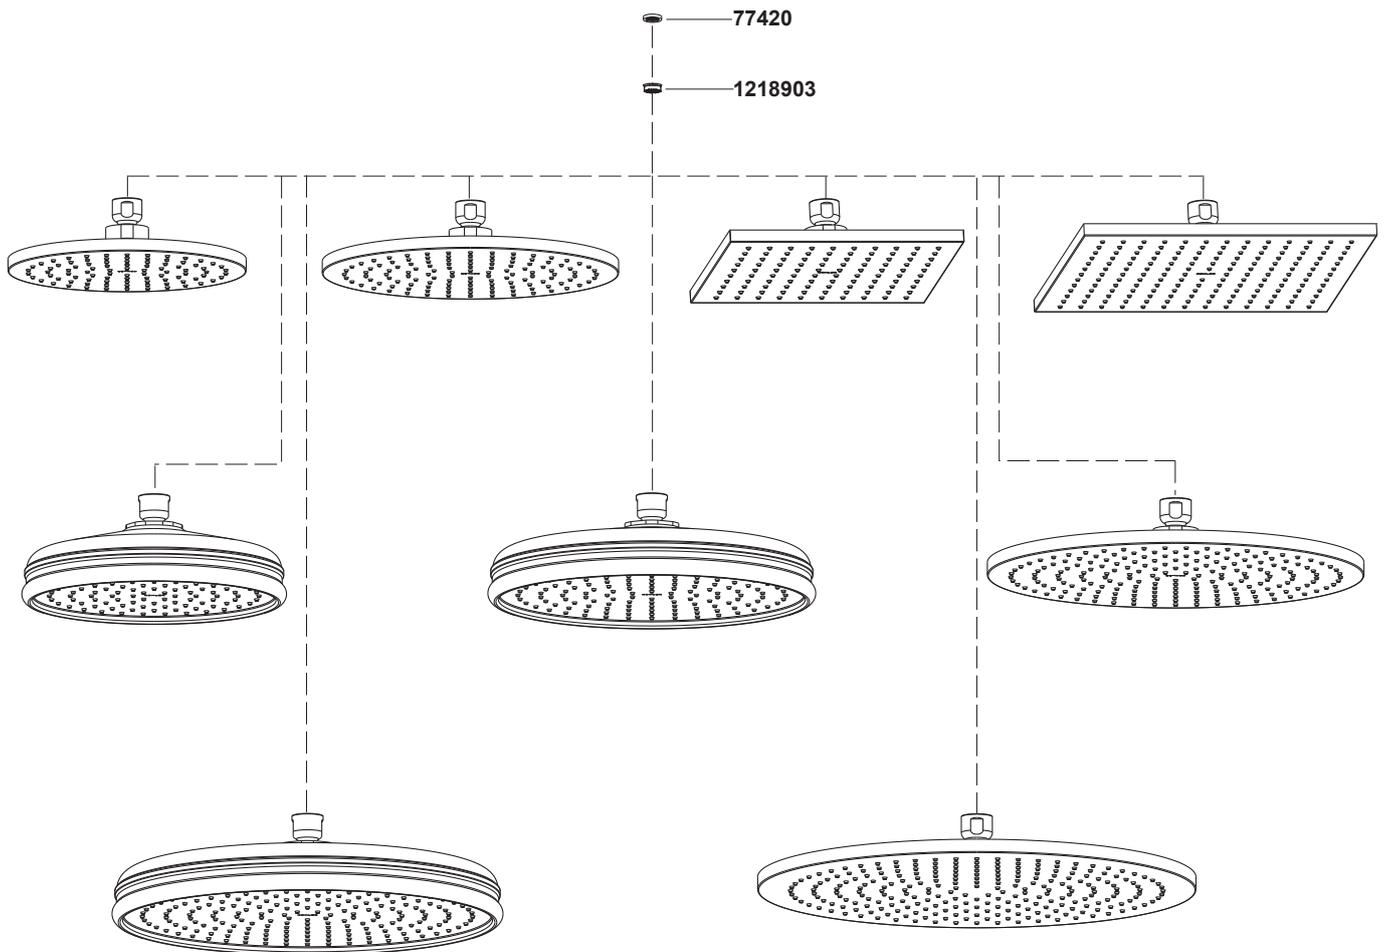
**Color code must be specified when ordering