



科勒® KOHLER®

依莱厨卫清洁喷枪2.0 R29784T-CP
ELATE HYGIENE SPRAY 2.0



· 两档冲洗力度 清洁高效省力

旋转出水嘴轻松切换普通、强劲两种水流力度。

· 两种安装方式 自由灵活选择

喷枪托架支持打孔和免打孔粘贴两种安装方式。

· 科勒镀层 耐久品质

表面抛光镀铬工艺处理，通过科勒严格的48小时酸性盐雾测试，以及高达100,000次循环开关试验*。

*科勒实验室内部数据

1459326-T01-A

科勒® KOHLER®


依莱厨卫清洁喷枪2.0 R29784T-CP
ELATE HYGIENE SPRAY 2.0

安装指南

安装托架

注意：托架须安装在离地面60~70厘米的位置上。

1. 将托架③置于装修好的墙面，标记安装孔位。
 2. 根据标记位置在墙面钻孔。
 3. 对于混凝土墙面，将胀塞塞入孔中。
 4. 将托架紧贴墙面放置，锁紧螺钉以固定托架。
- * 若选用免打孔粘贴方式安装，需事先清洗擦拭安装墙面，保证墙面干净，而后撕开胶贴保护层，用力挤压贴在干净墙面48小时后再放入喷枪即可。

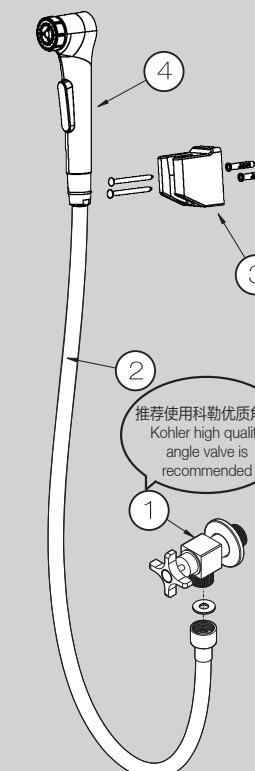

安装软管

1. 打开水源，冲洗管道中的水垢和杂质。
 2. 关闭水源。
 3. 确保滤网垫片装在软管②里，拧紧软管到角阀①上。(推荐使用科勒优质角阀)
 4. 打开水源，检查是否能正常使用。
 5. 如供水水压高于2bar，每次使用后请关闭角阀。
 6. 转动角阀手柄可调节喷枪④的水流强度。
- * 推荐使用：科勒安全角阀R29810T-9-CP，科勒三通双控角阀33983T-9-CP。

Installation guide

Install the bracket

NOTE: The bracket should have 60-70 cm. height from floor.

1. Position the bracket ③ on the finished wall, and mark the location of the center mounting holes.
2. Drill the holes at the marked location.
3. For concreted wall, insert the anchors into the finished wall.
4. Position the bracket against the finished wall, secure the bracket with screws.

Install the spray hose

1. Run water through water supply pipe to flush out dirt and debris.
2. Turn off the water supply.
3. Ensure that the screen washer is placed into the hose, ② then tighten the hose to the shut-off valve. ① (1, Not provided)
4. Turn on the main water supply and check for proper operation.
5. If your home's pressure is greater than 2 bar, close the shut-off valve after every use.
6. Use the shut-off valve to adjust the spray's ④ flow intensity.

科勒(中国)投资有限公司
上海市静安区江场三路158号
邮编: 200436
本产品执行GB/T23447-2009标准

KOHLER CHINA INVESTMENT CO., LTD
NO.158, JIANG CHANG SAN ROAD,
JINGAN DISTRICT, SHANGHAI, PRC
POST CODE: 200436

