


75521T-4 2 Handle Deck Mount Bath Faucet

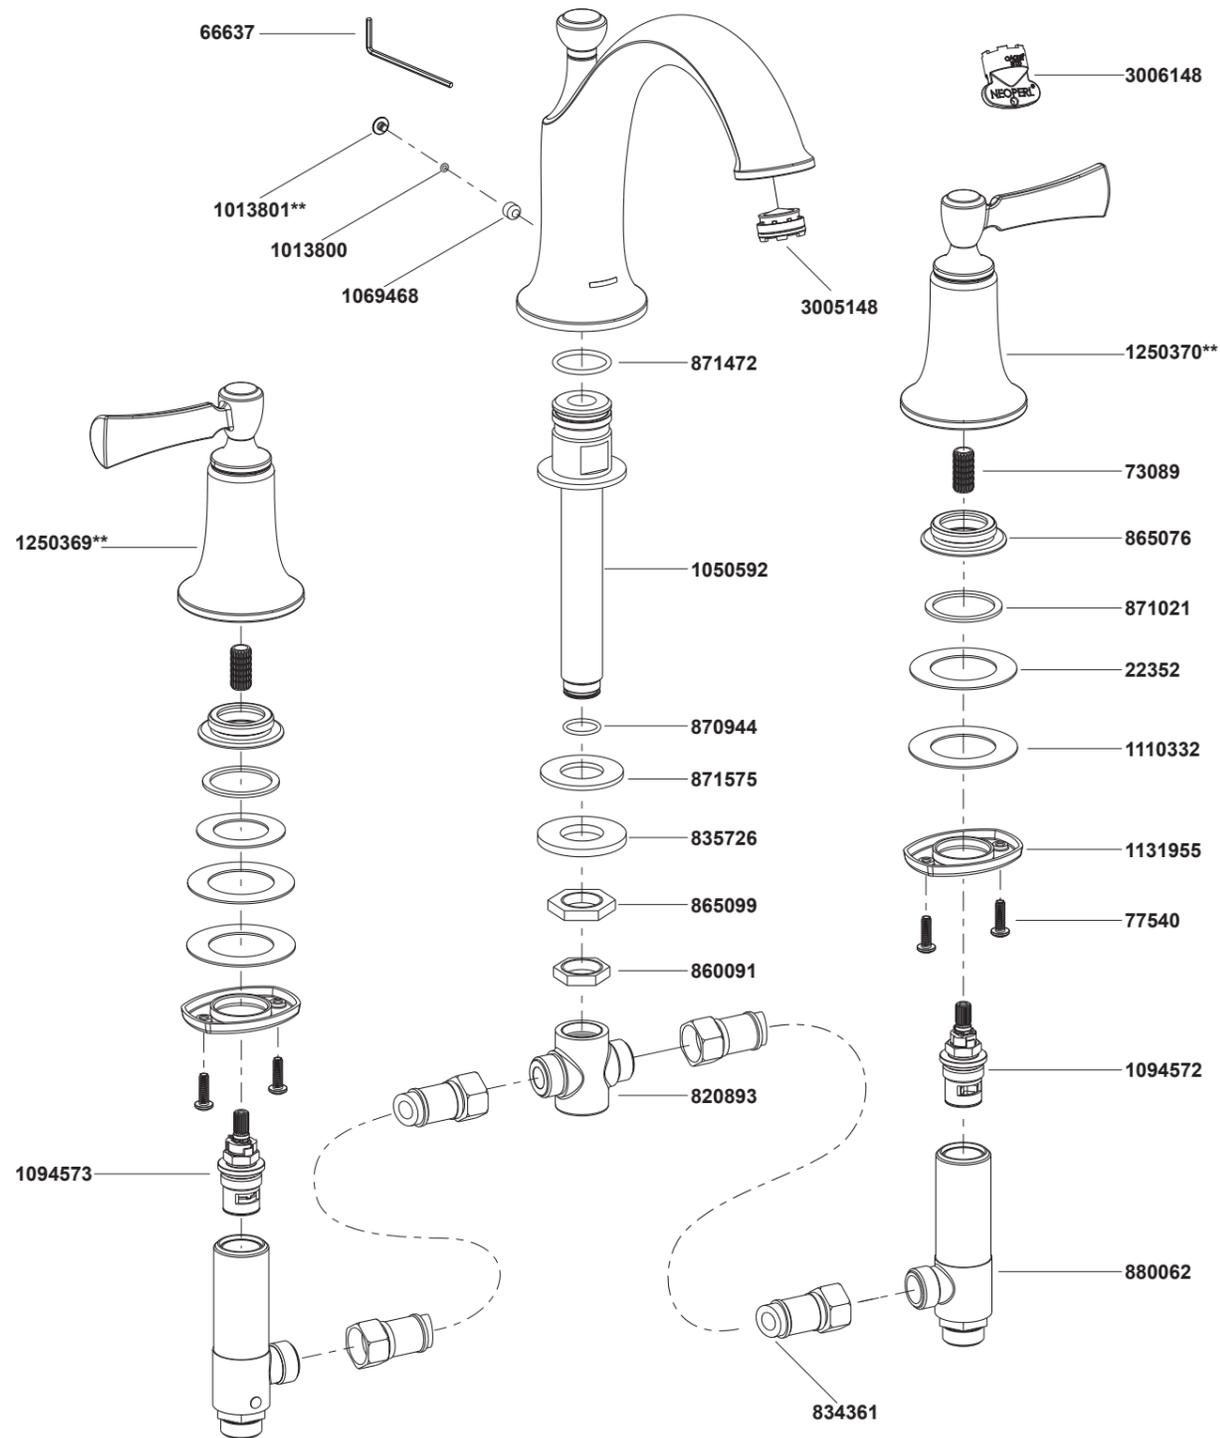

**Color code must be specified when ordering

75521T-4 2 Handle Deck Mount Bath Faucet

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
3. Observe local plumbing codes.
4. If possible, install this faucet before installing the tub.
5. Shut off the water supplies to the fitting.


HANDLE OPERATION

Left handle opens with one-quarter turn counter clockwise. Right handle opens with one-quarter turn clockwise.

ROUGH-IN DIMENSIONS

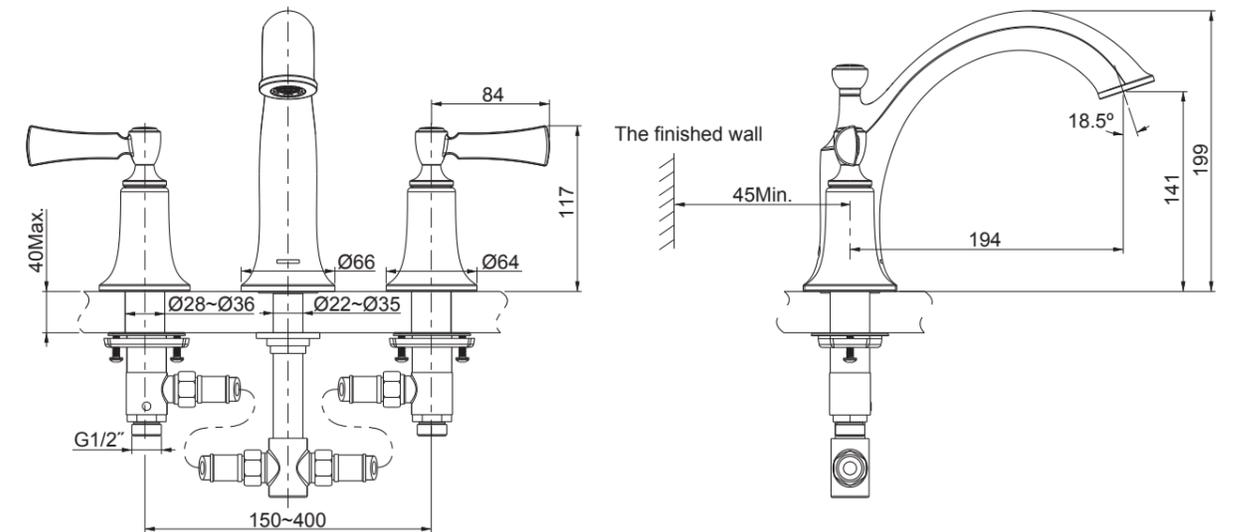

INSTALLATION

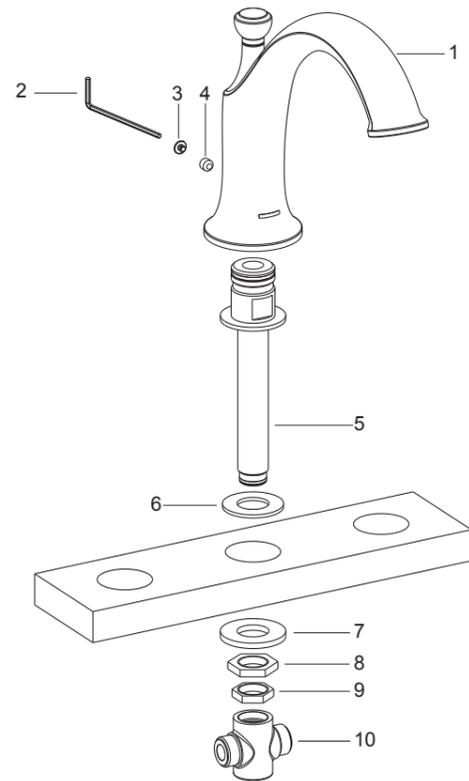

How to Install the Shank

Remove the plug(3) in the rear of the spout(1). Unscrew the screw(4) by hex wrench(2) provided.

Remove and retain the spout kit, the supply tee(10), nut(9, 8) and washer(7) from the shank(5). Fit the shank with washer(6) to the center hole of tub.

Install the washer(7), nut(8,9), and wrench to tighten nut(8) then tighten nut(9).

Thread supply tee to the shank of the unit kit until hand-tight.

How to Install the Side Bodies



Remove the base nuts(12) and the washers(13) from the side bodies(11).

Be sure the washers(14), steel washers(15) and the threaded rings(16) on the side bodies.

Insert the side bodies into the mounting hole from the underside of the tub. **NOTE:** The side body with red mark should be installed on the left. Slide the washers(13) onto the side bodies. Thread the base nuts onto each side body.

Adjust the outlet of side body to connect hose easily. Secure the threaded rings(16) by tightening screws(17) with screwdriver.

Connect the side bodies(11) and the center tee(10) with the hoses(18). **NOTE:** The hoses(18) should only be used here. To ease installation, you may back off the supply tee up to 180 degrees. Ensure that there is no kinking of the hoses.

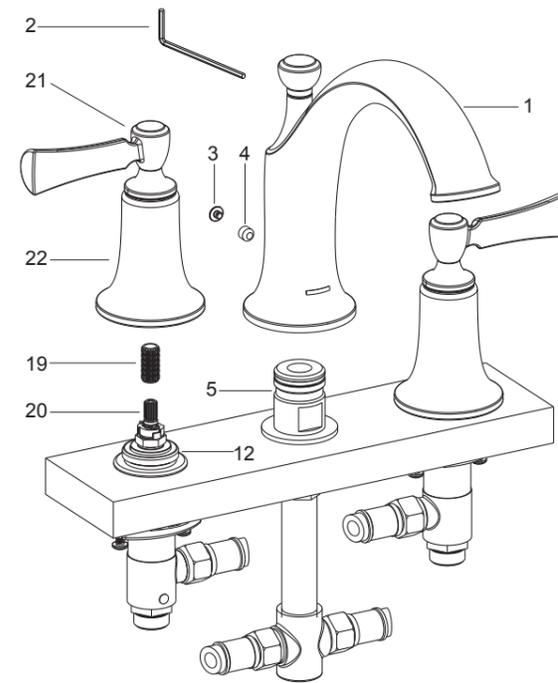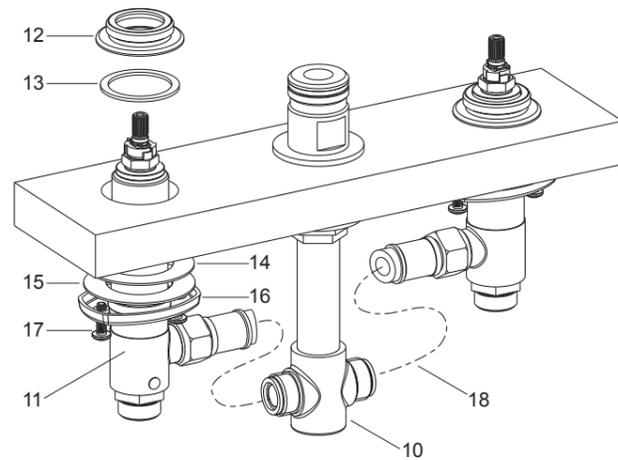


How to Install the Handles and Spout

Press the stem extensions(19) onto the valve stems(20), install the handle kits(21) onto the base nuts(12). **NOTE:** The handle kit with red mark should be installed on the left side of body. Ensure the valves and handle kits are in the off position. Screw the escutcheons(22) of the handle kit and fix the handle kits.

Insert the spout kit(1) to the shank(5) until it contacts the deck. Tighten the screw(4) by hex wrench(2) then insert the plug button(3) into the rear hole.

INSTALLATION CHECKOUT

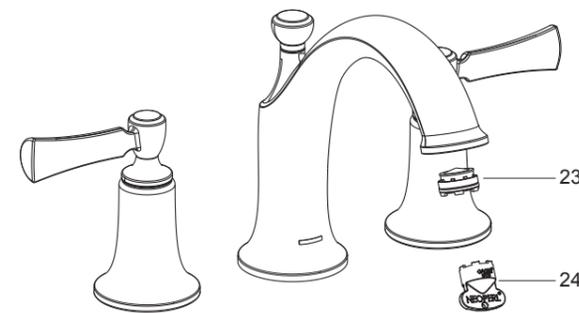

Ensure that all coupling nuts are tight. Ensure that the lever handles are in the off position.

Turn on the main water supply and drain, and check for leaks. Repair as needed.

Remove the aerator(23) by key(24). Run hot and cold water through faucet for about one minute to remove any debris. Check for leaks. Repair as needed. Remove any debris from the aerator. Shut off the faucet. Reinstall the aerator.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.