

# K-3746T 奇奥 GEOG

## BEFORE YOU BEGIN

- WARNING:** Risk of personal injury. Metal surfaces are sharp and can cause severe cuts. Use gloves and handle sink edges carefully.
- Observe all local plumbing and building codes.
  - Shut off the hot and cold water supplies.
  - Prior to installation, unpack the new sink and inspect it for damage. Return the sink to its protective carton until you are ready to install it.
  - Inspect the drain and supply tubing. Replace if necessary.
  - All information in these instructions is based on the latest product information available at the time of publication. Kohler China reserves the right to make changes at any time without notice.

## RECOMMENDED TOOLS AND MATERIALS

- Safety Glasses
- Measuring Tape
- Pencil
- Drill
- Putty Knife
- Silicone Sealant
- Pipe Wrench
- Plumbers Putty

- Plus:**
- Level
  - Cross Screwdriver
  - Keyhole/Jigsaw
  - Gloves

## ROUGHING-IN

## 安装之前

- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。

- 遵循当地所有的管道和建筑规范。
- 关闭冷热水供应。
- 在安装之前，请打开新水槽的包装，检查产品是否有损坏。将水槽放回其保护性的纸箱包装，直到您准备安装。
- 检查供水和排水管道。如果需要，请更换管道。
- 此手册中的所有资料按照出版时的最新产品资料编写。科勒公司保留任何时候不通知便可进行更改的权利。



## 推荐使用的工具和材料

- 安全眼镜
- 测量尺
- 铅笔
- 钻孔机
- 灰泥刀
- 硅胶
- 管道扳手
- 管道用灰泥

- 其它：**
- 水平尺
  - 十字螺丝刀
  - 锁眼锯或剑齿锯
  - 手套

## 尺寸图

单位：毫米  
Unit: mm

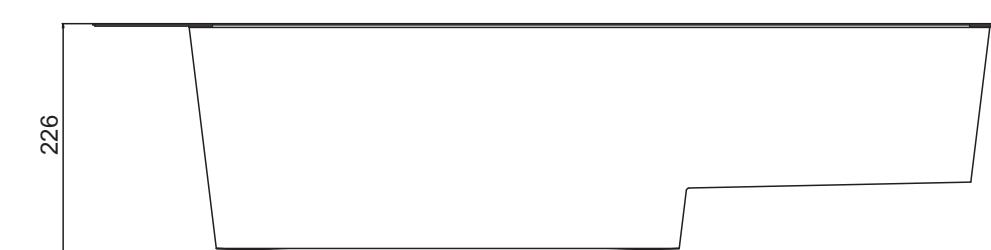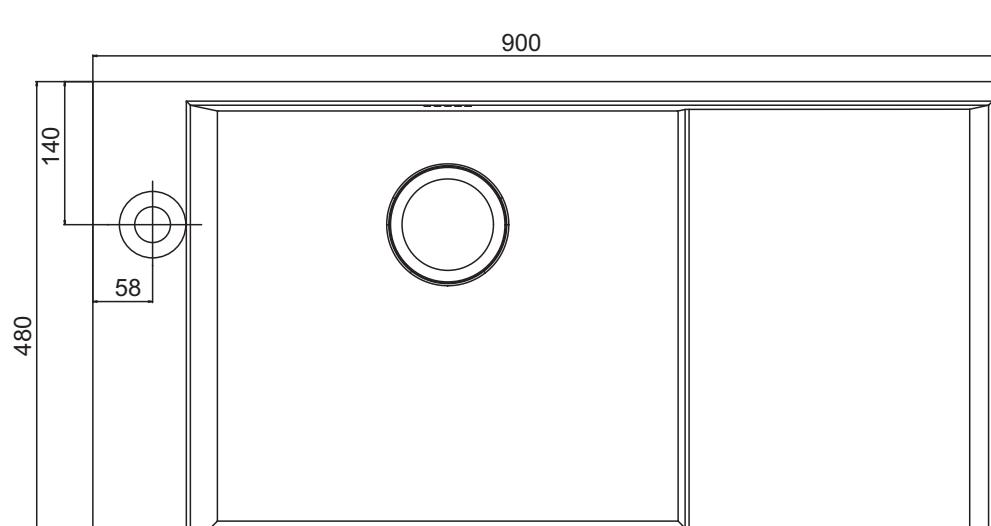

## INSTALLATION THE NEW SINK


### 1. Preparation

- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。

- For new installations:**
- Cut along the line dedicated to the installation type as you desire.
  - Carefully place the cutout template on the countertop in the desired location.
  - Make sure the sink will not interfere with the cabinet.
  - Trace the cutout template outline onto the countertop.
  - Drill a pilot hole inside the cutting line. Using a jig or keyhole saw, cut along the outline to cut out the opening in the Countertop.

### For existing installations:

- Carefully lift the old sink out of the countertop.
- Compare the existing cut-out to the cut-out size.
- If needed, enlarge the cut-out hole according to the directions for new installations.

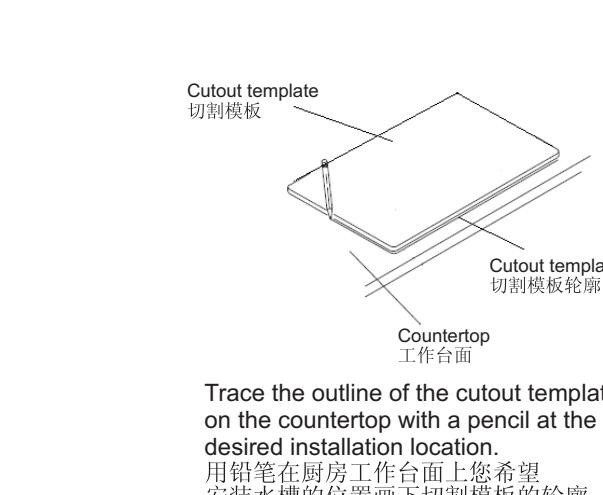

### 2. Install the Faucet Fitting and Drain


- Install the faucet overflow pipe and strainer according to the manufacturer's instructions.

**NOTE:** If you are reusing fittings from an old sink, use plumbers putty under the faucet base and top flange of the strainer.

### 3. Install the Sink

#### A. Undercounter Installation

- Apply a bead of silicone sealant or rubber sealant around the rim of the sink.
- Reverse the countertop and fix the sink to the countertop bottom with clips or other fastener.
- Use a dry cloth to wipe away any excess sealant.
- Verify that there are no gaps.
- Allow the sealant to cure for at least 30 minutes.
- Reverse the countertop back and fix into the cabinet.

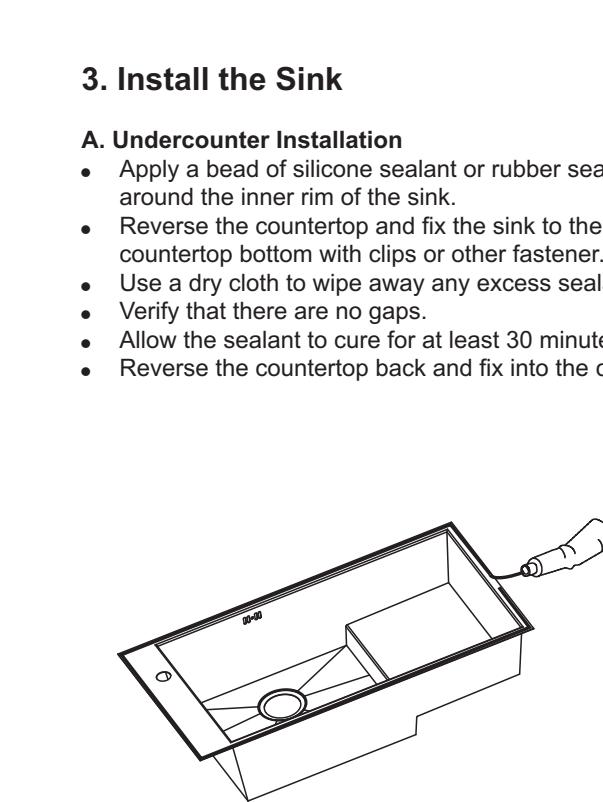


## 安装新水槽

### 1. 准备安装

- WARNING:** 小心人身伤害。金属表面非常锋利，可能导致严重的划伤。请使用手套，并小心接触水槽边缘。

### 对于新安装:

- 请沿您期望安装方式剪切切割模板。
- 将水槽放入切割孔内，并调整至期望位置。
- 画下水槽外轮廓线。
- 打磨水槽外轮廓线内区域使台面水槽外轮廓线内低于台面约2.5mm。
- 在水槽边缘背面涂上一层优质密封剂。
- 将水槽置入切割区域。
- 用干布擦掉任何多余的密封剂。
- 确认没有缝隙。
- 让密封剂凝固至少三十分钟时间。

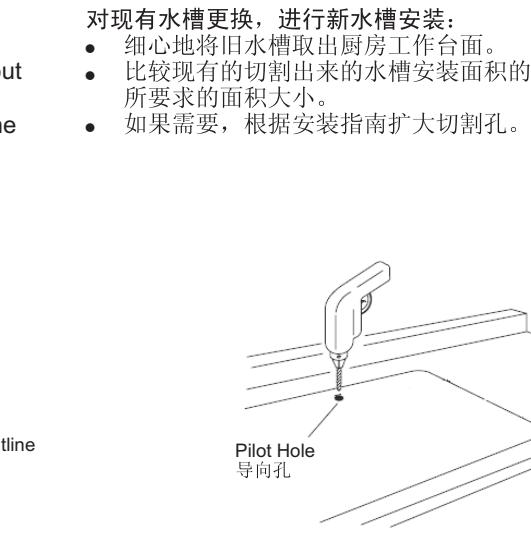

### 4. Connect Water Supply and Test

- 如果使用垃圾处理器的话，根据生产商指示，安装垃圾处理器。
- 连接并拧紧下水器和下水管，根据龙头所附的指示完成通往龙头的供水连接。
- Run water into the sink and check for leaks.

## CARE AND CLEANING

### Stainless Steel 不锈钢

每次使用后，请彻底冲洗您的不锈钢水槽，并用清洁的软布将其擦干。对于不锈钢用品，请每周清洗一次。

请使用非磨损性的布或海绵，并用不锈钢专用清洁剂/光亮剂进行清洁，而不要使用含颗粒的清洁剂。请不要使用钢丝球、钢丝刷或者研磨性的抹布清洁不锈钢水槽。

如果您使用含有氯化物的清洁剂，在您清洁水槽之后，确保立即对水槽表面进行冲洗，以防止腐蚀。不要让清洁剂在您的水槽表面停留过长时间。

科勒厨房水槽附件，包括底部盆架、金属丝冲洗篮、砧板和沥水篮都有助于保护您的水槽表面。

如果水槽表面很脏，使用碳酸氢钠，或普通的清洁剂进行清洗。

# KOHLER®

## 科勒厨卫经典

单槽台上台下双用厨盆  
SINGLE-BASIN SR AND UC KITCHEN SINK  
切割图/安装说明书  
CUT-OUT TEMPLATE / INSTALLATION INSTRUCTIONS

