

KOHLER

K-3885T/K-3886T 英迪 INDIO


450mm
413mm

RECOMMENDED TOOLS AND MATERIALS

- Safety Glasses
- Measuring Tape
- Pencil
- Drill
- Putty Knife
- Silicone Sealant
- Pipe Wrench
- Plumbers Putty

- Plus:**
- Level
 - Cross Screwdriver
 - Keyhole/Jigsaw
 - Gloves

ROUGHING-IN

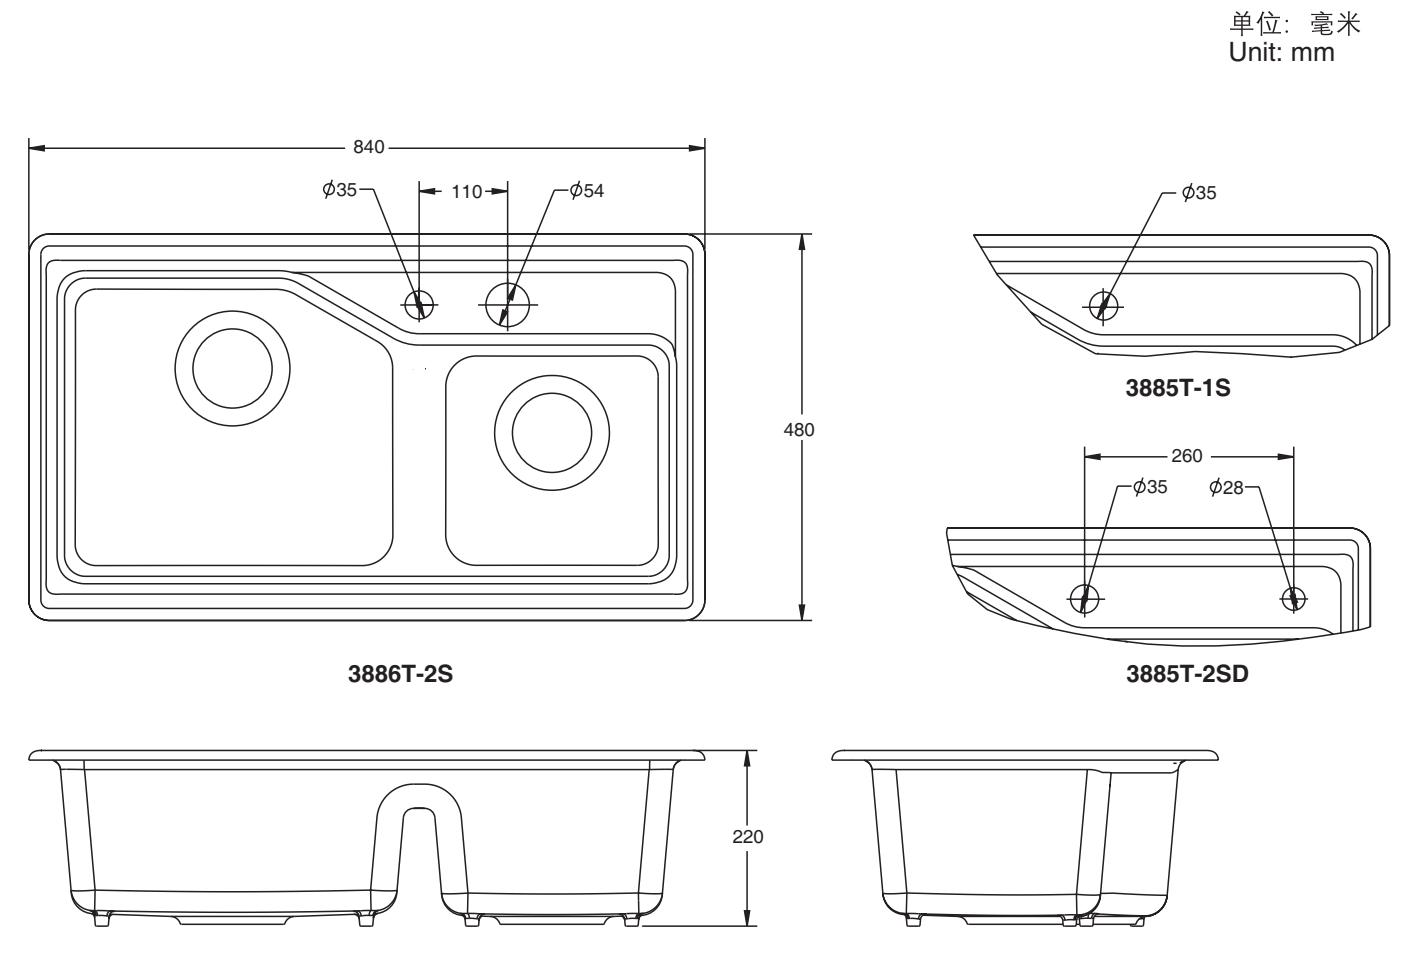

安装之前

- 遵循当地所有的管道和建筑规范。
- 关闭冷热水供应。
- 在安装之前, 请打开新水槽的包装, 检查产品是否有损坏。将水槽放回其保护性的纸箱包装, 直到您准备安装。
- 检查供水和排水管道。如果需要, 请更换管道。
- 此手册中的所有资料按照出版时的最新产品资料编写。科勒公司保留任何时候不通知便可进行更改的权利。
- 所有信息在这些说明书中是基于最新的产品信息。如有任何疑问, 请参阅科勒网站。
- 在任何时候, 科勒公司保留对任何通知进行更改的权利。

推荐使用的工具和材料

- 安全眼镜
- 测量尺
- 铅笔
- 钻孔机
- 灰泥刀
- 密封硅胶
- 管道扳手
- 管道用灰泥

- 其它:
- 水平尺
 - 十字螺丝刀
 - 锯齿刀或割齿锯
 - 手套




尺寸图

单位: 毫米
Unit: mm

INSTALL THE SINK

1. Preparation

- WARNING: Risk of personal injury or property damage.** Cast iron sinks are very heavy. Get help lifting the sink.
- Cut along the line dedicated to the installation type as you desire.

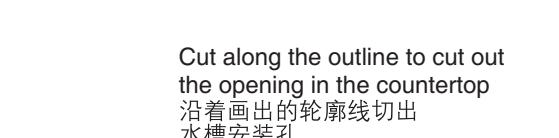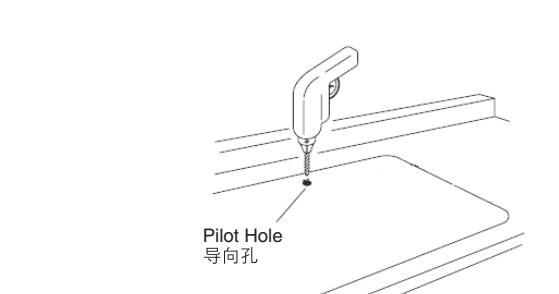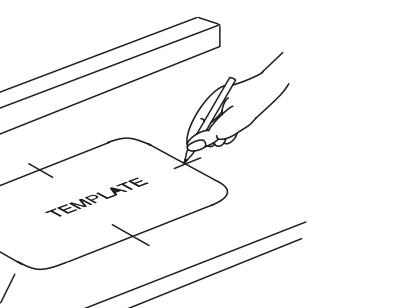

2. Install the Optional Undercounter Kit

NOTE: This cast iron sink requires either an undercounter bracket (not supplied) or support framing. More details about undercounter shelf installation, please refer to its installation instructions. Support framing is covered in the "Install the Support Frame" section.

K-18415T	120cm厨盆支架, 1套 120cm Rail Shelf For Cast Iron Sink, 1 Set 适用于长度为120cm的橱柜柜体。 For Cabinet with Length of 120cm.
K-18414T	90cm厨盆支架, 1套 90cm Rail Shelf For Cast Iron Sink, 1 Set 适用于长度为90cm的橱柜柜体。 For Cabinet with Length of 90cm.
K-18408T	三角厨盆支架 Triangle-frame Shelf For Cast Iron Sink 适用于任何长度的橱柜柜体。支架需安装在橱柜背后的承重墙上。 For Cabinet of any length. The shelf shall be installed to the main wall behind the cabinet.

安装水槽

1. 准备安装

- WARNING: Risk of personal injury or property damage.** Cast iron sinks are very heavy. Get help lifting the sink.
- 请沿着您期望安装方式剪切切割模板。

3. Install the Faucet Fitting and Drain

3. 安装龙头和排水系统

- 根据生产商的指示安装龙头溢水管和排水系统。


4. Install the Sink

A. Self-rimming Installation


- Clean the countertop, and carefully position the sink in the countertop opening so the sink edges line up with the pencil line or masking tape border.
- Apply a thin, continuous bead of quality sealant around the sink edges.

B. 台上安装

- 清洁台面, 小心地将水槽放入台面切口处, 让水槽的边缘与画的线条或胶带边界线一致。
- 在水槽边缘涂一小圈连续的密封硅胶。

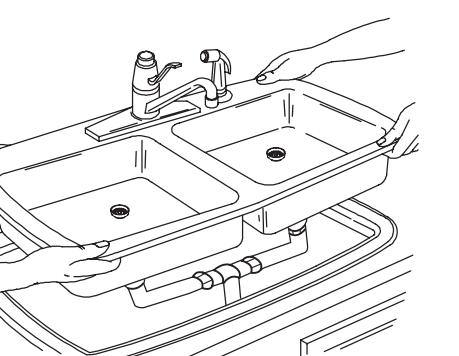


- Lower the sink into the cabinet. Verify the sink is supported by the frame.
- Verify the sink is level, make any adjustments as needed.
- Install the rail shelf. Adjust the rail shelf, upside surface of the rail shelf the same level with either surface of the cabinet if needed.
- Apply a thin bead of silicone sealant where the sink meets the countertop.
- Immediately wipe away any excess sealant with a damp cloth. Fill any voids if needed.
- Allow the sealant to cure for at least 30 minutes before proceeding.

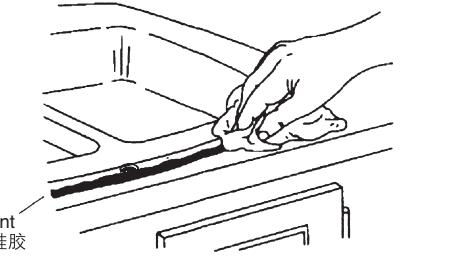

B. Undercounter Installation

- As the shelf is installed from side to side, determine the side-to-side length of the inside of the cabinet.
- If necessary, cut the railshelf rails up to 1/2" (13 mm) less than the determined length.
- Consult the dimensional information to determine Dimension A (A: 430).

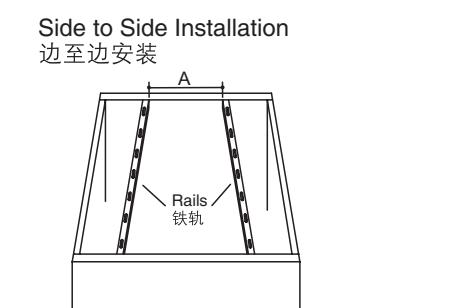

- Position and trace the template on the countertop as per line for undercounter installation directed on the template.
- Drill a 13mm pilot hole on the inside of the cut line. Cut along the traced line.

一体槽台上/台下双用铸铁厨盆 CAST IRON OFFSET KITCHEN SINK 切割图/安装说明书

CUT-OUT TEMPLATE / INSTALLATION INSTRUCTIONS

3. 安装龙头和排水系统

- 降低水槽, 放入底柜。确保水槽已由所选框架完全支撑。

- 不断调整直至水槽水平。

- 安装台面。如有必要继续调整, 确保厨盆上表面与台面下表面齐平。

- 在水槽与台面支撑的地方涂抹一薄层密封硅胶。

- 尽快用湿的抹布擦除多余的密封硅胶。如有需要, 再在空隙处补上一些密封硅胶。

- 让密封硅胶风干30分钟以上。



Wipe away excess
密封硅胶

涂抹密封硅胶

- 降低水槽, 放入底柜。确保水槽已由所选框架完全支撑。
- 不断调整直至水槽水平。
- 安装台面。如有必要继续调整, 确保厨盆上表面与台面下表面齐平。
- 在水槽与台面支撑的地方涂抹一薄层密封硅胶。
- 尽快用湿的抹布擦除多余的密封硅胶。如有需要, 再在空隙处补上一些密封硅胶。
- 让密封硅胶风干30分钟以上。

4. 安装水槽

A. 台上安装

- 清洁台面, 小心地将水槽放入台面切口处, 让水槽的边缘与画的线条或胶带边界线一致。

- 在水槽边缘涂一小圈连续的密封硅胶。




Nut 螺母
Gasket 密封垫圈

Nut 螺母
Gasket 密封垫圈

- 降低水槽, 放入底柜。确保水槽已由所选框架完全支撑。
- 不断调整直至水槽水平。
- 安装台面。如有必要继续调整, 确保厨盆上表面与台面下表面齐平。
- 在水槽与台面支撑的地方涂抹一薄层密封硅胶。
- 尽快用湿的抹布擦除多余的密封硅胶。如有需要, 再在空隙处补上一些密封硅胶。
- 让密封硅胶风干30分钟以上。

5. System Drainage and Connect Supplies

- 连接龙头供水管。
- 连接排水系统。
- 打开龙头阀, 检查是否有漏水现象。

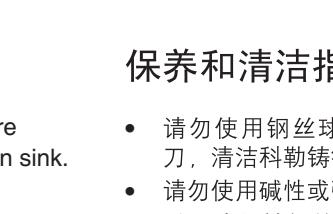

Nut 螺母
Gasket 密封垫圈

Nut 螺母
Gasket 密封垫圈

当在台面上一比一描绘切割线时,
务必确保模板的水平和竖直尺寸与模板上标注的一致。

WHEN PLOTTING TEMPLATE FULL SIZE:
Make sure horizontal and vertical dimensions
match the dimensions labeled on the template.

FOR UNDERCOUNTER INSTALLATION
CUT ALONG THIS LINE
专用于台下安装
沿此线切割

RIM OF SINK
水槽边缘

FOR SELF-RIMMING INSTALLATION
CUT ALONG THIS LINE
专用于台上安装
沿此线切割

1150340-T01-B