

## **BEFORE YOU BEGIN**

- Observe all local plumbing and building codes.
- Shut off the hot and cold water supplies. • Prior to installation, unpack the new sink and inspect it for damage. Return the sink to its protective carton until you are ready to install it.
- Inspect the drain and supply tubing. Replace if necessary. 检查供水和排水管道。如果需要,请更换管道。 • All information in these instructions is based on the latest • 此手册中的所有资料按照出版时的最新产品资料编写。科 product information available at the time of publication. Kohler china. reserves the right to make changes at any time without notice.

## **RECOMMENDED TOOLS AND MATERIALS** 推荐使用的工具和材料

K-5871T-2SD

- 420 -

# Safety Glasses Measuring Tape Pencil

- Drill Putty Knife
- Silicone Sealant
- Pipe Wrench Plumbers Putty

## Plus: Level

Gloves

8m

4

470mm

 $\square$ 

 $\bigcirc$ 

R22.5

 Cross Screwdriver Keyhole/Jigsaw

## **ROUGHING-IN**

**Reference Value** 参考值


# 安装之前


- 遵循当地所有的管道和建筑规范。 • 关闭冷热水供应
- 在安装之前,请打开新水槽的包装,检查产品是否有损 坏。将水槽放回其保护性的纸箱包装,直到您准备安装。
- 勒公司保留在任何时候不需通知便可进行更改的权利。

- 安全眼镜 测量尺 铅笔 钻孔机 灰泥刀 密封硅胶 管道扳手 • 管道用灰泥 其它: 水平尺 • 十字螺丝刀
- 锁眼锯或剑齿锯
- 手套

## 尺寸图

UNIT: mm 单位:毫米

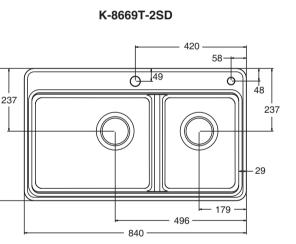



### Kohler reserves the right to change marked dimensions without prior notice. 科勒公司保留随时变更图中标示尺寸的权利,无需另行通知。

1. Preparation WARNING: Risk of personal injury or property

desire

INSTALL THE SINK

lifting the sink.


工作台面 Trace the outline of the cutout template on the countertop with a pencil at the sired installation locatior 用铅笔在厨房工作台面上您希望 安装水槽的位置画下切割模板的轮廓。

Cutout template

切割模板


## 2. Install the Optional Undercounter Kit

**NOTE:** This cast iron sink requires either an undercounter bracket(not supplied) or support framing. More details about undercounter shelf installation, please refer to its installation instructions. Support framing is covered in the "Install the Support Frame" section.

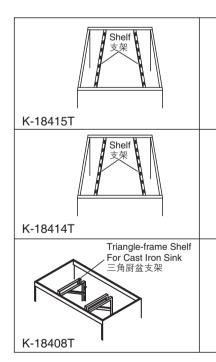

FOR UNDERCOUNTER INSTALLATION CUT ALONG THIS LINE 专用于台下安装 沿此线切割



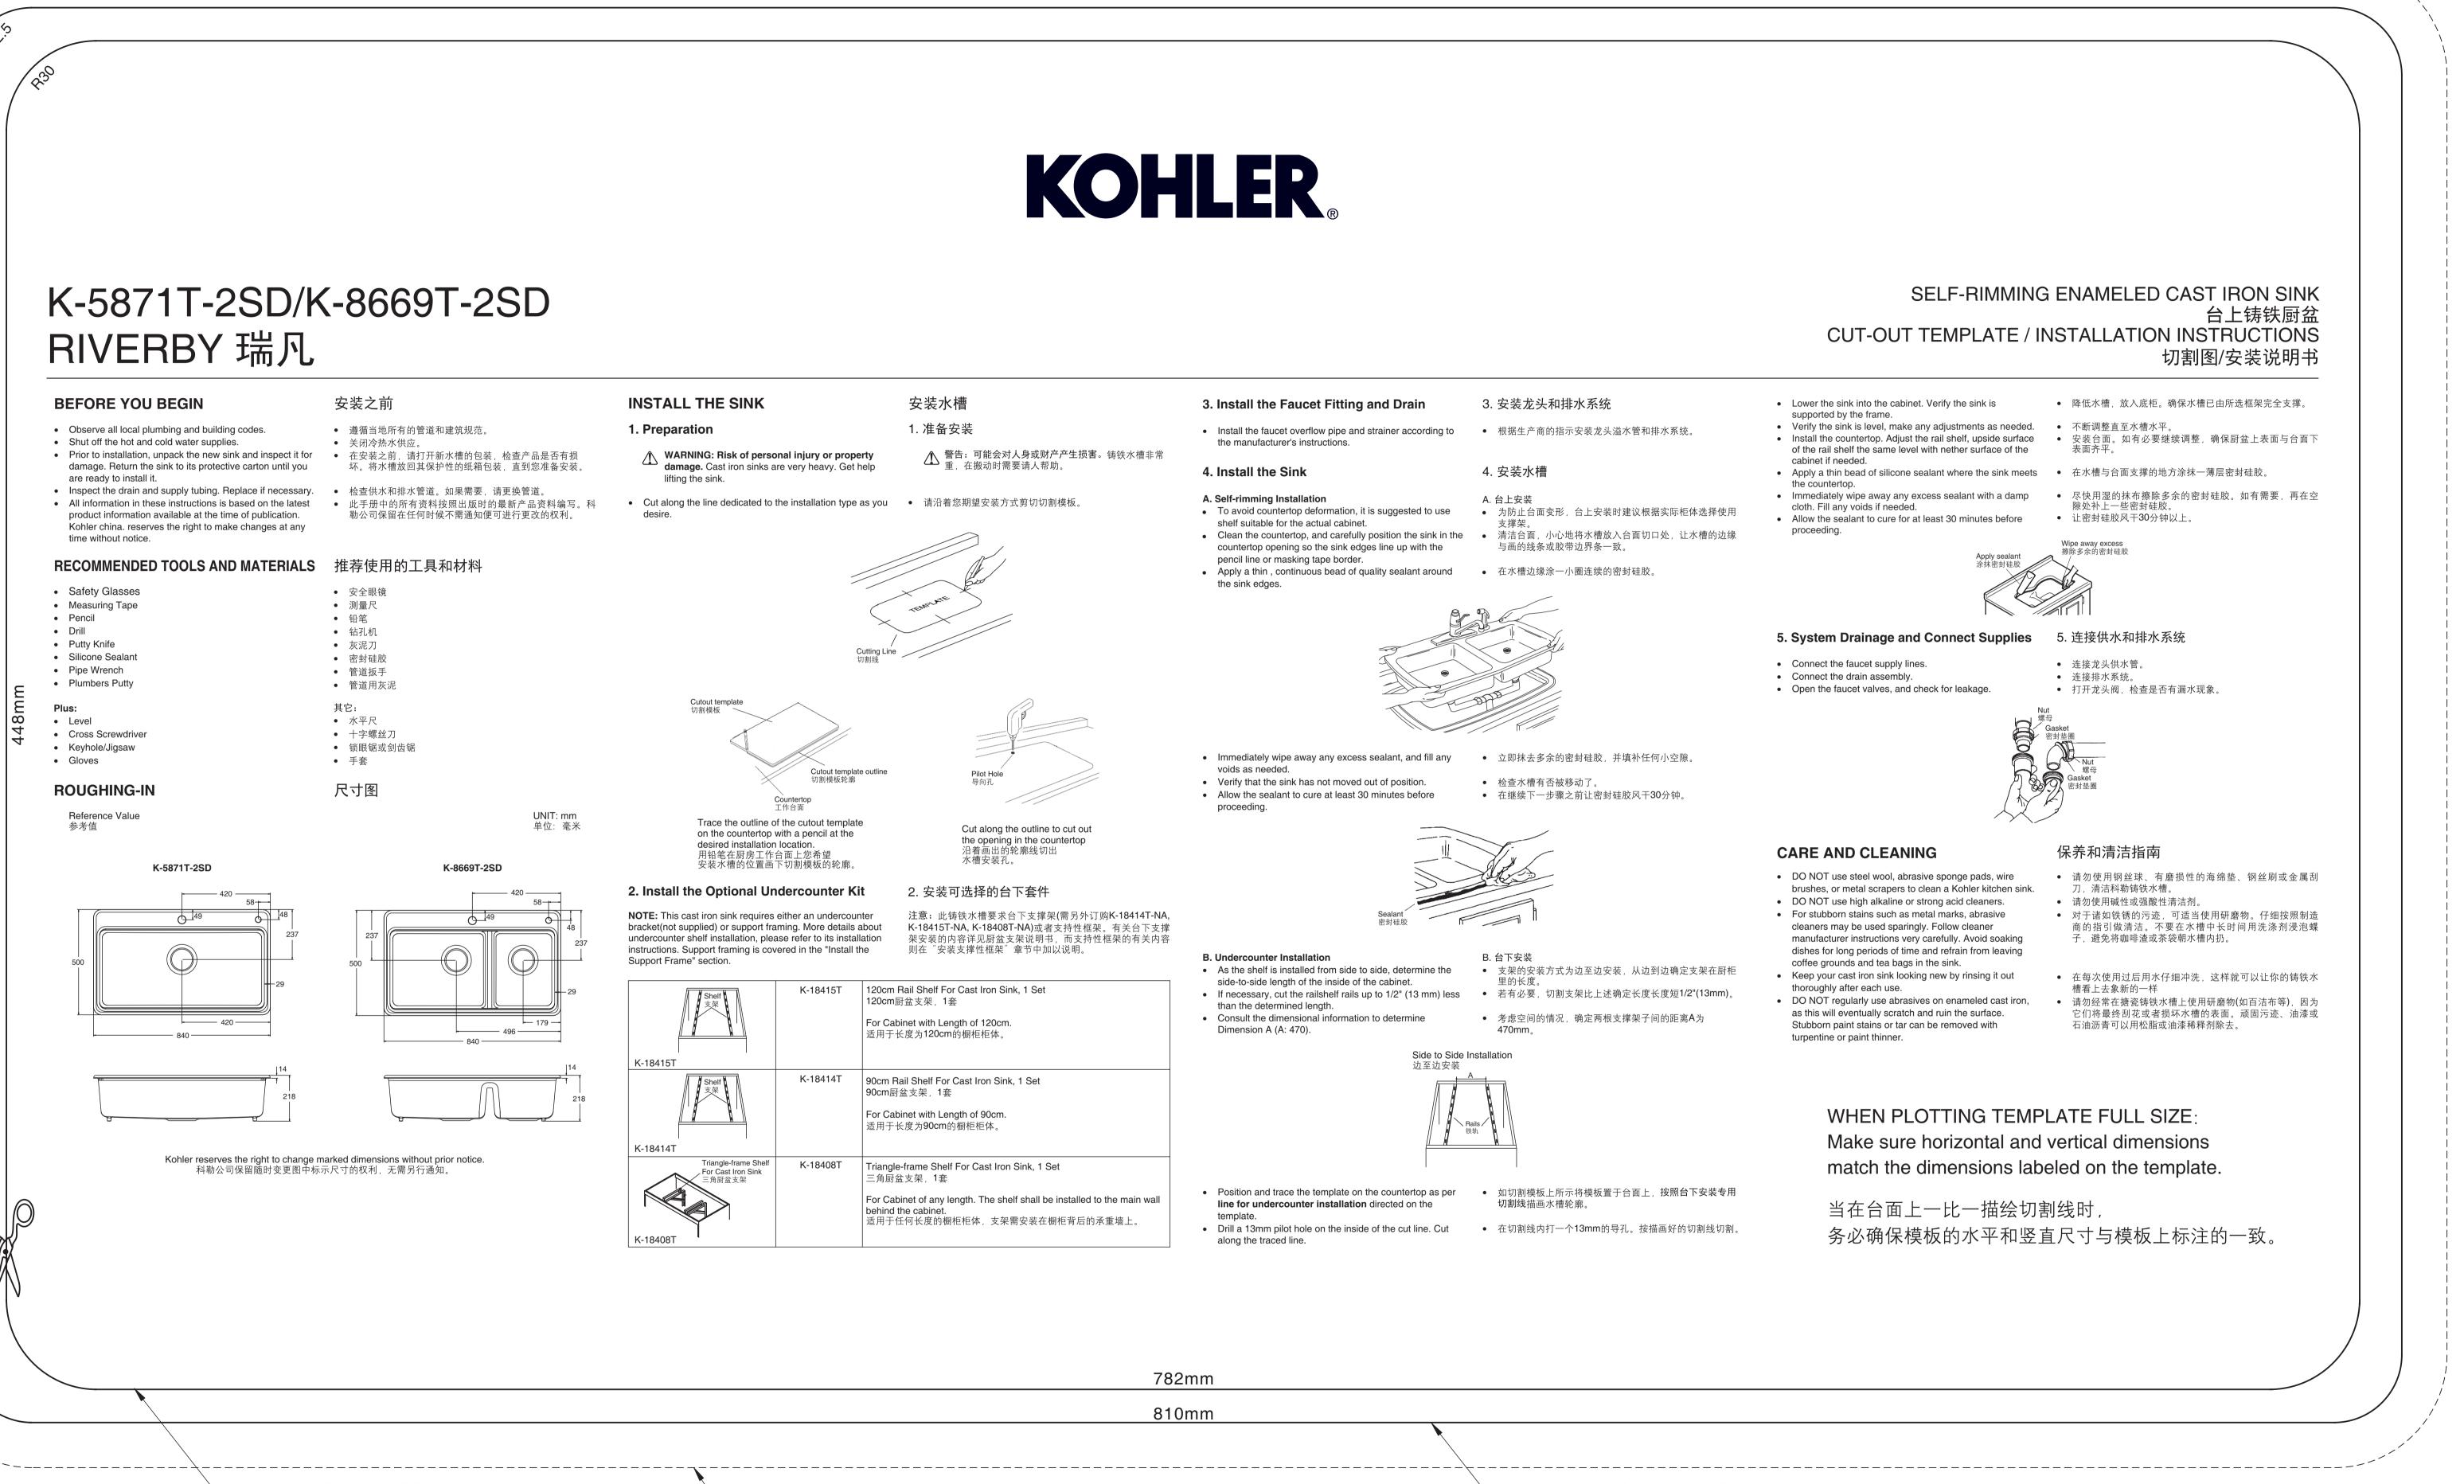

**RIM OF SINK** 水槽边缘

FOR SELF-RIMMING INSTALLATION CUT ALONG THIS LINE 专用于台上安装 沿此线切割

SHANGHAI KOHLER LTD., NO.368, MIN LE ROAD, FENG XIAN DISTRICT, SHANGHAI, CHINA POST CODE 201419 上海科勒有限公司 上海市奉贤区民乐路368号 邮编: 201419