

BEFORE YOU BEGIN

开始之前

- Congratulation on your purchase of this high quality Bathroom Accessory. Before proceeding with the installation, please carefully read this installation instruction in order to ensure proper care and assembly of this accessory.
- Please keep this installation instruction for future reference.

- 首先恭喜您购买到了高档的卫浴产品，为了使您正确保护和组装产品，在您安装之前请仔细阅读此说明书。



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget:

1. Wear eye protection.
2. Unplug equipment after use.



警示：在钻孔之前，请借助电子探测仪确认墙内是否有电源线，通讯光缆或者水管之类的东西。如果使用电钻的话请勿忘记以下两点：

1. 请戴上防护镜。
2. 用完设备后关掉电源。

INSTALLATION

安装步骤


For Listed Products Excluding Grab Bars

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Use measuring tools to measure the distance between two wall holes and mark drilling positions.
3. Drill holes to suit, and insert wall plugs if ① required.
Note: For best results, avoid wall studs. It is suggested to use a level to mark the holes.
4. Securely tighten the machine screw ③ against the mounting plate ② with the screwdriver.
5. Loosen off set screw (but do not remove) and place the accessory ④ over the mounting plate ② with set screw ⑤ at the bottom.
6. Tighten up the set screw ⑤ until the accessory ④ is secure against the wall.


非扶手类产品

1. 在安装之前请先辨别所有零件并确认是否齐全。
2. 先用量具量出壁座两孔的尺寸，并在安装的位置上标示出钻孔点。
3. 钻孔固定：若有必要，可插上壁塞①。为了达到最佳效果并避免墙面受损，建议您先借助水平尺规标明孔位。
4. 请用螺丝刀拧紧螺丝③与固定片②。
5. 松动止付螺丝⑤（请勿移出），然后利用底部的螺丝把产品④与固定片②固定上。
6. 拧紧止付螺丝⑤直到产品④完全固定住。


- ①. Wall plug
- ②. Mounting Plate
- ③. Screw
- ④. Accessory
- ⑤. Set Screw
- ⑥. Hexagonal key

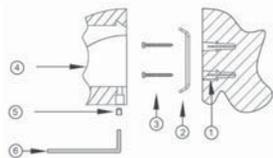


- ①. 壁塞
- ②. 固定片
- ③. 螺丝
- ④. 产品
- ⑤. 止付螺丝
- ⑥. 六角扳手

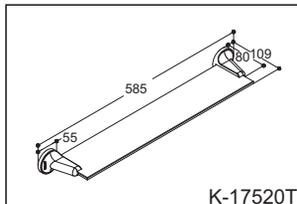


K-17520T

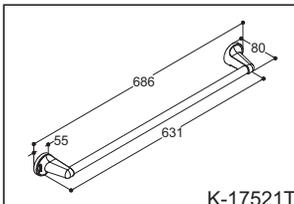


K-17521T

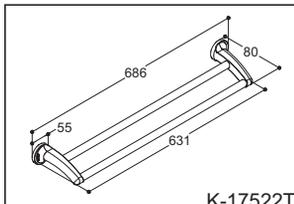


K-17522T

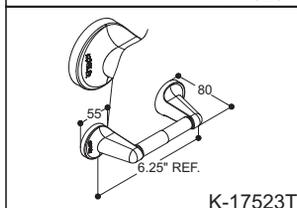


K-17523T

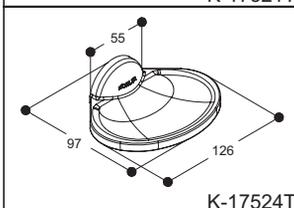


K-17524T

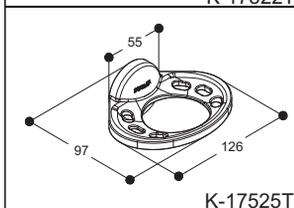


K-17525T

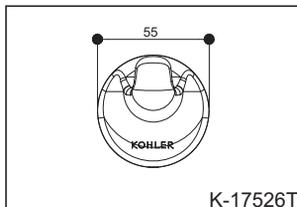


K-17526T

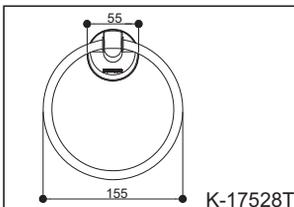


K-17528T

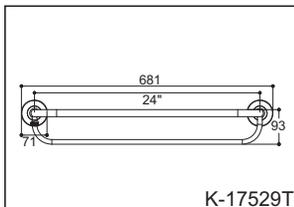


K-17529T

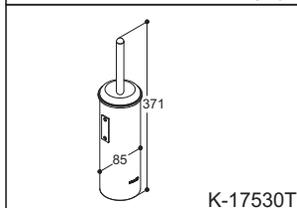

K-17530T

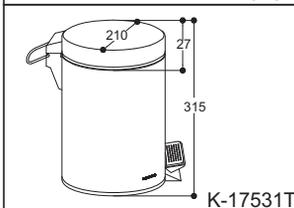


K-17531T

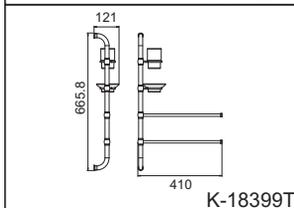

K-18399T

For Grab Bars

扶手类产品

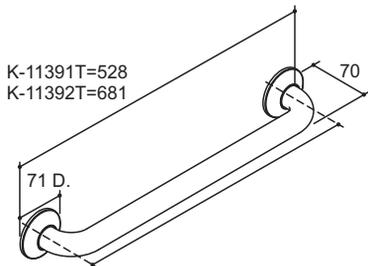

1. Mark and Drill the Pilot Holes

NOTE: There is no provision for later adjustment if the resulting pilot holes are not level.

- Mark the holes on the finished surface for each wall plate. Use the template on the back of the shipping carton to assist you OR hold the grab bar assembly against the desired location to mark the holes.
- Confirm the marked holes are at the desired location.

CAUTION: Risk of property damage. Apply light, even pressure when drilling through tile. Drill a clearance hole through the tile and its backing only. Use a 5mm or a #12 drill bit.

- Select a drill bit appropriate for the wall material you will be drilling through.
- Carefully drill a hole at all marked hole locations.

2. Install the Grab Bar

- Apply silicone sealant into the drilled holes (recommended). Insert expanded bolt into the drilled holes.
- Align the holes of the wall plates with the drilled holes on the wall.
- Secure the wall plate to the finished surface with the screws provided. Do not overtighten.
- Slide the escutcheons on the grab bar assembly over the wall plates. Press into place.

1. 标记和试钻孔

注意: 如果钻孔位置不水平, 则本说明书中不提供后期调整的说明。


- 在墙面上标记所有底座孔的位置。根据运输箱背面的模板或者将扶手组件按在墙面标记安装位置。
- 确定所标记的钻孔位置为您想要安装的位置。

警示: 财产受损风险。 钻孔时注意照明。所钻孔仅可穿透瓷砖。使用5mm或者12#钻头。

- 对于不同的墙体材料选择不同的钻头。
- 在所有标记位置小心地钻孔。

2. 安装扶手

- 在已钻孔内涂上密封硅胶(推荐), 并塞入膨胀螺钉。
- 将底座孔和墙体上所钻孔对齐。
- 使用附带的螺丝将底座完全固定在墙面。
- 将装饰盖套入扶手组件, 置于底座上方。用力向下按压使装饰盖固定到位。

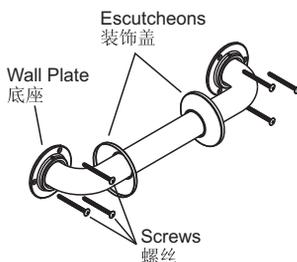

CARING FOR YOUR PRODUCTS

保养须知

The accessories should be washed with warm water and a soft cloth or sponge. Do not use abrasive cleaners or cleaners containing bleach.

为了更好地保养本品, 请您用温水和软毛巾(或海绵)擦拭, 含有腐蚀剂或漂白剂的洗洁剂对本品有害。