

BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information—**please leave instructions for the consumer**.
- Before installation carefully inspect the new fixture for any signs of damage.

⚠ WARNING: Risk of injury or product damage. Be careful when opening the door to avoid pinching fingers.

⚠ WARNING: Don't use acidic or alkalic cleaners or alcohol to clean the surface. Use a dampened cloth to clean.

⚠ CAUTION: Risk of electric shock. Electrical wiring may need to be relocated.

⚠ CAUTION: Risk of property damage. Use anchors (not provided) rated for the loaded weight of this product. Refer to the anchor manufacturer's instructions.

⚠ Important Information: This cabinet is designed for either right or left door swing. Check the wall cavity for obstructions.

TOOLS REQUIRED

安装之前

- 请仔细详阅本指引，以便熟悉所需工具、物料及安装程序。请遵照适用的章节来安装本产品，以免安装失当导致不必要的损失。除了有关正确的安装方法之外，还务请详阅所有操作及安全指引。
- 本指引所载之一切资料，均以印刷时所有之最新产品情况为基础，科勒中国保留权利随时更改产品特性、包装或供应情况，恕不另行通知。
- 本指引也包含了有关保养、清洁及担保等重要资料—请交予用户保存。
- 安装之前，仔细检查产品是否有损伤。

⚠ 警告：可能有人员伤害或者产品损坏的危险。为防止门左右移动时夹到手指，请注意推门的位置。


⚠ 警告：表面不能用含酸或碱性的清洁剂以及酒精清洁，请用潮布清洁。

⚠ 警告：触电风险。可能需要重新布线。

⚠ 警告：财产损失风险。请使用可承载本产品重量的膨胀螺栓（不随货提供）。请参考螺栓制造商的产品说明。


⚠ 重要信息：本镜柜有适用于左右开门安装的型号，请注意区别。请检查墙体内壁空间是否存在障碍物。

所需工具

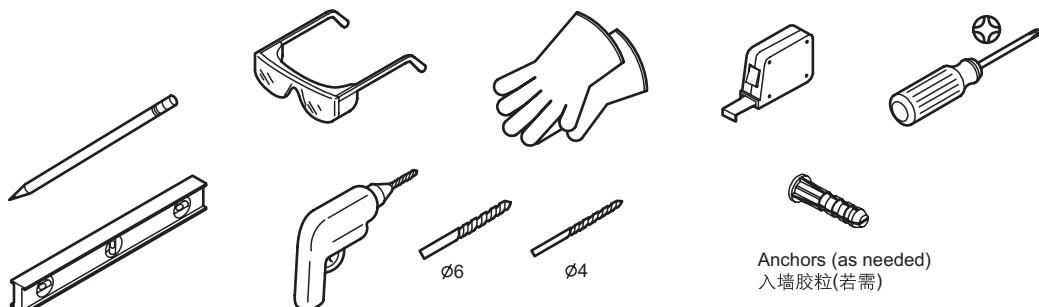

PARTS SUPPLIED

随附零件

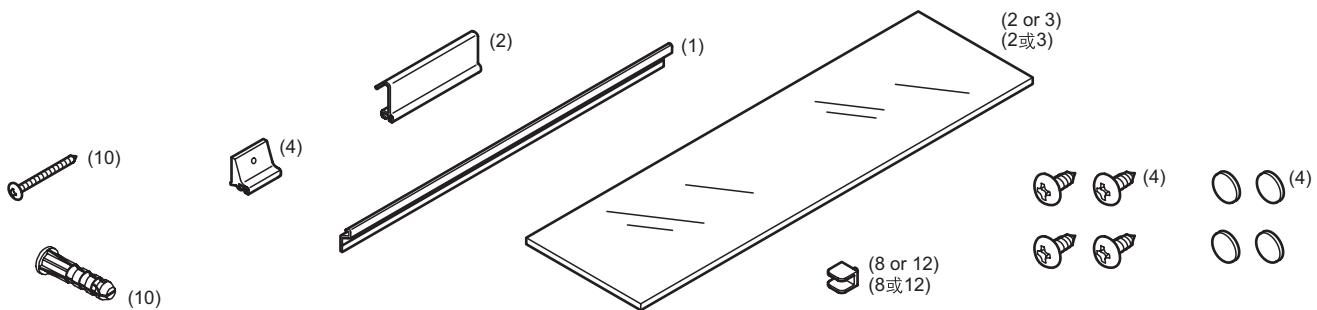


ROUGHING-IN

尺寸图



Reference Value
参考值

UNIT : mm
单位: 毫米



K-99003T-L
K-99003T-R

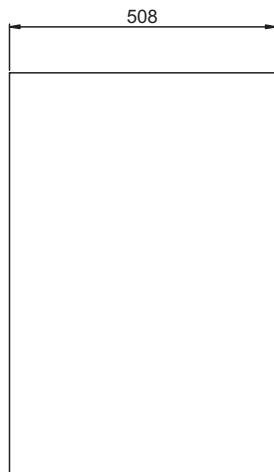

K-99005T-L
K-99005T-R

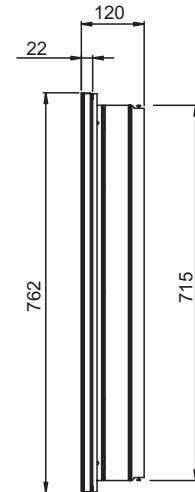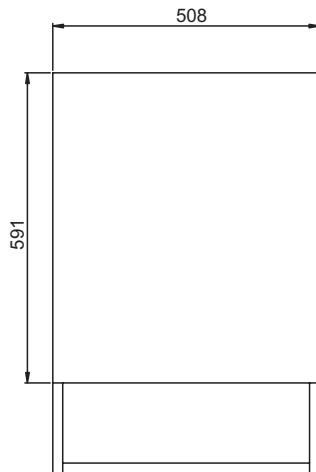

K-99009T

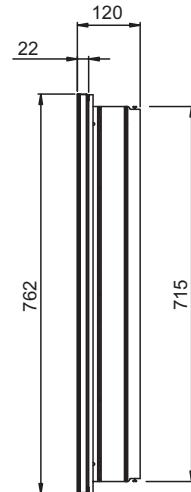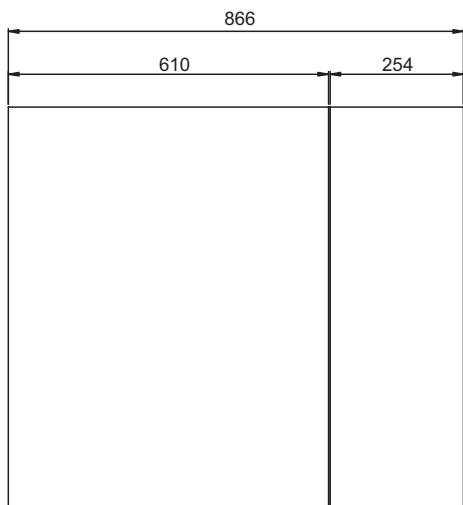


科勒公司保留随时变更图中标示尺寸的权利，无需另行通知。
Kohler reserves the right to change marked dimensions without prior notice.

INSTALLATION

Surface-Mount Installation

Verify minimum clearances.

确定最小间距。

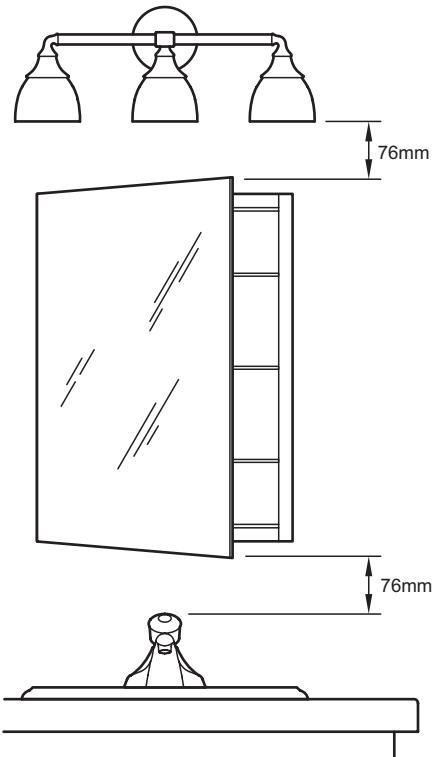


STEP
1

安装

挂墙式安装

Mark the mounting bar position (centered as desired). Mark stud locations.


标记安装支架的位置（根据所需确定中心点）。标记螺钉的位置。

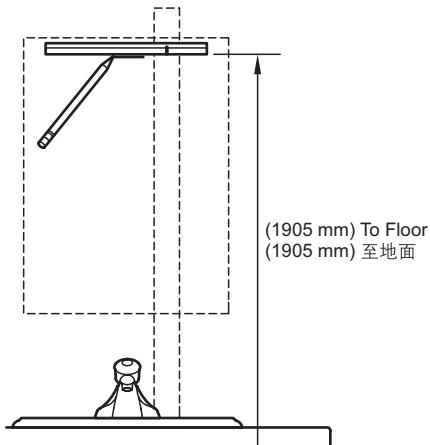

STEP
2

Mark hole locations on the wall. Drill holes. Insert anchors where needed.


在墙上标记安装孔的位置。钻孔。在所需处插入入墙胶粒。

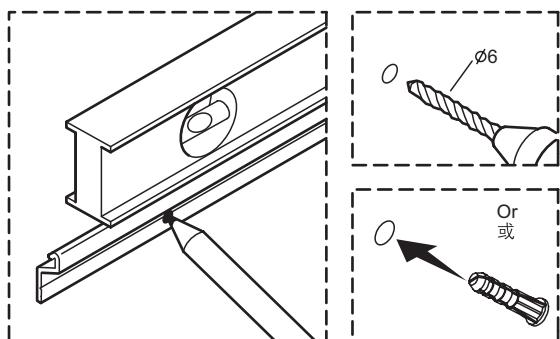

STEP
3


Secure the bar with round-head screws.

用圆头螺钉固定安装支架。

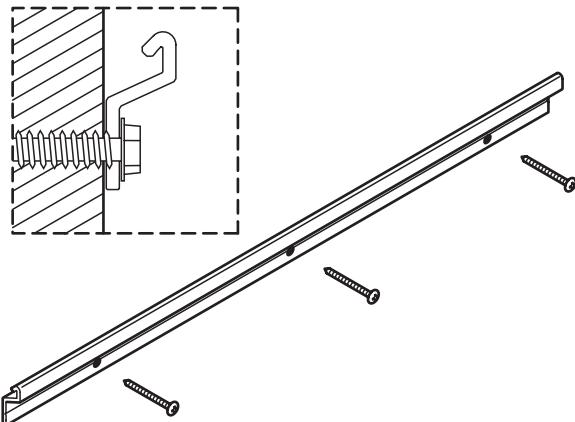


STEP
4

Rotate the cabinet for right or left door swing with KOHLER logo on the bottom of the outside mirror.
根据左右开门安装，KOHLER标志在外镜底部。

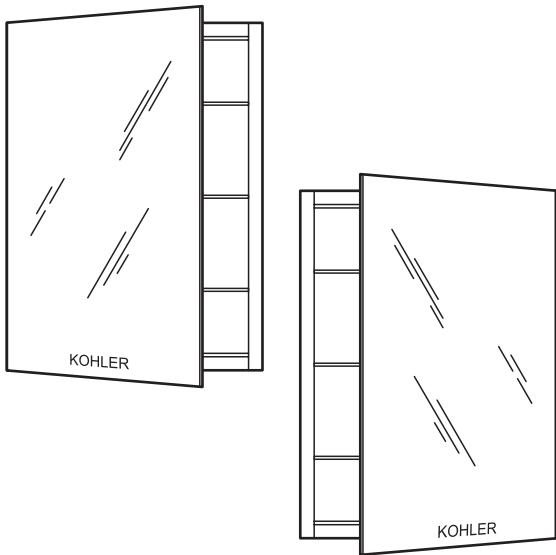

STEP
5


Slide the hanger hooks onto the top T-slot as shown.
如图所示，钩滑入顶部T型槽。

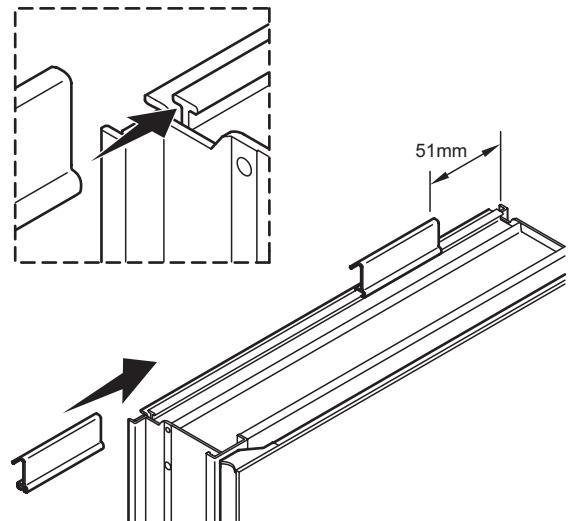

STEP
6

Lift the cabinet onto the mounting bar. Ensure the hooks engage the bar.


将镜柜抬至安装支架处。确保钩子与支架正确连接。

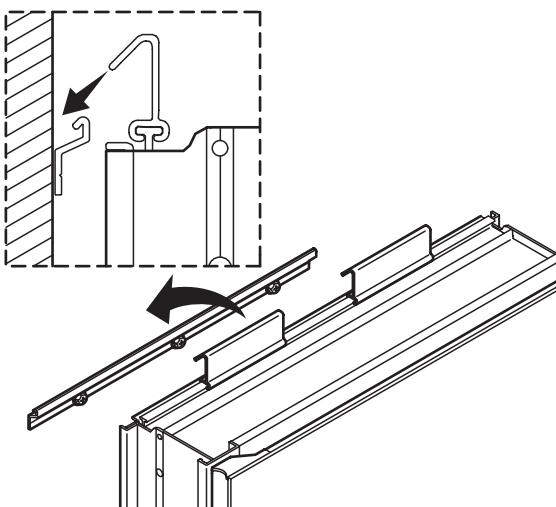

STEP
7

Slide two clips onto the T-slot. Ensure the cabinet is centered as desired. Drill pilot holes.


将两个夹子滑入顶部T型槽。确保镜柜位于所需的中心位置。钻安装孔。

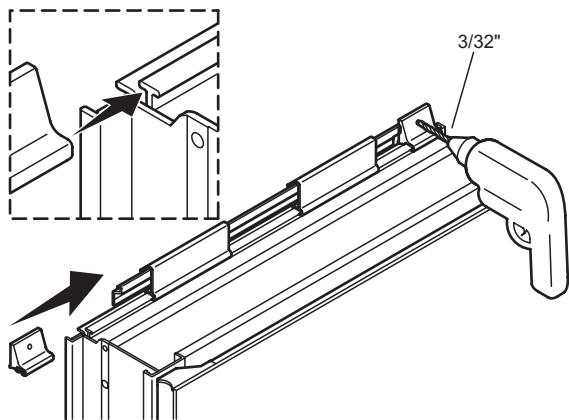

STEP
8

If needed, insert anchors into the wall. Secure the clips with round-headed long screws.


若有需要，将入墙胶粒插入墙面。用圆头的长螺钉固定搭扣。

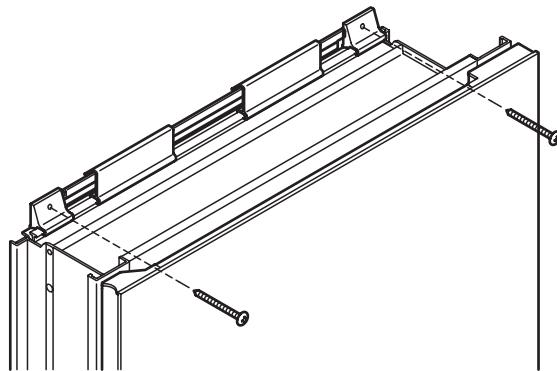

STEP
9

Slide two clips onto the bottom T-slot. Drill pilot holes and secure with round-headed long screws.

将两个夹子滑入底部T型槽。钻安装孔。用圆头的长螺钉固定搭扣。

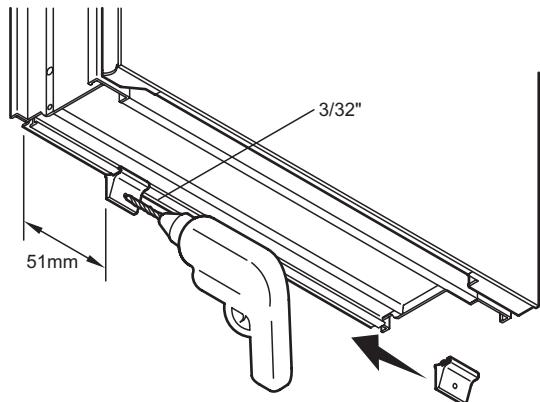

STEP
10

Cut-Out Dimensions.


切割框尺寸。

Model 型号	A=Width A=宽度
K-99003T	470mm
K-99005T	470mm
K-99009T	828mm

STEP
11

Measure and mark the cutout.


测量并标记切割框。

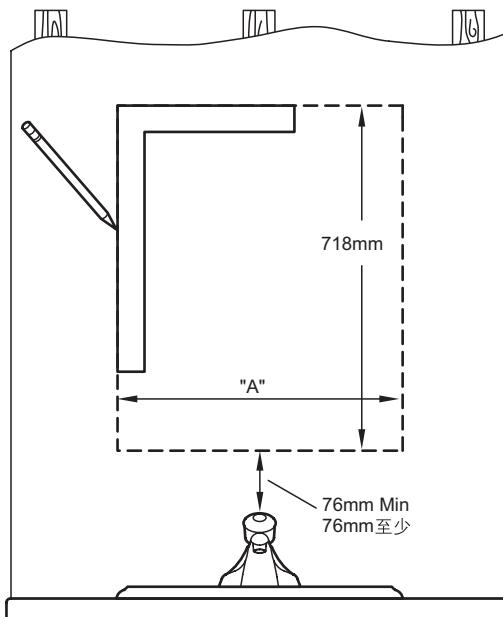

STEP
12

Cut away the drywall.


切割墙面。

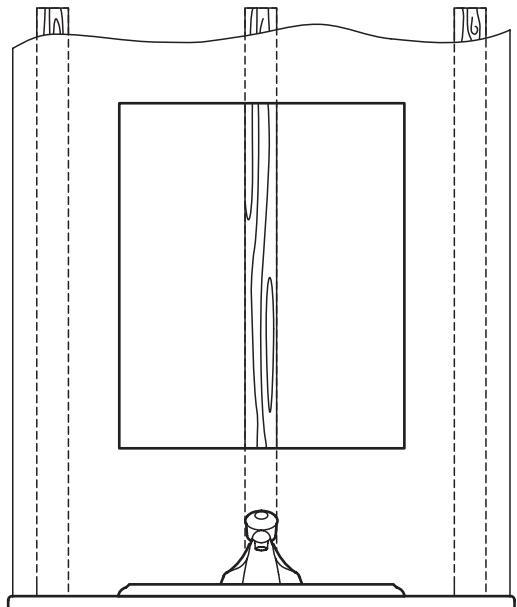

STEP
13

With help, lift and hold the cabinet in the cutout.


在他人帮助下，抬起镜柜，放入支架框。

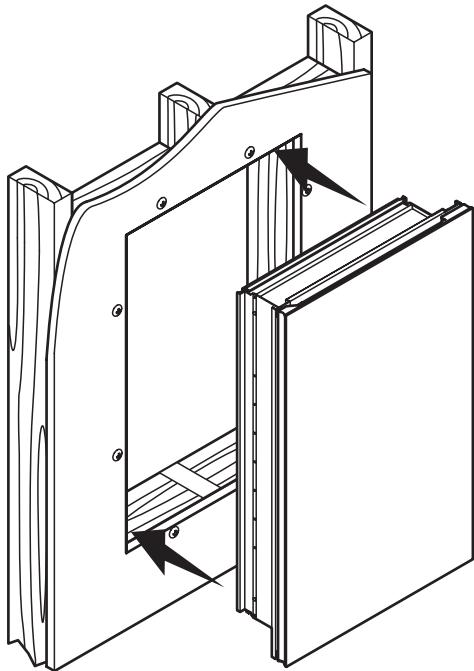

STEP
14

Secure the cabinet to the framing.

将镜柜固定至支架框。

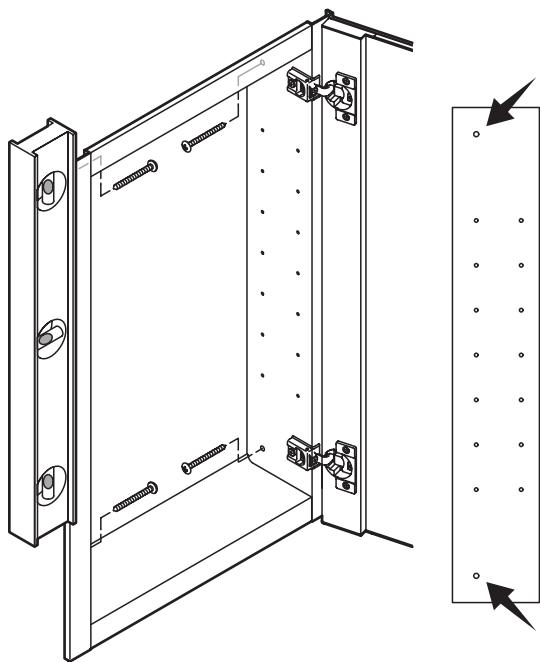


STEP
15

Installation and Adjustment of Accessories

Install the clips. Insert the shelves between the clips.

安装夹子。将层板插入夹子中。

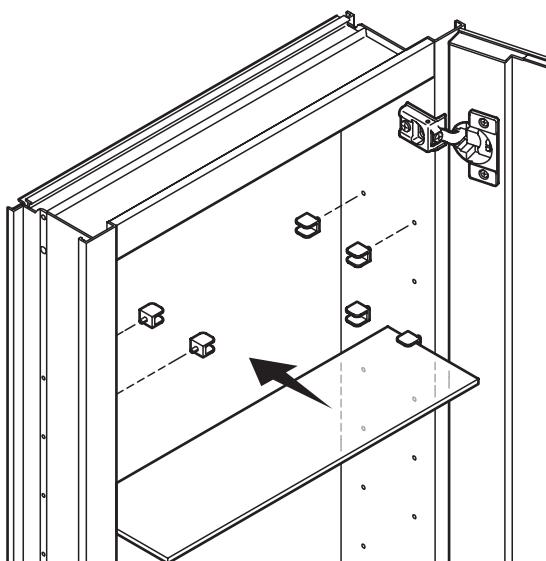


STEP
1

配件安装及调节

If needed, align the door.

若有需要，可对柜门进行调整。

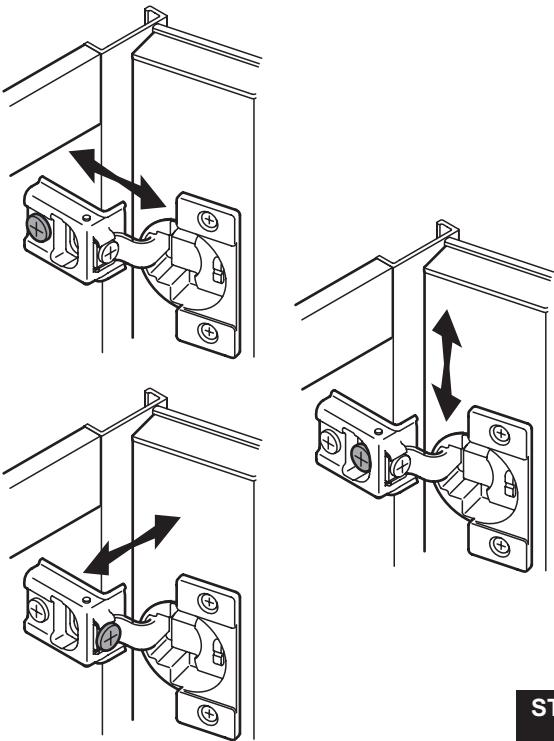


STEP
2

To adjust mirror height, slide up or down.

IMPORTANT! Rotate mirror in before closing the door.

上下滑动，以调节镜子高度。


重要：必须在柜门关闭前旋入镜子。

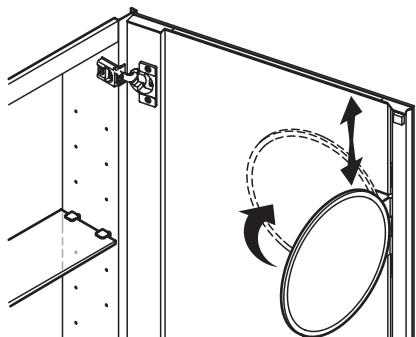

STEP
3

To adjust mirror tension, remove the end cap and mirror.
Turn tension knobs.


若需调整镜子松紧度，可拆除后盖和镜子。转动松紧度旋钮。

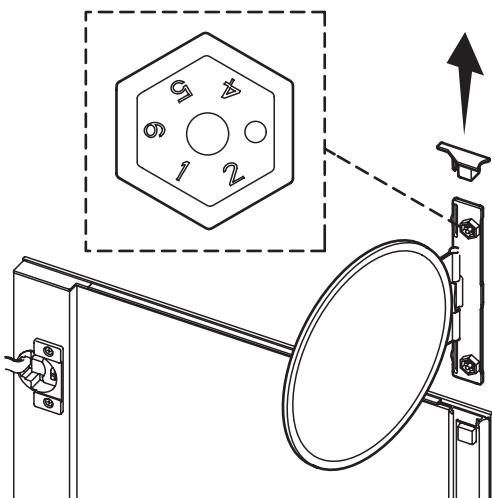

STEP
4

Installation of Side Mirror (Note: Not necessary for recess-mount installation.)


Find the two bracket locations on each side of the cabinet.
在镜柜两侧找出支架位置。

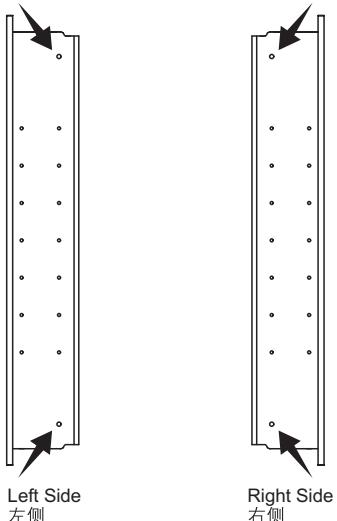

STEP
1


侧镜安装(注：入墙式安装不需要装侧镜。)

Align the brackets with the mounting holes.
将支架与安装孔对齐。

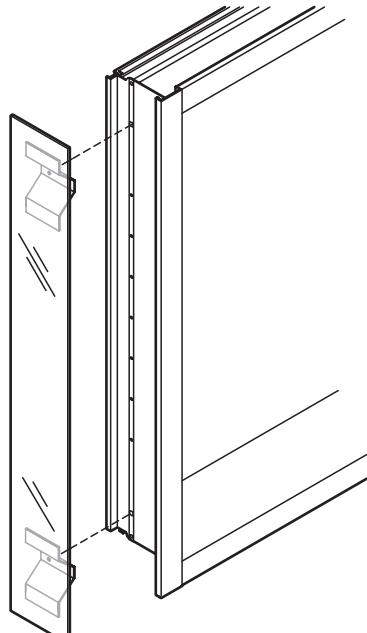


STEP
2

Secure the brackets with the round-headed short screws.
用圆头短螺钉将支架固定。

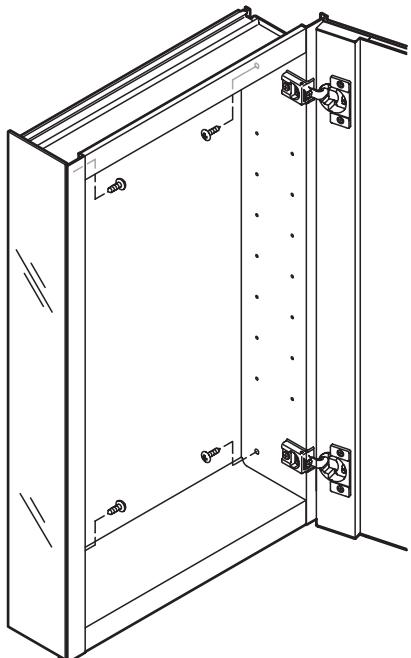

STEP
3

Cover the screws with the screw caps.
安装螺帽。

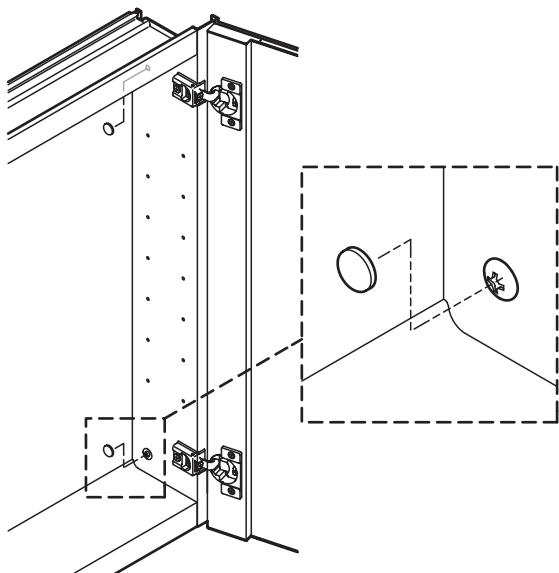

STEP
4