

10373 10374 16351 16352 16355
10375 16353 10376 16354

SHOWERHEAD WITH ARM & FLANGE

BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

1. Flush the water supply pipes thoroughly to remove debris.
2. The highest working pressure for handspray & shower head is 0.5MPa(5 bar). If it exceeds 0.5MPa(5 bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handspray, shower head and shower arm away from heater, or it may become damaged and cause injury to the user.


ROUGH-IN DIMENSIONS

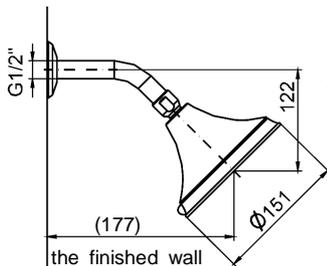


10373

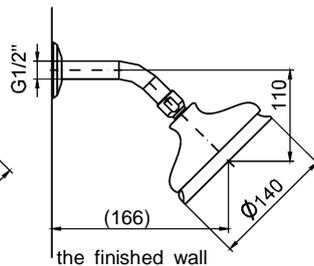


10374

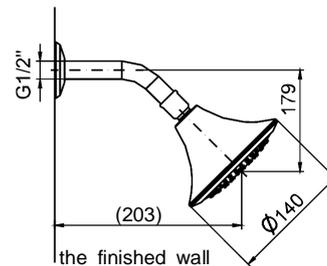


16351

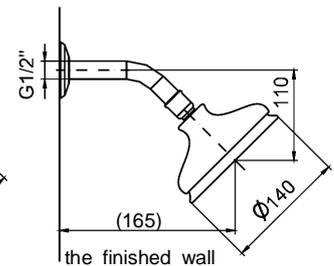


16352

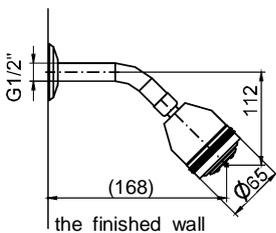


16355

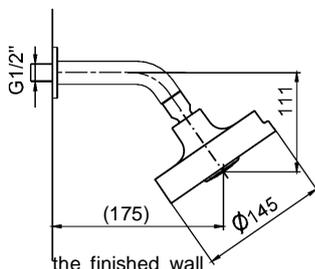


10375

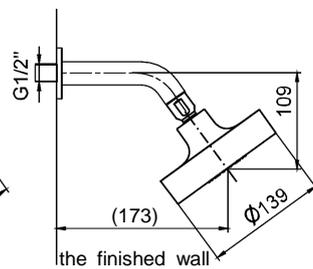

16353

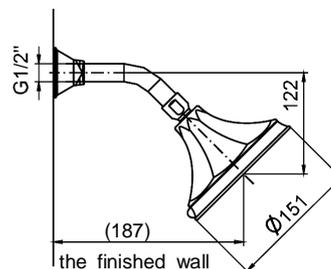

10376

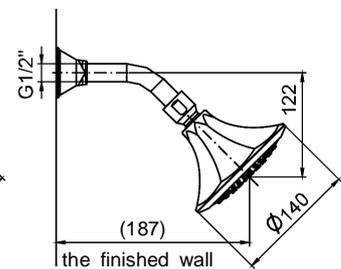


16354

INSTALLATION

For 10373/10374/16351/16352/16355


Remove the temporary nipple. Apply a ring of plumbers putty around the back surface of the flange(2). Slide the flange over the shower arm(3). Apply tape or sealant to the shower arm, and install the shower arm into the shower ell(1). Tighten with a strap wrench. Push the flange against the wall. Remove any excess putty.

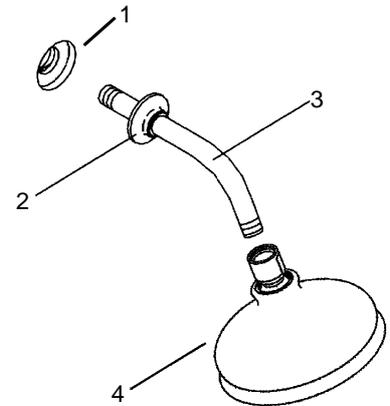

Flush both water supplies through the shower arm for one minute before the shower head is installed. Apply tape or sealant to the exposed end of the shower arm. Tighten the showerhead(4) with a strap wrench.

For 10376/16354

Remove the temporary nipple. Apply a ring of plumbers putty around the back surface of the flange(6). Slide the flange over the shower arm(8). Apply tape or sealant to the shower arm, and install the shower arm into the shower ell(5). Tighten with a strap wrench.

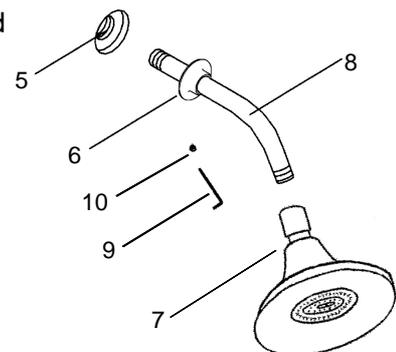


Push the flange against the wall, tighten the screw(10) with the hex wrench(9) to secure the flange. Remove any excess putty.

Flush both water supplies through the shower arm for one minute before the shower head is installed. Apply tape or sealant to the exposed end of the shower arm. Tighten the showerhead(7) with a strap wrench.

For 10375/16353

Install the G1/2" connector(11) to the pipe so it extends 10~18mm beyond the finished wall. Apply tape or thread sealant to the connector threads, apply a ring of plumbers putty or sealant around the flange(12). Slide the flange over the shower arm(13). Install the shower arm onto the connector(11). Tighten with strap wrench. Push the flange against the wall. Remove any excess putty.

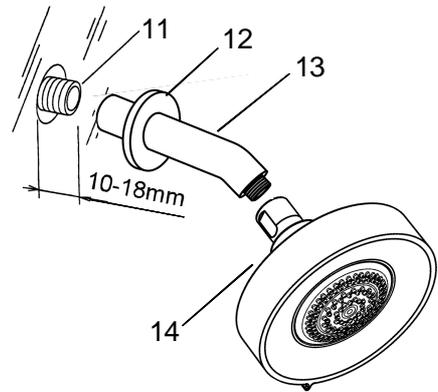

Flush both water supplies through the shower arm for one minute before the showerhead is installed. Apply tape or sealant to the exposed end of the shower arm. Tighten the showerhead(14) with a strap wrench.


CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler showerheads and fittings.

10373 10374 16351 16352 16355
10375 16353 10376 16354

SHOWERHEAD WITH ARM & FLANGE

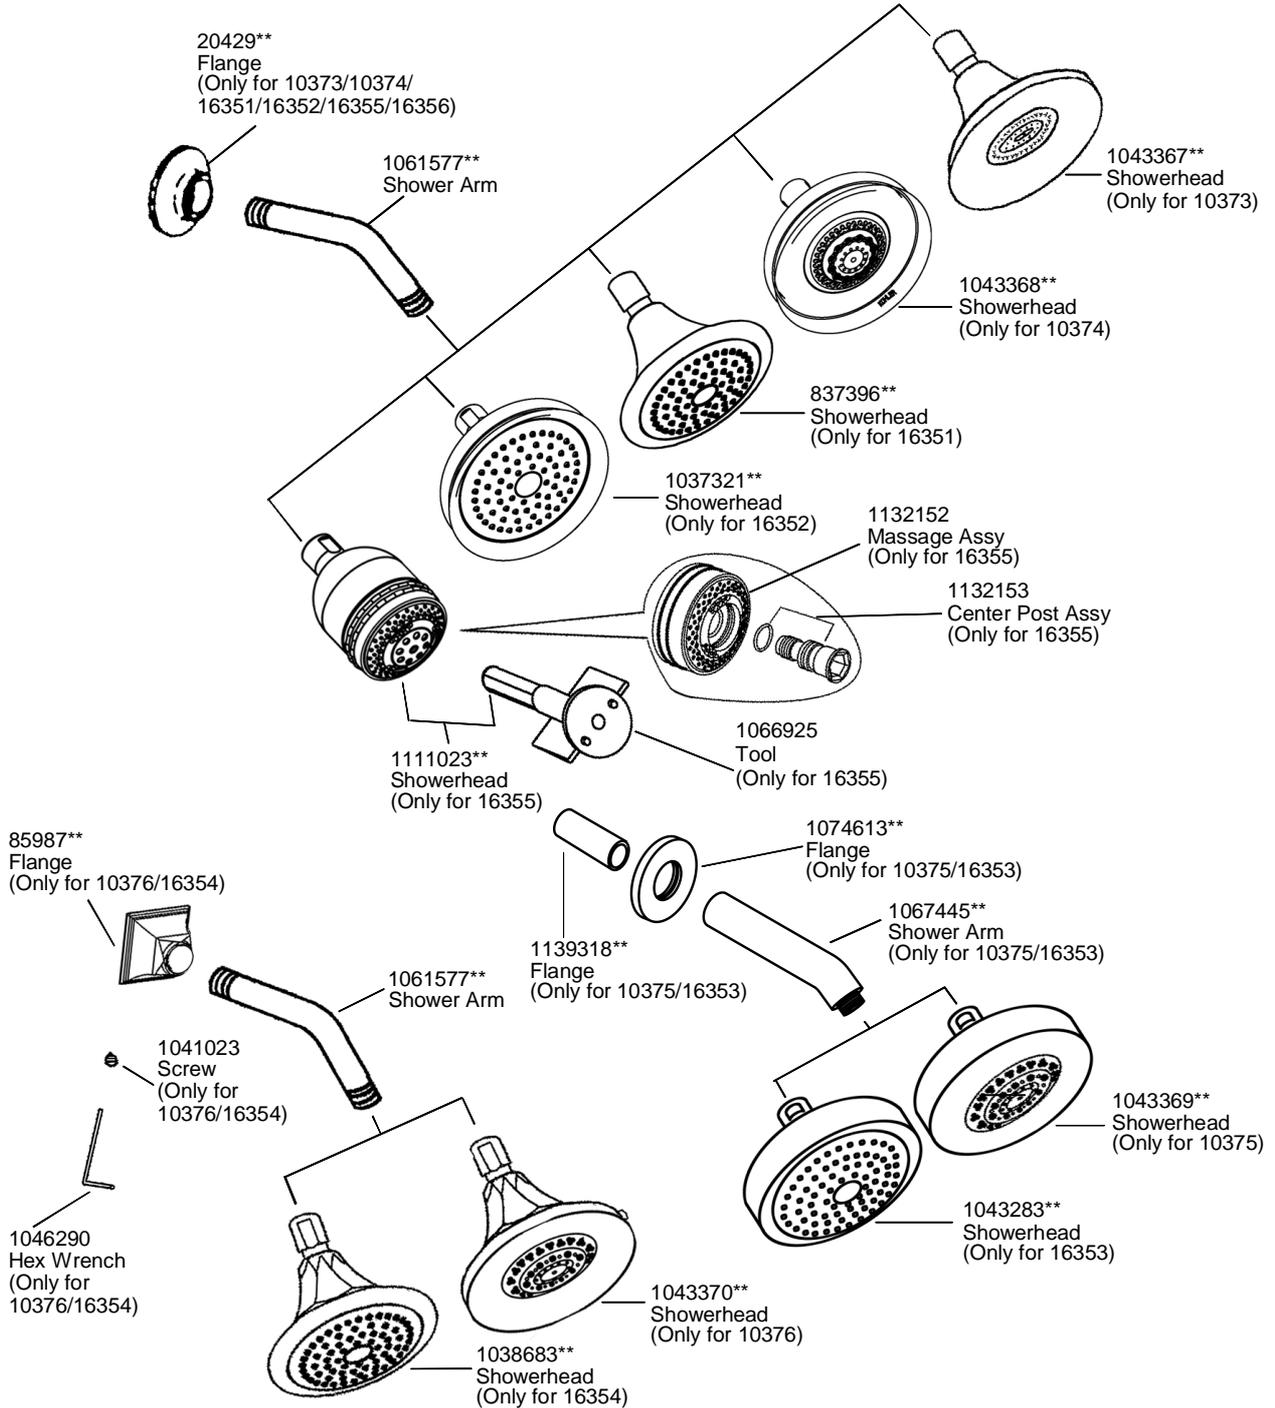

**Color code must be specified when ordering