

11615 16359 16361 16364  
16365 16366 10377 10109 37432

### HANDSPRAY WITH HOSE

#### BEFORE YOU BEGIN


All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

#### NOTES:

1. Flush the water supply pipes thoroughly to remove debris before installation.
2. The highest working pressure for handspray is 0.5Mpa(5 bar). If it exceeds 0.5Mpa(5 bar), a pressure reducer is needed. The highest water and environment temperature is 60°C. Please keep handspray away from heater, or maybe damage it and hurt user.


#### ROUGH-IN DIMENSIONS

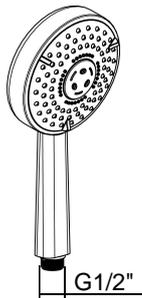

11615



16359

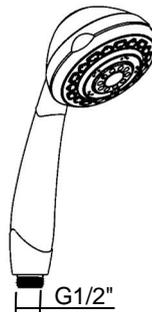


16361




16364




16365

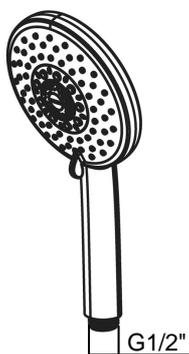


37432

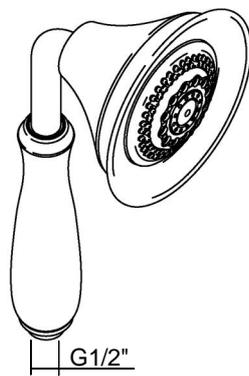


16366

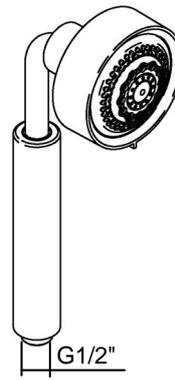

10377




10109

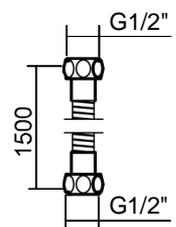

## INSTALLATION

Filter washers(1) provided with shower hose(2) must be installed in each end of hose(2). For **16366/10377**, put the washer(4, thickness 5mm) instead of washer(1) at the end which connect to the handspray. Connect shower hose to handspray(3) and the water supply.

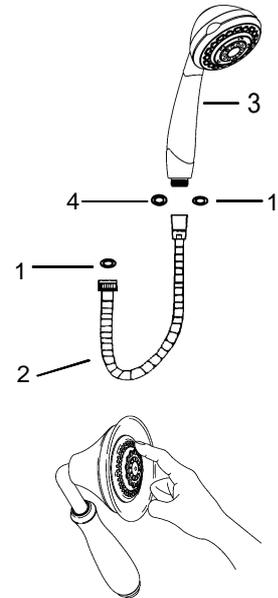

### How To Clean The Spray Holes


The furriness or debris may cause flow stream distorted or reduce the flowrate. To clean up the furriness or debris, run water through the handspray, firmly press or rub your finger back and forth across the rubber spray holes.



## CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning. Do not use abrasive cleaners or solvents on Kohler handsprays and fittings.

## SERVICE PARTS

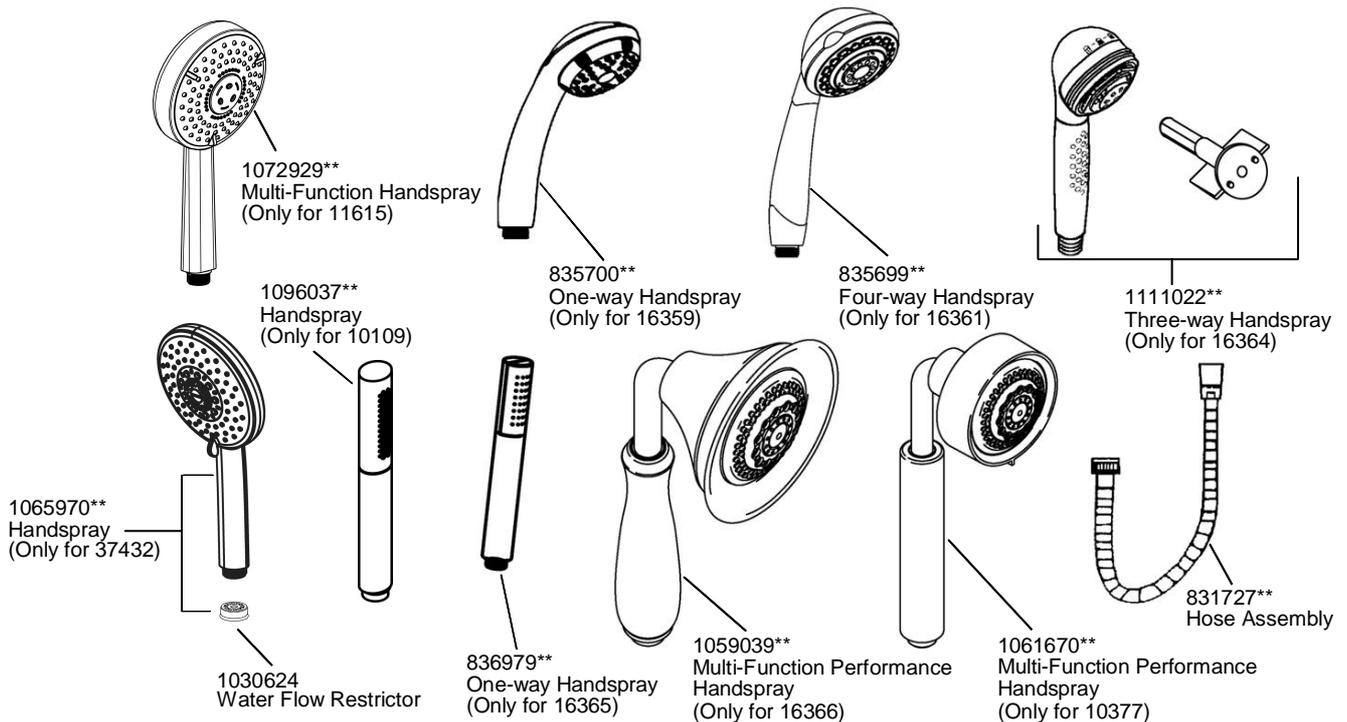

\*\*Color code must be specified when ordering.