


### INSTALLATION INSTRUCTIONS

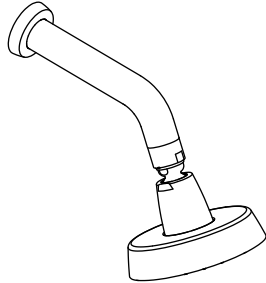

P23272



P21672

## INSTALLATION INSTRUCTIONS

## THANK YOU FOR CHOOSING KALLISTA


We appreciate your commitment to Kallista quality products. Please take a moment to review this manual before you install your Kallista product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

## BEFORE YOU BEGIN

 **WARNING:** Risk of scalding. High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation Instructions.

- ☐ Prior to installation, unpack the new showerhead and inspect it for damage. Return the showerhead to its protective carton until you are ready to install it.
- ☐ Observe all local plumbing and building codes.
- ☐ Shut off the water supply.
- ☐ The finished wall or bath/shower unit must be installed before installing this trim.
- ☐ The appearance of your product may differ from what is shown in these instructions, however, the installation procedure is the same.
- ☐ KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

## TOOLS AND MATERIALS




Pipe Wrench



Thread Sealant




Plumbers Putty



Silicone Sealant



Adjustable Wrench




Strap Wrench

Plus

- 1/2" Pipe Nipple


## INSTALLATION INSTRUCTIONS

## INSTALLATION

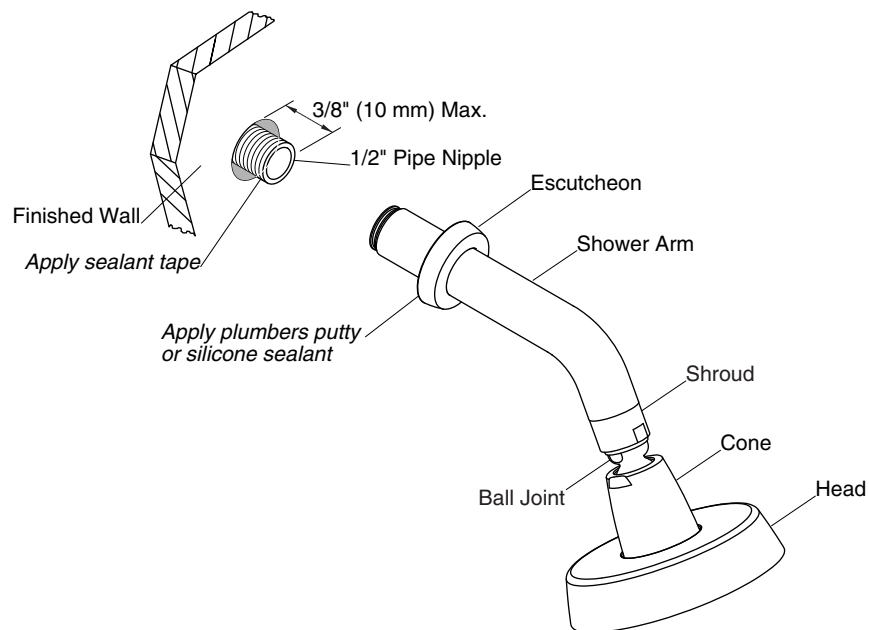


**CAUTION:** Risk of product damage. To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound (pipe dope).

- ☐ Apply sealant tape around both ends of a 1/2" pipe nipple.

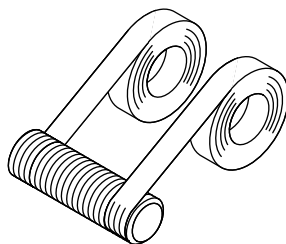

- ☐ Install the pipe nipple into the pipe with the pipe nipple extended 3/8" (10 mm) beyond the finished wall.

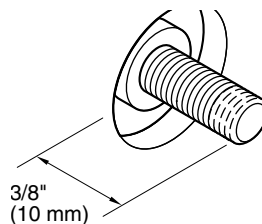


- ☐ Run water through the system to flush out dirt and debris.
- ☐ Slide the escutcheon onto the shower arm.


## INSTALLATION INSTRUCTIONS

## INSTALLATION (CONT'D)


- ❑ Thread the shower arm onto the 1/2" pipe nipple. Carefully tighten the shower arm with a clean strap wrench until the shower arm is oriented correctly.

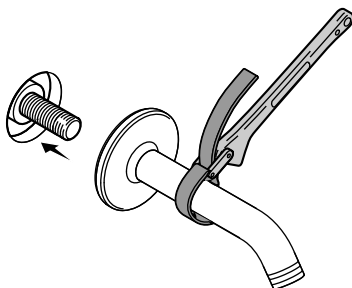

- ❑ Apply sealant tape to ball joint threads. Install the shroud and thread the ball joint onto threads. Tighten ball joint with a clean wrench (wrap the jaws with tape or use a rag to protect the finish).

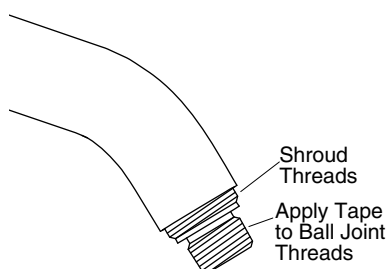

- ❑ Ensure ball joint is tight using a clean wrench (wrap the jaws with tape or use a rag to protect the finish).

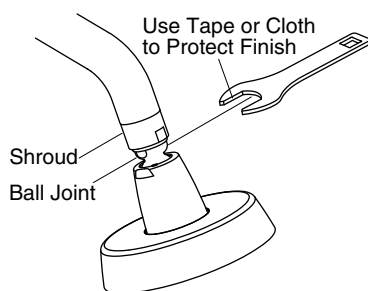

- ❑ Run water through the showerhead and check for leaks at the nipple. If leakage occurs, remove the showerhead and apply more sealant tape to the pipe nipple. Re-install showerhead and check for leaks. Repeat until no leakage occurs.
- ❑ Apply plumbers putty or silicone sealant to the back of the escutcheon.
- ❑ Slide the escutcheon so that it touches the wall.
- ❑ Wipe away excess plumbers putty or silicone sealant with a damp rag.
- ❑ If desired, apply a thin bead of clear silicone sealant around the escutcheon.

NOTE: To adjust the stiffness in the ball joint, grasp the cone tightly with one hand, and tighten the head with the other hand. A wrench may also be used to hold the cone in place while tightening (wrap the jaws with tape or use a rag to protect the finish).