
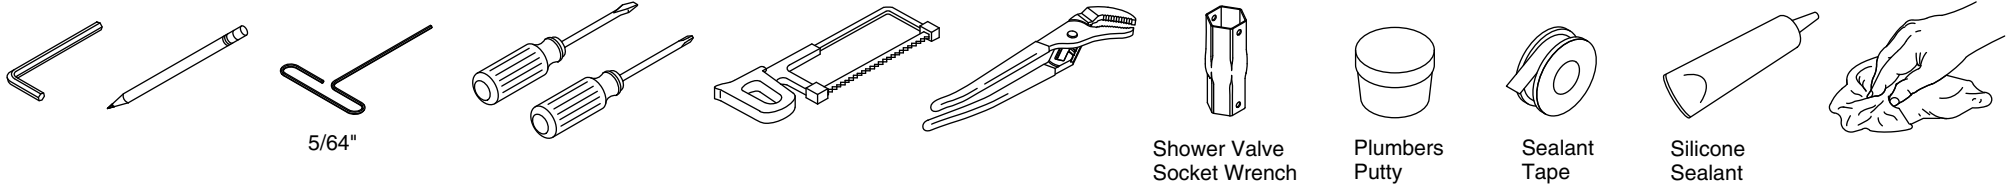
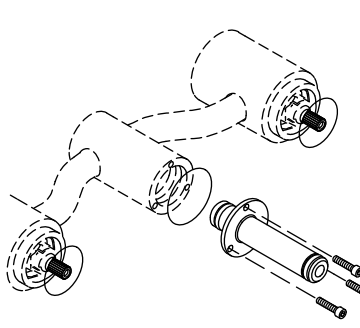
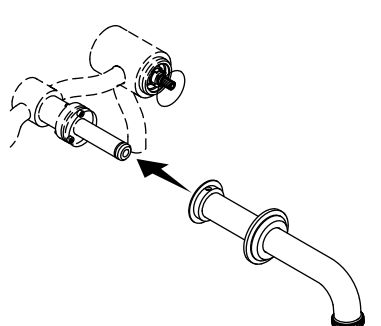
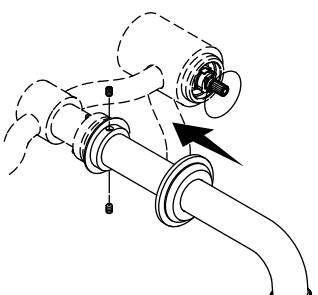
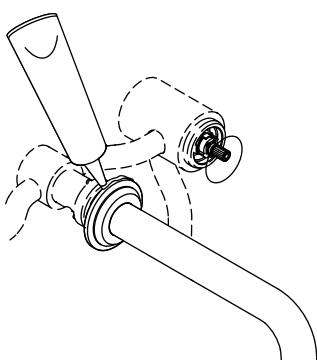
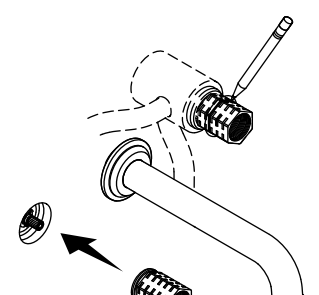
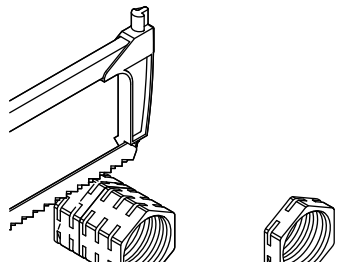
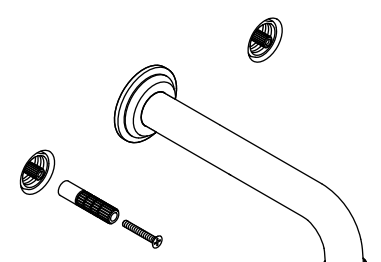
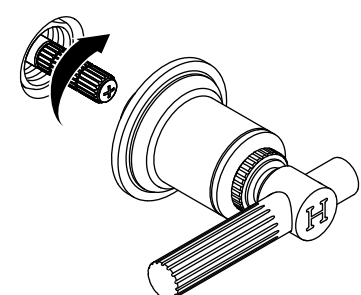
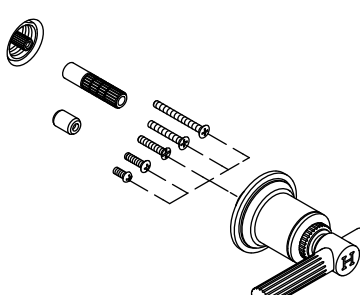
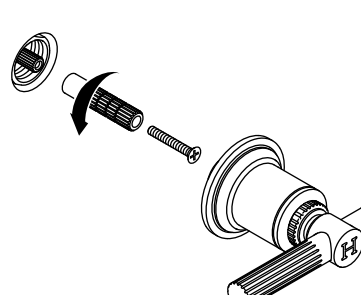
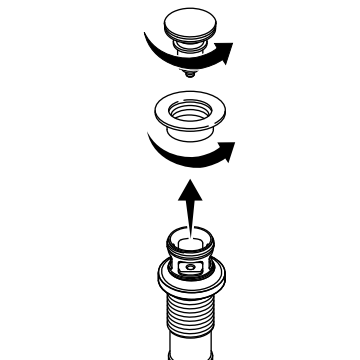
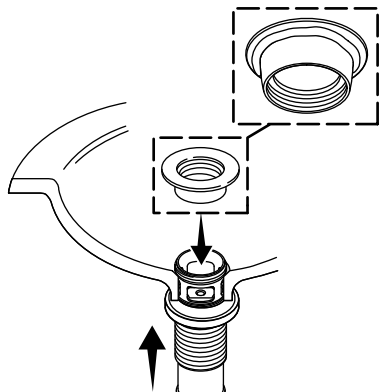
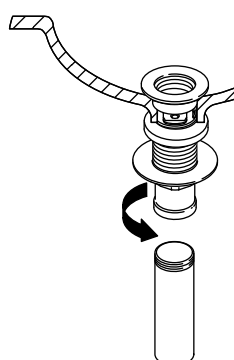
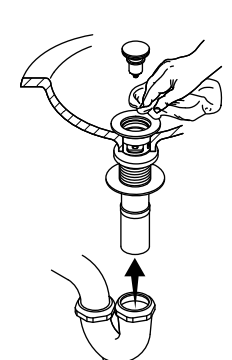
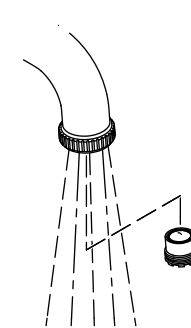


KALLISTA®

Installation Guide

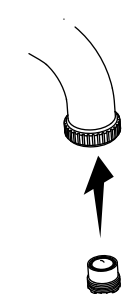

<p>Record your model number.</p>	<p>⚠ WARNING: Risk of scalding. High water temperature can cause severe burns. Set the water temperature at or below 120°F (49°C) following the adjustment procedure in the valve Installation and Care Guide.</p> <p>⚠ NOTE: Do not install aerator until after flushing the spout.</p>	<p>Important Information Follow all local plumbing and building codes.</p>	<p>1 Attach the spout shank to the valve with the three socket head screws.</p> 	<p>2 With the spout pointing down, slide the spout over the shank until flush with the finished wall.</p> 
<p>3 Secure the spout with the setscrews. Slide the escutcheon over the spout until flush with the wall.</p> 	<p>4 Optional: If desired, apply a bead of clear silicone sealant around the escutcheon.</p> 	<p>5 Using a shower valve socket wrench, fully thread the sleeve onto the valve. Mark where the sleeve is flush with the wall.</p> 	<p>6 Remove the sleeve and cut at the notch closest to the inside of the mark. The cut sleeve should not protrude beyond the finished wall.</p> 	<p>7 Reinstall the sleeve. Install the longest extension onto the valve stem with the longest screw.</p> 
<p>8 Place the handle horizontally onto the stem extension. Thread the escutcheon into the sleeve.</p> 	<p>9 If the escutcheon is not flush with the wall when fully threaded, use the short stem extension or cut the extension to 11/16" (17 mm) past the finished wall. Use the appropriate length screw.</p> 	<p>10 To adjust handle position, rotate the extension one tooth. Repeat until aligned.</p> 	<p>11 Disassemble the drain.</p> 	<p>12 Apply plumbers putty to the flange and thread onto the drain body.</p> 
<p>13 Tighten the nut. Apply sealant tape to the drain pipe threads.</p> 	<p>14 Install the stopper. Connect the trapway. Wipe away excess putty.</p> 	<p>15 Remove the aerator with the key. Run the water for 1 minute to flush debris.</p> 	<p>16 Reinstall the aerator with the key.</p> 	

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.