
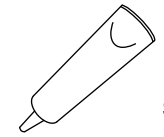


KALLISTA®

Installation Guide

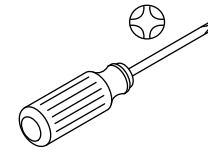


100% Silicone Sealant

Record your model number.


Important Information

Follow all local plumbing and building codes.


1 Install the spline adapters to the valve stems.

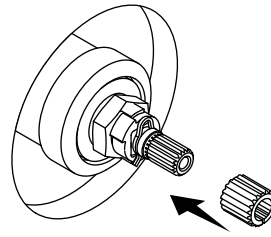


2 Secure the spline adapters with the screws.

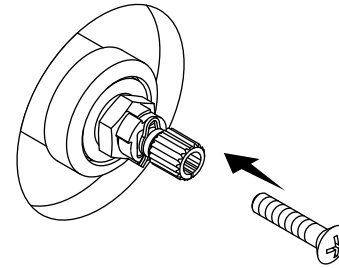


3 Turn the valves to the closed position.

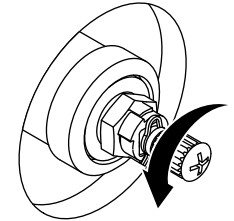

4 Apply a ring of 100% silicone sealant to the handle escutcheons.

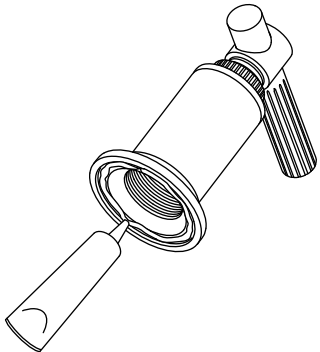

5 Position the handles on the valves. Thread the bonnet onto the valve until secure.

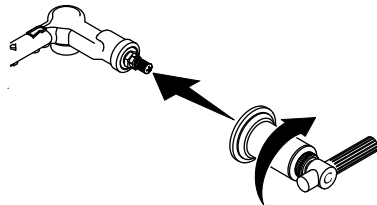

Questions? Problems? For additional assistance, please contact
KALLISTA's Customer Service Department at 1-888-4-KALLISTA
(1-888-452-5547) or kallista.com.