


PARTS



Semi-Recessed Side Kit



[203-1451]
(4) Screw




[SS672]
(4) Screw Cap

INSTRUCTIONS


These are general instructions for attaching Semi-Recessed Side Kits on an installed Uplift Tech medicine cabinet.

1. With the cabinet properly installed, slide the cabinet door up to the open position. Attach using two screws for Semi-Recessed. Cover screws with caps.

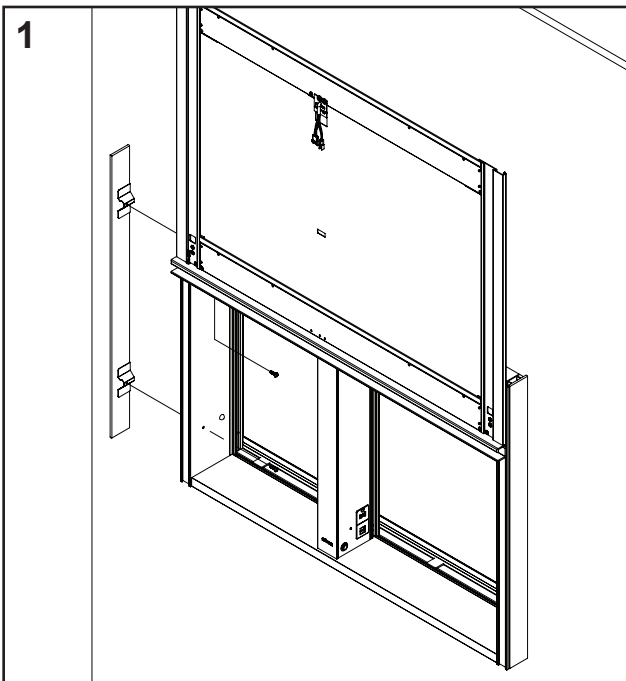

Kits de côté pour montage semi-encastré / Kits laterales para montaje semi empotrado

PIÈCES/ PARTES



Kit latéral semi-encastré /
Kit lateral semi empotrado



[203-1451]
(4) vis / tornillo



[SS672]
(4) bouchon à vis /
tapón de rosca

INSTRUCTIONS

Ce sont des instructions générales pour la fixation de kits latéraux semi-encastrés sur une armoire à pharmacie Uplift Tech installée.

1. Lorsque l'armoire est correctement installée, faites glisser la porte de l'armoire en position ouverte. Fixez à l'aide de deux vis pour semi-encastré. Vis de couverture avec des capuchons.

INSTRUCCIONES

Estas son instrucciones generales para instalar kits laterales semiempotrados en un gabinete de medicina Uplift Tech instalado.

1. Con el gabinete correctamente instalado, deslice la puerta del gabinete hasta la posición abierta. Fije utilizando dos tornillos para Semi-Empotrado. Cubra los tornillos con tapas.

