

BEFORE YOU BEGIN

A. Introduction

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information-**please leave these instructions for the consumer.**

B. Installer Hazard Notification

 **CAUTION!!** Risk of personal injury. Cast iron baths are extremely heavy. Wear appropriate safety equipment when installing these products.

安装之前

A. 引言

- 请仔细阅读此说明书以熟悉所需要的工具、材料及安装顺序。遵循适合您的特定安装要求的各项内容，避免昂贵的损失。除了要正确安装外，还应阅读操作及安全说明。
- 所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候无须通知即可改变产品特性、包装或产品可供类型的权利。
- 安装说明包括重要的安装、清洁及保养方面的内容，请把这些资料交给用户阅读。

B. 安装人员危险警告

 小心!! 避免人员受伤。铸铁浴缸非常重，在安装时一定要穿戴合适的的安全装备。

PRODUCT REQUIREMENTS

A. Summary Of Key Requirements

- Observe all local plumbing codes.
- Install the bath tub to a level floor.
- Provide properly-dimensioned space.
- Ensure that the drain location corresponds to the bath outlet.
- Make sure the flooring offers adequate support for your bath.
- Observe all local plumbing and building codes.

 **CAUTION: Risk of product or property damage.** Do not support the bath by the rim.

产品要求

A. 关键要求的总结

- 请遵守当地的管道施工规范。
- 在水平地面上安装浴缸。
- 提供适当的空间以安装浴缸。
- 确保地面排水的位置正好对准浴缸的出水口。
- 确保安装地面为您的浴缸提供足够的支撑。
- 遵守当地所有给排水和建筑规定。

 小心：存在产品或财产受损的危险。不要用浴缸边缘支撑浴缸。

B. Product Inspection

- Uncrate and inspect bath for damage. Leave all materials in the crate during construction to prevent damage.
- Carefully open the wood surround cartons and remove the components and hardware pack. Inspect all the wooden pieces for damage.
- If you observe any damage, do not install the bath or the wood surround. Report the specific problem to your dealer.

B. 产品检查

- 小心地打开包装箱并检查浴缸是否损坏。施工期间将所有的材料都留在箱内，以防止损坏。
- 小心地打开木质框架包装箱并检查其是否损坏，取出组件及五金配件包。小心检查木质组件是否损坏。
- 如果观察到任何损坏，请勿安装浴缸或木质框架。将问题告知经销商。

INSTALLATION REQUIREMENTS

安装要求

A. Tools And Materials Required (Not Supplied)

- Safety glasses
- Tape measure
- Pencil
- Level
- Blade screwdriver
- Phillips screwdriver
- Pliers
- Sealant
- Square
- Knife
- Conventional woodworking tools and materials
- Drop cloth 2×4's or 2×6's
- Water-resistant wall material
- Metal shims
- Adjustable wrench
- Hex wrench
- Rags

A. 所需工具及材料(不随货供应)

- 防护眼镜
- 卷尺
- 铅笔
- 水平尺
- 一字螺丝刀
- 十字螺丝刀
- 老虎钳
- 密封胶
- 直尺
- 美工刀
- 木工常用工具和材料
- 罩单 2x4英尺或2x6英尺
- 防水墙面材料
- 金属薄垫片
- 活动扳手
- 六角扳手
- 抹布

B. Clearance Requirements

Check the rough-in and room dimensions to provide adequate available space for the bath unit.

B. 预留尺寸

检查产品尺寸及浴室尺寸，确保有充分的空间安装浴缸。

SITE REQUIREMENTS

安装现场要求

A. Old Bath Removal (if necessary)

A. 拆除旧浴缸(如有必要)

B. Preparation

B. 独立浴缸安装准备

Note: Adequate floor support must be provided. Refer to roughing-in sheet packed with your bath for specific floor loading requirements.

注：必须确保地面支撑力足够。请参考浴缸随附的尺寸图查看具体的地面负载要求。

- Make sure the floor offers adequate support for your bath and verify that the subfloor is flat and level.

- 确保地面可以完全支撑您的浴缸，并确保地面水平。

Note: When assembling the surround, make sure there is sufficient space to move around the structure.

注：安装框架时，确保留有足够空间可以移动该框架。

C. Plumbing Preparation

Position the plumbing according to rough-in dimensions. Cap the supplies and check for leaks.

C. 管道的准备

将管道按安装尺寸安置。堵塞供水管并检查是否漏水。

INSTALL THE FREESTANDING BATH

安装独立式浴缸

1. Install the bath based on the unpacked package.


1. 直接在拆开包装上安装。

Note: Package base is used for wood surround installation. It is recommended to keep the package until you complete wood surround installation.

注意：包装的底架用于安装木架，请保留至木架安装完成。


- Unpack the bath and fix the wood surround on the package base.

- 打开包装，在包装的底架上安装木架。

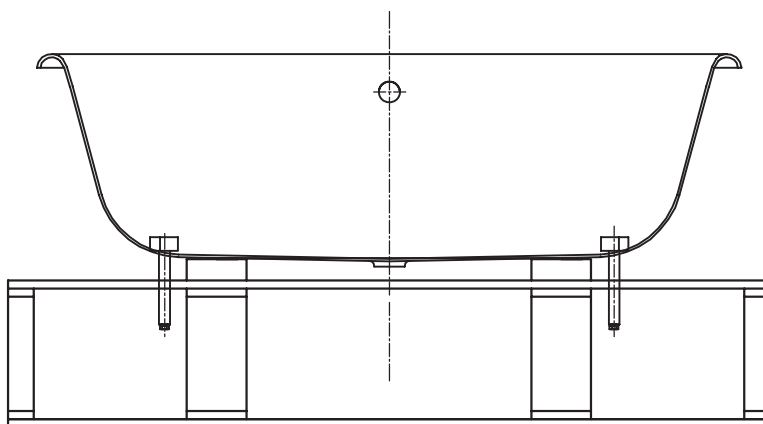


2. Verify that the distance between two adjustable feet located at the bottom of the bath conforms to roughing-in sheet with supporting tool gauge as illustrated. Otherwise, adjust the distance between two adjustable feet.


2. 用如图所示检具检验浴缸底部的可调支撑脚之间的距离。如不符，请调节可调支撑脚间距。

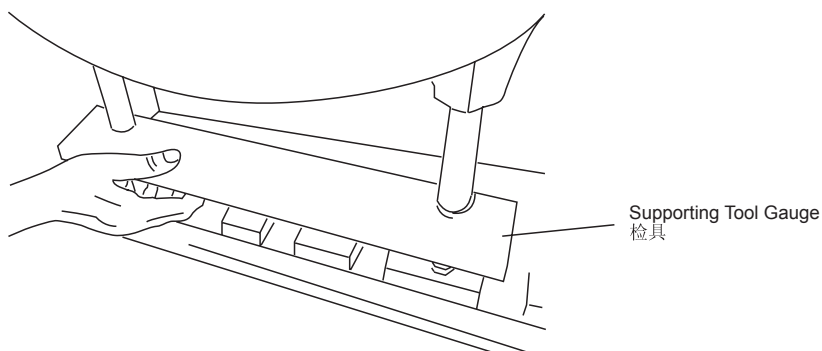

3. Install the left and right wood surround leg.
Hand tighten cap screws with provided inner hex wrench. Cap screws may need further adjustment in future steps.

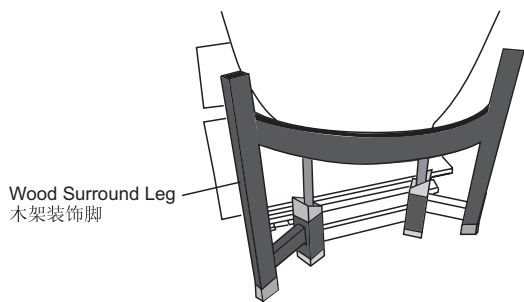


3. 安装木架的左右木架装饰脚。
 先用随附的内六角扳手预紧顶紧螺丝，在之后的过程中可能需要调节。

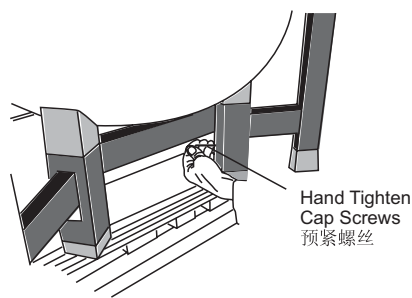

4. Fix long and short rivet connector.

4. 安装铆钉长、短连接器。

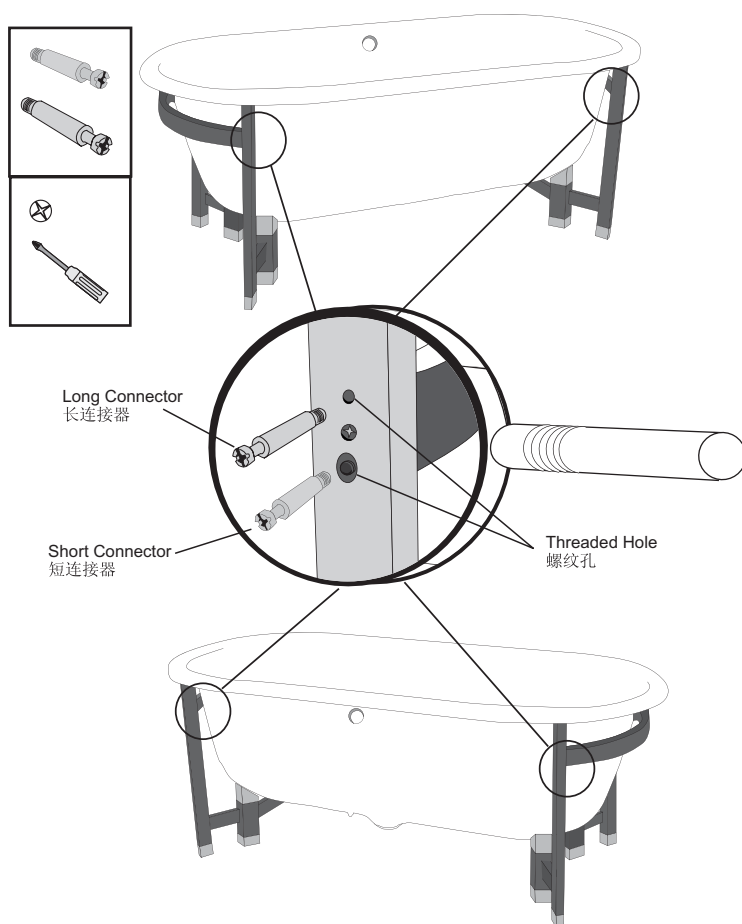

- Tighten the rivet connectors until rivet connector top are fully threaded into the holes.


- 紧固铆钉连接器，直到铆钉连接器上的螺纹刚好全部拧入螺纹孔中。

CAUTION: Risk of product damage. Do not overtighten the pivot connectors.

小心！存在产品损坏风险。 请勿过度上紧铆钉连接器。


5. Install the horizontal rail.

5. 安装水平栏杆。

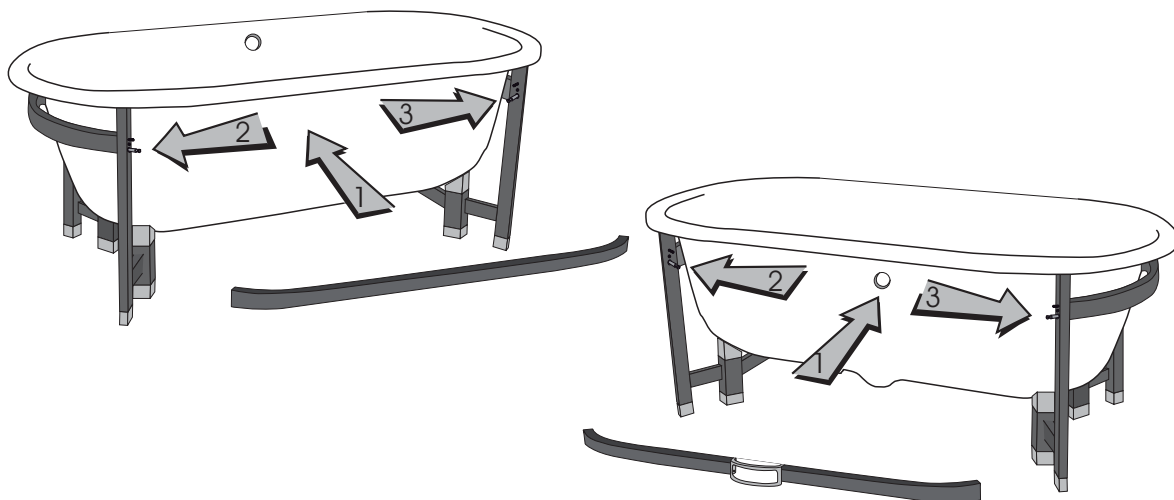

6. Fix the cam.

6. 安装凸轮。

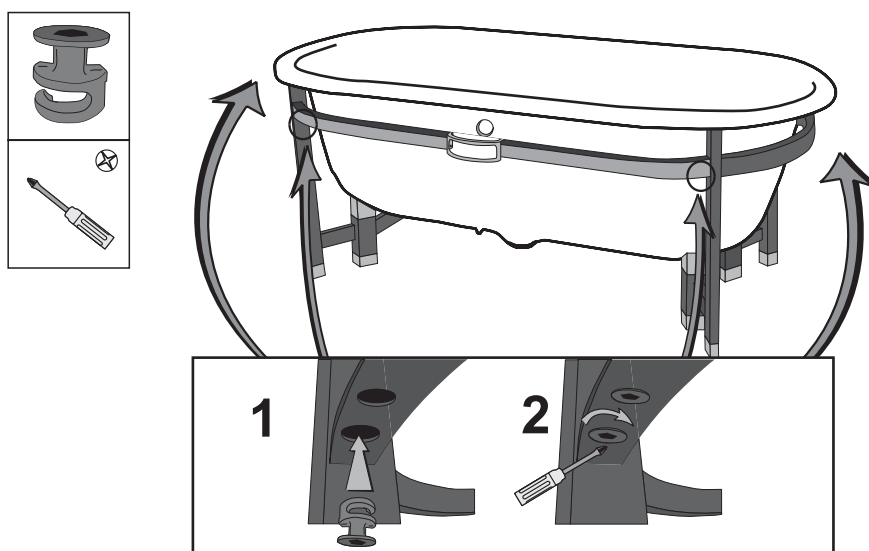


- Press the remaining eight short cams into the large holes in the two horizontal rails. Make sure the cam heads contact the bottom of the holes.
- Turn the cams half a circle and lock them up.
- Adjust the tightness of cap screws mentioned in step 3 if necessary until they are properly tightened.

- 将8个短凸轮按压进入两个水平栏杆中。确保凸轮头接触底部孔。
- 旋转凸轮半圈并锁紧。
- 如有需要，再调整步骤3中的顶紧螺丝，直至其处于合适位置。

7. Adjust supporting screws with provided wrench.

7. 用附带扳手调节支撑螺丝。


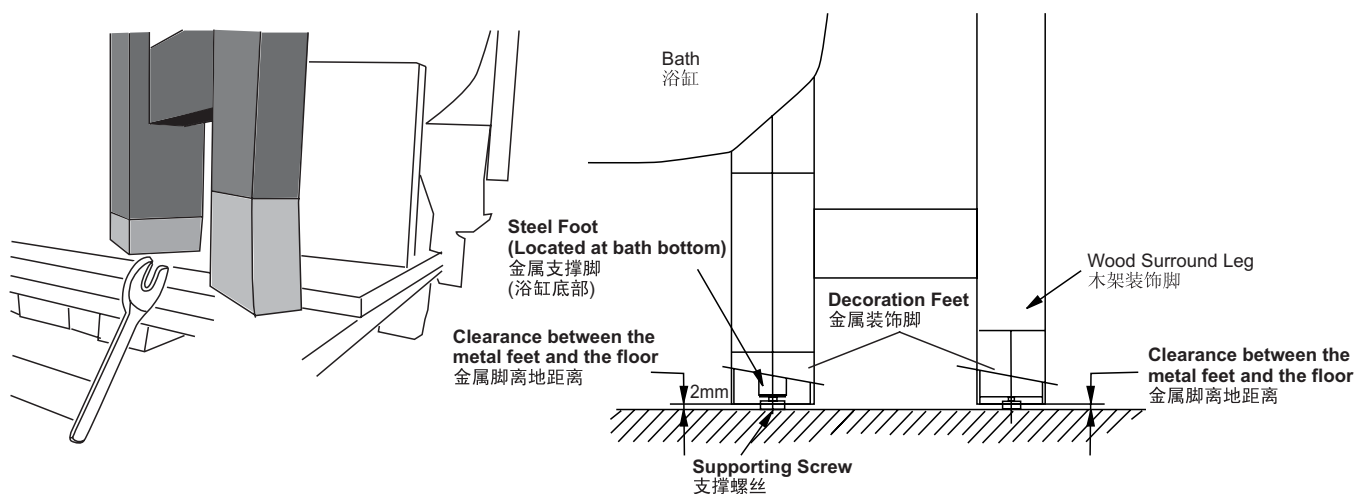


- The bathtub **can only** be supported by four steel feet.
- The decoration feet should not touch the floor.

- 浴缸只能由四个金属支撑脚支撑。
- 金属装饰脚不能接触到地面。

8. Tighten cap screws completely.

8. 完全锁紧顶紧螺丝。

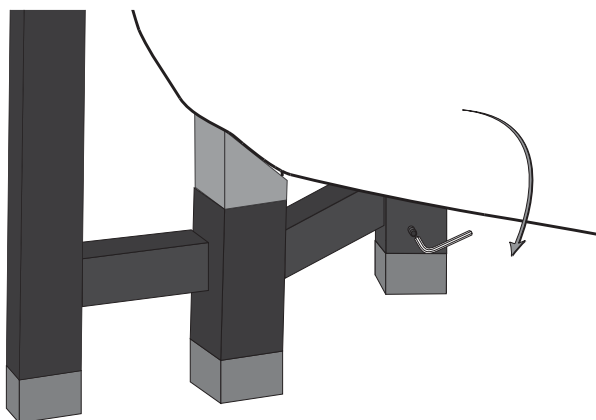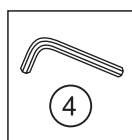

9. Adjust the bath to level.

9. 调整浴缸水平。

- Place the bath with wood surround on the floor and make sure it is level with leveler measurement. Otherwise, perform adjustment until the bath is level.


- 将浴缸连同木架放置在地面上，用水平仪测量确保浴缸已为水平状态，否则需重新调整直到浴缸水平。

 **CAUTION: Risk of product or property damage.** Do not support the bath by the rim. Provide adequate support under the feet.

 **Note:** Do not move the bath by its wood surround.

 小心：存在产品或财产受损危险。请勿通过边缘支撑浴缸。支撑脚下需提供足够支撑。

 注意：禁止通过木质框架搬运浴缸。

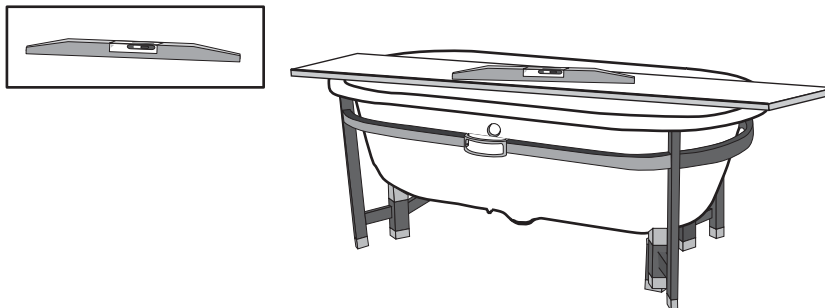

Note: Use the provided wrench to turn the supporting screw in or out as needed to level the bath, as shown in the figure of step 7.

注意：使用附带扳手旋转支撑螺丝，确保浴缸处于水平状态，见步骤7中附图。

INSTALL THE PLUMBING

安装管道

 **CAUTION: Risk of property damage.** Make sure a watertight seal exists on all bath drain connections.

 小心！存在产品损坏风险。确保所有落水连接均使用防水密封圈。

NOTE: Provide access to all plumbing connections to simplify future maintenance.

注意：所有管道连接均预留检修口，以便简化之后的维修。

- Connect the drain according to the drain manufacturer's instructions.
- Open the hot and cold water supplies and check all connections for leaks.
- Run water into the bath and check the drain connections for leaks.
- Fill the bath to the overflow and check for leaks.

- 遵循落水安装说明书，安装落水。
- 开启冷热水水管，然后检查所有连接是否渗漏。
- 试水，检查落水连接是否渗漏。
- 放水直至溢流孔处，检查是否渗漏。

COMPLETE THE INSTALLATION

完成安装

Cast Iron Surfaces

When cleaning up after installation, do not use abrasive cleaners, as they may scratch and dull the bath surface. Use warm water and a liquid, non-abrasive detergent to clean the surface.



CAUTION: Do not allow cleaners containing petroleum distillates to remain in contact with the surfacer long periods of time.

Remove stubborn stains, paint, or tar with turpentine or paint thinner.

Remove plaster by scraping with a wood edge. Do not use metal scrapers, wire brushes, or other metal tools. You can use a powder-type detergent on a damp cloth to provide mild abrasive action to any residual Plaster.

Wood Surround Surfaces

When cleaning up, do not use abrasive cleaners, as they may scratch and dull the wood surround surface. Use warm water and a clean cloth to clean the surface.

铸铁表面

在安装完成后进行清理时，请勿使用磨损性的清洁用具，以免擦伤浴缸表面，使其失去光泽。使用温水和非磨损性的液体清洁剂，清洗浴缸表面。



小心: 请不要让含有汽油溶解物的清洁剂和浴缸长时间接触。

使用松节油或涂料稀释剂去除顽固的污渍、油漆或沥青。

滞留水泥可用薄木刀刮掉。请不要使用金属刮刀，钢丝刷，或其它金属工具，对残留的灰泥，可用湿布粘些洗衣粉，以提供轻微的研磨作用。

木质框架表面

清理时请勿使用磨损性的清洁用具，以免擦伤木质框架表面，使其失去光泽。使用温水和干净的抹布清洁表面。

IMPORTANT CONSUMER INFORMATION

重要的用户资料

The Safeguard slip resistant surface on this bathtub meets or exceeds the requirements of ASME/ANSI for A112.19.1M slip resistance.

DANGER!! Improper maintenance or cleansers may permanently remove the slip resistant surface on Kohler bathtubs.

NOTICE: All housekeeping and maintenance employees must be trained in the proper cleaning of Kohler bathtubs. Post a copy of this notice in a readily-visible location.

DO NOT use steel wool, wire brushes, metal scrapers or abrasive sponge pads to clean a Kohler bath tub.

DO NOT use buffing machines on the slip resistant surface.

DO NOT use high alkaline or strong acid cleansers.

DO NOT use abrasive cleansers. Use only non-abrasive cleansers and a soft nylon brush to clean the slip resistant surface.

- When using commercial cleansers, use cleansers with a pH of between three and eight.
- When using commercial cleansers, use cleansers with a pH of between three and eight.
- Follow cleanser manufacturer instructions very carefully.

浴缸的Safeguard防滑表面达到或超过ASME/ANSI A112.19.1M对防滑表面的要求。

危险!! 不适当的维护或清洁剂的使用可导致科勒浴缸的防滑表面永久失去。

注意: 所有的清洁和维修人员都应当进行正确清洗科勒浴缸的培训。请将此注意事项的复印件张贴在显著的位置。

请勿 使用钢丝绒，钢丝刷，金属刮刀或有磨损性的海绵垫清洗科勒浴缸。

请勿 在防滑表面上使用抛光仪器。

请勿 使用强碱或强酸性的清洁剂。

请勿 使用磨损性的清洁剂。

- 请使用没有磨损性的清洁剂和软尼龙刷清洗浴缸的防滑表面。
- 请使用pH值3和8之间的清洁剂(若要使用商业用清洁剂时)。
- 请仔细按照清洁剂生产厂家的说明书进行清洗。