

BEFORE YOU BEGIN

- Kohler Co. reserves the right to make revisions without notice in the design of fittings, as specified in the Price Book.

NOTES

- You can install this drain for either countertop or under-the-lavatory control. The lift rod and escutcheon required for countertop installation must be ordered separately.
- Both a long and short ball lever assembly are provided. Use whichever assembly suits your installation and design needs. We recommend the long ball lever for countertop installations.
- For new installations, install the drain to the lavatory before installing the lavatory.
- Observe all local plumbing codes.

REQUIRED TOOLS AND MATERIALS

- Adjustable or open end wrench
- Plumbers putty
- Thread sealant


INSTALLATION

Disassemble the drain components. Remove the protective material from the stopper and drain flange.

Apply a ring of plumbers putty or other sealant to the underside of the drain flange according to the putty manufacturer's instructions. Insert the drain flange into the lavatory drain hole.

Assemble the tapered gasket and large plastic washer to the drain flange, and partially thread the long or short locknut to the drain flange. Use the **long locknut for thin-wall** lavatories. Use the **short locknut for thick-wall** models. Do not tighten the locknut at this time.

Install the small plastic washer and the drain body to the drain flange, and tighten securely. Do not use thread sealant.

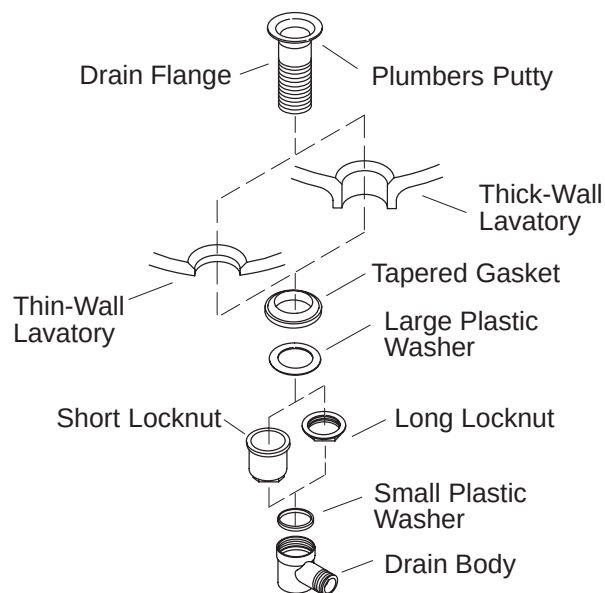


Turn the drain flange so the drain lever hole is facing either forward for under-the-lavatory control, or toward the desired location for countertop control. Carefully tighten the locknut. Do not scratch the finish. Remove any excess putty or sealant.

NOTE: Do not reposition the drain flange after you have tightened the locknut.

Insert the stopper assembly into the drain flange. Choose the long or short ball lever. Fit the short end of the ball lever into the drain lever hole and **under** the stopper assembly for regular installations. Fit the ball lever **through** the hole in the stopper assembly for vandal-resistant installations. Loosely secure in place with the knurled nut. Remove and adjust the stopper assembly so the stopper lifts about 3/8" when opened. Tighten the knurled nut. Do not scratch the finish.

Install the ball to the ball lever for under-the-lavatory control installations. Install the connecting link and "V"-clip to the ball lever for countertop control installations. Complete assembly of a countertop control installation according to the instructions included with the lift rod and escutcheon.

Apply thread sealant to the tailpiece. Thread the tailpiece to the drain body, and tighten securely.

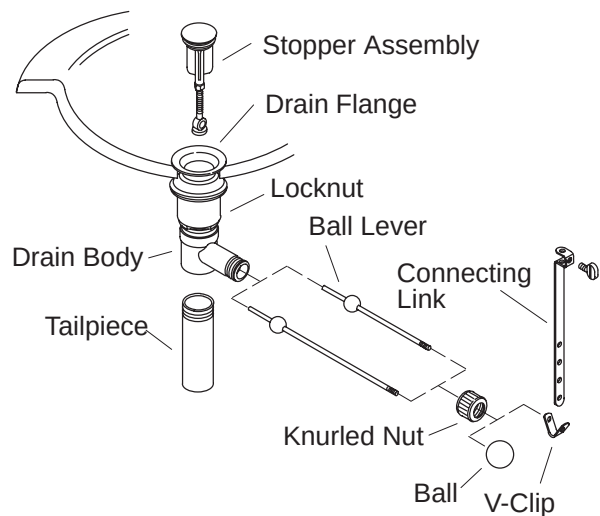

For new installations, install the lavatory according to the instructions packed with the lavatory.

Install the trap.

Inspect for leaks.