

KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

Bath Drain

1086986 浴缸排水器

安装之前

BEFORE YOU BEGIN

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

Please leave these instructions for the consumer. They contain important information.

注意事项:

1. 遵守当地管路安装条例。
2. 关闭主供水源。

NOTES:

1. Observe local plumbing codes.
2. Shut off the main water supply.

使用说明


HANDLE OPERATION

顺时针转动控制钮，打开排水器。

Turn control knob clockwise to open the drain.

安装尺寸

ROUGH-IN DIMENSIONS

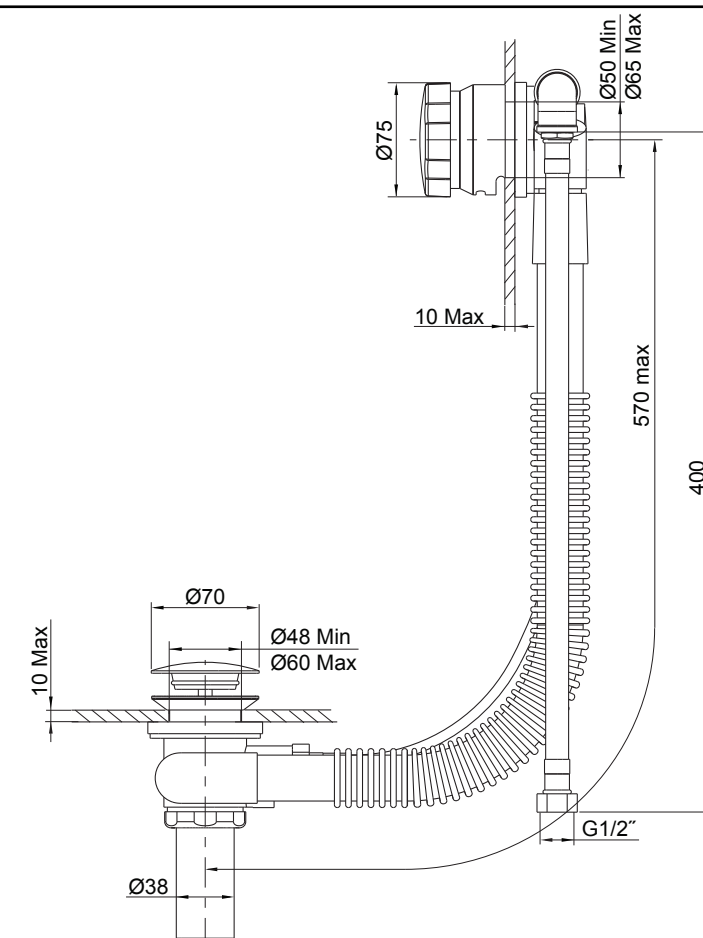

安装步骤

将浴缸放置在木架或砖墙上保障排水本体在浴缸底下。


将垫圈(4)放在排水本体(5)上，安装到浴缸底部。

将垫片(3)和法兰盘(2)通过浴缸底部排水孔旋入排水器本体。去掉调节塞组件(1)上的保护盖，把调节塞组件放入法兰盘内。

注意：调整调节螺钉(10)，使调节塞组件上的O型圈(9)接触到法兰盘内壁。

拧紧螺母(11)，防止调节螺钉掉落。

装上垫圈(6)，并将尾管(7)装入排水本体，锁紧螺母(8)。

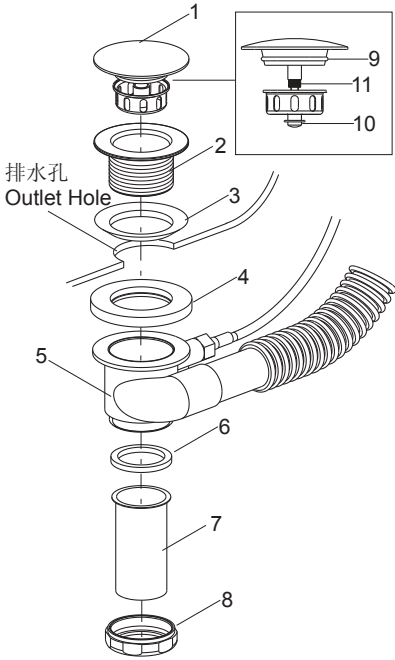

INSTALLATION

Please ensure that the bath is placed on wooden blocks or bricks to protect the drain body under the bath.

Fit the gasket(4) on the drain body(5), insert the drain body to underside of bath.

Thread the washer(3) and flange(2) into the drain body through the outlet hole of the bath. Remove the plastic cap of the plug kit(1), put the plug kit into the flange.

NOTE: Adjust the screw(10), ensure the O-ring(9) is touching the inwall of the flange.

Tighten the nut(11) to prevent the screw falling off.

Fit the gasket(6) and tailpiece(7) onto drain body, tighten the nut(8).


取下螺母(12)、O型圈(13)和溢水面板(14)，折弯排水器的管子(15)，并确保本体上的进水管(16)水平方向。

在溢水面板底部和浴缸溢水孔周围都涂上密封胶。将溢水面板、O型圈和螺母都通过溢水孔装到排水本体上，锁紧螺母。

装上控制钮(20)，并用六角扳手(17)将螺钉(18)装入V型槽(19)内拧紧。

将接头(21)和软管(23)的外螺纹上缠生胶带或涂密封胶，连接接头、弯头(22)和软管到进水管上。

将软管连接到水源上。

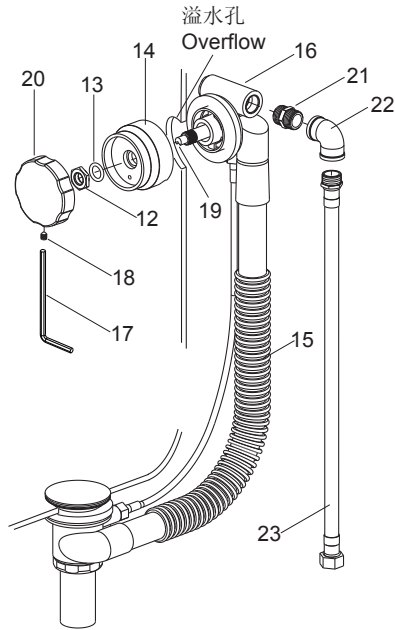

Uninstall the nut(12), O-ring(13) and the overflow cover(14). Bend the tube(15), ensure the inlet pipe(16) is level.

Apply silicone sealant around the underside of the overflow cover and the overflow hole in the bath. Install the overflow cover and O-ring on the drain body through the overflow hole, tighten the nut.

Install the control knob(20) and tighten the screw(18) in 'V' notch(19) by hex wrench(17).

Apply tape or thread sealant to threads of the connector(21) and the hose(23). Connect the connector, the elbow(22) and the hose to the inlet pipe.

Attach the hose to the water supply.

安装结果检查

确保已拧紧所有连接处。

打开排水器。打开主供水源，检查有无泄漏。

INSTALLATION CHECKOUT

Make sure all connections are tight.

Open the drain. Turn on the main water supply and check for leaks.

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。


CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

零件图

SERVICE PARTS

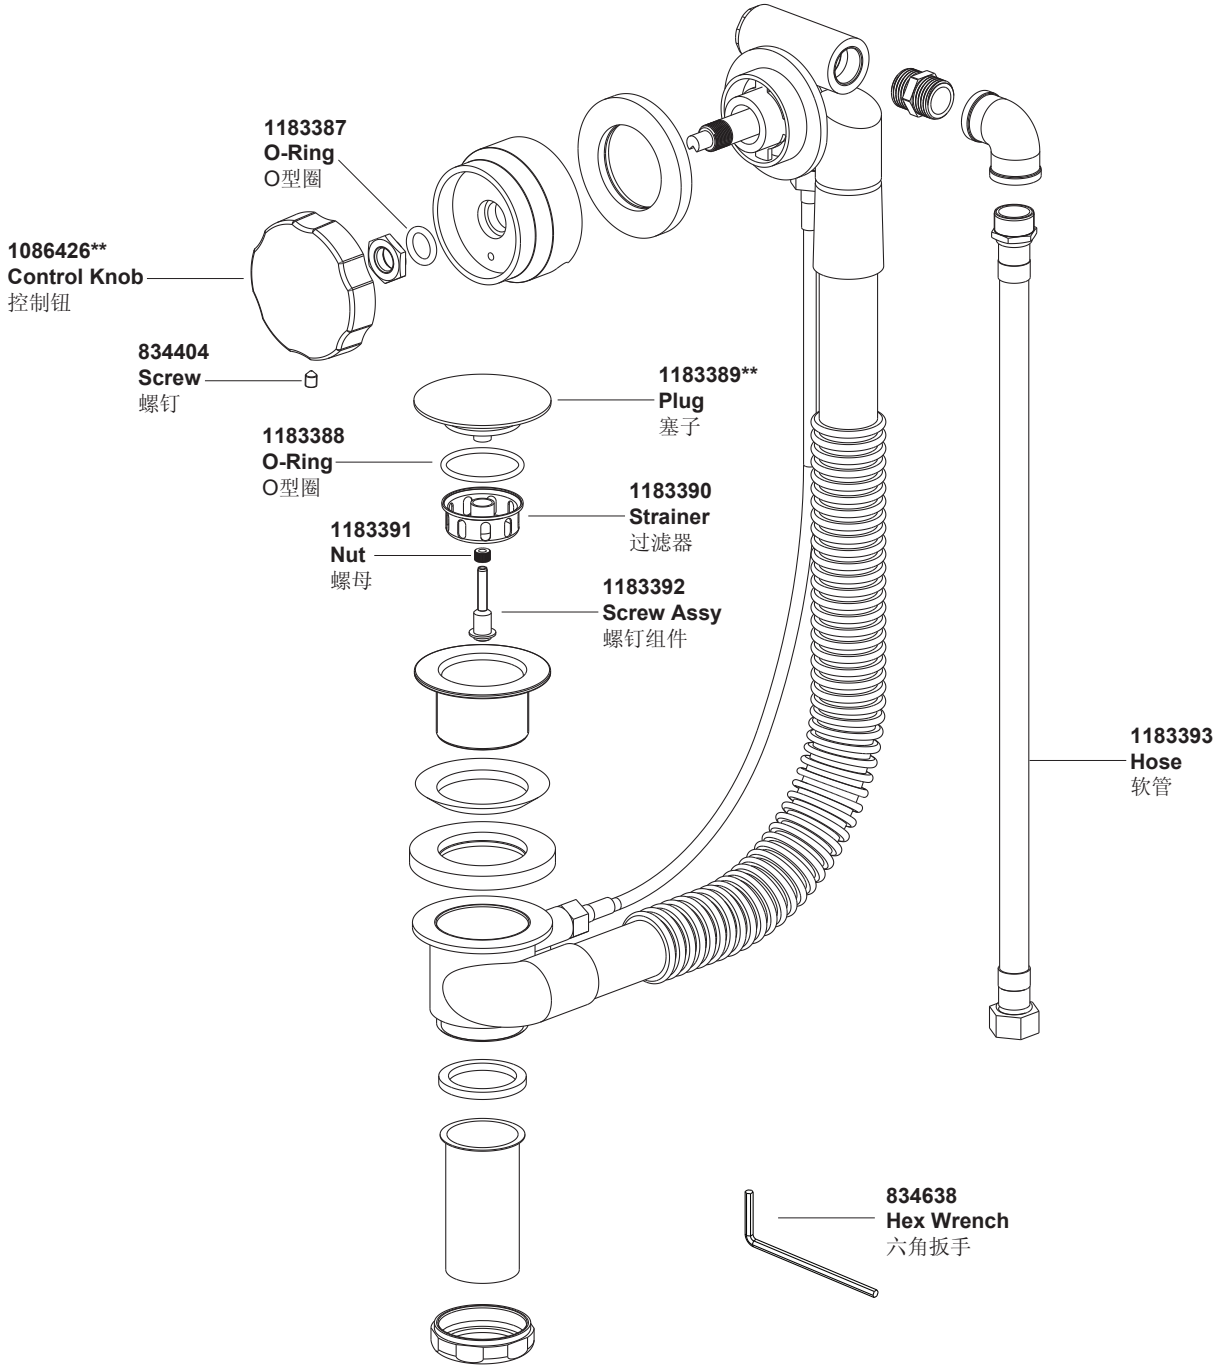

**订购时请说明颜色编号
**Color code must be specified when ordering