


5241K-4E2 SINGLE LEVER TALL LAVATORY FAUCET

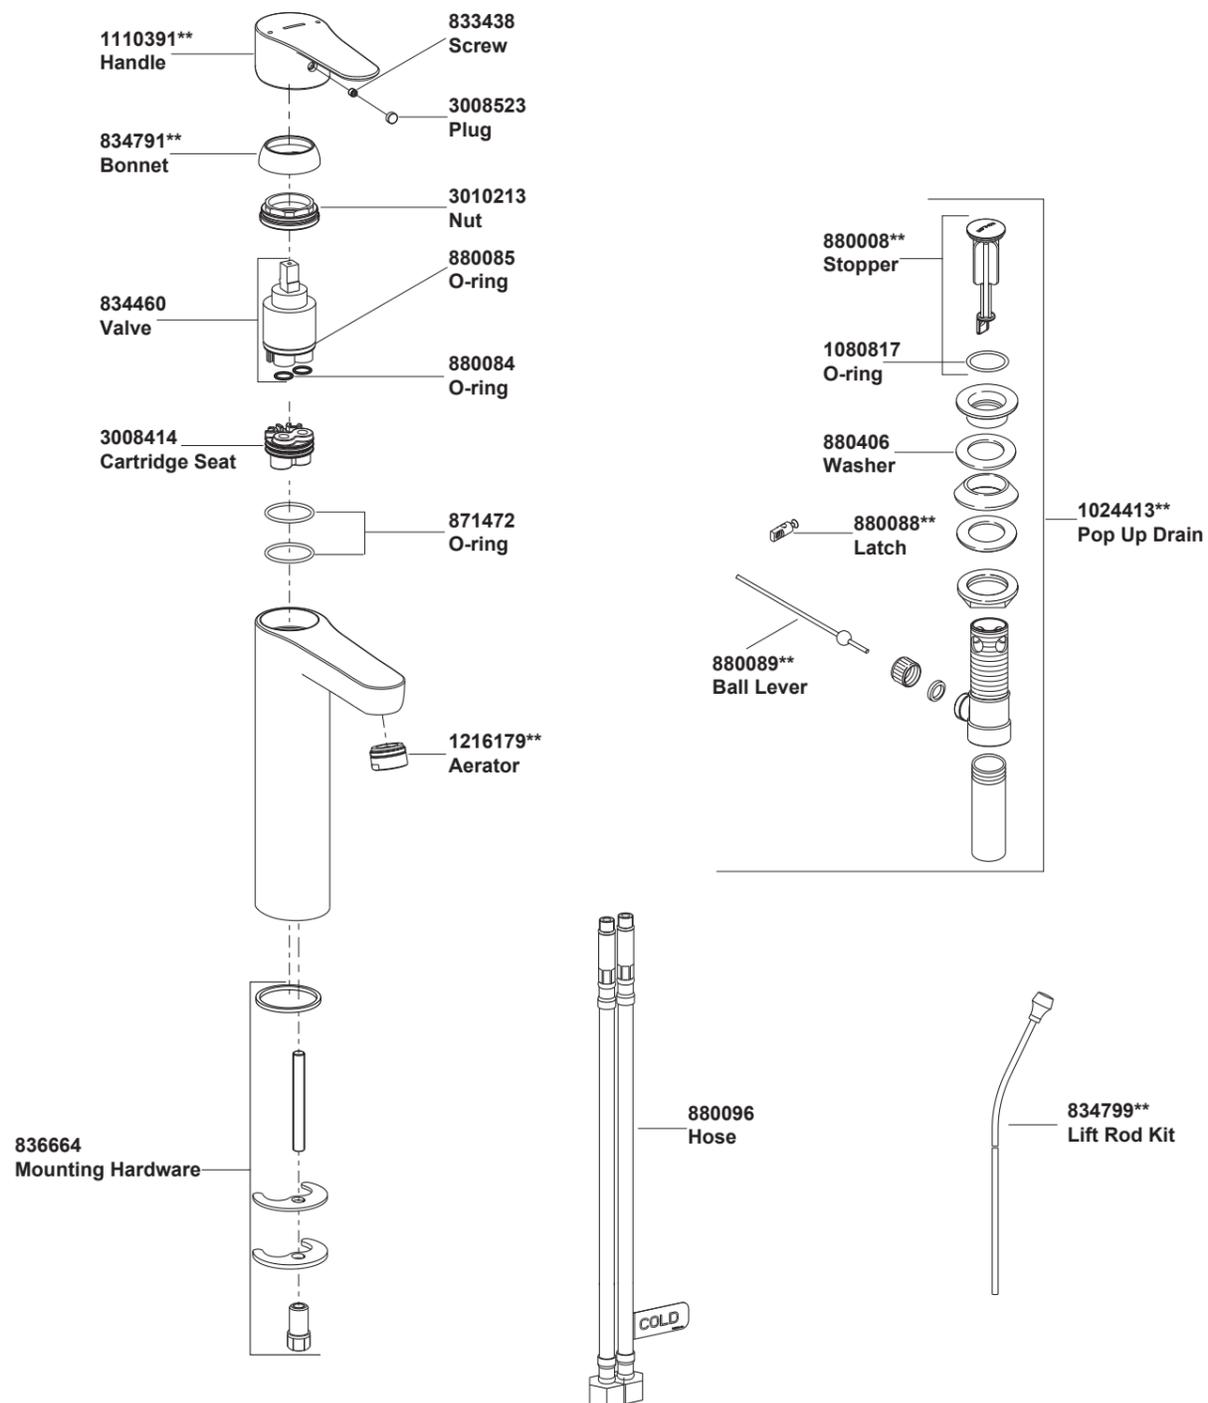

\*\*Color code must be specified when ordering

5241K-4E2 SINGLE LEVER TALL LAVATORY FAUCET

**BEFORE YOU BEGIN**

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


**NOTES:**

1. Flush the water supply pipes thoroughly to remove any debris.
2. Observe local plumbing codes.
3. For new installations, assemble faucet and drain to lavatory before installing lavatory.

**HANDLE OPERATION**

Lift the handle gently. Turn clockwise for hot water, counter-clockwise for cold water.

**ROUGH-IN DIMENSIONS**

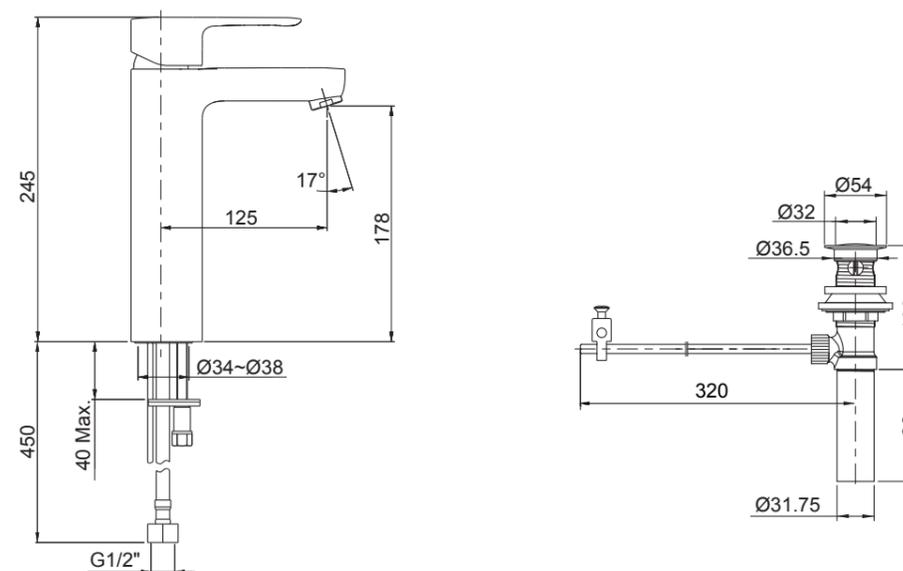


## INSTALLATION

### How To Install The Faucet

Screw the stud(1) to the thread hole on the bottom of faucet. Insert the lift rod(2) into the hole at the rear of the body assembly. Put the washer(3) into the bottom of body(5) through the flexible hoses(4) and the stud.

Insert hoses and stud into the hole of lavatory. Position the faucet. From underside of the lavatory, fit the bracket(6)(Rubber washer is on the top) onto the stud. Secure the faucet by tightening nut(7).


Attach the hoses to water supplies. When facing the front of the faucet, the left hose connects to hot water, the right hose with 'COLD' label connects to cold water.

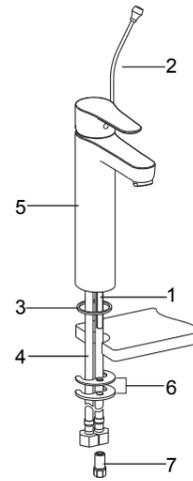

### How To Install The Drain

Remove stopper(14), flange(8) and washer(10) from drain body(9). Take off the tailpiece(11). Apply thread tape to tailpiece and install the tailpiece to drain body. Insert drain body kit into the lavatory from underside, and make sure the drain lever hole(12) facing to the back of the lavatory. Screw the flange with washer into the drain body. Tighten the locknut(13) by hand from the underside of the fixture.


**NOTE:** If needed, apply a ring of plumbers putty around the underside of the drain flange(8), instead of using washer(10).

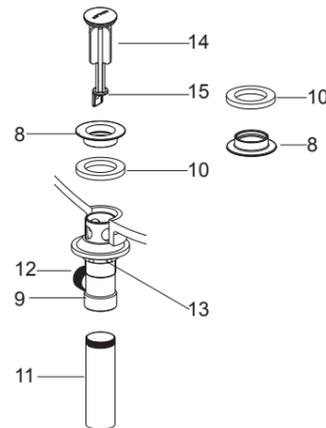

Place stopper(14) into drain body aligning the flat side of stopper hole(15) with the drain lever hole.


Remove the retaining nut(16). Fit the plastic washer(17) and retaining nut onto the ball lever(18). Insert the ball lever assembly into the drain lever hole and through the stopper hole. Tighten the retaining nut.

Be sure that the ball lever(18) points to the back of the lavatory, tighten the locknut(13) on the drain body by wrench.

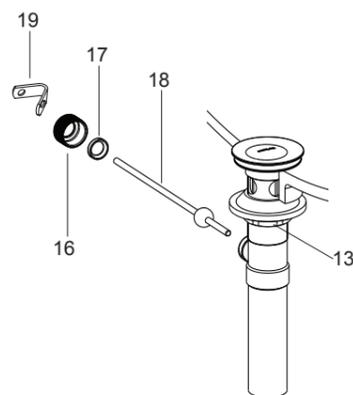

**NOTE:** Do not reposition the drain if plumbers putty applied after the locknut is tightened, or you may break the putty seal. Wipe away excess plumbers putty.

Insert the ball lever(18) into the bigger hole(21) of the latch(20). Insert the lift rod(2) into the other hole of latch. Push the ball lever rod down to the open position, and adjust the lift rod so that the length between the top of the lift rod and the mounting surface can not exceed 60mm when the drain is closed. Tighten the screw(22) on the latch.

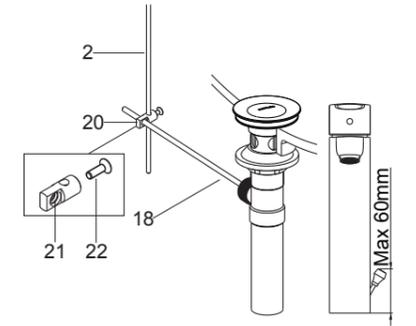


### INSTALLATION CHECKOUT

Ensure that all connections are tightened. Ensure that the handle is in the off position.

Open the drain. Turn on main water supply and check for leaks. Repair as required.

Remove the aerator(23). Turn on the faucet. Run hot and cold water through the spout for about one minute to remove any debris. Remove debris from the aerator. Shut off the faucet and reinstall the aerator.

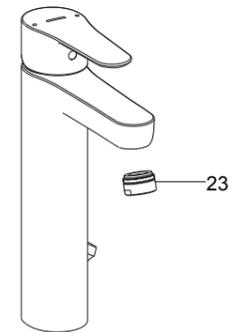

### CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.