



INSTALLATION INSTRUCTIONS

Single Lever Recessed Trim

16316-4FP SINGLE LEVER RECESSED BATH & SHOWER TRIM 16317-4FP SINGLE LEVER RECESSED SHOWER ONLY TRIM

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.


Please leave these instructions for the consumer. They contain important information.

Notes:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. Do not remove the plaster guard from the valve body until instructed to.
- 3. Install valve 880 according to the rough-in dimensions of 16317-4FP, Install valve 882 according to the rough-in dimensions of 16316-4FP,

ROUGH-IN DIMENSIONS

16317-4FP 16316-4FP

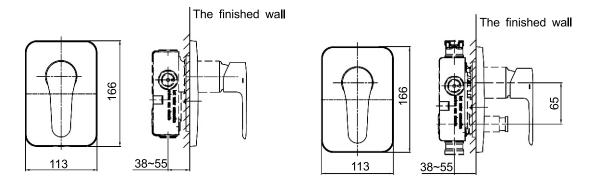


1159525**-**2A-B


INSTALLATION

Note: Install valve 880 according to the rough-in dimensions of 16317-4, Install valve 882 according to the rough-in dimensions of 16316-4.

Remove the plastic guard(1) after completed the finished wall.

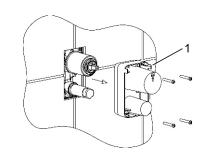

Slide the cover kit(4) onto the valve(3) with the plug(13) facing outside(**Note**: Don't squeeze out the rings12,14). Push it against the wall. Secure it with the screws(2, length 50mm). Slide the faceplate(5) onto the valve with slots(6) downwards, push it against the wall. Screw the bonnet(7) on the valve.

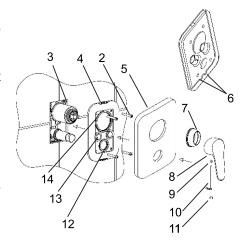


Install handle(8): Tighten the setscrew(9) with hex wrench(10). Press plug button(11) to the hole. The red part faces the left.

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

SERVICE PARTS

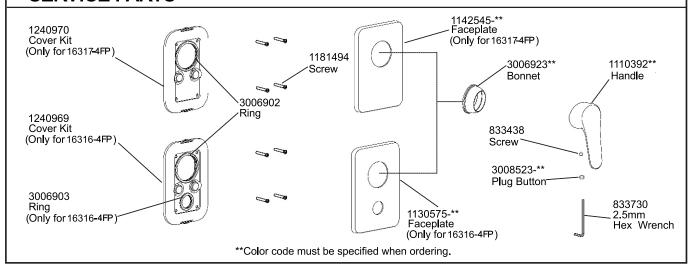

1159525**-**2A-B