


Dimensions

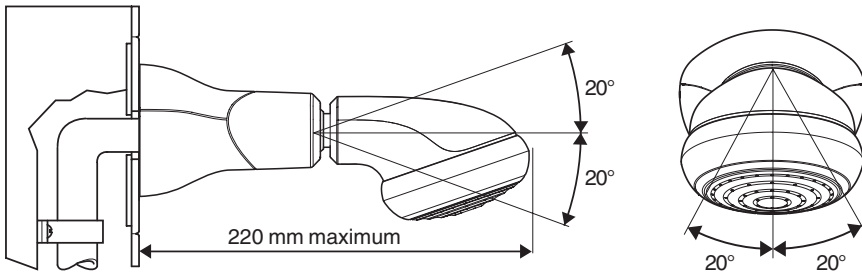

All dimensions are nominal and in millimetres

Installation

Before Installing

Before installing the showerhead, consider these positioning tips:

1. Position the showerhead at a convenient position for all the family.
2. Position the showerhead so that the spray discharges away from the shower control, and down the centre line of the bath or across (rather than into) the shower cubicle opening.

Solid and Dry-lined Wall Installation

1. The 15 mm copper pipework from the outlet of the shower control **must** be vertical so that it does not interfere with the installation screws.

