KOHLER INSTALLATION INSTRUCTIONS

78014T-4	Dual Handle Wall-mour
78014T-8	Dual Handle Wall-mour
78014T-9	Dual Handle Wall-mour

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.


NOTES:

- 1. Flush the water supply pipes thoroughly to remove debris.
- 2. Inspect the supply tubing for damage and leakage. Replace and maintain as necessary.
- 3. Shut off the water supplies to the fitting.
- 4. Observe local plumbing codes.
- 5. Check for leaks before cover the pipes, repairs as needed. 6. Please ensure only apply water pressure test on the product, and empty the air in pipe and faucet thoroughly before the test. Please ensure test pressure below 0.8MPa(8bar) and test duration within 30 minutes.
- 7. Do not remove the plaster guard body until instructed to.

STANDARD APPLICABLE


Special model meets or exceeds the following at date of manufacture: TIS

ROUGH-IN DIMENSIONS

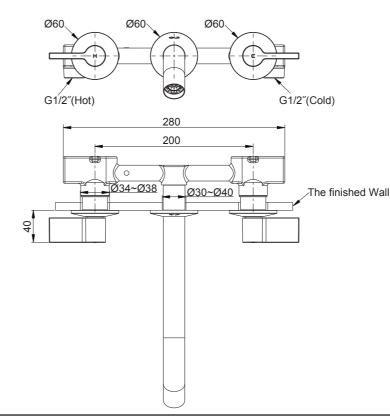


COMPONENTS

nt Bath Faucet-Lever Handles nt Bath Faucet-Oyl Handles nt Bath Faucet-Industrial Handles

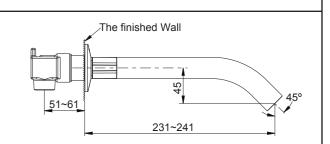

78014T-4

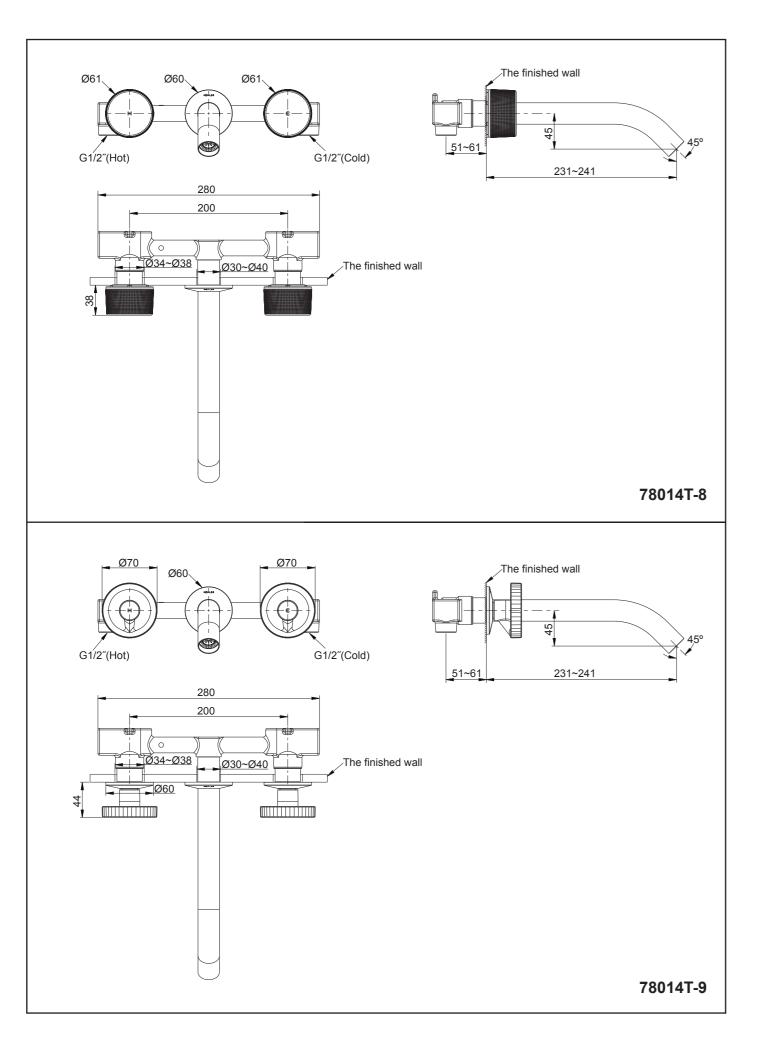


KOHLER® **SERVICE PARTS**


COMPONENTS


78014T-4 Dual Handle Wall-mount Bath Faucet-Lever Handles

- 78014T-8 Dual Handle Wall-mount Bath Faucet-Oyl Handles
- 78014T-9 Dual Handle Wall-mount Bath Faucet-Industrial Handles

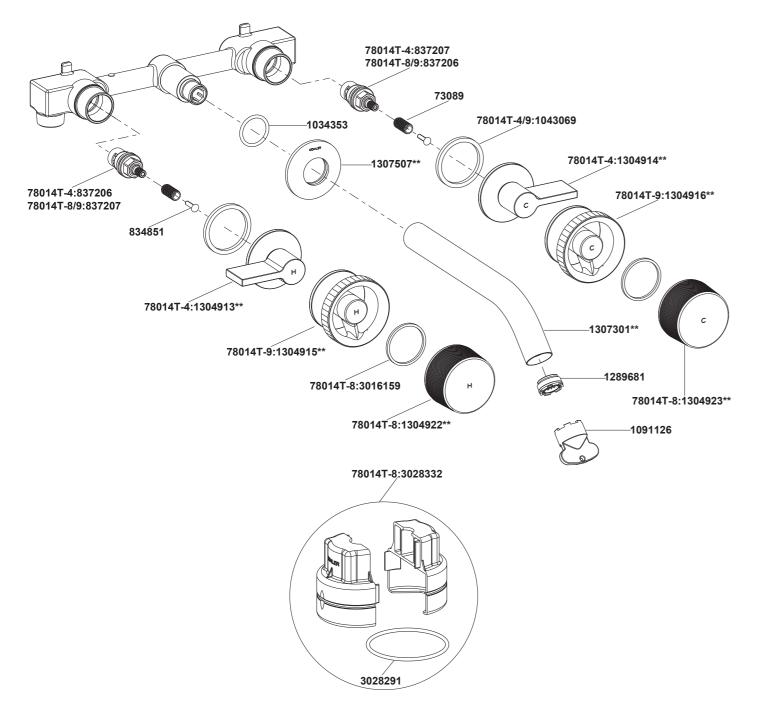



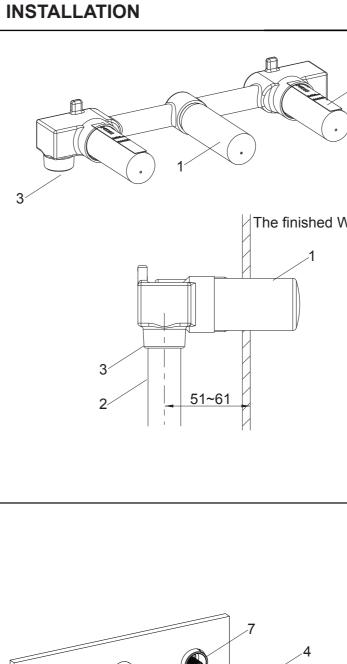

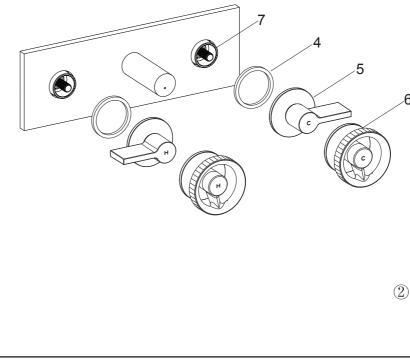

_1	
)	How to Install the Yoke
	Do not take off guards(1) at this moment.
Vall	Connect the G1/2" water supply pipes(2) to the supply yoke(3).
	The finished wall must be between the mark Max and Min on the guards. Make sure the left supply pipe is the hot supply and connected to the end with red mark.
(1)	




Remove and discard the handle guards after completed the finished wall.

For 78014T-4 & 78014T-9

Put the washers(4) into the groove of the handle kits(5, 6). Screw the handle kits onto the valves(7) until against the finished wall.

NOTE: The handle kit with "H" should be installed on the left. The valves should be closed before installed.

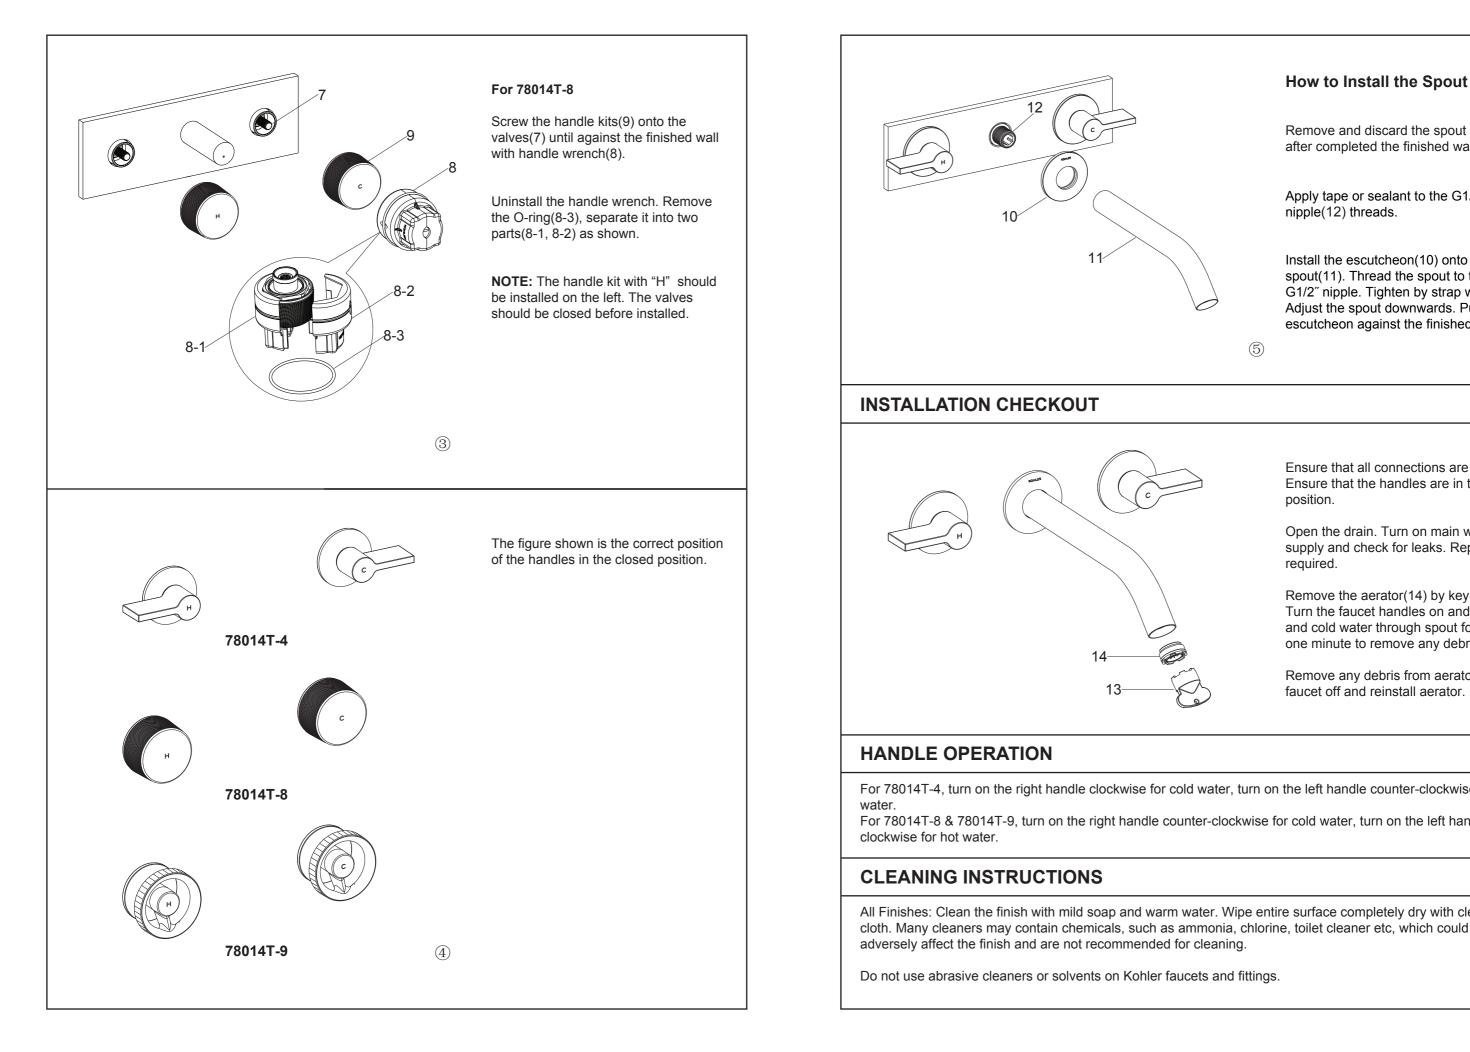

	How to Install the Spout	
	Remove and discard the spout guard after completed the finished wall.	
	Apply tape or sealant to the G1/2" nipple(12) threads.	
5	Install the escutcheon(10) onto the spout(11). Thread the spout to the G1/2" nipple. Tighten by strap wrench. Adjust the spout downwards. Push the escutcheon against the finished wall.	
I	Ensure that all connections are tight. Ensure that the handles are in the off position.	
	Open the drain. Turn on main water supply and check for leaks. Repair as required.	
	Remove the aerator(14) by key(13). Turn the faucet handles on and run hot and cold water through spout for about one minute to remove any debris.	
\supset	Remove any debris from aerator. Shut faucet off and reinstall aerator.	
vater, turn on the left handle counter-clockwise for hot		
r-clockwise for cold water, turn on the left handle		
er. Wipe entire surface completely dry with clean soft		