



I3838N Neo-Angle Shower Base

INSTALLATION INSTRUCTIONS

YOUR BASE KIT INCLUDES:


*1 EACH SHOWER BASE
1 EACH NO CAULK DRAIN*






BASE INSTALLATION

1. Check local building codes prior to drain installation.
2. Determine location of drain pipe using dimensions shown below.
3. Drain system is designed for 2" pipe (Flush with floor).
4. A 5" to 5½" hole must be cut in the subfloor to provide adequate clearance for the drain system. (See Sectional View).
5. Make sure that floor under base is level. Be sure that the pipe is self-supporting and strapped down.
6. After the location of the base has been established, place the base firmly against the two adjacent walls and mark walls using the top edge of raised lip of base as a template.
7. Remove base and cut the wall at marks from step 6.
8. Trial fit the base against the studs and use filler strip (if needed) to compensate for wall thickness.
9. Assemble drain body through opening on bottom of base by placing the rubber washer under the drain body flange and the fiber washer over the drain body outside of the base. Tighten with locknut.

SECTIONAL VIEW

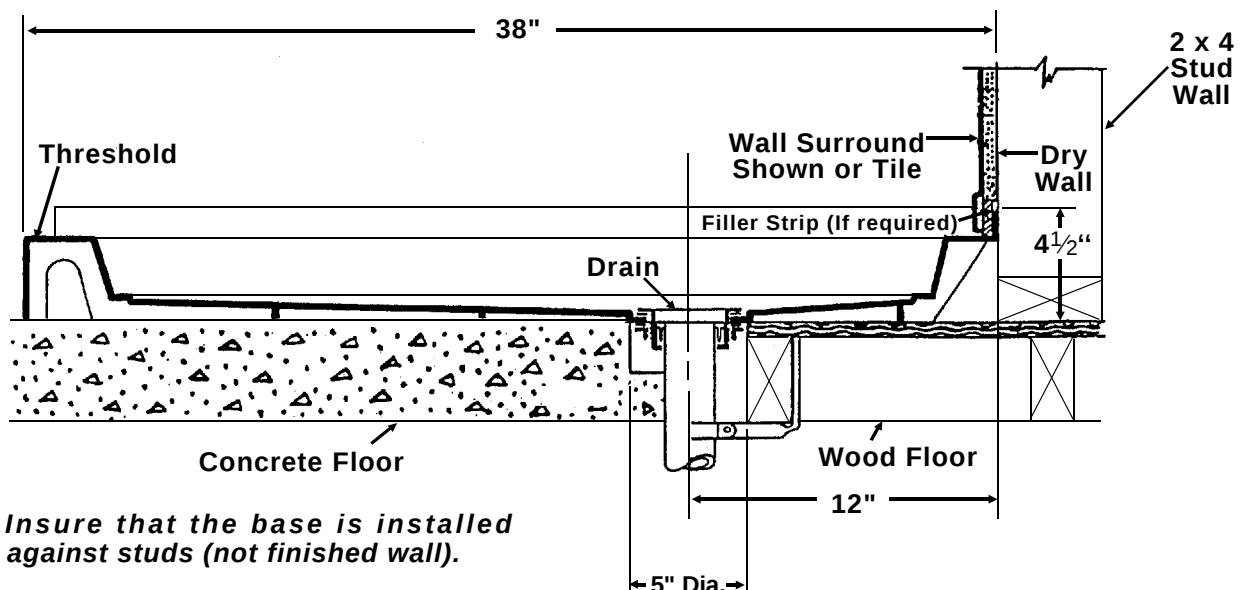

NOTE: Insure that the base is installed directly against studs (not finished wall).

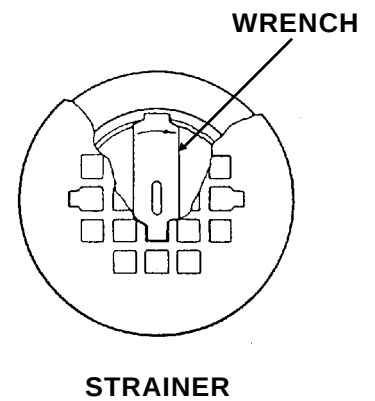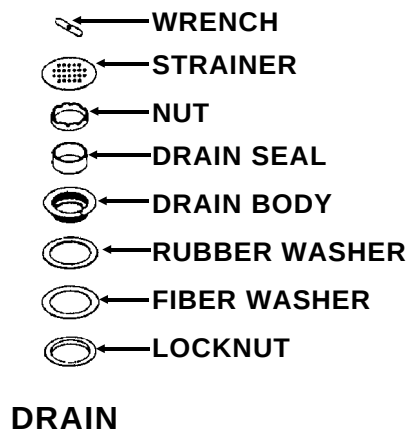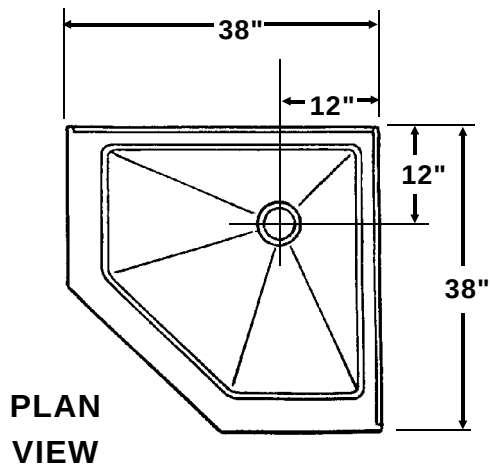

10. Carefully set the base in place by sliding the drain body of the base over the drain pipe.

NOTE: *There is no need to fasten the base to the stud or sit the base in any type of bath to hold it in place.*

11. Seal the drain pipe by installing the drain seal around the 2" drain pipe.

12. Using the wrench provided, screw in the nut (clockwise) until it is tight enough to compress the seal and remove wrench.

13. Install the strainer by snapping it into the drain body.

IMPORTANT: *Do not use abrasive cleaners for cleaning the base. Wash regularly with warm water, use soft cloth with mild detergent.*


PROFESSIONAL CAULKING TIPS

1. Check all instruction sheets for the recommended caulking location.

2. Apply masking tape to the base, $\frac{3}{16}$ " away from shower door or wall surround, as shown.

3. Apply caulking with $\frac{3}{16}$ " dia. bead. Immediately remove tape, taking care not to disturb caulking. Excess caulking can be removed with mineral spirits.

4. Allow caulking to set for 24 hours before using.

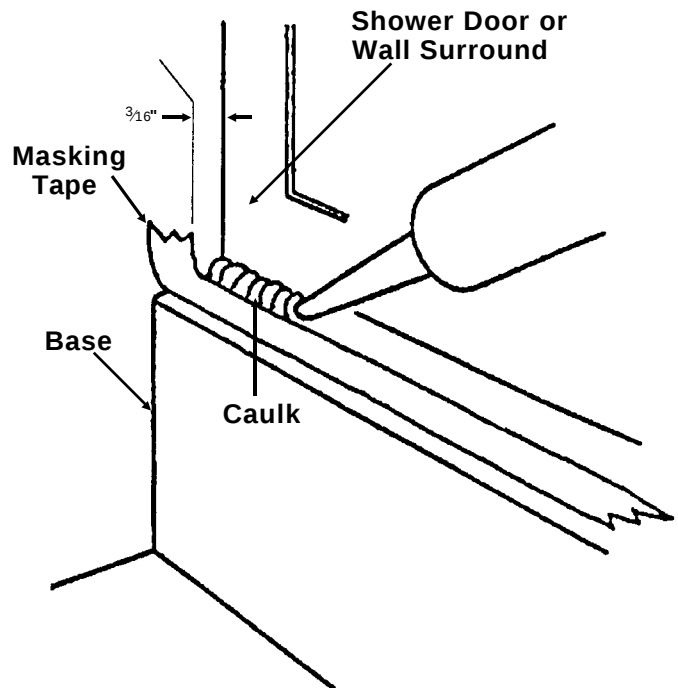

North Fifth Street, Union City, TN 38261