

安装说明书 INSTALLATION INSTRUCTIONS 釉面陶瓷柱式脸盆 VITREOUS CHINA PEDESTAL LAVATORY K-8715T-1/-4

BEFORE YOU BEGIN

厨

球

仐

Observe all local plumbing and building codes.

THE BOLD L

 Prior to installation, unpack the new lavatory and inspect it for damage. Return the lavatory to its protective carton until you are ready to install it.

ፐ

经

曲

- These instructions are for installing the lavatory to wood frame construction. For other installation, supply suitable bracing and fastening devices of sufficient size and strength.
- The walls and floor must be square, plumb, and level.

CAUTION: Lavatory must be installed with either the pedestal or half pedestal. It must not be installed alone.

 Kohler lavatory is made according to American National Standard that it can match the American lavatory fittings. Any other lavatory fittings may not fit for kohler lavatory.

TOOLS AND MATERIALS REQUIRED (Not Supplied)

Level

Δ

- Drill with assorted bits
- 14mm(9/16") Wrench
- Tape measure
- Framing square
- Channel lock pliers
- Socket wrench with 203mm (8") extension & assorted sockets

MATERIALS REQUIRED (Not Supplied)

- 2 screws, 2 bolts and 2 caps suitable to secure shroud to wall.
- 6 Lag bolts and 6 washers suitable to secure hanger to wall.

Note: Materials required may differ depending on type of substrate.

ACCESSORIES INCLUDED WITH PRODUCT

63069 Leveling Pads
64839 Hanger
52204 Ped. Lav Access Pack
Additional accessories other than those provided may be required for installation.

安装之前

- 遵守当地所有给排水和建筑规定。
- 安装之前先开启新脸盆的包装,检查有无破损后放回纸箱 中以免碰坏,到准备安装时才取用。
- 以下安装指引适用于安装脸盆于木框结构之中,其他的结构需另置合适尺寸和强度的支撑及紧固装设配套。
- 墙壁和地板必须方正、平整和水平。

▲ 警告:脸盆必须有立柱或半柱支撑,不可单独安装。

 科勒洗脸盆是根据美国标准制造的,与美式洗脸盆配件相 配。其它洗脸盆配件可能与之不相配。

所需工具及材料 (不随货供应)

- 水平尺
- 带配套钻头的钻
- 14mm板钳
- 卷尺
- 定位直尺
- 锁钳
- 接头板钳附有203mm把手及接头配套

所需物料(不随货供应)

- 在墙上安装半柱用的螺钉、螺栓、螺帽各2枚
- 在墙上安装悬挂架用的螺栓、垫圈各6枚
- 注意:需要视乎墙壁或地面的用料而使用不同的螺栓及垫圈。

随货供应的配件

63069 水平垫 64839 悬挂架 52204 立柱安装配件 安装时或需要不随货供应之额外配件。

广东省佛山市三水区乐平镇第二工业区 佛山科勒有限公司 邮编:528137

©版权为科勒中国有限公司所有, 2004

© Copyright Kohler China Ltd., 2004

ROUGHING-IN

Product Info:	
Basin Area	397mm×215mm
Basin Depth	137mm
Outlet	45mm (D.)

Applicable Product:	K-8715T-4	K-8715T-1
Spout	32mm (D.)	35mm (D.)
Faucet	32mm (D.)	35mm (D.)

Included Components:	
Rubber Pads	63069
Components	52204

FINISHED WALL 完工墙

353

190

DN 10 HOT 热水

Ø32 OUTLET 出水口

13mm D. MOUNTING HOLE IN PEDESTAL 立柱上安装孔直径

尺寸图

产品资料:	
脸盆面积	397毫米×215毫米
盆深	137毫米
出水口	45毫米 (直径)

2004/11/19 四校

型号:	K-8715T-4	K-8715T-1
出水管孔	32 毫米 (直径)	35毫米 (直径)
水龙头孔	32 毫米 (直径)	35毫米 (直径)

附设配件:	
胶垫	63069
配件	52204

K-8715T-4

52

€OF BACKING

67

13mm D. ANCHOR HOLES

-2-

842


完工地面

背部中心线


锚孔


DN 10 COLD 冷水

140 178



单位: 毫米 Unit: mm



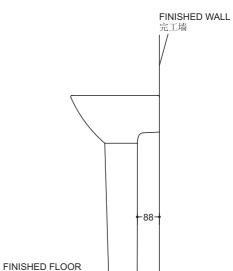



-451--102-

Ó

- 502

201-

 $\pi \Lambda$

Ŷ. 1102-

Ø32

. _

INSTALLATIONS

INSTALLATION K-8715T-1/-4

• Rough-in the supplies and the drain piping.


NOTE: The supply stop handles cannot extend more than 76mm (3") from the finished wall when in the open position.

- Install suffcient backing behind the finish wall to provide a secure material for the anchoring devices.
- Apply two self-adhesive leveling pads (provided) to each of the three ridges in the bottom recess of the lavatory.
- Mark the centerline on the floor.
- Position the pedestal on the floor centerline.
- Carefully set the lavatory on the pedestal.
- Move the pedestal as required to ensure proper fit in the desired location.
- Level the lavatory. Add more selfadhesive gaskets as needed to level the lavatory.

NOTE: The lavatory must be supported by the pedestal.

- Check the lavatory placement.
- Mark the center of each anchoring hole on the wall, and mark the floor through the hole in the pedestal bottom.
- Carefully remove the lavatory from the pedestal. Then move the pedestal from the area.
- Drill a 6mm (1/4") mounting hole at the mark on the floor, then drill two 6mm (1/4") hanger bolt holes at the marks on the wall.
- Mount hanger bolts to the wall so approximately 32mm (1-1/4") of each bolt remains exposed. For masonry applications, use suitable anchors.

NOTE: Other fastening devices of sufficient size and strength may also be used.

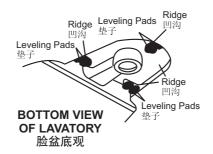

安装

安装K-8715T-1/-4

• 画出供水及排水管道的坑距。


注意:供水开关手柄在旋开位置时,距 离完工墙面不得超过**76mm**。

- 要在完工墙后加上安装足够的支 撑,为锚固装置提供牢靠的基础。
- 在脸盆底部三边的凹沟中各贴上两 个自粘水平垫子(已提供)。
- 在地面上画出中心线标记。
- 把立柱放在地面中心线位置上。
- 小心地将脸盆安放在立柱上。
- 必要时移动立柱,以确保位置恰当。
- 调平脸盆,如有需要,可使用更多的自粘垫子,以便持平。

注意:脸盆必须由立柱支撑。

- 检查脸盆是否安放正确。
- 在墙上标出每个锚孔的中心位置, 并通过立柱底部的孔,在地面上作 出标记。
- 小心地从立柱上移开脸盆,再将立 柱搬开。
- 在地面标记处钻一个6mm的安装 孔,然后再在墙上标记处钻两个 6mm的悬挂螺栓孔。
- 将悬挂螺栓安装在墙上,并使每个 螺栓保持外露约32mm。若需安装 在水泥上,请用合适的塞子。

注意:也可使用其它具有足够尺寸及强 度的坚固装置。

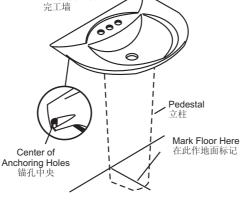

۵

Finished Wall 完工墙

Hanger Bolts

悬挂螺科

Finished Wall

Install the faucet and drain to the lavatory according to the . manufacturer's instructions.

NOTE: Do not fully tighten slip-joint drain connections at this time.

- Position the pedestal mounting • hole over the hole in the floor.
- Secure the pedestal to the floor with the screw and washer. Tighten the screw until it is snug. For masonry applications, use suitable anchor.

CAUTION: Risk of product damage. Do not overtighten. Overtightening may cause damage to the product.

- Set the lavatory on the pedestal so • the bolts extend through the lavatory holes.
- Level the lavatory.
- Install the cap nuts and washers, and tighten until snug.
 - **CAUTION: Risk of product** ΔŊ damage. Do not overtighten the cap nuts.Overtightening may cause damage to the product.
- Connect and tighten the trap. Connect the hot and cold water supplies to the faucet.

IMPORTANT CONSUMER INFORMATION 用户须知

CARE AND CLEANING

To keep your lavatory looking new, make sure you rinse it out thoroughly after each use. DO NOT ABRASIVES on this product, as they will scratch and ruin the surface. Stubborn stains, paint, or tar can be removed with turpentine or paint thinner.



Bolts

螺栓

Pedestal

立柱

按照制造商之指引,将水龙头及排水管道安装在脸盆上。

注意:此时勿将滑动排水连结器完全上紧。

- 把立柱安装孔对准地面的孔。
- 用螺钉及垫圈将支座固定在地面 上,上紧螺钉直至贴合为止。若需 安装在水泥地上,请用合适的塞 子。

小心:有产品损坏之危险。螺钉 Λ 不要上得过紧,否则可能损坏产 品。

- 将脸盆放于立柱上, 使螺栓穿过脸 • 盆的孔。
- 调平脸盆。
- 安上帽螺母及垫圈,将之上紧直至 贴合为止。

小心:有产品损坏之危险。不要 Δ 把螺母上得过紧,否则可能损坏 产品。

联接并上紧弯管,同时将热水及冷 水管接上水龙头。

护理和清洁

Finished Wall

Lavatory

脸盆

完工墙

Cap Oo' Nut

Washer 垫圈

帽螺母

为保持脸盆光洁如新,须确保每次使用后彻底冲洗干净,切勿 **使用腐蚀性的清洁剂**,以免刮花及破坏脸盆的表面。要清除顽 固污垢,油漆或柏油,可使用松油或油漆稀释剂。

LIMITED ONE-YEAR WARRANTY

Plumbing Fixtures and Fittings Limited One-year Warranty

Kohler plumbing fixtures and fittings are warranted to be free of manufacturing defects.

This product is warranted for one year from date of purchase. Kohler China will be responsible for any problems caused by manufacturing defects provided with the invoice. Kohler China will, at its election, repair, replace or make appropriate adjustment where Kohler China inspection discloses any such defects occurring in normal usage within one year after purchase.

Implied warranties including that of merchantability and fitness for a particular purpose are expressly limited in duration to the duration of this warranty, Kohler China disclaims any liability for special, incidental or consequential damages. Damages to the product caused by misuse, abuse and installation that is not in accordance with the owner's manual are not covered by this warranty.

To obtain quick warranty service, please contact your dealer, or write to Kohler China. (Original sales receipt must be provided as the proof of purchase.)

> Kohler China Investment Company Ltd. Central Customer Service Center 19/F, Shanghai Square, 138 Huai Hai Road, Luwan District, Shanghai, PRC Zip Code: 200021

This is our exclusive written warranty.

一年有限担保

陶瓷及浴缸产品及配件担保——一年有限担保

科勒公司担保其陶瓷及浴缸产品及配件在制造工艺上无瑕疵。

本产品自购买之日起即获得本公司一年的质量保证。在质保期 内,凭购货发票,科勒公司将免费承担由制造质量引起的任何 问题。经核查后,科勒中国有限公司有权决定是修理、更换、 还是作适当的调整。

这里所指的担保,包括产品,都已明确地限制在该担保期之 内。科勒中国有限公司对其后出现的损坏不负有任何责任。担 保也不包括外观损伤、使用不当以及未按说明书安装的损失。

为获得快捷的担保服务,请联系您的销售商;您也可写信给科 勒中国有限公司(请出示销售发票原件作为购货凭证):

> 科勒(中国)投资有限公司 中央客户服务中心 上海市卢湾区淮海中路138号 上海广场19楼 邮编: 200021

这是我们全部的书面担保。