# Installation Guide

Deck-Mount Bath Faucet with Riser Tubes

P22107, P22109, P22110, P22207, P22707, P22709, P23007

KALLISTA.

1019831-2-C

# Thank You For Choosing Kallista

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed on the back cover.

#### **Tools and Materials**







Plumbers Putty



Sealant Tape

## **Before You Begin**

**IMPORTANT!** For proper drainage of the spout, install the bath faucet to a level surface.




**WARNING:** Risk of product damage. To avoid product damage, do not exceed 45 psi (3.1 bars) supply pressure limit.

- □ Observe all local plumbing and building codes.
- □ Shut off the main water supply.
- □ The appearance of your faucet may differ from the faucet illustrated. The referenced components in the illustration and the installation instructions still apply.
- □ Before installation, unpack the new faucet trim and inspect it for damage. Return it to the carton until installation.
- □ Inspect all threads, connections, and O-rings to ensure they are clean before installing.
- □ Before installing this product, the water supplies, finished deck material, and bath must be in place.
- □ The installation method for deck riser tubes and floor riser tubes are identical.

Before You Begin (cont.)
<ul> <li>Supply connections may vary from site to site. For this installation guide, copper supply tubing is used.</li> </ul>
□ An adapter to convert an IPS thread to an NPT thread is included with the deck/floor riser tubes.
□ KALLISTA reserves the right to make revisions in the design of faucets without notice, as specified in the Price Book.

Kallista 3 1019831-2-C

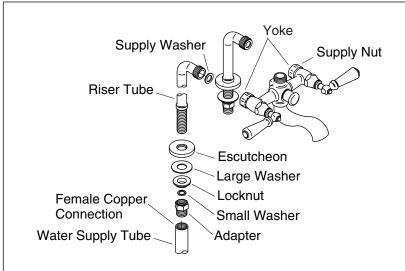

#### 1. Install the Riser Tubes and Faucet

### **Connect the Supplies**

**NOTE:** Supply connections may vary from site to site. For this installation guide, copper supply tubing is used.

- □ **For copper supply connections:** Solder the female connections to the water supply tubes, then apply thread sealant to the female copper connections.
- □ **For all other supply connections:** Connect the supplies. Use the adapter (supplied) to convert the IPS thread to the NPT thread, if necessary.

#### **Install the Riser Tubes**

- □ **For floor riser tubes:** Ensure the escutcheon, large washer, locknut, small washer, and adapter are assembled on each floor riser tube (as shown). Thread the riser tubes down onto the female copper connections until the riser tubes bottom out.
- □ **For deck riser tubes:** Insert the riser tube with escutcheon through the deck. From underneath the deck, secure the riser tubes with a washer and locknut.


#### For all installations:

- □ Apply plumbers putty to the underside of each escutcheon, then press each escutcheon against the finished floor/deck. Wipe away any excess putty.
- □ Insert a supply washer into each yoke of the bath faucet.

1019831-2-C 4 Kallista

Install the Riser Tubes and Faucet (cont.)
□ Slide the yokes of the bath faucet onto the riser tubes.
<b>NOTE:</b> Wrap a clean cloth around the supply nuts before tightening the supply nuts with a wrench. This will protect the finish.
□ Wrench tighten the supply nut on each yoke to secure the bath faucet to the riser tubes.

Kallista 5 1019831-2-C

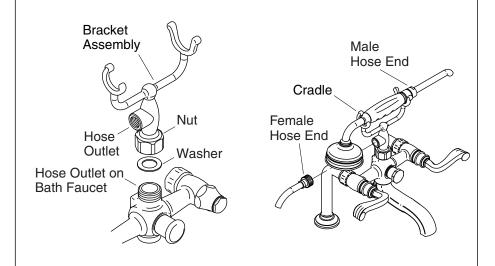

## 2. Install the Handshower

- □ Insert the washer into the nut of the bracket assembly.
- □ Wrench tighten the nut of the bracket assembly to the hose outlet on the bath faucet.
- $\hfill\Box$  Secure the female hose end to the hose outlet on the bracket assembly.
- □ Secure the male hose end to the handshower.
- □ Place the handshower on the cradle.

## 3. Installation Checkout

- □ Ensure that all connections are watertight.
- □ Open the drain.
- □ Open the main water supply and check for leaks. Repair as necessary.
- □ Open both hot and cold valves and run water through the spout for one minute to remove debris.
- □ Activate the handshower. Check for leaks at the flexible hose and handshower hose connections.
- $\Box$  Close the valves.

USA/Canada: 1-888-4-KALLISTA

Fax: 1-888-272-3094

kallista.com

KALLISTA.

©2018 KALLISTA

1019831-2-C