


4" Central Hole Lavatory Faucet



4" Central Hole Lavatory Faucet

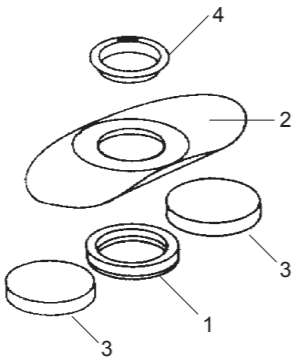
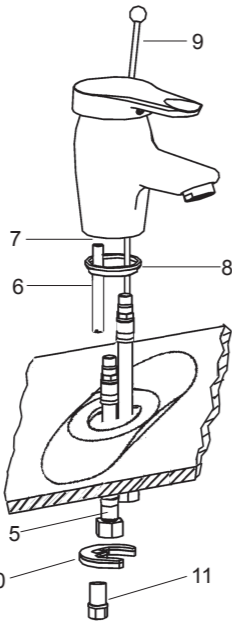
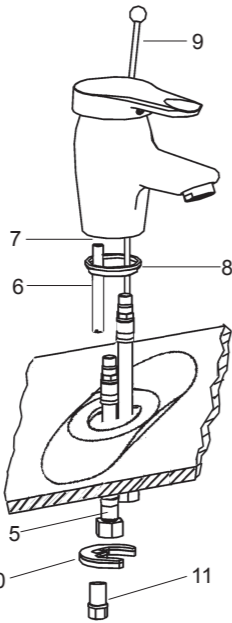
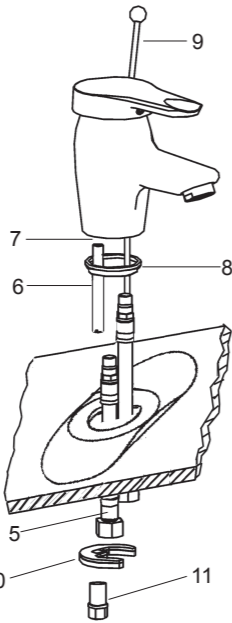
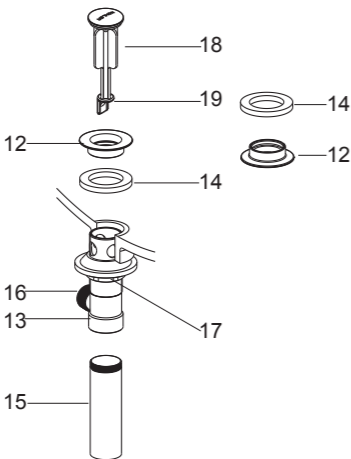
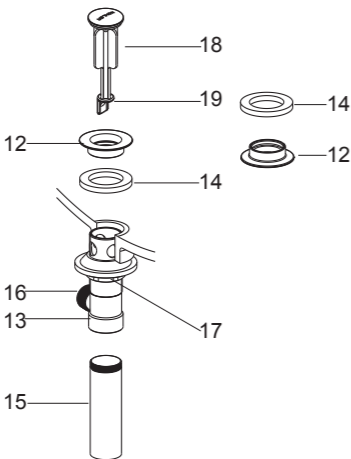
BEFORE YOU BEGIN

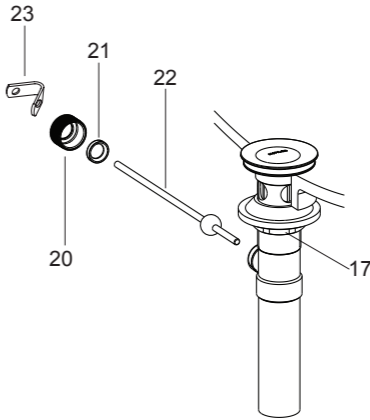
1. Flush the water supply pipes thoroughly to remove debris.
2. For new installations, assemble faucet and drain to lavatory before installing lavatory.

HANDLE OPERATION

Lift the handle gently. Turn clockwise for hot water, counter-clockwise for cold water.

ROUGH-IN DIMENSIONS

安装步骤	INSTALLATION
<div>如何安装装饰盖</div> <div>在装饰盖(2)底面沿周围涂上一圈密封油灰，把隔离圈(1)放在脸盆中孔正中间。用垫圈(3)分别封住两侧孔。把装饰盖对准，放在有垫圈和隔离圈上。</div> <div></div> <div>把随水龙头附带的O型圈丢掉, 换上随装饰盖附带的塑料装饰盖垫片(4)。</div>	<div>How to Install the Escutcheon</div> <div>Apply a ring of plumbers putty on the underside of the escutcheon(2). Center the spacer(1) over the center hole of the lavatory. Cover the holes on both sides with the gaskets(3). Position the escutcheon over the spacer and the gaskets.</div> <div></div> <div>Discard the O-Ring supplied with the faucet and replace with plastic escutcheon washer(4).</div>
<div>如何安装水龙头</div> <div>首先将固定螺栓(6)安装到水龙头底部(7)处，然后将提拉杆(9)插入水龙头右侧的小孔中，把塑料装饰盖垫片(8)嵌入水龙头底槽中，将供水软管(5)从脸盆下方伸进，装到水龙头底部，用手拧紧即可。</div> <div></div> <div>从洗脸盆的下方把托架(10)和螺母(11)套入固定螺栓(6)。调整水龙头位置，使出水口位于正前方，并拧紧螺母以便把水龙头固定在洗脸盆上。</div> <div>把软管接到水源，当您在面对水龙头时，左边为热水，右边为冷水。</div>	<div>How to Install the Faucet</div> <div>Install the mounting stud(6) into the faucet body base(7). Insert lift rod(9) into hole at rear of body assembly. Slide the plastic escutcheon washer(8) into groove on body assembly. Insert the flexible supply hoses(5) into the hole from under the lavatory and install the flexible supply hoses into the faucet holes. Tighten it by hand.</div> <div></div> <div>From underside of lavatory, place bracket(10) and nut(11) onto mounting stud(6). Position faucet so that the spout is right in the front.</div> <div>Tighten nut to secure faucet to lavatory. Attach the hoses to water supplies. When facing front of faucet, the left hose is hot water, the right hose is cold water.</div>
<div>如何安装提拉杆排水组件</div> <div>将止水塞(18)、法兰盘(12)及垫片(14)从排水本体(13)上取下。从排水本体上取下尾管(15)。用密封胶带(生料带)在排水器尾管螺纹上缠几圈，再装回到排水本体上。把排水本体组件从脸盆下方插到脸盆中，排水杆口(16)朝后方。把法兰盘带垫片旋入到排水本体中，从下方用手拧紧锁紧螺母(17)。</div> <div></div> <div>注意：如果需要，可直接在法兰盘(12)底面沿周围涂一圈密封油灰，或其他密封剂，而不使用垫片(14)。</div>	<div>How to Install the Drain</div> <div>Remove stopper(18), flange(12) and washer(14) from drain body(13). Take off the tailpiece(15). Apply thread tape to tailpiece and install the tailpiece to drain body. Insert drain body kit into the lavatory from underside, and make sure the drain lever hole(16) facing to the back of the lavatory. Screw the flange with washer into the drain body. Tighten the locknut(17) by hand from the underside of the fixture.</div> <div></div> <div>NOTE: If needed, apply a ring of plumbers putty around the underside of the drain flange(12), instead of using washer(14).</div>

<div>把止水塞(18)放入排水本体中，调整止水塞末端的洞口(19)使其靠近并对正排水杆的洞口。</div> <div></div> <div>将固定螺母(20)取下，把塑料垫圈(21)及固定螺母装在球杆(22)上，再把球杆组件插入排水杆的洞口中并穿过止水塞，拧紧固定螺母。</div> <div></div> <div>确保球杆(22)指向脸盆后方，用扳手拧紧排水本体上的锁紧螺母(17)。</div> <div>注意：在锁紧螺母拧紧后，如法兰盘使用密封油灰，则不可以调整排水本体的位置，否则会破坏油灰密封的密封性。同时去除多余油灰。</div> <div>把手捻螺丝(25)装到联杆(24)上。用“V”形夹(23)将联杆连接到球杆(22)上，将提拉杆(9)插入联杆的孔中，将球杆下推至排水组件全开位置，调整提拉杆的位置。拧紧手捻螺丝(25)。</div>	<div>Place stopper(18) into drain body aligning the flat side of stopper hole(19) with the drain lever hole.</div> <div>Remove the retaining nut(20). Fit the plastic washer(21) and retaining nut onto the ball lever(22). Insert the ball lever assembly into the drain lever hole and through the stopper hole. Tighten the retaining nut.</div> <div>Be sure that the ball lever(22) points to the back of the lavatory, tighten the locknut(17) on the drain body by wrench.</div> <div>NOTE: Do not reposition the drain if plumbers putty applied after the locknut is tightened, or you may break the putty seal. Wipe away excess plumbers putty.</div> <div>Assemble thumb screw(25) to link(24), and link onto ball lever(22) with ‘V’-clip (23). Slide lift rod(9) into the hole in link. Push the ball lever down into the open position, and adjust the lift rod. Tighten thumb screw(25).</div>
<div>安装结果检查</div> <div>检查并确保所有的衔接处都已拧紧。确保手柄在关闭位置。</div> <div></div> <div>打开主要供水源和排水系统，检查并修理有漏水的接口。</div> <div>将起泡器(26)拆下，打开水龙头的冷热水，让水流出约一分钟以清除杂质，检查渗漏。冲洗起泡器，关闭水龙头，重新装回起泡器。</div>	<div>INSTALLATION CHECKOUT</div> <div>Ensure that all connections are tight. Ensure that the handle is in the off position.</div> <div>Turn on the main water supply and drain, and check for leaks. Repair as needed.</div> <div>Remove the aerator(26). Run hot and cold water through faucet for about one minute to remove any debris. Check for leaks. Repair as needed. Remove any debris from the aerator. Shut off the faucet. Reinstall the aerator.</div>
<div>清理说明</div> <div>适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。</div> <div>有磨损性的清洁用具或清洁剂也不可使用于科勒牌的水龙头及其配件上。</div>	<div>CLEANING INSTRUCTIONS</div> <div>All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. which could adversely affect the finish and are not recommended for cleaning.</div> <div>Do not use abrasive cleaners or solvents on Kohler faucets and fittings.</div>