


- 16143T 置物架
- 16148T 18"毛巾杆
- 16150T 24"毛巾杆

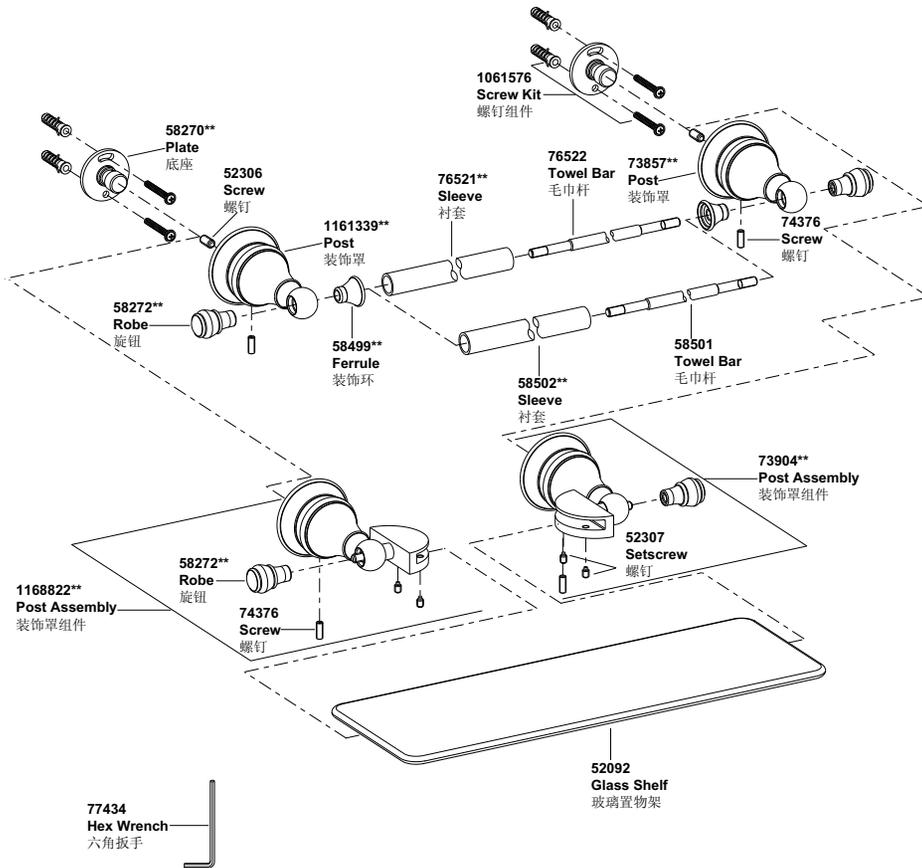

**订购时请说明颜色编号
**Color code must be specified when ordering

- | | |
|---------------|--------------|
| 16140T 毛巾环 | 16141T 卫生纸架 |
| 16142T 皂盘 | 16143T 置物架 |
| 16145T 化妆镜 | 16146T 衣钩 |
| 16148T 18"毛巾杆 | 16149T 牙刷杯架 |
| 16150T 24"毛巾杆 | 16152T 双卫生纸架 |

安装之前

所有的资料是按最新发布的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容，请把这些资料交给用户阅读。

注意事项:

本产品为水泥墙面安装或木墙面安装。若安装在其他表面可能影响产品性能。

危险警告: (人身伤害)

本产品不能作为扶手等支撑物使用，请勿将产品安装在可能被误认为扶手等支撑物的位置。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.

Please leave these instructions for the consumer. They contain important information.

NOTE:


These products should be located and mounted to a wall. While it is possible to mount them to any surface, a stud or concrete mounted product will yield the best results.


DANGER: (Risk of personal injury)

These products are not designed or intended for use as a grab bar or support bar. Do not install any of these products in any area where they are likely to be used inadvertently as a grab bar or support bar.

安装尺寸

ROUGH-IN DIMENSIONS

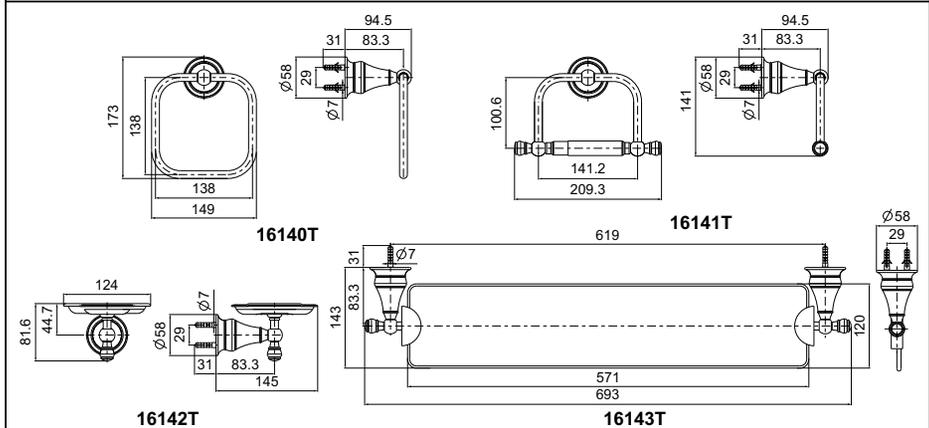

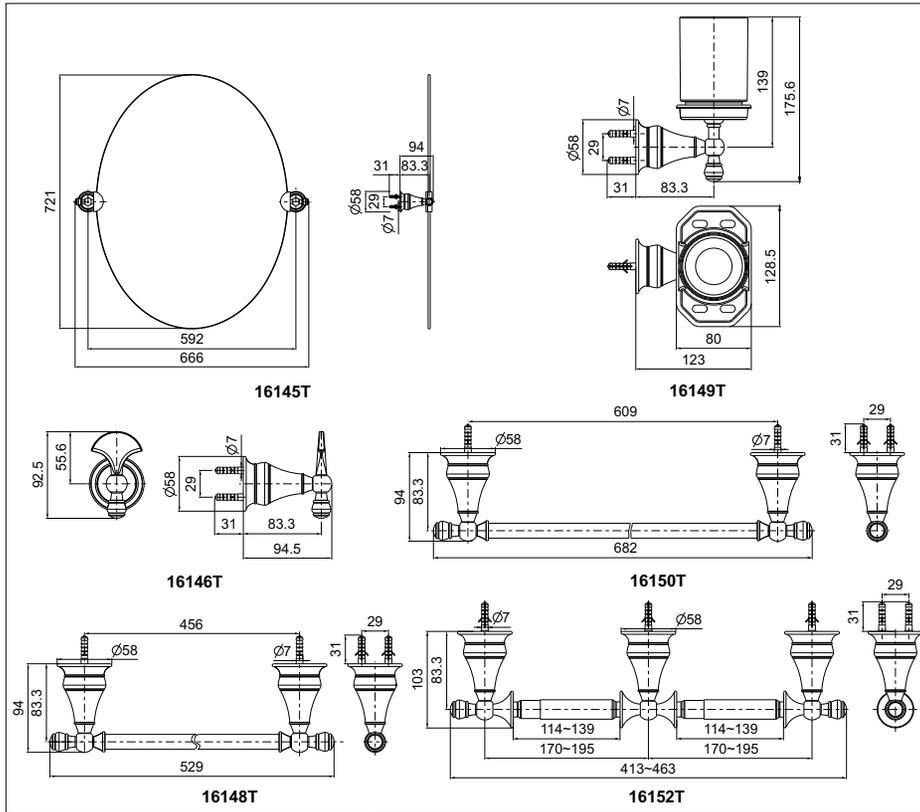

安装步骤


如何安装托架

用六角扳手(1)旋松装饰罩(2)上的螺钉(3), 将底座(4)从装饰罩上取下。

仅对于16140T/16141T/16142T/
16146T/16149T

在垂直面的墙壁上, 选择一个合适的位置用于安装底座。

如图所示, 在墙壁上标记胀塞(5)安装孔位置, 确保底座(4)大安装孔在上, 小安装孔在下, 两螺钉孔铅锤。根据胀塞直径钻孔。

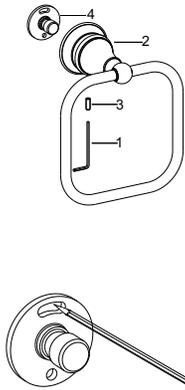

INSTALLATION

How To Install The Plate

Loosen the screw(3) on the post(2) with hex wrench(1), remove the plate(4) from the post.

Only For 16140T/16141T/
16142T/16146T/16149

Select a location on the vertical wall to install the plate.

Mark anchor(5) mounting hole locations on wall as shown, ensure the large slotted mounting hole of the plate(4) up, the smaller hole of the plate down and two screw holes are vertical. Drill holes in the finished wall as required.

KOHLER®

ACCESSORY SERVICE PARTS


浴室配件 零件图

丽依华

REVIVAL

Accessories

- 16140T 毛巾环
- 16141T 卫生纸架
- 16142T 皂盘
- 16146T 衣钩
- 16149T 漱口杯架

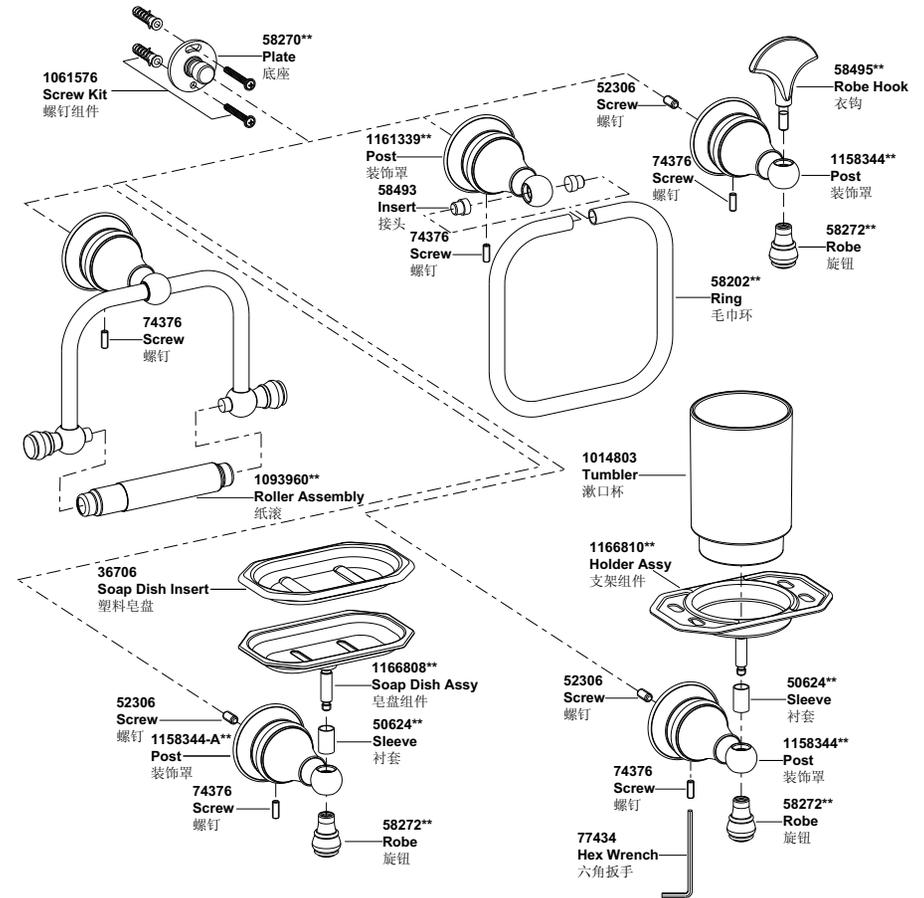

**订购时请说明颜色编号
**Color code must be specified when ordering

清洗说明

适用于所有加工处理过的表面：以中性肥皂水清洗镀层表面，再以干净的软布彻底擦干整个表面，许多清洁剂，比如氨水、去污粉及洁厕灵等，会对电镀表面造成伤害，切忌使用。

有磨损性的清洁用具或清洁剂也不可适用于科勒牌的水龙头及其配件上。

CLEANING INSTRUCTIONS

All Finishes: Clean the finish with mild soap and warm water. Wipe entire surface completely dry with a clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc. Which could adversely affect the finish and are not recommended for cleaning.

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

仅对于16143T/16145T/16148T/ 16150T

如图所示，在垂直面的墙壁上找一个合适的位置粘贴模板，确保模板水平，保持圆孔在下。根据胀塞直径钻孔。




Only For 16143T/16145T/ 16148T/16150T

Select a location on the vertical wall to stick the templet, ensure the templet is level and keep the smaller hole down as shown. Drill holes in the finished wall as required.

仅对于16152T

在垂直面的墙壁上找一个合适的位置安装双卫生纸架。

如图所示，在墙壁上标记安装双卫生纸架中心点，中心距在170~195mm之间。确保中心点连线水平、等距。

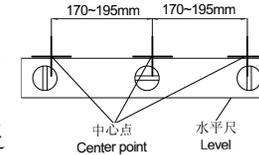


Only For 16152T

Select a location on the vertical wall to install the double toilet tissue holder.

As shown, mark the center points on the finished wall, and keep the center-to-center distance at 170~195mm. Use a level to ensure that all center points are level and equidistance.

如图所示，在竖直方向上，标记距中心点上下12.7mm处胀塞(5)安装孔的位置。根据胀塞直径钻孔。

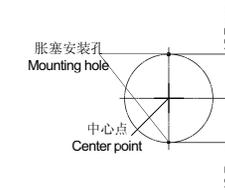


Mark anchor(5) hole locations vertically 12.7mm above and below the center points as shown. Drill holes in the finished wall as required.

注意：确保底座(4)中心连线水平。否则将导致双卫生纸架安装后倾斜。

NOTE: Ensure that all center points are level, or may result in slant of tissue holder.

对于所有产品

将胀塞(5)塞入孔中，用自攻钉(6)固定底座(4)，保持底座大安装孔在上，小安装孔在下，两螺钉孔铅锤。

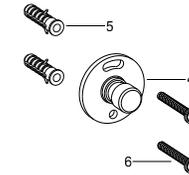


For All Products

Press the anchor(5) into the holes. Orienting the large slotted mounting hole of the plate up, the smaller hole of the plate down and two screw holes are vertical, secure the plate(4) with the self-tapping screws(6).

如何安装毛巾环

将底座(4)装入毛巾环组件(7)的装饰罩(2)内，保持装饰罩的螺钉孔向下，用六角扳手(1)锁紧螺钉(3)，固定毛巾环组件。

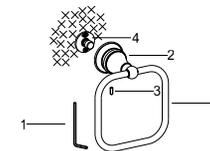


How To Install Towel Ring

Slide the post(2) of the towel ring kit(7) onto the plate(4). Orient the screw hole of the post downward. Tighten the screw(3) with the hex wrench(1) to secure the towel ring kit.

如何安装卫生纸架

将底座(4)装入卫生纸架组件(8)的装饰罩(2)内，保持装饰罩的螺钉孔向下，用六角扳手(1)锁紧螺钉(3)，固定卫生纸架组件。根据需要，取下纸滚(9)，装入卫生纸，然后重新装回纸滚。

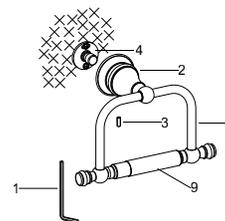


How To Install The Toilet Tissue Holder

Slide the post(2) of the toilet tissue holder kit(8) onto the plate(4). Orient the screw hole of the post downward. Tighten the screw(3) with the hex holder(1) to secure the toilet tissue holder kit. If needed, remove the roll assembly(9) to install toilet paper, then reinstall the roll assembly.

如何安装皂盘

将底座(4)装入皂盘组件(10)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定皂盘组件。根据需要,取下塑料皂盘(11),装入肥皂,然后重新装回皂盘。

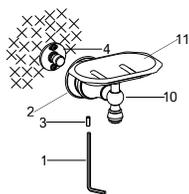


How To Install Soap Dish

Slide the post(2) of the soap dish holder kit(10) onto the plate(4). Orient the screw hole of the post downward. Tighten the screw(3) with the hex wrench(1) to secure the soap dish holder kit. If needed, remove the plastic soap dish(11) to install soap, then reinstall the soap dish.

如何安装置物架

注意: 确保装饰罩组件(12, 13)水平对称安装,且固定可靠。否则会损坏玻璃。

将底座(4)装入装饰罩组件(12, 13)的装饰罩(2),保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定装饰罩组件。

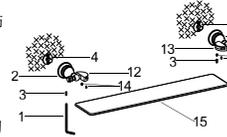

用六角扳手(1)旋松装饰罩组件内的螺钉(14)。将玻璃(15)装入装饰罩组件的凹槽内,确保玻璃水平。用六角扳手(1)拧紧螺钉(14),固定玻璃。但是不能太紧。

How To Install Glass Shelf

NOTE: Ensure the post kits(12, 13) are properly aligned and securely anchored. If not, damage to the glass may occur.


Slide the posts(2) of the post kits(12, 13) onto the plates(4). Orient the screw hole of each post downward. Tighten the screws(3) with the hex wrench(1) to secure the post kits.

Loosen the screws(14) on the post kits with hex wrench(1). Slide the glass(15) through the slot each the post kit. Ensure the glass is level. Tighten the screws(14) with the hex wrench(1) to secure the glass. But don't overtighten.

如何安装化妆镜

注意: 确保装饰罩组件(16)水平对称安装,且固定可靠。否则会损坏镜子。

用六角扳手(18)旋松装饰罩组件内的螺钉(17)。取下装饰罩组件的旋钮(19)。将化妆镜(22)的接头(20, 21)装入装饰罩组件。将旋钮选入接头并拧紧。用六角扳手(18)旋紧螺钉(17)。

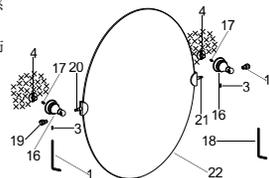

将底座(4)装入装饰罩组件内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定化妆镜。

How To Install Oval Mirror


NOTE: Ensure the post kits(16) are properly aligned and securely anchored. If not, damage to the mirror may occur.

Loosen the screws(17) on the post kits with the hex wrench(18). Remove the knobs(19) on the post kits. Install the connectors(20, 21) of the mirror kit(22) into the post kits. Screw the knobs onto the connectors and tighten them. Tighten the screws(17) with the hex wrench(18).

Slide the post kits onto the plates(4). Orient the screw hole of each post downward. Tighten the screws(3) with the hex wrench(1) to secure the post mirror.

如何安装衣钩

将底座(4)装入衣钩组件(23)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定衣钩组件。

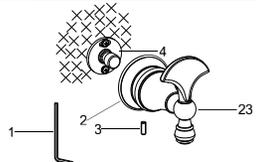


How To Install Robe Hook

Slide the post(2) of the robe kit(23) onto the plate(4). Orient the screw hole of the post downward. Tighten the screw(3) with the hex wrench(1) to secure the robe kit.

如何安装毛巾杆

将底座(4)装入毛巾杆组件(24)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定毛巾杆组件。

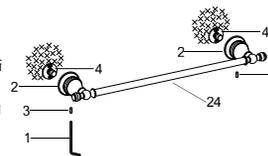


How To Install Towel Bar

Slide the posts(2) onto the towel bar kit(24) onto the plates(4). Orient the screw hole of each post downward. Tighten the screw(3) with the hex wrench(1) to secure the towel bar kit.

如何安装漱口杯架

将底座(4)装入漱口杯架组件(25)的装饰罩(2),保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定漱口杯架组件。将漱口杯(26)置于漱口杯架上。根据需要,取下漱口杯,使用后重新装回。

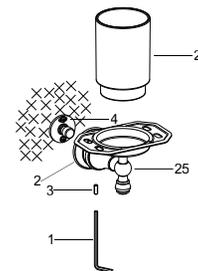

How To Install Toothbrush/Tumbler Holder

Slide the post(2) of the tumbler holder kit(25) onto the plate(4). Orient the screw hole of the post downward. Tighten the screw(3) with the hex wrench(1) to secure the tumbler holder kit. Place the tumbler(26) on the tumbler holder. If needed, remove the tumbler, after using reinstall it.


如何安装双卫生纸架

将左边底座(4)装入装饰罩组件(27)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定装饰罩组件。

将中间底座(4)装入装饰罩组件(28)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定装饰罩组件。

将右边底座(4)装入装饰罩组件(29)的装饰罩(2)内,保持装饰罩的螺钉孔向下,用六角扳手(1)锁紧螺钉(3),固定装饰罩组件。

压缩纸滚组件(30)并装入装饰罩组件。根据需要,取下纸滚,装入卫生纸,然后重新装回纸滚。

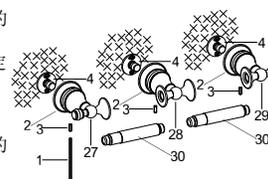

How To Install Double Toilet Tissue Holder

Slide the post(2) of the post kit(27) onto the left plate(4). Orient the screw hole of the left post downward. Tighten the screw(3) with the hex wrench(1) to secure the post kit.

Slide the post(2) of the post kit(28) onto the middle plate(4). Orient the screw hole of the middle post downward. Tighten the screw(3) with the hex wrench(1) to secure the post kit.

Slide the post(2) of the post kit(29) onto the right plate(4). Orient the screw hole of the right post downward. Tighten the screw(3) with the hex wrench(1) to secure the post kit.

Compress roller assemblies(30) to install them into post kits. If needed, remove the roll assemblies to install toilet paper, then reinstall the roll assemblies.

安装结果检查

检查并确保所有连接处已锁紧。

检查并确保置物架是水平放置的。

检查并确保所有六角螺钉竖直向下。



INSTALLATION CHECKOUT

Ensure that all connections are tightened.

Ensure the glass shelf is level.

Ensure all setscrews face straight down.

16145T 化妆镜
 16152T 双卫生纸架

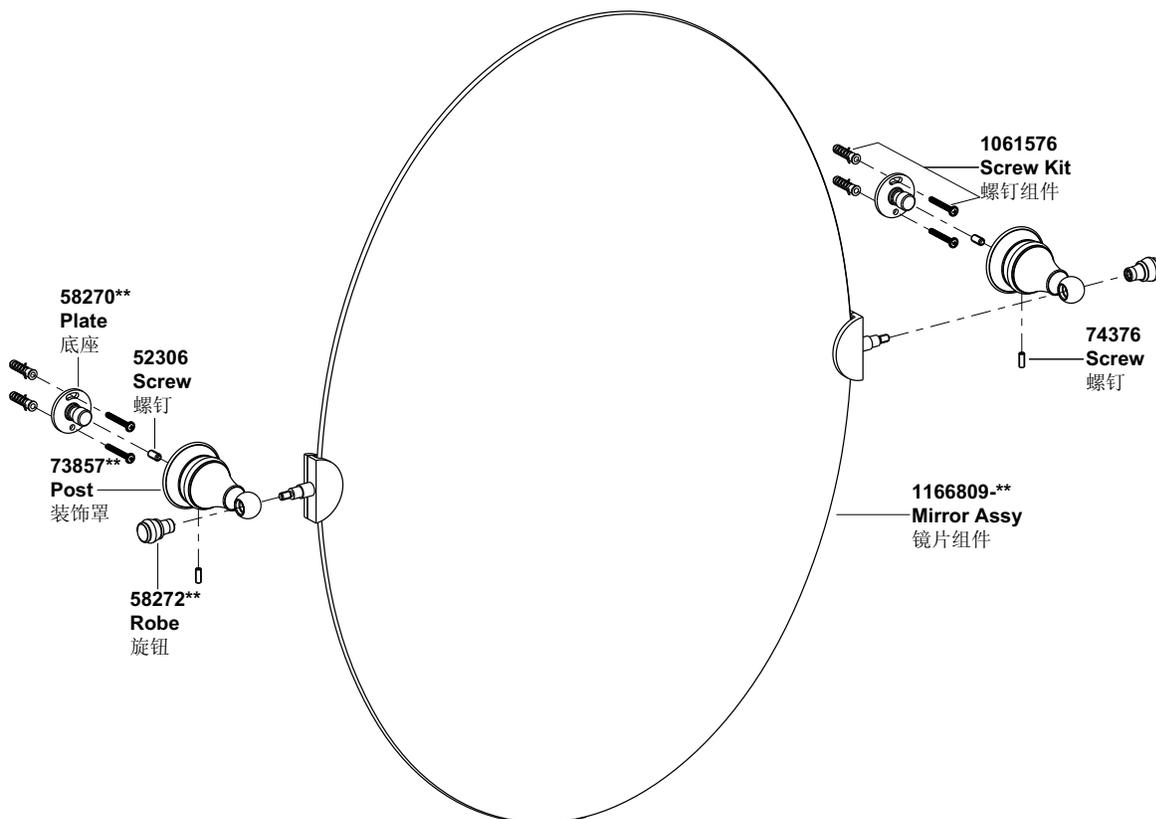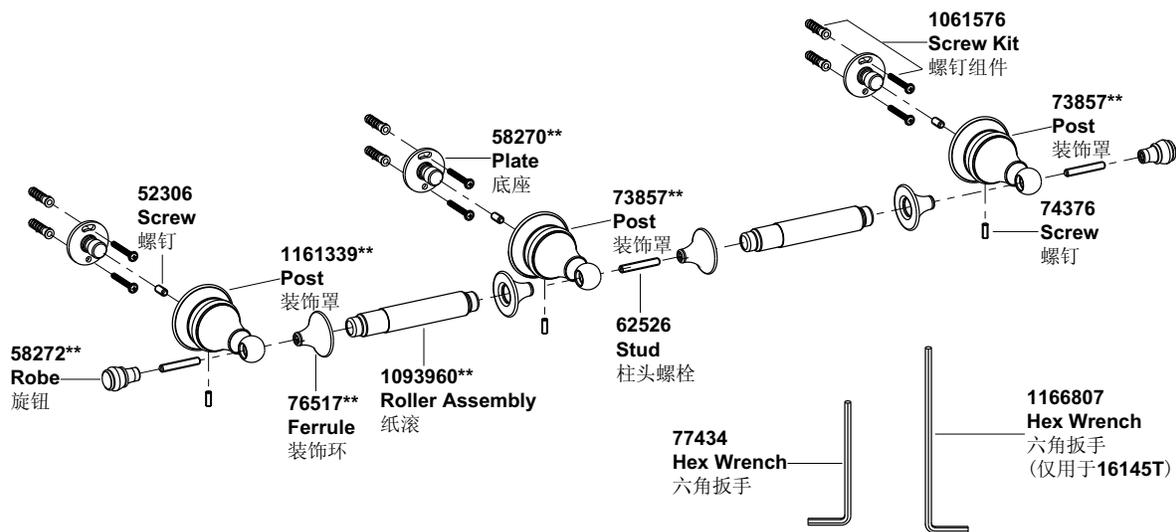

**订购时请说明颜色编号
 **Color code must be specified when ordering