



BEFORE YOU BEGIN

- Please read these instructions carefully to familiarize yourself with the required tools, materials, and installation sequences. Follow the sections that pertain to your particular installation. This will help you avoid costly mistakes. In addition to proper installation, read all operating and safety instructions.
- All information in these instructions is based upon the latest product information available at the time of publication. Kohler China reserves the right to make changes in product characteristics, packaging, or availability at any time without notice.
- These instructions contain important care, cleaning, and warranty information—**please leave instructions for the consumer.**
- JUTE bathroom cabinet adopts E1 grade natural black walnut wood-based panel of high quality. With further processing, its harmful emission is less than 1.5mg/L.
- Turn off the water supply.
- The plumbing installation must comply with Water Supply Regulations/Bye-laws, Building Regulations or any particular regulations and practices, specified by the local water company or water undertakers. The installation should be carried out by a plumber.
- Before installation carefully inspect the new fixture for any signs of damage.
- This product complies with GB 24977-2010.

ORDERING INFORMATION

This installation covers the following products in the JUTE range:

JUTE Cabinet 914mm.....	K-77125T
JUTE Cabinet 1220mm.....	K-77123T

SAFETY WARNINGS

Kohler products are precision-engineered and should give continued superior and safe performance, provided:

- They are installed, commissioned, operated and maintained in accordance with the recommendations given in this Manual.
- Periodic attention is given, as necessary, to maintain the product in good functional order. Recommended guidelines are given in the **MAINTENANCE** section.

Carefully inspect the new fixture for any signs of damage.

When installing Kohler Products, manufacturers guidelines for power tool safety should be followed.

KOHLER CHINA INVESTMENT CO., LTD NO.158, JIANG CHANG SAN ROAD,
ZHABEI DISTRICT, SHANGHAI, PRC POST CODE: 200436
科勒(中国)投资有限公司 上海市闸北区江场三路158号 邮编: 200436

安装之前

- 请仔细详阅本指引，以便熟悉所需工具、物料及安装程序。请遵照适用的章节来安装本产品，以免安装失当导致不必要的损失。除了有关正确的安装方法之外，还务请详阅所有操作及安全指引。
- 本指引所载之一切资料，均以印刷时所有之最新产品情况为基础，科勒中国保留权利随时更改产品特性、包装或供应情况，恕不另行通知。
- 本指引也包含了有关保养、清洁及担保等重要资料-请交予用户保存。
- 琪乐浴室柜选用E1级优质人造板贴天然黑胡桃木皮精心加工而成，其有害气体释放量少于1.5mg/L
- 关闭供水。
- 管道安装必须遵循当地所有给排水、建筑或者其他特别规定。管道安装人员必须具备相应资格。
- 安装之前，仔细检查新产品是否有损伤。
- 本产品符合GB 24977-2010。

订购信息

此安装说明书适用于以下琪乐系列家具的安装：

琪乐浴室柜914mm.....	K-77125T
琪乐浴室柜1220mm.....	K-77123T

安全警告

科勒产品经过精确制造，性能卓越，经久耐用。为保证产品品质，您必须：

- 按照此手册中推荐的方法进行安装、起动、操作及维护。
- 如有需要，定期检查，令产品保持良好性能状态。日常维护章节中列有推荐方法。


仔细检查新产品是否有损伤。

在安装科勒产品时，必须遵循制造商相关电动工具的安全指令。


ROUGHING-IN

尺寸图

Reference Value
参考值

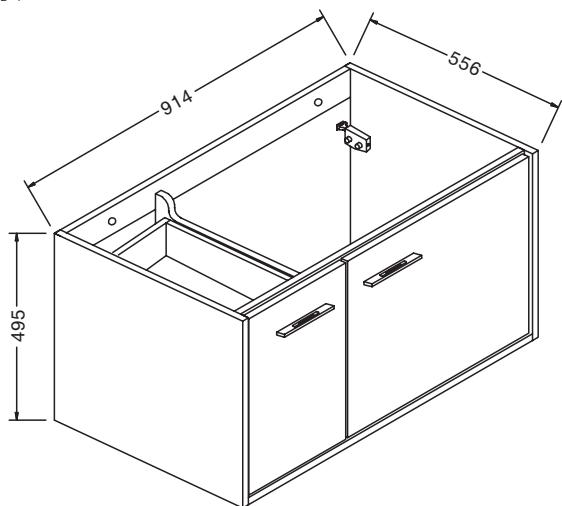

K-77125T
Cabinet 914mm
浴室柜914mm

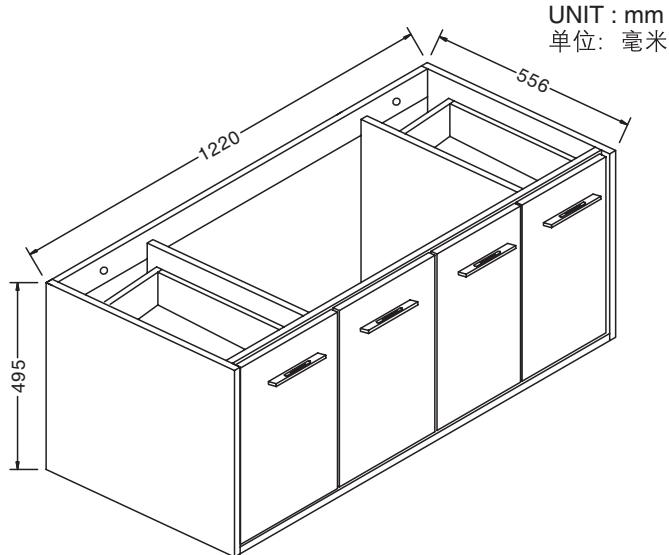

K-77123T
Cabinet 1220mm
浴室柜1220mm

Fig.1
图1

Kohler reserves the right to change marked dimensions without prior notice.
科勒公司保留随时变更图中标示尺寸的权利，无需另行通知。

INSTALLATION

A. Install Washbasin Cabinet

Install the services.

Hot (H) and Cold (C) inlets must be connected to the correct inlet pipes.

Install the drain in accordance with the manufacturer's instructions.

We suggest using P-trap drain. Connect P-trap pipe with washbasin drain.



CAUTION !Make sure a watertight seal exists on all washbasin drain connections.



CAUTION !Provide access to the plumbing connections for future plumbing maintenance.

NOTE: The hot and cold water supplies must be installed with isolating valves.

安装

A. 安装脸盆柜

安装管道。

热水(H)及冷水(C)入口必须连接至正确的进水管。

根据制造商说明书安装排水。

我们建议采用墙排水方式，使用P弯管连接脸盆去水。



小心！请确保所有脸盆排水的连接处都装有防水密封圈。



小心！管道连接处需留有检修空间，以备日后管道维护之用。

注意：安装冷热供水管时必须使用隔离阀。

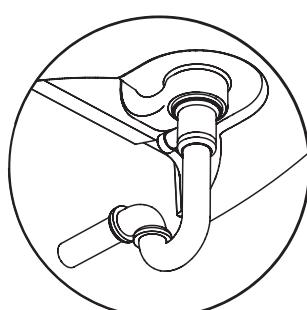


Fig.2
图2

I Installation with adjustable feet (K-77104T-B07 is not supplied with cabinet and shall be purchased.)

1. Place the cabinet on the floor. Fix adjustable feet as shown in Fig.3. (Put carton or foam on the floor first to prevent scratching the cabinet.)

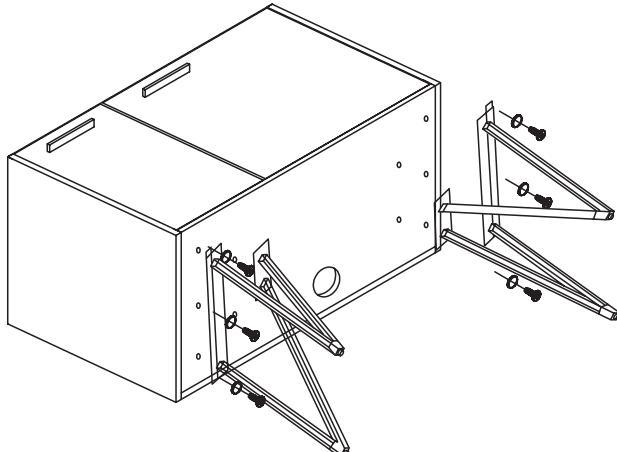


Fig.3
图3

2. Put the cabinet upright and place it at a desired position in the bathroom. Adjust the adjustable feet to make the cabinet level, as shown in Fig.4.

2. 将浴室柜立起，放在浴室合适的位置，上下调节调整脚，将产品水平放置到位，如图4。

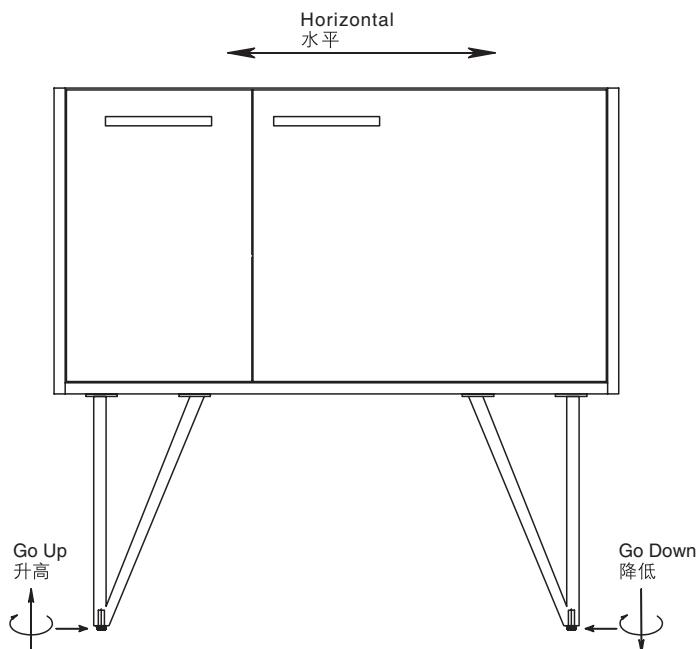


Fig.4
图4

3. Pre-drill wall anchors

- Adjust cabinet level and use pencil to mark the hole of the back bar on the wall.
- Remove the cabinet, drill $\Phi 8\text{mm}$ & 50mm deep holes at the marked positions.
- Hammer the anchors into the drilled holes.
- Finish the step.

3. 预打墙面固定螺栓

- 柜体调整水平后，用铅笔，穿过柜体后横条上的孔在墙面上留下记号。
- 移开柜体，用相关工具在墙面上的记号处打直径8mm深度为50mm的孔。
- 将五金包中塑料膨胀管用榔头敲入事先打好的孔内。
- 完成该步骤。

II Hang onto wall (installation without adjustable feet)

1. Mark the positions of the wall hangers on the wall according to the dimensions shown. Drill Φ 8mm & 50mm deep holes and hammer the anchors in. Fix the wall hangers onto wall with screws supplied.



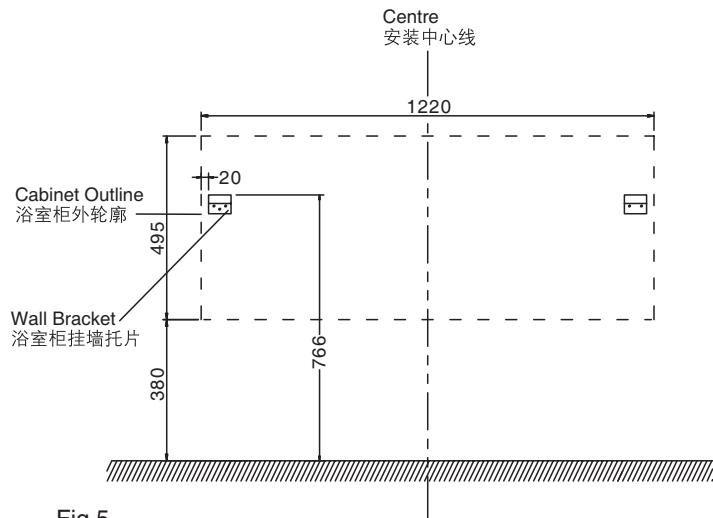


Fig.5
图5

2. Hang the cabinet onto wall and adjust the hanger to make the cabinet level, as shown in Fig.6.

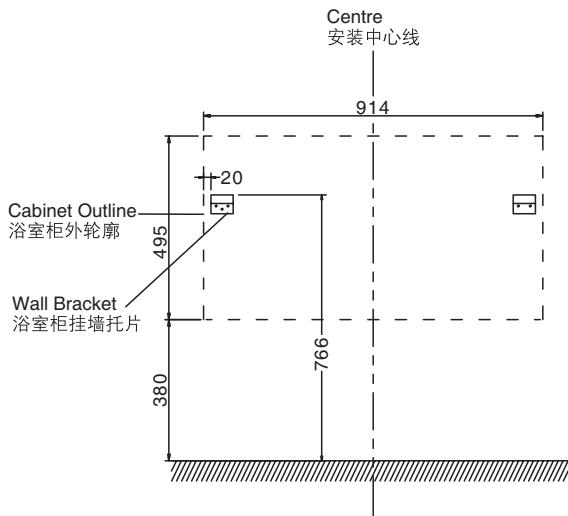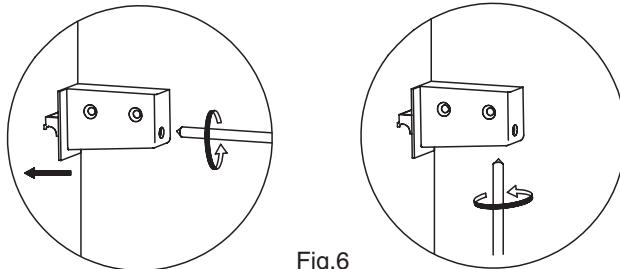

3. Pre-drill wall anchors

- Adjust cabinet level and use pencil to mark the hole of the back bar on the wall.
- Remove the cabinet, drill Φ 8mm & 50mm deep holes at the marked positions.
- Hammer the anchors into the drilled holes.
- Finish the step.

B. Fix the cabinet onto wall



Note: For installation with or without adjustable feet, the cabinet must be fixed onto wall with anchors.

1. Adjust the cabinet level after installation with or without adjustable feet. Fix the cabinet onto wall through the holes on the back bar with anchors and gaskets supplied.

II 挂墙安装(柜体不装脚的浴柜安装方法)

1. 根据图示尺寸在墙壁上标出挂墙托片的位置，并用相关工具打直径8mm深度50mm的孔，敲入五金包中的膨胀管，用配套螺丝将挂片固定在墙面上。

2. 将浴柜挂在墙上后，调节吊码(见图6)，使柜体水平。

3. 预打墙面固定螺栓

- 柜体调整水平后，用铅笔，穿过柜体后横条上的孔在墙面上留下记号。
- 移开柜体，用相关工具在墙面上的记号处打直径8mm深度为50mm的孔。
- 将五金包中塑料膨胀管用榔头敲入事先打好的孔内。
- 完成该步骤。

B. 台盆柜与墙面的固定



注意：台盆柜无论是支撑脚安装还是挂墙安装，柜体都必须与墙面用膨胀螺栓固定。

1. 柜台装好脚，或者挂好墙，调水平后，用配套的螺栓，套上垫片，通过柜体后横条上的孔，将柜体与墙面固定密封。

C. Install the Synthetic Top/Counter Top

Note: Please refer to the installation instructions of synthetic top/counter top for its installation. To protect the cabinet from dampness, please apply silicone sealant where the synthetic top/counter top and the cabinet connect.

Connect Drainage

1. Inwall drainage (P-Trap)

Please install the drain assembly and faucet as shown. Please set the water supply and drainage position according to the suppliers instructions.

C. 安装台盆/台面

注：台盆/台面的安装请参照台盆安装说明书，请在台盆/台面和柜体连接处打上密封胶，以防止水分侵入柜体。

连接排水管

1. 入墙式排水管(P弯管)

请按照如图所示安装排水管和龙头。请遵照供应商所提供的说明在墙上设置进/排水管位置。

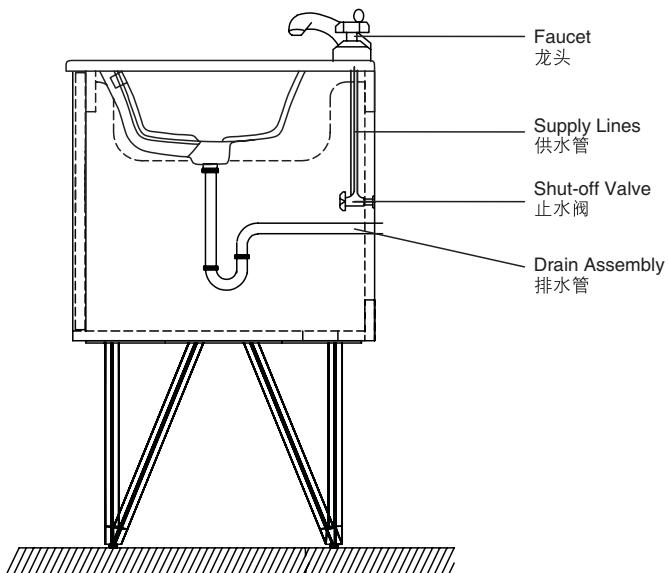


Fig.7
图7

2. Floor drainage (S-Trap)

Please install the drain assembly and faucet as shown. Please set the water supply and drainage position according to the suppliers instructions.

2. 地排水 (S弯管)

请按照如图所示设置排水管和龙头。请遵照供应商所提供的说明设进水管位置。


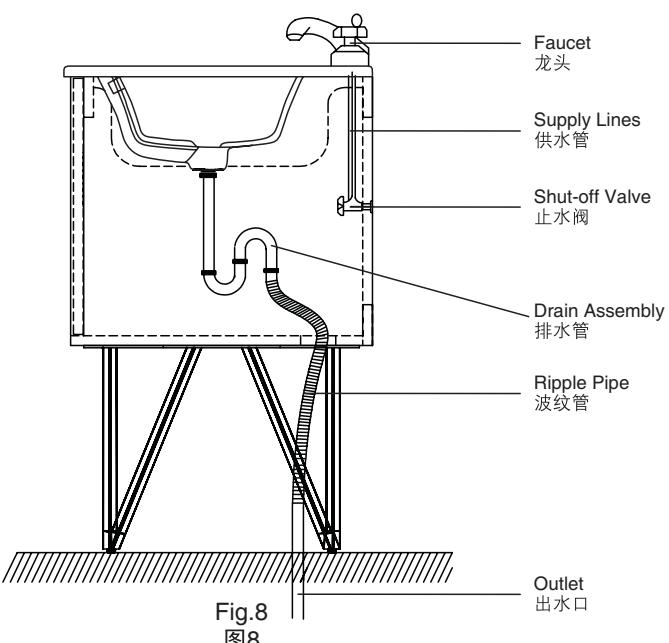


Fig.8
图8

D. Adjustments

1. Adjust the hinge cover in 3 direction to make sure the door is level. As shown in Fig.9.

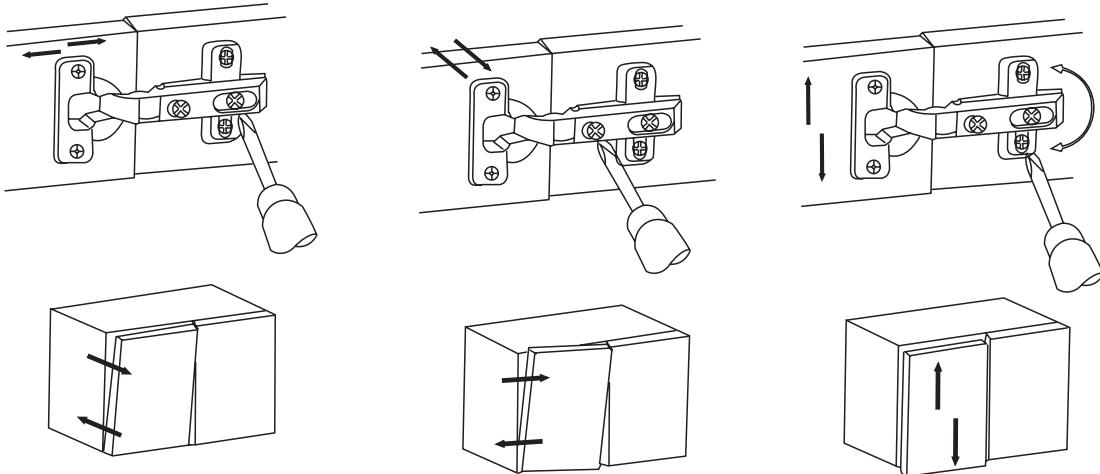

D. 外观调节

1. 如图9所示三向调节门板位置。

2. Place the hinge cover and plastic cover.

2. 装上门铰盖，盖上塑料孔盖。

USER MAINTENANCE

⚠ Warning! Risk of product damage.

1. Many cleansers contain abrasive and chemical substance which is not suitable for cleaning stainless steel, enamel, plating or plastic products. You may use mild cleansers or soaps to clean the surfaces. Wipe any splashes of cleaner solutions from the surface with clean soft cloth.
2. Maintain ventilation in the bathroom, and separate the dry area from the damp one if conditions permit. Try to open the door and windows of the bathroom and maintain good ventilation.
3. Kohler bathroom cabinet are dealt with strict procedures for damp-proof, whose good damp-proof function ensures good performance even in bathroom of huge humidity. Yet do not splash and pour water directly on the bathroom cabinet. Make sure that the bathroom is not over damp and wipe any splashes from surfaces immediately.
4. Maintenance of door board: Clean and wipe door board regularly, and wipe the condensation vapor with dry and soft cloth.
5. Ensure that electrical connections for appliances such as head lamp is insulated wipe mirror surface with chamois regularly to guarantee the persistent excellent performance.
6. Please do not sit, lean or step on the basin cabinet.
7. If any fixtures caused by abnormal reasons, Kohler China can supply paid replacement for service parts caused by abnormal reasons as shown in the Service Parts Page in the limited duration of warranty.

日常维护

⚠ 警告！小心产品受损。

1. 许多清洁剂都含有研磨剂及化学物质，不可用于清洁不锈钢、搪瓷、镀层或塑料制品。这些表面须使用温和的清洁剂或皂液进行清洁，将残余洗涤剂洗干净，然后用干净的软布擦干。
2. 卫生间请保持良好的通风状态，有条件的可以干、湿分离，平常尽量保持浴室空气畅通，养成开窗开门的习惯。
3. 科勒浴柜都经过严格的防潮处理，但防潮并不是防水，使用时不可随意任浴柜被水浇、溅。良好的防潮性能可以保证在高相对湿度时仍有良好使用性，所以请避免卫生间过于潮湿，遇有水迹要及时擦干。
4. 门板的保养：经常用软布定期清洁、擦拭，洗浴后的冷凝水蒸气应用干布擦净，保持门板的干爽。
5. 照明灯等电器连接要确保绝缘、防潮镜面最好用麂皮经常擦拭，可以保障使用质量经久如一。
6. 日常使用时，请勿坐、倚、靠、踩踏在脸盆柜上。
7. 科勒公司确保在担保期内，可以提供因非正常原因造成的如维修零件图中零件的有偿更换。