

KOHLER®

INSTALLATION INSTRUCTIONS

安装说明书

Touch Activated Drain

弹跳式落水

7119T 7120T

弹跳式落水

安装之前

所有的资料是按最新出版的产品资料编写而成。科勒公司保留任何时候不经通知即可改变产品特性、包装或产品可供类型的权利。

说明书包括重要的安装、保养及清洁方面的内容,请把这些资料交给用户阅读。

注意事项:

- 遵守当地管路安装条例。
- 关闭主供水源。
- 尽可能在安装面盆之前安装落水。

BEFORE YOU BEGIN

All information is based on the latest product information available at the time of publication. Kohler Co. reserves the right to make changes in product characteristics, packaging, or availability at any time without notice. Please leave these instructions for the consumer. They contain important information.

NOTES:

- Observe all local plumbing codes.
- Shut off the main water supply.
- If possible, install this drain before installing the lavatory.

使用说明


按压止水塞打开或关闭排水。

OPERATION INSTRUCTION


Press the stopper to open or close.

安装尺寸

ROUGH-IN DIMENSIONS

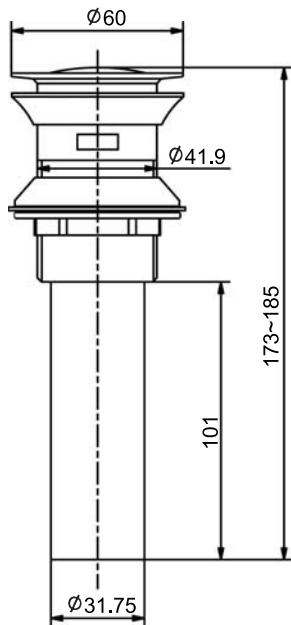

7119T

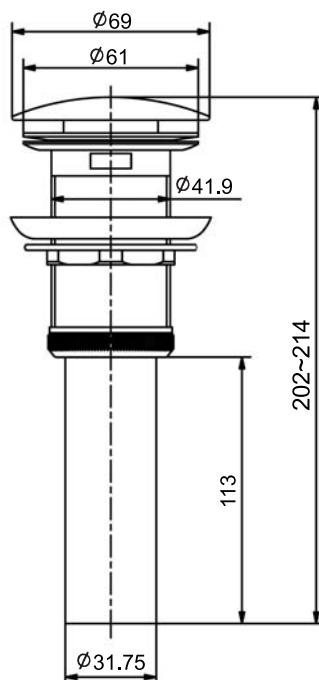

7120T

北京科勒有限公司

1101341-2-AA/Rev00

中国北京市密云县果园西路27号 邮编:101500


安装步骤

安装 7119T

把锁紧螺母(5)、塑料垫片(4)、橡胶垫圈(3)和尾管(6)从排水本体上取下。在尾管螺纹处须缠绕足以密封的密封胶带或涂合适的密封胶，装回排水本体。把排水本体从面盆上部孔插入。再依次将橡胶垫圈(小面朝上)、塑料垫片和锁紧螺母从排水本体底部装入。锁紧螺母。

注意：如果需要，可直接在排水器盘片(1)底面沿周围涂一圈密封油灰或其它密封剂，而不使用橡胶垫片(2)。

在锁紧螺母拧紧后，不可调整排水本体的位置，否则会破坏油灰或密封剂密封。

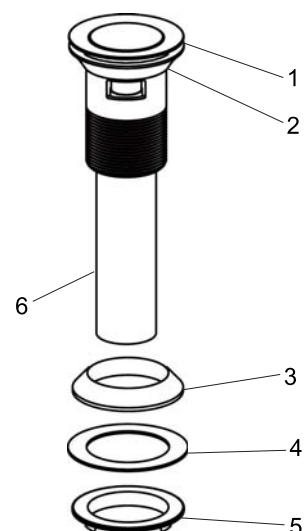

INSTALLATION

Installation for 7119T

Remove the locknut(5), plastic washer(4), rubber gasket(3) and tailpiece(6) from the drain body. Supply enough tape or sealant to tailpiece thread. Reinstall the tailpiece. Insert the drain body into the lavatory. Put the rubber gasket (Tapered side up), plastic washer and locknut back to the drain body in turn. Tighten the clocknut.

Note: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(1), instead of using rubber washer(2).


Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal.

安装 7120T

把连接螺母(5)及尾管(6)、锁紧螺母(4)和橡胶垫圈(3)从排水本体上取下。把排水本体从面盆上部孔插入。再依次将橡胶垫圈(小面朝下)和锁紧螺母从排水本体底部装入。锁紧螺母。重新装回连接螺母和尾管。

注意：如果需要，可直接在排水器盘片(1)底面沿周围涂一圈密封油灰或其它密封剂，而不使用橡胶垫片(2)。

在锁紧螺母拧紧后，不可调整排水本体的位置，否则会破坏油灰或密封剂密封。

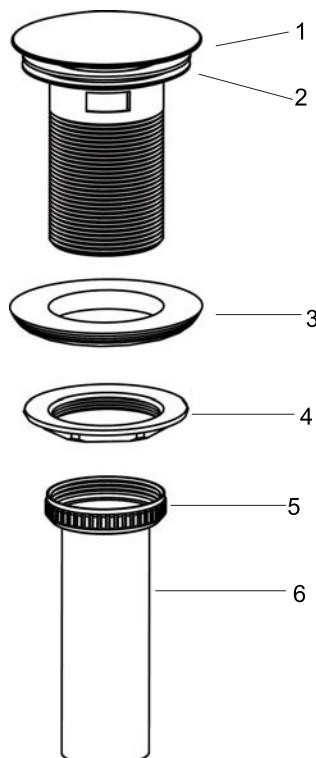

Installation for 7120T

Remove the connection nut(5) & tailpiece(6), rubber gasket(3) and the locknut(4) from the drain body. Insert the drain body into the lavatory. Put the rubber gasket (Tapered side downwards), plastic washer and locknut back to the drain body in turn. Tighten the clocknut. Reinstall the tailpiece by tightening connection nut.


Note: If needed, apply a ring of plumbers putty or other sealants around the underside of the drain flange(1), instead of using rubber washer(2).

Do not reposition the drain after the locknut is tightened, or you may break the putty or sealant seal.

安装后检查

INSTALLATION CHECKOUT

检查并确保所有的衔接螺帽都已拧紧。

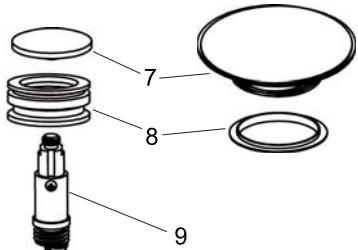

Ensure all coupling nuts are tightened.

打开主要供水源,打开/关闭排水器,检查并修理有漏水的接口。

Turn on main water supply. Turn on/ shut off the drain. Check for leaks. Repair as required.

更换止水垫及活塞组件



逆时针旋下止水塞(7),取出止水垫(8)。更换新的止水垫。逆时针旋下活塞组件(9),更换新的活塞组件。装回止水垫及止水塞。

Replacing the Washer and Piston Kit

Turn counterclockwise to remove the stopper(7). Take out washer(8). Replace with a new one. Turn counterclockwise to remove the piston kit(9). Replace with a new one. Reinstall stopper and washer.

清理说明

CLEANING INSTRUCTIONS

适用于所有加工处理过的表面:以中性肥皂水清洗镀层表面,再以干净的软布彻底擦干整个表面。许多清洁剂,比如氨水、去污粉及洁厕灵等,会对电镀表面造成伤害,切忌使用。

All Finishes: Clean the finish with a mild soap and warm water. Wipe entire surface completely dry with a clean soft cloth. Many cleaners may contain chemicals, such as ammonia, chlorine, toilet cleaner etc, which could adversely affect the finish and are not recommended for cleaning.

有腐蚀性的清洁剂或溶剂不可使用于科勒牌的水龙头及其附件上。

Do not use abrasive cleaners or solvents on Kohler faucets and fittings.

KOHLER®

SERVICE PARTS


零 件 图

Touch Activated Drain

弹跳式落水

7119T 7120T

弹跳式落水

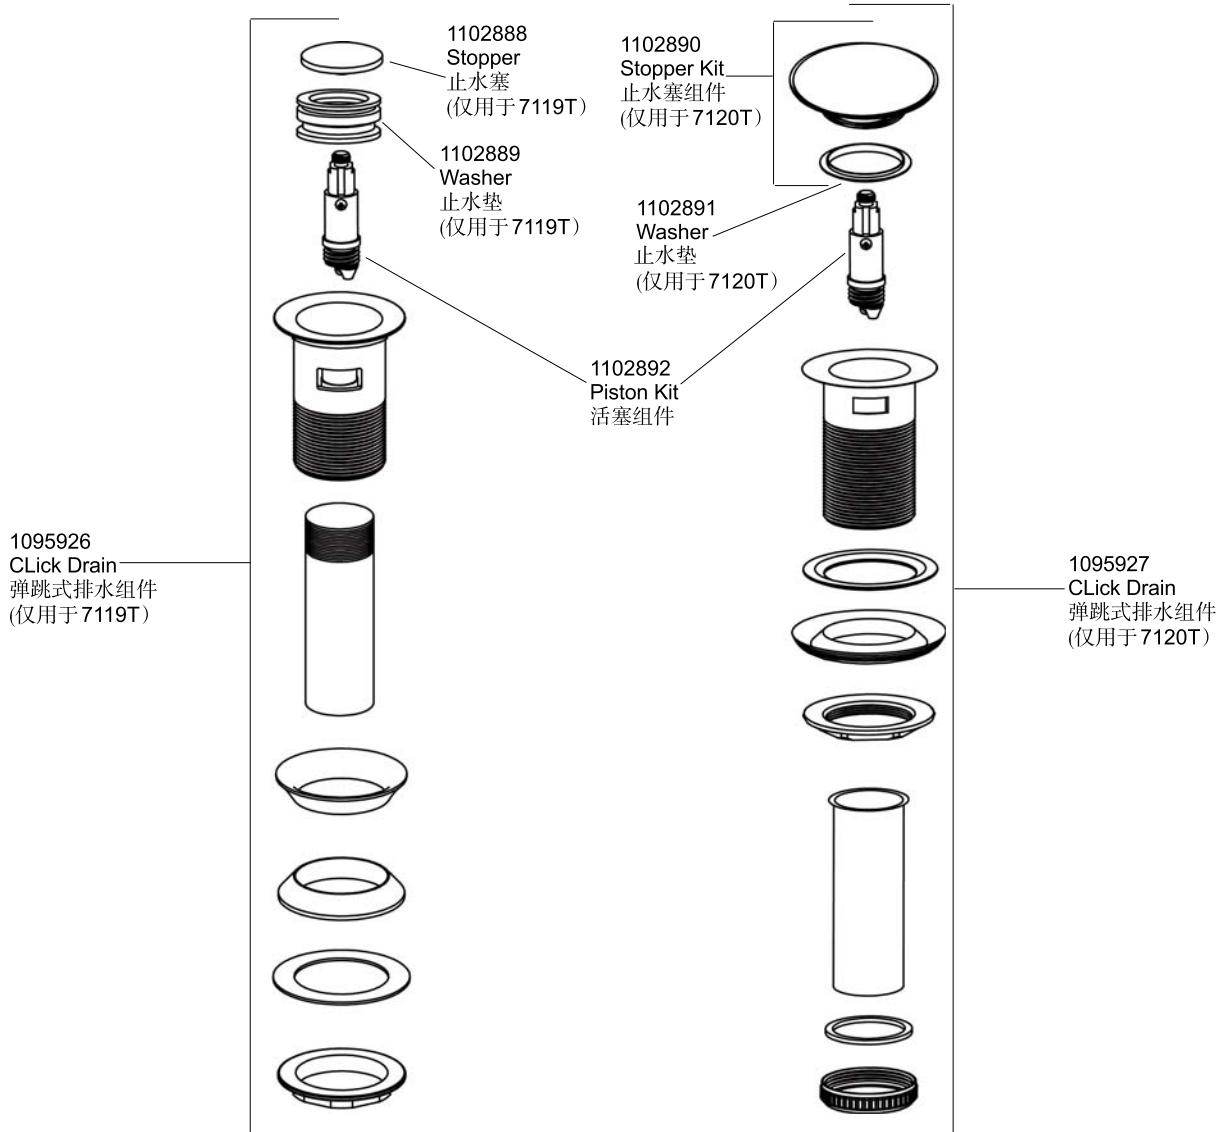

北京科勒有限公司

1101341-2-AA/Rev00

中国北京市密云县果园西路27号 邮编:101500

4