

BEFORE YOU BEGIN

开始之前

- Congratulations on your purchase of this high quality Bathroom Accessory. Before proceeding with the installation, please carefully read this installation instruction in order to ensure proper care and assembly of this accessory.
- Please keep this installation instruction for future reference.

- 首先恭喜您购买到了高档的卫浴产品，为了您正确保护和组装产品，在您安装之前请仔细阅读此说明书。
- 请保留此说明书以备参考。



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget:

1. Wear eye protection.
2. Unplug equipment after use.





警示：在钻孔之前，请借助电子探测仪确认墙内是否有电源线，通讯光缆或者水管之类的东西。如果使用电钻的话请勿忘记以下两点：

1. 请戴上防护镜。
2. 用完设备后关掉电源。

ROUGHING-IN

尺寸图

UNIT : mm
单位：毫米

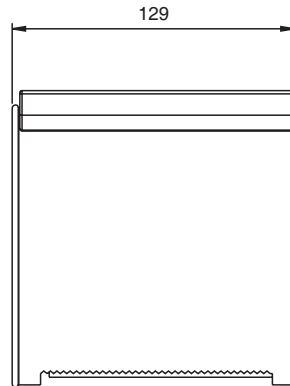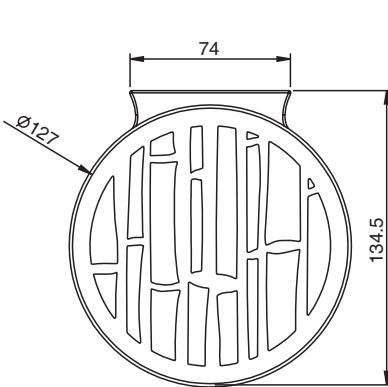


科勒(中国)投资有限公司
上海市闸北区江场三路158号 邮编：200436

INSTALLATION

安装步骤

1. Separate the tray, cover and loosen the paper roller.

1. 将置物盘，面盖和卷纸轴从产品上取下。

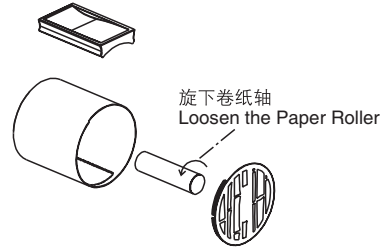


2. Put the tissue box at the desired installation place and adjust it to level.

2. 在希望安装纸巾筒的位置放好纸巾筒，并调整水平。




3. Mark the three installation holes.

3. 标记出3个孔的位置。



4. Drill three holes at the marked places with a 6mm drill and then insert the plugs.

4. 用6mm的钻头在2中标记的位置钻3个孔，并塞入壁塞。




5. Fix the tissue box onto wall with screws.

5. 用螺钉将纸巾筒固定在墙上。



6. Put into place the paper roller, tray and the cover.

6. 放置好卷纸轴和置物盘和面盖即可。

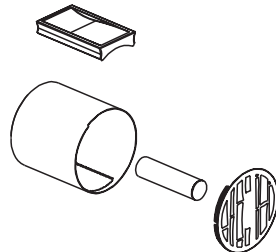

CARING FOR YOUR PRODUCTS

保养须知

The accessories should be washed with warm water and a soft cloth or sponge. Do not use abrasive cleaners or cleaners containing bleach.

为了更好地保养本品，请您用温水和软毛巾(或海绵)擦拭，含有腐蚀性或漂白剂的洗洁剂对本品有害。